
Emergency Licensing Procedures


How to license the N5343A and N5344A when other attempts have failed.

Step 1: Open the license programmer

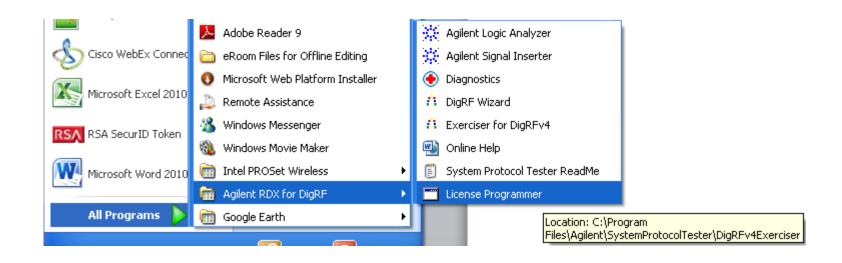

If you don't have a license programmer ask your FE or AE to provide you with one.

Step 2: Connect

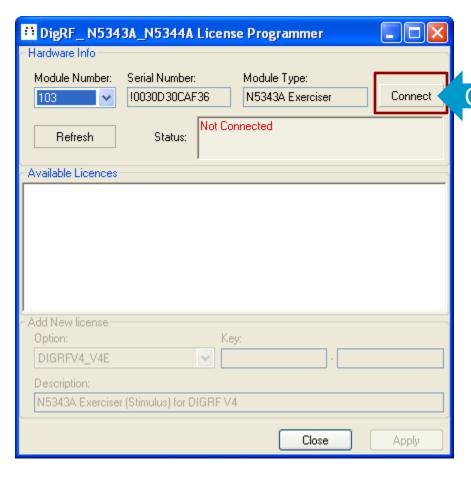


Click here

The number LEDS (shown below) will quickly flash indicating the sync process is occurring




Step 3: Review current state of hardware

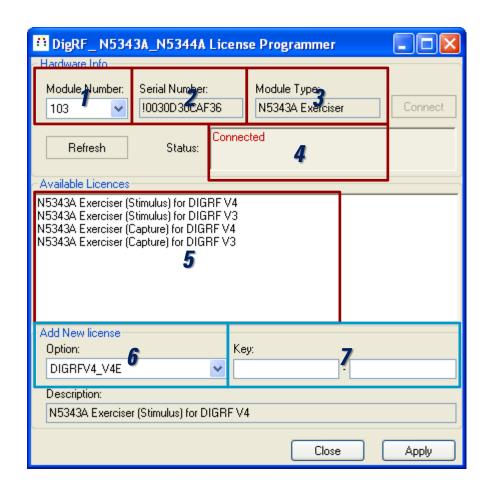

- Boxes 1-5 show the current status of your system.
- Boxes 6 & 7 allow you to program the licenses.
- This box should match the numbers on the LEDs indicated on the previous slide
- This should be the serial number of your hardware
 - 1. Each piece will be different
- This should be the type of hardware you are using
- This box indicates that you have successfully connected
- This box indicates the current licenses you have on your system.
- 6. Use this box to select the license you need to program.
- 7. Use these boxes to enter in the unique license key assigned to your hardware.

Step 4: Apply the license

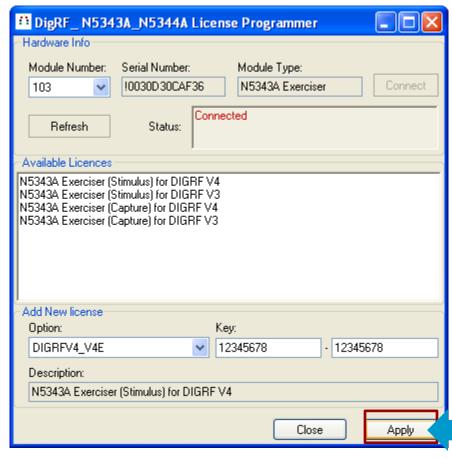

After entering in the 16 digit key press 'apply'





The program will indicate success once the exerciser is properly programed.