



VARIAN

Number: **SHT-500CVM-01**
Date: *October 03, 2008*
Page 3

SERVICE How To

Model Number:	Originator:	Topic
500 CVM (Column Valve Module)	Des Wicherms	Configuring a Valve in the 500 CVM

Configuring a Valve in the 500 CVM

Procedure:

1. Power up the CVM and wait for the beeps to finish (beeps are the self test)

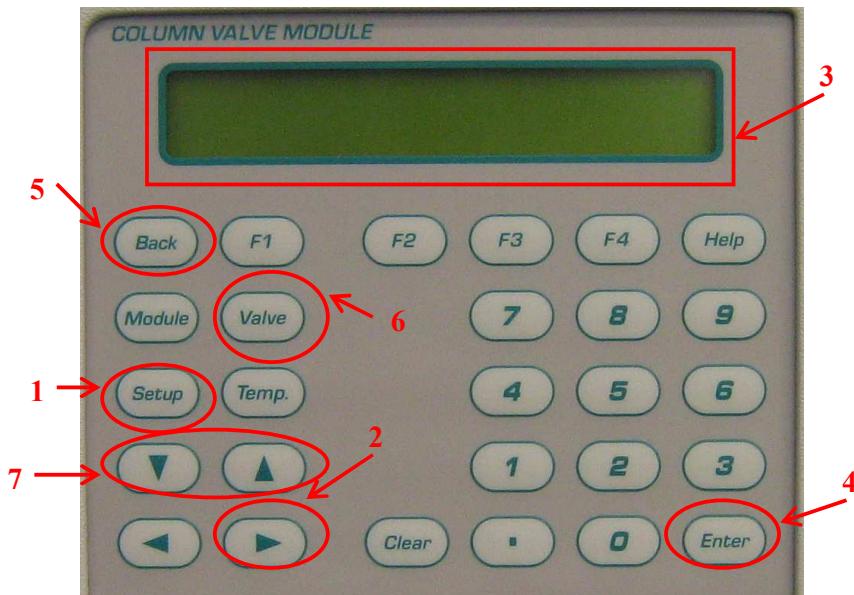


Figure 1: Front Panel of the 500 CVM

All buttons referred to in the following procedure relate to the buttons shown on the front Panel of the 500 CVM (Shown in Figure 1 above)

2. Press the *Setup* button (1) and scroll to the *Right* (2) until you see the valve menu in the display screen (3). At this point select the *Enter* button (4).
3. Setup the following parameters in the menu:
 - VLV - insert the number corresponding to the position that the valve is plugged into on the board.
 - Model - using the table below (Figure 3) select the configuration number matching the valve type shown on your valve.

<i>Config # to use</i>	<i>Old Rheodyne number</i>	<i>New Rheodyne number</i>
1x106	RV100-106	RV310-107
5x100	RV500-100	RV500-106
5x100	RV550-100	RV550-106
5x104	RV500-104	RV500-105
5x104	RV550-104	RV550-105
7x100	RV700-100	RV700-133
7x100	RV750-100	RV750-133
7x107	RV700-107	RV700-132
7x107	RV750-107	RV750-132
7x112	RV700-112	RV700-131
7x112	RV750-112	RV750-131
7x116	RV700-116	RV700-134
7x116	RV750-116	RV750-134

Figure 2: Table of Configurations

4. Select *Enter* button (4) and then select the *Back* button (5) twice to bring you back to the start menu.

To Test the Configuration:

1. Select the *Valve* button (6) and enter the valve position of interest (you will need to select a number corresponding to the position of the valve on the board).
2. Scroll to the *Right* (2) until you see *POS* in the display screen (3), and then use the *Up* and *Down* keys (7) to change the valve position.