

# PROGRAMMING YOUR RADIO RECEIVER

To program your Radio Plus receiver, open the compartment on the back of the Radio Plus unit. Move the dip switches to the position in the chart below.

RECEIVING FREQUENCY IS:	THESE DIP SWITCHES SHOULD BE TURNED ON	RECEIVING FREQUENCY IS:	THESE DIP SWITCHES SHOULD BE TURNED ON
88.1	1, 2, 3, 6	94.1	1, 3, 6
88.3	1, 2, 3	94.3	1, 3
88.5	1, 2, 4, 7, 8, 9	94.5	1, 4, 7, 8, 9
88.7	1, 2, 4, 6, 8, 9	94.7	1, 4, 6, 8, 9
88.9	1, 2, 4, 8, 9	94.9	1, 4, 8, 9
89.1	1, 2, 4, 6, 7, 8	95.1	1, 4, 6, 7, 8
89.3	1, 2, 4, 7, 8	95.3	1, 4, 7, 8
89.5	1, 2, 4, 6, 8	95.5	1, 4, 6, 8
89.7	1, 2, 4, 8	95.7	1, 4, 8
89.9	1, 2, 6, 7, 9	95.9	1, 6, 7, 9
90.1	1, 2, 7, 9	96.1	1, 7, 9
90.3	1, 2, 6, 9	96.3	1, 6, 9
90.5	1, 2, 9	96.5	1, 9
90.7	1, 2, 6, 7	96.7	1, 6, 7
90.9	1, 2, 7	96.9	1, 7
91.1	1, 2, 6	97.1	1, 6
91.3	1, 2	97.3	1
91.5	1, 3, 4, 7, 8, 9	97.5	2, 3, 4, 7, 8, 9
91.7	1, 3, 4, 6, 8, 9	97.7	2, 3, 4, 6, 8, 9
91.9	1, 3, 4, 8, 9	97.9	2, 3, 4, 8, 9
92.1	1, 3, 4, 6, 7, 8	98.1	2, 3, 4, 6, 7, 8
92.3	1, 3, 4, 7, 8	98.3	2, 3, 4, 7, 8
92.5	1, 3, 4, 6, 8	98.5	2, 3, 4, 6, 8
92.7	1, 3, 4, 8	98.7	2, 3, 4, 8
92.9	1, 3, 6, 7, 9	98.9	2, 3, 6, 7, 9
93.1	1, 3, 7, 9	99.1	2, 3, 7, 9*
93.3	1, 3, 6, 9	99.3	2, 3, 6, 9
93.5	1, 3, 9	99.5	2, 3, 9
93.7	1, 3, 6, 7	99.7	2, 3, 6, 7
93.9	1, 3, 7		

RECEIVING FREQUENCY IS:	THESE DIP SWITCHES SHOULD BE TURNED ON
99.9	2, 3, 7
100.1	2, 3, 6
100.3	2, 3
100.5	2, 4, 7, 8, 9
100.7	2, 4, 6, 8, 9
100.9	2, 4, 8, 9
101.1	2, 4, 6, 7, 8
101.3	2, 4, 7, 8
101.5	2, 4, 6, 8
101.7	2, 4, 8
101.9	2, 6, 7, 9
102.1	2, 7, 9
102.3	2, 6, 9
102.5	2, 9
102.7	2, 6, 7
102.9	2, 7
103.1	2, 6
103.3	2
103.5	3, 4, 7, 8, 9
103.7	3, 4, 6, 8, 9
103.9	3, 4, 8, 9
104.1	3, 4, 6, 7, 8
104.3	3, 4, 7, 8
104.5	3, 4, 6, 8
104.7	3, 4, 8
104.9	3, 6, 7, 9
105.1	3, 7, 9
105.3	3, 6, 9
105.5	3, 9
105.7	3, 6, 7
105.9	3, 7

RECEIVING FREQUENCY IS:	THESE DIP SWITCHES SHOULD BE TURNED ON
106.1	3, 6
106.3	3
106.5	4, 7, 8, 9
106.7	4, 6, 8, 9
106.9	4, 8, 9
107.1	4, 6, 7, 8
107.3	4, 7, 8
107.5	4, 6, 8
107.7	4, 8
107.9	6, 7, 9

AF-161

**SWITCH SW2 FUNCTIONS**  
This switch is located by front LED in board.

SWITCH #	FUNCTION
1	No Function
2	High Frequency cut off filter
3	Power on and off
4	No Function
5	Main Channel audio
6	De-emphasis curve
7	No Function
8	SCA audio
9	SCA audio
10	67/92 switch

R85 = audio level

R1 on auto mute board sets audio squelch

R71= base boost

R72= music over hold level

R77= noise squelch

SW1 (frequency select switch) position #10 DC power to antenna