


Zoom 6000 System Diagram

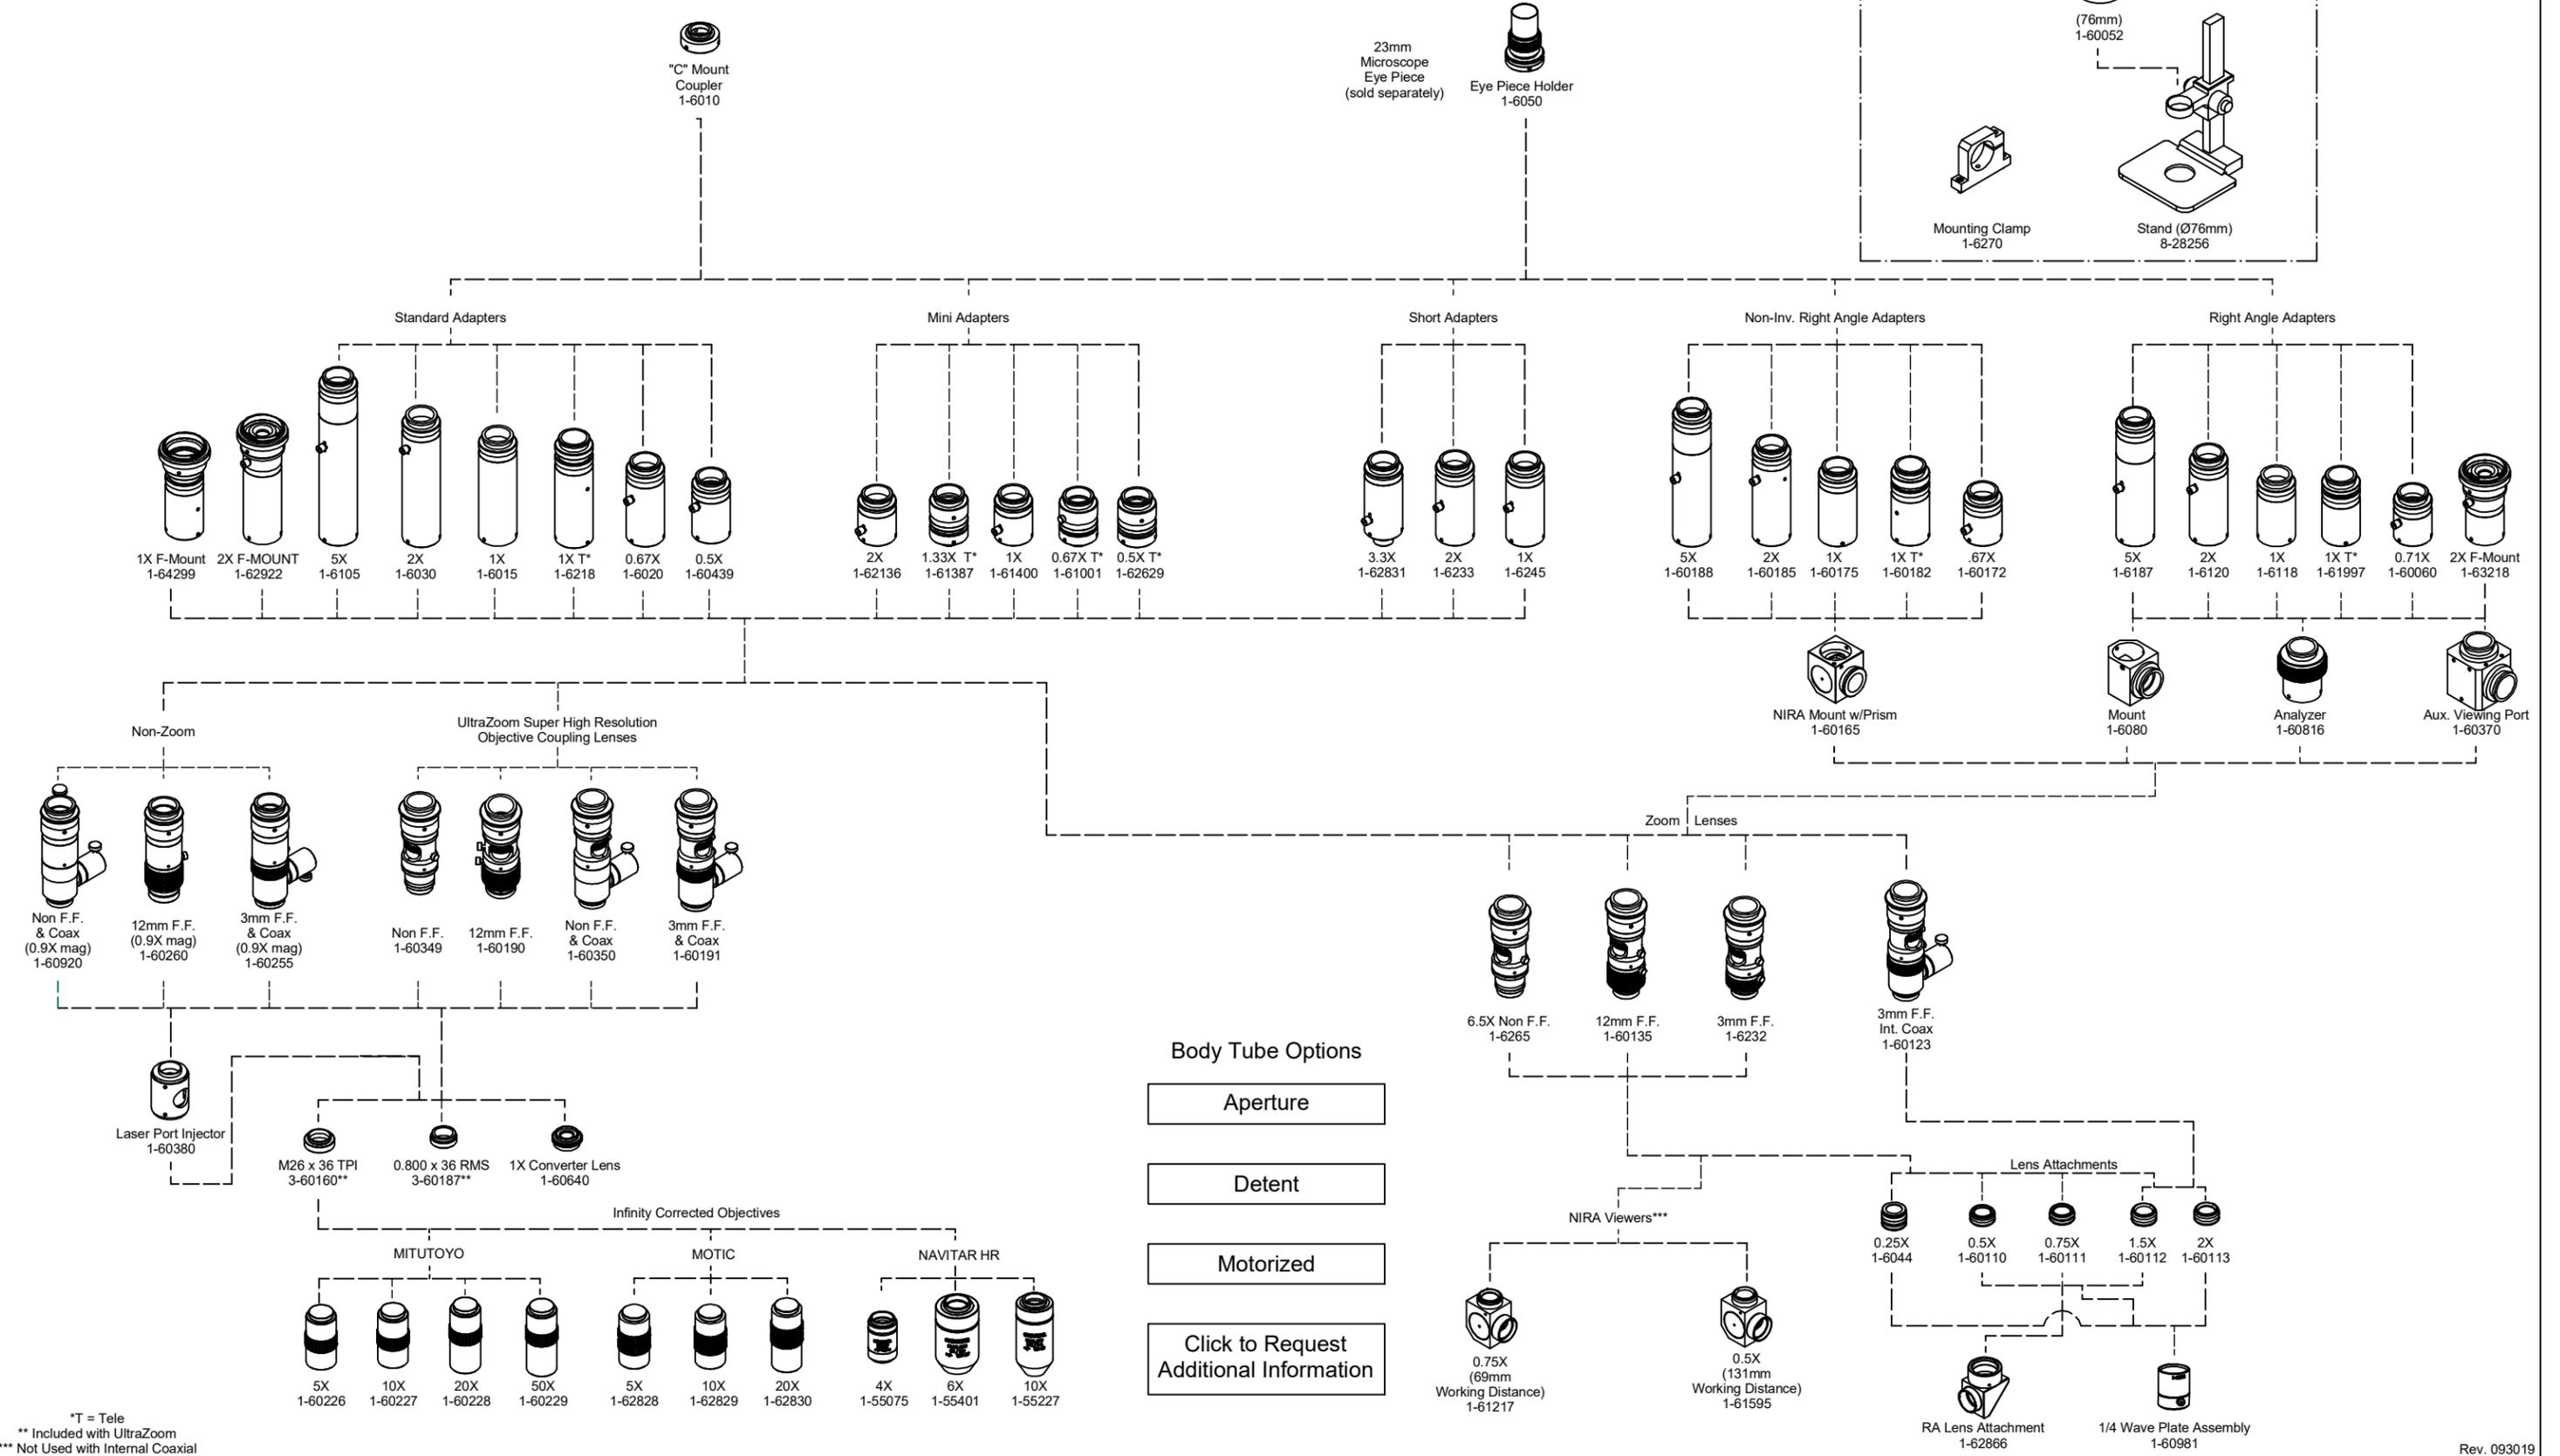

*T = Tele
 ** Included with UltraZoom
 *** Not Used with Internal Coaxial