

Bedienungsanleitung

Crate ECH 124

3HE – Eurocrate mit Spannungsversorgung für Hochspannungsquellen der Baureihen CPS, DPS und EPS in 3HE-Eurokasette

INHALT

1. Allgemeine Information

2. Technische Daten

3. Steckerbelegungen

Achtung!

-Das Gerät darf nur mit geschlossener Abdeckhaube betrieben werden.

-Wir lehnen jede Haftung für Schäden und deren Folgen, die beim unsachgemäßen Einsatz unserer Geräte entstehen können, ab. Deshalb sollte diese Bedienungsanleitung vor der ersten Inbetriebnahme aufmerksam gelesen werden!

Bemerkung

Änderungen dieser Bedienungsanleitung sind jederzeit ohne Mitteilungspflicht möglich. Für Fehler in dieser Beschreibung wird keine Haftung übernommen. Alle Rechte und technische Änderungen vorbehalten!

Filename ECH124.____; Version 1.0 vom 10.11.2000

The English version is following to the German version !

1. Allgemeine Information

Das Crate ECH 124 kann bis zu 4 HV-Module in **3HE-Eurokassette mit H15-Konnektor** und ein **Multichannel CAN-I/O** aufnehmen. Das netzgespeiste Crate versorgt dabei die Module mit den benötigten Spannungen und stellt alle Verbindungen zur Fernsteuermöglichkeit dieser Module über ihre analog-digitale Schnittstelle her.

Beim Betrieb des Gerätes ist auf ausreichende Lüftung zu achten!

In Tischaufstellung muss unterhalb und oberhalb des Gerätes ein minimaler Luftraum von 20 mm Höhe zur Verfügung stehen.

Bei Schaltschrankschaltung und dem Betrieb von mehreren Crates übereinander, ist unter Umständen Zwangsbelüftung erforderlich.

Die Versorgungsspannungen für die Hochspannungsmodule werden über den Netzschalter „POWER“ ein- bzw. ausgeschaltet.

2. Technische Daten

	ECH 124
	max. 4 Steckplätze 4 * 8TE (40,64mm) oder 2 * max. 12TE (60,96mm)
Netzspannung	230 V ^{+10%} _{-15%} / max. 1,6 A (doppelt abgesichert) 110 V $\pm 10\%$, intern umschaltbar
Gleichspannungen	+ 24 V (bis zu 4 A) / + 5 V (bis zu 6 A)
Gesamtleistung	max. 175 W
INHIBIT	Lemo-Buchse auf der Rückseite, verbunden mit dem INHIBIT-Signal aller HV-Module TTL_Pegel, LOW = aktiv $\Rightarrow V_{OUT-X} = 0$
Abmessungen	½ 19" – 3HE Standard Tisch-Crate (42 TE) / ca. 320 mm tief Modul Steckplatztiefe 160 mm CAN-Konnektoren: 9-pin Sub-D

3. Steckerbelegung

Der externe CAN-Bus wird über 9-pin Sub-D Konnektoren auf der Rückseite angeschlossen:

Eingang	Ausgang	PIN	Signal	Beschreibung
9-pin Sub-D Buchse	9-pin Sub-D Stecker	2	CAN_L	
		3	CAN_GND	GND
		5	CAN_SHLD	Schirm
		7	CAN_H	

H15 – Buchsenleiste auf der Rückseite


PIN	Name	Beschreibung
8	V _{REF}	V _{8-10/12} = 5 V (1 mA) Interne Referenzspannung zum Anschluss externer Potis (Schleifer an V _{VSET} und/oder V _{ISET})
10/12	PWR_0V	Power_0 V (intern verbunden mit HV-GND = LOW-Potential)
14	V _I MON	Monitorspannung entsprechend I _{OUT} : I _{OUT} = 0 bis I _{OUTnom} ± 1 % ⇒ V _{14-10/12} = 0 bis 5 V Ausgangsimpedanz: 10 kΩ/ 100 nF
20	V _V SET	Spannungssteuerung: V _{20-10/12} = 0 bis 5 V ⇒ V _{OUT} = 0 bis V _{OUTnom} ± 1 % Eingangsimpedanz: 4,7 MΩ
24	V _V MON	Monitorspannung entsprechend V _{OUT} : V _{OUT} = 0 bis V _{OUTnom} ± 1 % ⇒ V _{24-10/12} = 0 bis 5 V Ausgangsimpedanz: 10 kΩ/ 100 nF
26	PWR_+V	V _{26-10/12} = 24V ± 5% / max. 0,8 A
28	V _I SET	Stromsteuerung: V _{28-10/12} = 0 bis 5 V ⇒ I _{OUT} = 0 bis I _{OUTnom} ± 1 % (verbunden mit V _{REF} über 10 kΩ) offen: I _{OUTnom} ist möglich
30	KILL_ENA	TTL-Pegel, HIGH = aktiv ⇒ HV_OFF ohne Rampe, wenn Signal INHIBIT aktiv ist. Wiedereinstellung der Ausgangsspannung ist erst möglich nach erneutem KILL_ENA oder PWR_OFF/ON. LOW (offen) ⇒ HV entsprechend V _{VSET} oder V _{ISET}
32	INHIBIT	TTL-Pegel, LOW = aktiv ⇒ V _{OUT} = 0 HIGH (offen) ⇒ V _{OUT} entsprechend V _{VSET} oder V _{ISET} (mit Rampe)

96-pin Steckbuchse für CIO

H15-slots from 0 (left) to 7 (right)

96-pin connector for CIO (rightmost)

VS0 to VS7: V_v-set for slots 0 to 7 (H15: 20)
IS0 to IS7: V_i-set for slots 0 to 7 (H15: 28)
VM0 to VM7: V_v-mon for slots 0 to 7 (H15: 24)
IM0 to IM7: V_i-mon for slots 0 to 7 (H15: 14)
KILLEN : KILL_ENA for slots 0 to 7 (H15: 30)
+24 V: PWR_+V for slots 0 to 7 (H15: 26)
GND: PWR_0V for slots 0 to 7 (H15: 10/12)

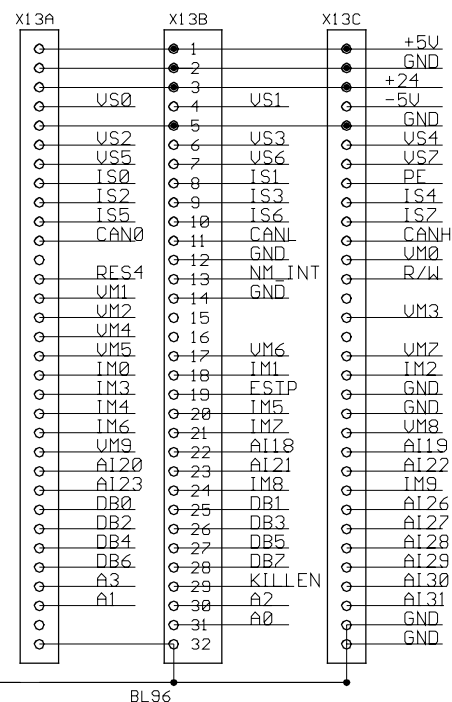

Operators manual

Crate ECH 124

Contents

1. General information

2. Technical Data

3. Pin assignments

Caution!

-The unit must not be operated with the cover removed!

- We decline all responsibility for damages and injuries caused by improper use of the system. It is highly recommended to read the operator manual before any kind of operation!

Note:

All information in this document is subject to change without notice. We take no responsibility whatsoever for any error in this document. We reserve the right to make changes in the product design without any notification to the users.

File name ECH124_eng.____; Version 1.0 as of Nov. 10, 2000

1. General information

The crate ECH 124 is able to carry up to 4 HV-modules in **3U-Eurocassette with H15 connector** and one **Multichannel CAN - analog and digital I/O**. The crates provide the necessary supply voltages and the connections for all remote control capabilities.

During operation enough air flow has to be given to the unit.

2. Technical data

	ECH 124
	max. 4 slots 4 * 8TE (40,64mm) or 2 * max. 12TE (60,96mm)
AC supply voltage	230 V ^{+10%} _{-15%} / max. 1,6 A (fuses double sided) 110 V $\pm 10\%$, internal switchable
DC supply voltages	+ 24 V (up to 4 A) + 5 V (up to 6 A)
Power total	max. 175 W
INHIBIT	Lemo-hub on the rear, connected with INHIBIT-signal from all HV-modules TTL level, LOW = active $\Rightarrow V_{OUT-X} = 0$
Mechanical layout	$\frac{1}{2}$ 19" – 3U Standard BIN (Desk top) / ca. 320 mm depth Module slot depth 160 mm CAN-connectors: 9-pin Sub-D

3. PIN assignment

The external CAN-Bus is connected through 9-pin Sub-D connectors on the rear panel:

Input	Output	PIN	Signal	Description
9-pin Sub-D connector female	9-pin Sub-D connector male	2	CAN_L	
		3	CAN_GND	GND
		5	CAN_SHLD	Shield
		7	CAN_H	

Female H15 - connector on the back plane

PIN	Name	Description
8	V _{REF}	V _{8-10/12} = 5 V (1 mA) Internal reference voltage for an external potentiometer (Sliding contact on V_V _{SET} or V_I _{SET}))
10/12	PWR_0V	Power_0 V (internal connected with HV-GND = LOW-potential)
14	V_I _{MON}	Monitor voltage corresponding I _{OUT} : I _{OUT} = 0 to I _{OUTmax} ± 1 % ⇒ V _{14-10/12} = 0 to 5 V
20	V_V _{SET}	Setting voltage: V _{20-10/12} = 0 to 5 V ⇒ V _{OUT} = 0 to V _{OUTmax} ± 1 %
24	V_V _{MON}	Monitor voltage corresponding V _{OUT} : V _{OUT} = 0 to V _{OUTmax} ± 1 % ⇒ V _{24-10/12} = 0 to 5 V
26	PWR_+V	V _{26-10/12} = 24V ± 5% / max. 0,4 A
28	V_I _{SET}	Setting current: V _{28-10/12} = 0 to 5 V ⇒ I _{OUT} = 0 to I _{OUTmax} ± 1 % (connected with V _{REF} through 10 kΩ) n.c.: I _{OUTmax} is possible
30	KILL_ENA	TTL-level, High = active ⇒ HV_OFF without ramp if signal INHIBIT is active. Restoring the output voltage is only possible after operating KILL_ENA or HV_ON. LOW (or n.c.) ⇒ HV according V_V _{SET} or V_I _{SET} , limited to V _{max} , I _{max} resp.
32	INHIBIT	TTL-level, LOW = active ⇒ V _{OUT} = 0 HIGH (or n.c.) ⇒ V _{OUT} according V_V _{SET} (with ramp)

Female 96-pin connector for CIO

H15-slots from 0 (left) to 7 (right)

96-pin connector for CIO (rightmost)

VS0 to VS7: V_v-set for slots 0 to 7 (H15: 20)
IS0 to IS7: V_i-set for slots 0 to 7 (H15: 28)
VM0 to VM7: V_v-mon for slots 0 to 7 (H15: 24)
IM0 to IM7: V_i-mon for slots 0 to 7 (H15: 14)
KILLEN : KILL_ENA for slots 0 to 7 (H15: 30)
+24 V: PWR_+V for slots 0 to 7 (H15: 26)
GND: PWR_0V for slots 0 to 7 (H15: 10/12)

