NOTE

Connecting Scanner to Intercom
1. Scanner's volume to the lowest setting.
2. Connects supplied cable between the scanner's headphone jack and intercom's AUDIO IN jack.
3. Adjust the volume to a comfortable level.

Battery Condition
Replace batteries when red LED is turned on.

Connecting Headphone
The best connection is to use LEFT1,2 for left person and RIGHT3,4 for right person of the Intercom unit.

Operation
Press PTT switch and adjust MIC GAIN to proper level.

Traffic Safety
Do not use headsets with your intercom when operating a motor vehicle or taking a walk.

RadioShack®   CAT.NO.20-285
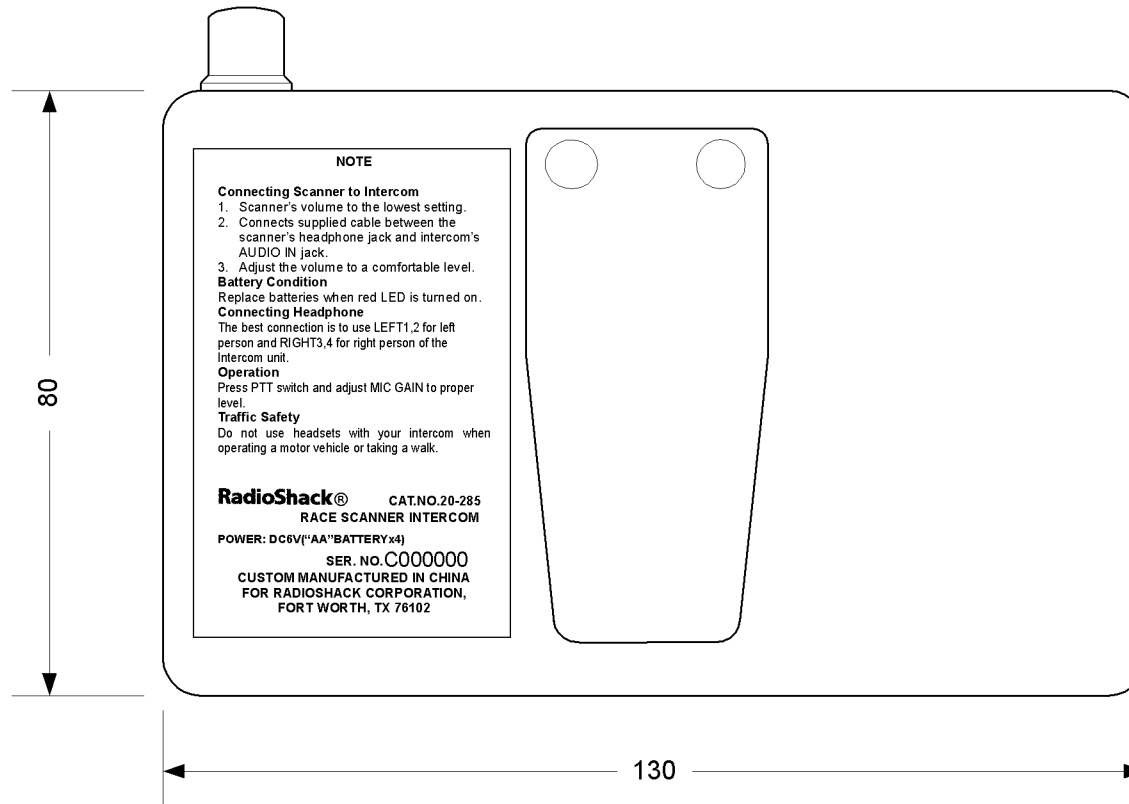RACE SCANNER INTERCOM

POWER: DC6V("AA"BATTERY x4)

SER. NO. C000000
CUSTOM MANUFACTURED IN CHINA
FOR RADIOSHACK CORPORATION,
FORT WORTH, TX 76102

Cat.No.20-285 RACE SCANNER INTERCOM
Label Location A

NOTE

Connecting Scanner to Intercom
1. Scanner's volume to the lowest setting.
2. Connects supplied cable between the scanner's headphone jack and intercom's AUDIO IN jack.
3. Adjust the volume to a comfortable level.

Battery Condition
Replace batteries when red LED is turned on.

Connecting Headphone
The best connection is to use LEFT1,2 for left person and RIGHT3,4 for right person of the Intercom unit.

Operation
Press PTT switch and adjust MIC GAIN to proper level.

Traffic Safety
Do not use headsets with your intercom when operating a motor vehicle or taking a walk.

RadioShack®   **CAT.NO.20-285**
RACE SCANNER INTERCOM

POWER: DC6V("AA"BATTERYx4)

SER. NO.C000000
CUSTOM MANUFACTURED IN CHINA
FOR RADIOSHACK CORPORATION,
FORT WORTH, TX 76102

80

130

REAR SIDE