


MOUNTING PROCEDURE

1. Drill thermal vias through PCB and fill with solder.
2. To ensure good thermal connectivity to heat sink, which is critical for proper operation drill and tap heatsink and mount PCB to heat sink using screws.

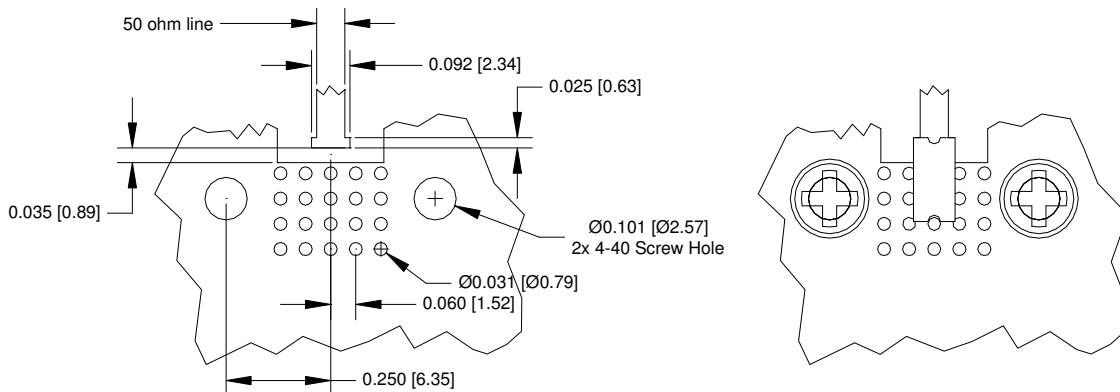

Dimension given in inches [millimeters]

For best thermal performance the PCB should be soldered to the heat sink.