


Agilent Logic Analyzer Recovery DVD

16800 Series

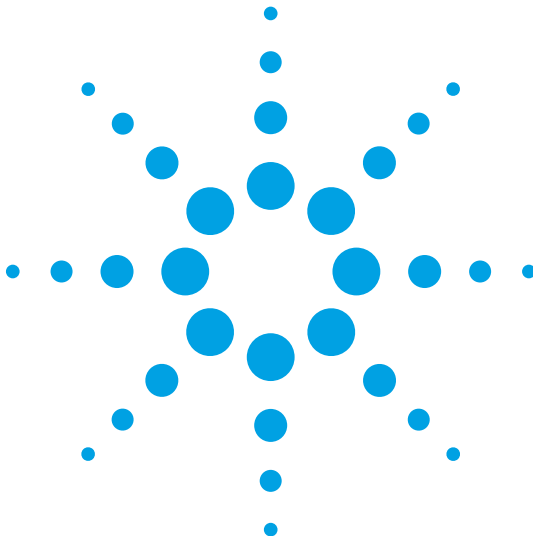

Agilent Technologies

To recover the OS and logic analyzer application software to the hard drive

The logic analyzer hard drive recovery system consists of: (1) this DVD containing the Windows® XP Professional operating system, and (2) the Agilent Logic Analyzer application software—get the latest version at http://www.agilent.com/find/16900_SW_Download or use your application software CD. If you use the OS recovery DVD and logic analyzer application CD, the logic analyzer hard drive is returned to the original Windows operating system and logic analyzer application software it had when it left the factory.

- 1** The recovery process removes all data and license files currently on the hard drive. Before proceeding, back up any data and license files you want to retain using LAN or a USB storage device.
- 2** Turn off the logic analyzer.
- 3** Connect a PS/2 mouse and PS/2 keyboard to the logic analyzer. The touch screen is not available during the recovery process (for units with a touch display).
- 4** Connect a USB DVD-ROM drive to the logic analyzer.
- 5** Wait 15 seconds, and then turn on the logic analyzer. Immediately insert the Recovery DVD into the DVD-ROM drive. The logic analyzer will boot from the Recovery DVD.
- 6** You will be asked to confirm if you want to recover the hard drive. Follow the onscreen instructions.
- 7** Once the recovery is complete, install the Agilent Logic Analyzer application software. Follow the installation/upgrade instructions provided on the web download page or with the application software CD.
- 8** Install any additional application software.
- 9** Restore the data and license files you backed up in step 1.

To receive notification of software update availability for Agilent logic analyzers, please sign up for email notification at: <http://www.agilent.com/find/emailupdates>



5965-3984, Printed in Malaysia