

Board-Level TDI Camera C10000-201

Time Delay Integration Camera



HAMAMATSU
TDI-CCD Sensor





The C10000-201 TDI camera is useful for a wide range of imaging applications requiring high speed operation with high sensitivity simultaneously. TDI is a special image acquisition technology that has been used extensively in machine vision applications for industrial inspection. TDI imaging is appropriate for applications where it is desired to record a linear process over time, or where the aspect ratio of the subject being imaged is significantly asymmetric. TDI is particularly useful for low light level scanning applications for which a typical line scan camera would have inadequate sensitivity. Also, frame readout mode is available for easy focusing.

OPERATING PRINCIPLE OF TDI

TDI (Time Delay Integration):

Time Delay Integration is a technology of scanning in which a frame transfer device produces a continuous video image of a moving object by means of a stack of linear arrays aligned with and synchronized to the motion of the object to be imaged in such a way that, as the image moves from one line to the next, the integrated charge moves along with it, providing higher resolution at lower light levels than is possible with a line-scan camera.

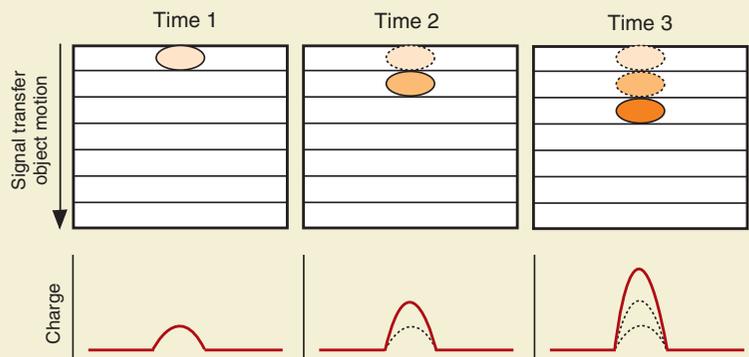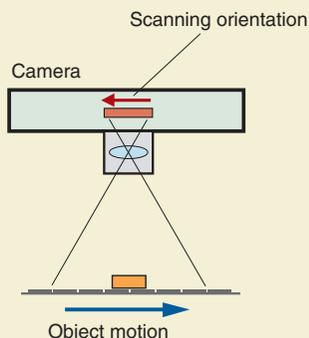

FEATURES

- 2048(H) spatial resolution with 128(V) TDI stages
- Line rates up to 50 kHz
- High speed imaging combined with high sensitivity & low noise
- Great spectral response for UV-NIR with back thinned CCD
- 100 % fill factor
- 100x anti-blooming with lateral overflow drain
- Dynamic range of 770:1
- 12 bit / 8 bit selectable A/D converter
- Bi-directional scanning operation
- Frame readout mode for easy focusing

APPLICATIONS


- High speed imaging for low light applications i.e. fluorescence imaging
- Electronics manufacturing and inspection
- Semiconductor inspection
- High speed scanning for a large size sample i.g. flat panel displays
- Continuous imaging of high-speed moving object

SPECIFICATIONS


Camera type	Board type (No mechanical chassis)
Pixel number	2048 (H) × 128 (V)
Device structure	Back thinned type
Cell size	12 μm(H) × 12 μm(V)
Effective area	24.58 mm(H) × 1.536 mm(V)
Readout mode	TDI mode / Frame readout mode *1
TDI transfer direction	Bi direction
TDI output channel	4 TAP (512 × 4)
Anti-blooming	Lateral overflow drain (100×)
TDI pixel clock rate	30 MHz
TDI line rate	0.45 kHz to 50 kHz
TDI line rate control	Internal setting by serial command *2 / External trigger
Full-well capacity (typ.)	100 000 electrons *3
Readout noise (typ.)	130 electrons r.m.s.
Dynamic range (typ.)	770 : 1
Analog enhancement gain	1 time to 10 times (16 steps)
A/D converter	12 bit / 8 bit *4
Interface	Camera Link (Medium Configuration)
Camera control	Serial control in Camera Link
Camera output clock	30 MHz
Camera connector	2 × Camera Link / 9 pin D-sub for power supply / BNC for trigger in
Lens mount	F-mount
Power / Power consumption	DC +15 V, DC +5 V / 20 V-A
Ambient storage temperature	-10 °C to +50 °C
Ambient operating temperature	0 °C to +40 °C
Ambient operating / storage humidity	70 % max. (with no condensation)

- *1 Frame readout mode is useful for easy focusing, but it is not suitable for measurement. Please consult with our sales office for details.
- *2 Internal TDI line rate is set by 33 ns step.
- *3 Guaranteed linearity is up to 80 000 electrons.
- *4 Selectable by serial command.


SPECTRAL RESPONSE

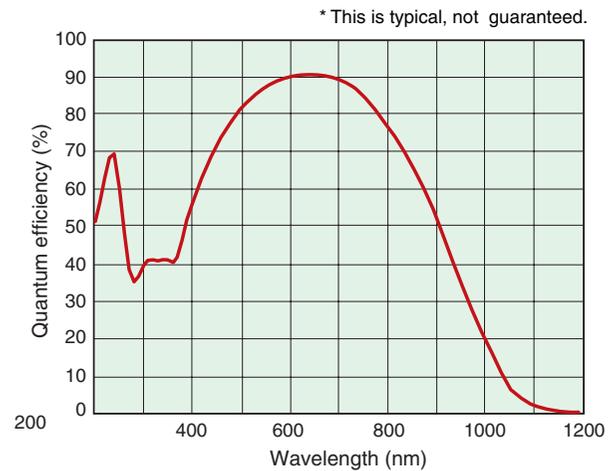

TDI SENSOR STRUCTURE

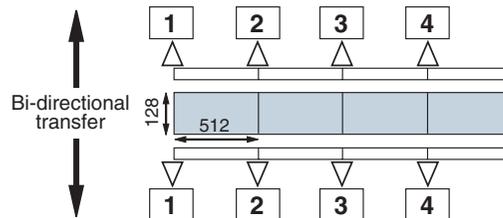

DIMENSIONAL OUTLINES (Unit : mm)

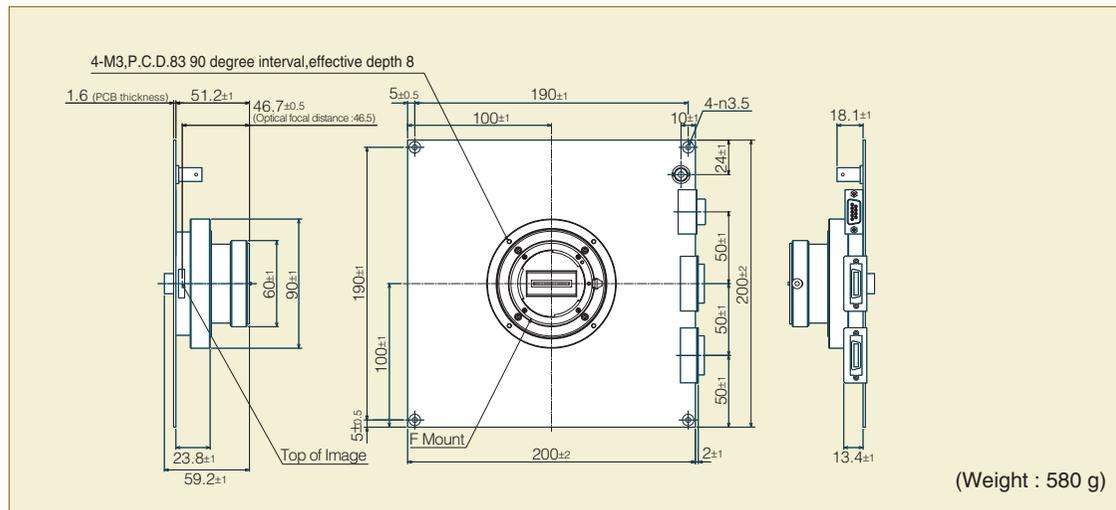

- ★ **Product and software package names noted in this documentation are trademarks or registered trademarks of their respective manufacturers.**
 - Subject to local technical requirements and regulations, availability of products included in this promotional material may vary. Please consult your local sales representative.
 - Information furnished by HAMAMATSU is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omissions.
- Specifications and external appearance are subject to change without notice.

© 2011 Hamamatsu Photonics K.K.

HAMAMATSU

HAMAMATSU PHOTONICS K.K., Systems Division

812 Joko-cho, Higashi-ku, Hamamatsu City, 431-3196, Japan, Telephone: (81)53-431-0124, Fax: (81)53-435-1574, E-mail: export@sys.hpk.co.jp

U.S.A. and Canada: Hamamatsu Corporation, 360 Foothill Road, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1) 908-231-0960, Fax: (1) 908-231-0852, E-mail: usa@hamamatsu.com

Germany: Hamamatsu Photonics Deutschland GmbH, Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-2658, E-mail: info@hamamatsu.de

France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10, E-mail: info@hamamatsu.fr

United Kingdom: Hamamatsu Photonics UK Limited, 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire, AL7 1BW, U.K., Telephone: (44) 1707-294888, Fax: (44) 1707-325777, E-mail: info@hamamatsu.co.uk

North Europe: Hamamatsu Photonics Norden AB, Smidesvägen 12, SE-171-41 Solna, Sweden, Telephone: (46)8-509-031-00, Fax: (46)8-509-031-01, E-mail: info@hamamatsu.se

Italy: Hamamatsu Photonics Italia S.R.L.: Strada della Moia, 1int.6-20020 Arese (Milano), Italy, Telephone: (39)02-935 81 733, Fax: (39)02-935 81 741, E-mail: info@hamamatsu.it

Homepage Address <http://www.hamamatsu.com>

Cat. No. SCAS0015E13
FEB/2011 HPK
Created in Japan