

Errata

Title & Document Type: HP 339A Operating and Service Manual

Manual Part Number: 00339-90001

Revision Date: December, 1979

HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, semiconductor products and chemical analysis businesses are now part of Agilent Technologies. We have made no changes to this manual copy. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A.

About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

www.tm.agilent.com

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.




Agilent Technologies

OPERATING AND SERVICE MANUAL

DISTORTION MEASUREMENT SET

339A

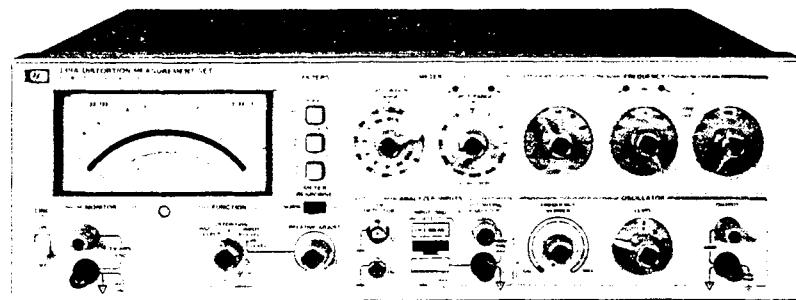

 HEWLETT
PACKARD



OPERATING AND SERVICE MANUAL

MODEL 339A

DISTORTION MEASUREMENT SET

Serial Numbers: 1730A01162 and Greater

IMPORTANT NOTICE

This manual applies directly to instruments with serial number shown on this page. If changes have been made in the instrument since this manual was printed, a "Manual Changes" supplement supplied with this manual will define these changes. Be sure to record this information in your manual. Backdating information contained in Section VII adapts this manual to instruments having serial numbers lower than those shown on this page.

WARNING

To help minimize the possibility of electrical fire or shock hazards, do not expose this instrument to rain or excessive moisture.

Manual Part No. 00339-90001

Microfiche Part No. 00339-90051

© Copyright Hewlett-Packard Company 1984
P.O. Box 69, Marysville, Washington 98270 U.S.A.

Reproduced with Permission, Courtesy of Agilent Technologies, Inc.

TABLE OF CONTENTS

Section	Page	Section	Page
I. General Information.....	1-1	III. 3-39. Oscillator Operation	3-5
1-1. Introduction	1-1	3-40. Frequency Selection	3-5
1-4. Specifications	1-1	3-42. Output Level	3-5
1-6. Instrument and Manual Identification.....	1-1	3-44. Operational Verification Checks	3-5
1-10. Description	1-1	3-46. Preliminary Procedure	3-5
1-17. Options	1-2	3-48. Oscillator	3-5
1-19. Recommended Test Equipment	1-2	3-50. AC Voltmeter	3-5
Section	Page	3-52. Distortion Analyzer	3-6
II. Installation.....	2-1	3-54. Filters	3-6
2-1. Introduction	2-1	3-56. Operator's Maintenance	3-7
2-3. Initial Inspection	2-1	3-57. Fuse Replacement.....	3-7
2-5. Preparation For Use	2-1	3-59. Adjustment of Meter Mechanical Zero	3-7
2-6. Power Requirements	2-1	Section	Page
2-8. Line Voltage Selection	2-1	IV. Performance Test	4-1
2-10. Power Cable	2-1	4-1. Introduction	4-1
2-12. Grounding Requirements.....	2-1	4-3. Equipment Required	4-1
2-14. Bench Use	2-2	4-5. Test Record	4-1
2-16. Rack Mounting.....	2-2	4-7. Calibration Cycle	4-1
2-18. Environmental Requirements	2-2	4-9. Voltmeter Performance Tests	4-1
2-19. Operating and Storage Temperature	2-2	4-11. Full-Scale Accuracy and Frequency Response Test	4-1
2-22. Humidity	2-2	4-12. Meter Tracking and Monitor Output Accuracy Test	4-2
2-24. Altitude	2-2	4-13. RMS Accuracy (crest factor) Test	4-4
2-26. Repackaging For Shipment	2-2	4-14. Filter Accuracy Test	4-4
Section	Page	4-15. Oscillator Performance Tests	4-5
III. Operation	3-1	4-16. Output Level and Flatness Test	4-5
3-1. Introduction	3-1	4-17. Output Impedance Test	4-5
3-3. Operating Characteristics	3-1	4-18. Oscillator Frequency Accuracy Test	4-6
3-4. General	3-1	4-19. Oscillator Total Harmonic Distortion Test	4-7
3-11. True RMS vs Average Responding Detection.....	3-1	4-20. Distortion Analyzer Performance Tests	4-8
3-13. Turn-On and Warm-Up.....	3-2	4-22. Fundamental Rejection and Induced Distortion Test	4-8
3-15. Distortion Measurement	3-2	4-24. Distortion Measurement Accuracy Test	4-10
3-16. Distortion Measurement Using the 339A Internal Oscillator	3-2	4-25. Residual Noise Test	4-11
3-18. Distortion Measurement of an External Source	3-3	4-26. Input Impedance Test	4-11
3-20. AM Detector.....	3-3	Section	Page
3-22. Voltmeter Operation	3-3	V. Adjustments	5-1
3-24. Normal Voltmeter Operation	3-3	5-1. Introduction	5-1
3-26. Relative Level Operation	3-4	5-3. Equipment Required	5-1
3-28. Oscillator Level Operation	3-4	5-5. Adjustment Locations	5-1
3-31. VU Measurements	3-4		
3-33. Filters	3-4		
3-35. Input Ground Select	3-4		
3-37. Monitor Output	3-5		

TABLE OF CONTENTS (Cont'd)

Section	Page	Section	Page
V.	5-7. Factory Selected Components 5-1 5-9. Voltmeter Adjustments 5-1 5-10. Mechanical Meter Zero 5-1 5-12. Gain Adjustments 5-1 5-13. Oscillator Adjustments 5-2 5-14. Amplitude Adjustment 5-2 5-15. Frequency Adjustment 5-2 5-16. Analyzer Adjustments 5-2 5-17. Notch Filter Null Adjust 5-2 5-18. High Frequency Adjustment 5-4	VIII.	Service 8-1 8-1. Introduction 8-1 8-3. Safety Considerations 8-1 8-8. Recommended Test Equipment 8-1
THEORY OF OPERATION			
Section	Page		
VI.	Replaceable Parts 6-1 6-1. Introduction 6-1 6-4. Ordering Information 6-1 6-6. Non-Listed Parts 6-1 6-8. Parts Changes 6-1 6-10. Proprietary Parts 6-2		8-10. General Description 8-1 8-22. Circuit Descriptions 8-2 8-23. Input Circuitry 8-2 8-26. Input Amplifier 8-3 8-28. Input Overload Protection 8-3 8-30. Analyzer Circuitry 8-3 8-31. Notch Filter 8-3 8-33. Capacitance Neutralizer 8-5 8-35. Amplitude Error Detector 8-6 8-37. Phase Error Detector 8-6 8-39. Auto Set - Level Circuit 8-7 8-41. Meter Circuits 8-7 8-43. Oscillator Circuit 8-8
Section	Page		
VII.	Manual Changes 7-1/7-2 7-1. Introduction 7-1/7-2 7-3. Manual Changes 7-1/7-2 7-6. Manual Change Instructions 7-1/7-2		

LIST OF TABLES

Table	Page
1-1. Specifications 1-2	
1-2. Typical Operating Characteristics 1-4	
1-3. Recommended Test Equipments 1-4	
4-1. Full-Scale Accuracy and Frequency Response Test Limits 4-2	
4-2. Meter Tracking and MONITOR Output Accuracy Tests 4-4	
4-3. Oscillator Output Limits (Flatness Test) 4-6	
4-4. Oscillator Frequency Accuracy Test 4-7	
4-5. Oscillator Total Harmonic Distortion Test 4-8	
4-6. Fundamental Rejection and Induced Distortion Test 4-10	
4-7. Distortion Measurement Accuracy Test 4-11	
5-1. Factory Selected Components 5-7	
5-2. Adjustable Components 5-7	
6-1. Standard Abbreviations 6-1	
6-2. Code List Of Manufacturers 6-2	
6-3. Replaceable Parts 6-3	
7-1. Manual Changes by Serial Number 7-1/7-2	

TABLE OF CONTENTS (Cont'd)

LIST OF ILLUSTRATIONS

Figure	Page	Figure	Page
2-1. Line Voltage Selection.....	2-1	5-2. Notch Filter High Frequency Adjust ...	5-5/5-6
2-2. Power Cord Configurations	2-1	5-3. Adjustment Locations	5-7
3-2. Distortion Measurement Using 339A Internal Oscillator	3-2	6-1. Mechanical Parts Locator.....	6-15/6-16
3-3. Distortion Measurement of an External Source.....	3-3	7-1. Amplitude Control Circuit Change.....	7-1/7-2
3-1. Control, Connector and Indicator Descriptions	3-0	8-1. Model 339A Simplified Block Diagram	8-2
4-1. Full-Scale Accuracy and Frequency Response Test	4-1	8-2. Simplified Input Amplifier Schematic	8-3
4-2. Meter Tracking and Monitor Output Accuracy Test	4-2	8-3. Simplified Notch Filter Schematic	8-4
4-3. RMS Accuracy Test	4-3	8-4. Effect of Feedback	8-4
4-4. Filter Accuracy Test	4-3	8-5. Simplified Capacitance Neutralizer Schematic	8-5
4-5. Oscillator Output Level and Flatness Test	4-5	8-6. Simplified Amplitude Error Detector Schematic	8-5
4-6. Oscillaotr Output Impedance Test.....	4-6	8-7. Simplified Phase Error Detector Schematic.....	8-6
4-7. Oscillator Frequency Accuracy Test	4-6	8-8. Simplified Auto Set-Level Circuit	8-7
4-8. Oscillator Total Harmonic Distortion Test	4-8	8-9. Simplified Meter Circuit Schematic	8-8
4-9. Logarithmic Addition of Harmonic Components	4-8	8-10. Simplified Oscillator Circuit.....	8-8
4-10. Fundamental Rejection and Induced Distortion Test.....	4-9	8-11. Simplified Amplitude Control Circuit	8-9
4-11. Distortion Measurement Accuracy Test	4-10	8-12. AM Detector and Input Switching	8-11/8-12
4-12. Shielded Load Assembly.....	4-11	8-13. Input Attenuator and Input Amplifier	8-13/8-14
4-13. Input Impedance Test	4-12	8-14. Fundamental Rejection Circuit	8-15/8-16
5-1. Notch Filter Null Adjustments.....	5-3	8-15. Error Detector Circuits	8-17
		8-16. Auto Set-Level and Meter Circuits	8-19/8-20
		8-17. Oscillator Circuits	8-21/8-22
		8-18. Power Supplies	8-23/8-24

SAFETY SYMBOLS


General Definitions of Safety Symbols Used On Equipment or In Manuals.



Instruction manual symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect against damage to the instrument.



Indicates dangerous voltage (terminals fed from the interior by voltage exceeding 1000 volts must be so marked).



Protective conductor terminal. For protection against electrical shock in case of a fault. Used with field wiring terminals to indicate the terminal which must be connected to ground before operating equipment.



Low-noise or noiseless, clean ground (earth) terminal. Used for a signal common, as well as providing protection against electrical shock in case of a fault. A terminal marked with this symbol must be connected to ground in the manner described in the installation (operating) manual, and before operating the equipment.



Frame or chassis terminal. A connection to the frame (chassis) of the equipment which normally includes all exposed metal structures.



Alternating current (power line).



Direct current (power line).



Alternating or direct current (power line).

WARNING

The WARNING sign denotes a hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in injury or death to personnel.

CAUTION

The CAUTION sign denotes a hazard. It calls attention to an operating procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product.

NOTE :

The NOTE sign denotes important information. It calls attention to procedure, practice, condition or the like, which is essential to highlight.

SECTION I GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. This Operating and Service Manual contains information necessary to install, operate, test, adjust, and service the Hewlett-Packard Model 339A Distortion Measurement Set.

1-3. This section of the manual contains the performance specifications and general operating characteristics of the Model 339A. Also listed are available options and accessories, and instrument and manual identification information.

1-4. SPECIFICATIONS.

1-5. Operating Specifications for the Model 339A are listed in Table 1-1. These specifications are the performance standards or limits against which the instrument is tested. Table 1-2 lists general operating characteristics of the instrument. These characteristics are not specifications but are typical operating characteristics included as additional information for the user.

1-6. INSTRUMENT AND MANUAL IDENTIFICATION.

1-7. Instrument identification by serial number is located on the rear panel. Hewlett-Packard uses a two-section serial number consisting of a four-digit prefix and a five-digit suffix separated by a letter designating the country in which the instrument was manufactured. (A = U.S.A.; G = West Germany; J = Japan; U = United Kingdom.) The prefix is the same for all identical instruments and changes only when a major instrument change is made. The suffix, however, is assigned sequentially and is unique to each instrument.

1-8. This manual applies to instruments with serial numbers indicated on the title page. If changes have been made in the instrument since the manual was printed, a yellow "Manual Changes" supplement supplied with the manual will define these changes and explain how to adapt the manual to the newer instruments. In addition, backdating information contained in Section VII adapts the manual to instruments with serial numbers lower than those listed on the title page.

1-9. Part numbers for the manual and the microfiche copy of the manual are also listed on the title page.

1-10. DESCRIPTION.

1-11. The Model 339A Distortion Measurement Set combines a low distortion signal source, a high resolution distortion analyzer, an rms responding voltmeter and a VU (volume units) meter in one unit.

1-12. The signal source used in the Model 339A is a "bridged-T" oscillator which provides a low distortion sine-wave signal from 10 Hz to 110 kHz. The output amplitude is variable from 1 mV rms to 3 V rms into a 600 ohm load and is maintained by an amplitude control circuit which minimizes amplitude variations even when changing frequency ranges.

1-13. The distortion analyzer section of the 339A contains a tracking notch filter which is tuned to the oscillator frequency. The analyzer measures total harmonic distortion (THD) from 100% full-scale to .01% full-scale in nine ranges and features both automatic "Set Level" and automatic "Nulling" to greatly simplify operation. The Auto Set Level feature automatically sets the reference level over a 10 dB range. If the input signal is outside this range, a LED on the front panel indicates whether the INPUT RANGE control setting must be increased or decreased to be within the "pull-in" range of the Auto Set Level. The Auto Nulling feature is fully automatic when the 339A internal oscillator is used as the signal source. When an external oscillator is used as the signal source, an LED on the front panel indicates which direction the FREQUENCY controls must be set to be within the Auto Nulling range. Distortion characteristics of the input signal can be monitored at the MONITOR OUTPUT terminals with external equipment (oscilloscope, voltmeter, spectrum analyzer, etc.) to provide additional analysis of the distortion products.

1-14. The Model 339A is equipped with an amplitude modulation (AM) detector which has a frequency response from 550 kHz to 1.6 MHz. The AM detector permits the measurement of modulation distortion.

1-15. The 339A contains three active filters, one high-pass and two low-pass, which enables the user to eliminate unwanted frequencies and noise to permit higher resolution measurements.

1-16. The ac voltmeter section of the 339A measures the rms value of input voltage from 1 mV full-scale to 300 V full-scale in twelve ranges. In the VU meter mode, the

meter response characteristics are changed to those of a volume units meter.

1-17. OPTIONS.

1-18. The following options are available for use with the Model 339A:

Option 907: Front Handle Kit

- Option 908: Rack Mounting Kit
- Option 909: Front Handle and Rack Mounting Kit
- Option 910: Additional Operating and Service Manual

1-19. Recommended Test Equipment

1-20. Equipment required to maintain the Model 339A is listed in Table 1-3. Other equipment may be substituted if it meets the critical requirements listed in the table.

Table 1-1. Specifications.

DISTORTION

Fundamental Frequency Range:

10 Hz to 110 kHz continuous frequency coverage in 4 decade ranges with 2-digit resolution. Distortion analyzer and oscillator are simultaneously tuned.

Distortion Measurement Range:

0.01% full scale to 100% full scale (-80 dB to 0 dB) in 9 ranges.

Detection and Meter Indication:

True rms detection for waveforms with crest factor ≤ 3 . Meter reads dB and % THD (Total Harmonic Distortion). Meter response can be changed from NORMAL to VU ballistics with a front panel switch.

Distortion Measurement Accuracy:

20 Hz to 20 kHz	± 1 dB
10 Hz to 50 kHz	+1, -2 dB
50 kHz to 110 kHz	+1.5, -4 dB

NOTE

The above specifications apply for harmonics < 330 kHz.

Fundamental Rejection:

10 Hz to 20 kHz	> 100 dB
20 kHz to 50 kHz	> 90 dB
50 kHz to 110 kHz	> 86 dB

Distortion Introduced by Instrument (Input > 1 V rms)

10 Hz to 20 kHz	< -95 dB
20 kHz to 30 kHz	< -90 dB
30 kHz to 50 kHz	< -85 dB
50 kHz to 110 kHz	< -70 dB

Residual Noise (Fundamental frequency setting < 20 kHz, 80 kHz filter in, source resistance ≤ 1 k Ω shielded):

< -92 dB referenced to 1 V.

Input Level for Distortion Measurements:

30 mV to 300 V rms
(100 mV range minimum)

Input Impedance:

100 k Ω $\pm 1.0\%$ shunted by < 100 pF input High to Low.

DC Isolation:

Input low may be connected to chassis ground or floated 30 V to reduce the effects of ground loops on the measurement.

Auto Set Level:

No set level adjustment required. Distortion measurements are made directly over 10 dB range selected by input range switch. Two LED annunciators provide a fast visual indication to change input range for valid distortion measurement. Correct range is indicated when both annunciators are extinguished.

Auto Null:

Using internal oscillators: No manual frequency tuning necessary when using internal oscillator as signal source. Oscillator frequency controls simultaneously tune the analyzer.

Using external frequency source: Two LED annunciators provide a quick visual indication for the operator to increase or decrease the analyzer frequency controls. When the analyzer is rough tuned to within one least significant digit of the fundamental frequency, the indicator lights are extinguished and the 339A auto-null circuitry takes over to provide a fast accurate null without tedious operator tuning.

Input Filters (usable on all functions):

Low Pass

30 kHz - 3 dB point at 30 kHz, + 2.6 kHz, - 3 kHz. Provides band limiting required by FCC for proof-of-performance broadcast testing.

80 kHz - 3 dB point at 80 kHz, + 7 kHz, - 7.9 kHz. Normally used with fundamental frequencies < 20 kHz to reduce the effect of higher frequency noise present in the measured signal.

High Pass

400 Hz - 3 dB point at 400 Hz, + 35 Hz, - 40 Hz. Normally used with fundamental frequencies > 1 kHz to reduce the effect of hum components in the input signal.

Monitor Output:

Provides scaled presentation of input signal after

Table 1-1. Specifications (Cont'd).

fundamental is removed for further analysis using oscilloscope or low frequency spectrum analyzer.	scale meter indication, proportional to meter deflection.
Output Voltage: 1 V rms $\pm 5\%$ open circuit for full	Output Resistance: 1 k Ω $\pm 5\%$.
VOLTMETER	
<i>Voltage Range:</i>	<i>Monitor Output:</i>
1 mV rms full scale to 300 V rms full scale (-60 dB to +50 dB full scale, meter calibrated in dBV and dBm into 600 Ω)	Provides scaled presentation of input signal for further analysis using oscilloscope or low frequency spectrum analyzer.
<i>Frequency Range:</i>	Output Voltage: 1 V rms $\pm 5\%$ open circuit for full scale meter indication, proportional to meter deflection.
10 Hz to 110 kHz	Output Resistance: 1 k Ω $\pm 5\%$.
<i>Accuracy (% of range setting)</i>	
20 Hz to 20 kHz $\pm 2\%$ 10 Hz to 110 kHz $\pm 4\%$	
<i>Detection and Meter Indication</i>	RELATIVE INPUT LEVEL
True rms detection for waveforms with crest factor ≤ 3 . Meter reads true rms volts, dB V, and dBm into 600 Ω .	Provides a ratio measurement relative to an operator selected reference level with readout directly in dB V or dBm (600 Ω).
<i>Input Impedance:</i>	Voltage range, frequency range, accuracy specifications, and monitor are the same as in VOLTMETER mode. (Accuracy is relative to 0 dB set level input.)
100 k Ω $\pm 1.0\%$ shunted by < 100 pF Input High to Low.	
OSCILLATOR	
<i>Frequency Range:</i>	<i>Frequency Accuracy:</i>
10 Hz to 110 kHz in 4 overlapping decade ranges with 2 digit resolution. Frequency vernier provides continuous frequency tuning between 2nd digit switch settings.	$\pm 2\%$ of selected frequency (with FREQUENCY VERNIER in CAL position).
<i>Output Level:</i>	<i>Level Flatness:</i>
Variable from < 1 mV to > 3 V rms into 600 Ω with 10 dB/step LEVEL control and 10 dB VERNIER adjustment.	20 Hz to 20 kHz ± 0.1 dB 10 Hz to 110 kHz ± 0.2 dB
OSC LEVEL position on function switch allows a quick check of oscillator level without disconnecting leads to device under test.	<i>Distortion</i> ($\geq 600 \Omega$ load, ≤ 3 V output):
OFF position on Oscillator LEVEL control provides fast signal-to-noise measurement capability. Oscillator output terminals remain terminated in 600 Ω .	10 Hz to 20 kHz < -95 dB (0.0018%) THD 20 kHz to 30 kHz < -85 dB (0.0056%) THD 30 kHz to 50 kHz < -80 dB (0.01%) THD 50 kHz to 110 kHz < -70 dB (0.032%) THD
<i>Output Resistance:</i>	<i>Output Resistance:</i>
	600 Ω $\pm 5\%$
AM DETECTOR	
<i>Frequency Range:</i>	<i>Input Level:</i>
Carrier frequencies: 550 kHz to 1.6 MHz. Modulation frequencies: 20 Hz to 20 kHz.	Maximum: 60 V peak Modulation signal level: 2.0 V rms minimum 10 V rms maximum
<i>Distortion introduced by AM Detector (with 30 kHz filter switched IN):</i>	<i>Monitor Output</i> (with modulated RF carrier applied to AM Detector input):
Up to 85% Modulation: < -36 dB (1.6%) THD 85% to 95% Modulation: < -30 dB (3%) THD	

Table 1-1. Specifications (Cont'd).

Distortion mode: Provides scaled presentation of demodulated input signal after fundamental is removed.	Voltmeter and Relative Input mode: Provides scaled presentation of demodulated input signal. Output Voltage and Output Resistance are the same as in Distortion mode.
---	---

Table 1-2. Typical Operating Characteristics.

GENERAL

Operating Environment:

Temperature: 0°C to 50°C.
Humidity Range: < 95%, 0°C to 40°C.

Storage Temperature:

-40°C to +65°C.

Power:

100/120/220/240, +5%, -10%, 40 to 66 Hz, 200 mA max.

Weight:

Net 8.2 kg (18 lbs.); shipping 11.3 kg (25 lbs.).

Dimensions:

426 mm wide x 146 mm high x 442 mm deep (16.75" wide x 5.75" high x 17.4" deep).

Table 1-3. Recommended Test Equipments.

Instrument	Critical Specification	Recommended Model	Use
AC Calibrator	Frequency: 10 Hz - 110 kHz Output Level: 1 mV - 300 V rms Level Accuracy: ± .2% Output Impedance: ≤ 50 Ω	-hp- Model 745A AC Calibrator -hp- Model 746A High Voltage Amplifier	PAT
True RMS Voltmeter	Frequency Range: 10 Hz - 110 kHz Voltage Range: 1 mV - 10 V rms Measurement Accuracy: ± .5% Measurement Resolution: .1% of full-scale Crest Factor: ≥ 4	-hp- Model 3403C True RMS Voltmeter	PT
Pulse Generator	Pulse Output Amplitude: 10 V p-p Pulse Width: Variable, 1 msec - 10 μsec Repetition Rate: 100 Hz - 10 kHz	-hp- Model 8011A Pulse Generator	P
Oscilloscope	Bandwidth: DC - 2 MHz Sweep Time: .1 μs - .5 sec/div Sensitivity: .1 V/div.	-hp- Model 1221A Oscilloscope	PT

Table 1-3. Recommended Test Equipments (Cont'd).

Instrument	Critical Specification	Recommended Model	Use
Frequency Counter	Frequency Range: 10 Hz - 110 kHz Frequency Resolution: .1% of reading	-hp- Model 5300A Counter Mainframe -hp- Model 5302A Counter Module	P
Spectrum Analyzer	Frequency Range: 10 Hz - 330 kHz Frequency Resolution: .1 Hz Input Amplitude: 1 V Dynamic Range: 50 dB Measurement Resolution: $\pm .1$ dB Minimum Bandwidth: 3 Hz	-hp- Model 3044A Spectrum Analyzer	PA
Tunable Notch Filter	Frequency Range: 10 Hz - 110 kHz Notch Depth: ≥ -80 dB	-hp- Model 339A Distortion Measurement Set	P
Low Distortion Oscillator	Frequency Range: 10 Hz - 110 kHz Output Level: 3 V rms into 600 Ω THD: > -95 dB (10 Hz - 20 kHz) > -85 dB (20 kHz - 30 kHz) > -80 dB (30 kHz - 50 kHz) > -70 dB (50 kHz - 110 kHz)	-hp- Model 239A Oscillator	PAT
DC Digital Voltmeter	Input Range: 4 V dc Measurement Accuracy: $\pm .1$ % Resolution: .01% of full-scale	-hp- Model 3465A Digital Voltmeter	AT
Resistors	600 Ω Resistive Load	-hp- Accessory No. 11095A	PA
	600 Ω 1% Metal Film	-hp- Part No. 0698-5405	
	60 k Ω 1% Metal Film	-hp- Part No. 0698-5973	P
	100 k Ω .1% Metal Film	-hp- Part No. 0698-4158	
	1 k Ω 1% Metal Film	-hp- Part No. 0757-0280	

P = Performance Test

A = Adjustment Procedures

T = Troubleshooting

SECTION II INSTALLATION

2-1. INTRODUCTION.

2-2. This section of the manual contains information and instructions necessary to install the Model 339A Distortion Measurement Set. Also included are initial inspection procedures, power and grounding requirements, environmental information, and packaging instructions.

2-3. INITIAL INSPECTION.

2-4. This instrument was carefully inspected, both mechanically and electrically, before shipment. It should be free of mars and scratches and in perfect electrical order. The instrument should be inspected upon receipt for damage that might have occurred in transit. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been mechanically and electrically inspected. Procedures for testing the electrical performance of the Model 339A are given in Section IV of this manual. If the contents are incomplete, if there is mechanical damage or defect, or if the instrument does not pass the Performance Tests, notify the nearest Hewlett-Packard Office. (A list of the -hp- Sales and Service Offices is presented at the back of this manual.) If the shipping container is damaged, or the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard Office. Save the shipping materials for the carriers inspection.

2-5. PREPARATION FOR USE.

2-6. Power Requirements.

2-7. The Model 339A requires a power source of 100, 120, 220, or 240 V ac (+5% - 10%), 48 Hz to 66 Hz single phase. Maximum power consumption is 48 VA.

2-8. Line Voltage Selection.

2-9. Before connecting ac power to the Model 339A make sure the rear panel line selector switches are set to correspond to the available power line voltage and that the proper fuse is installed, as shown in Figure 2-1. The instrument is shipped from the factory with the line voltage and fuse selected for 120 V ac operation.

2-10. Power Cable.

2-11. Figure 2-2 illustrates the standard configurations used for -hp- power cables. The number directly below each drawing is the -hp- part number for a power cable equipped with a connector of that configuration. If the

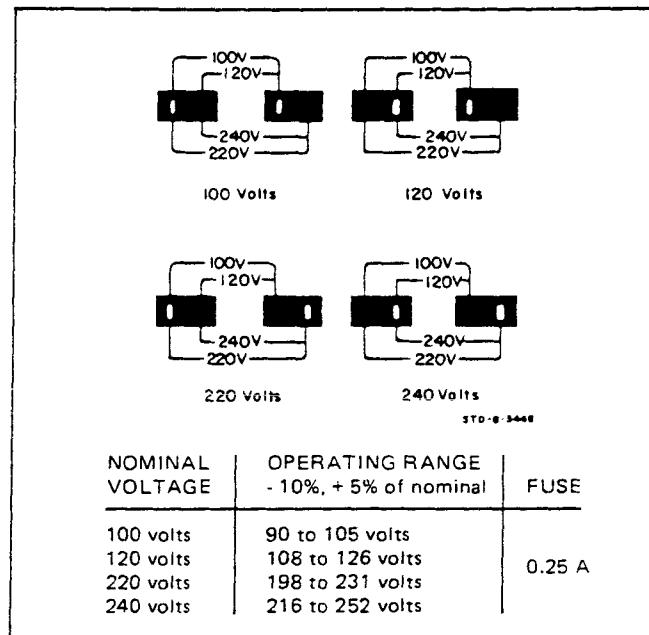


Figure 2-1. Line Voltage Selection.

appropriate power cable is not included with the instrument, notify the nearest -hp- Sales and Service Office and the proper cable will be provided.

2-12. Grounding Requirements.

2-13. To protect operating personnel, the National Electrical Manufacturer's Association (NEMA) recommends that the instrument cabinet and front panel be grounded. The Model 339A is equipped with a three

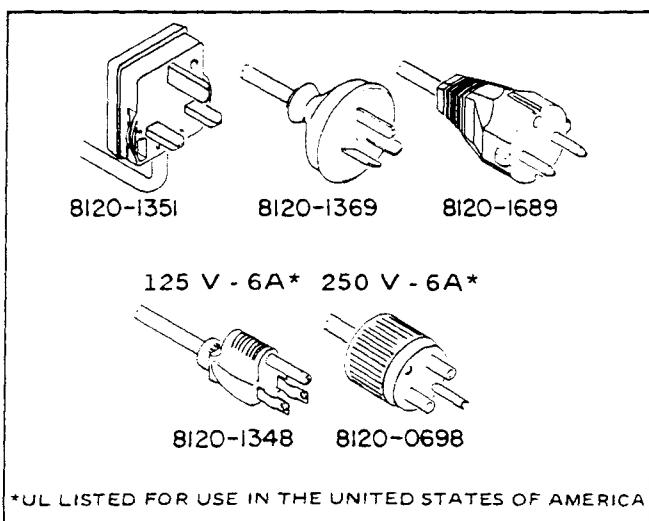


Figure 2-2. Power Cord Configurations.

conductor power cable which, when plugged into an appropriate receptacle, grounds the instrument.

2-14. Bench Use.

2-15. The Model 339A is shipped with plastic feet and tilt stands installed and is ready for use as a bench instrument. The plastic feet are shaped to permit "stacking" with other full-module Hewlett-Packard instruments. The tilt stands permit the operator to elevate the front of the instrument for operating and viewing convenience.

2-16. Rack Mounting.

2-17. The Model 339A may be rack mounted by adding rack mounting kit Option 908 or Option 909. Option 908 contains the basic hardware and instructions for rack mounting; Option 909 adds front handles to the basic rack mount kit. The rack mount kits are designed to permit the instrument to be installed in a standard 19 inch rack.

2-18. ENVIRONMENTAL REQUIREMENTS.

WARNING

To prevent electrical shock or fire hazard, do not expose the instrument to rain or moisture.

2-19. Operating and Storage Temperature.

2-20. In order to meet the specifications listed in Table 1-1, the instrument should be operated within an ambient temperature range of 0°C to +50°C (+32°F to +122°F).

2-21. The instrument may be stored or shipped where the ambient temperature range is within -40°C to +65°C (-40°F to +149°F). However, the instrument should not be stored or shipped where temperature fluctuations cause condensation within the instrument.

2-22. Humidity.

2-23. The instrument may be operated in environments with relative humidity of up to 95%. However, the instrument must be protected from temperature extremes which cause condensation within the instrument.

2-24. Altitude.

2-25. The instrument may be operated at altitudes up to 4572 meters (15,000 feet).



2-26. REPACKAGING FOR SHIPMENT.

NOTE

If the instrument is to be shipped to Hewlett-Packard for service or repair, attach a tag to the instrument identifying the owner and indicating the service or repair to be accomplished. Include the model number and full serial number of the instrument. In any correspondence, identify the instrument by model number and full serial number. If you have any questions, contact your nearest -hp-Sales and Service Office.

2-27. The following is a general guide for repackaging the instrument for shipment. If the original container is available, place the instrument in the container with appropriate packing material and seal well with strong tape or metal bands. If the original container is not available, proceed as follows:

- a. Wrap the instrument in heavy paper or plastic before placing it in an inner container.
- b. Place packing around all sides of the instrument and protect the front panel with cardboard strips or plastic foam.
- c. Place the instrument and inner container in a heavy carton and seal with strong tape or metal bands.
- d. Mark the shipping container "DELICATE INSTRUMENT", "FRAGILE", etc.

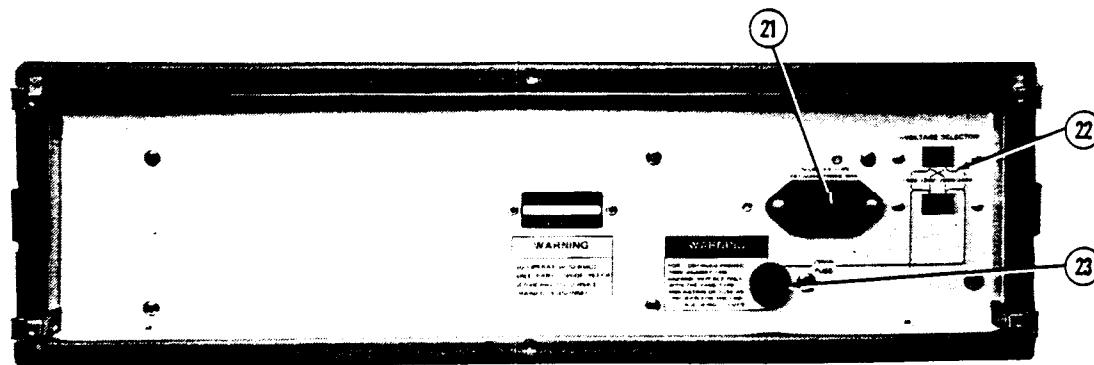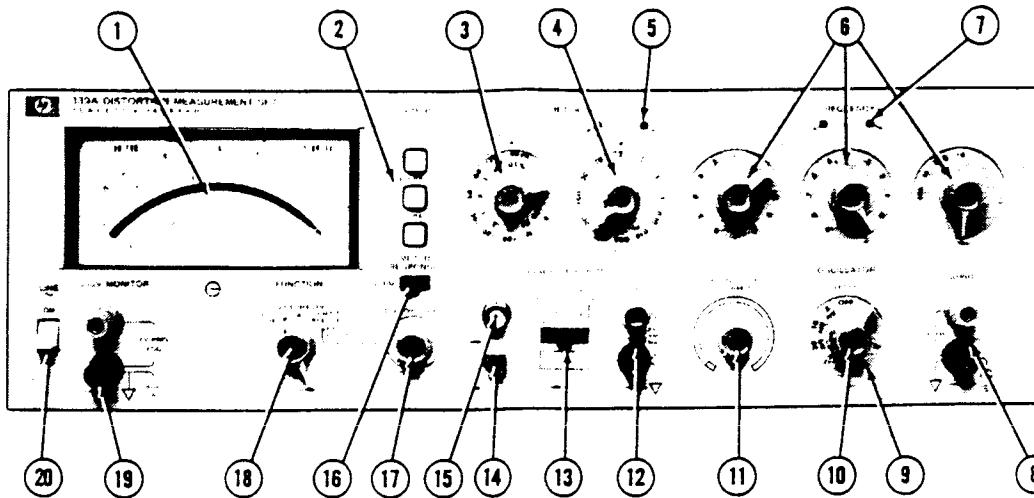

1. Meter indicates voltage level, distortion in dB or percent, or VU (volume units) in dB.

2. Filters permit the user to eliminate unwanted frequencies and noise from the measurement. The filters include a 400 Hz high-pass filter which is normally used to reject power-line related noise, a 30 kHz low-pass filter for use in making "proof of performance" measurements at AM broadcast stations, and an 80 kHz low-pass filter to eliminate high frequency noise.

3. DISTORTION RANGE control selects the gain of the distortion measurement circuits to the proper sensitivity for measuring the applied signal.

4. INPUT RANGE control sets the input range of the distortion and meter circuits to the proper sensitivity for measuring the applied signal.

5. Input Range indicators indicate the direction the INPUT RANGE control must be turned to select the correct range for the signal applied.

6. FREQUENCY controls determine the fundamental rejection frequency of the analyzer and the output frequency of the oscillator.

7. Frequency indicators indicate the direction the FREQUENCY controls must be turned to bring the analyzer circuits within "pull-in range" of the fundamental frequency of the applied signal. This applies only when using an external signal source.

8. OSCILLATOR OUTPUT terminals. Output impedance is 600 Ω .

9. OSCILLATOR LEVEL control changes the output level in 10 dB V steps from 3 mV rms to 3 V rms into 600 Ω . The LEVEL control also includes an OFF position which disconnects the oscillator output and terminates the output terminals with a 600 Ω resistive load.

10. Oscillator LEVEL Vernier permits the output level to be varied below the level selected by the LEVEL control. This makes the oscillator output level continuously variable from less than 1 mV to greater than 3 rms into 600 Ω .

11. OSCILLATOR FREQUENCY VERNIER. Frequency range of the vernier permits the oscillator output frequency to be increased above the frequency selected by the FREQUENCY controls. Frequency range of the vernier is approximately equal to one step on the center frequency control.

12. DISTORTION ANALYZER (and voltmeter) terminals provide connection for analyzer and voltmeter inputs.

13. ANALYZER (and voltmeter) INPUT/GND SELECT switch selects DISTortion ANALyzer input with either circuit or chassis ground or AM DETECTOR input with chassis ground only.

14. AM DETECTOR input terminal provides connection for amplitude modulated RF signals.

15. Ground Terminal provides connection to 339A Chassis.

16. METER RESPONSE switch selects normal or VU (volume units) meter response.

17. RELATIVE ADJUST permits the user to set a convenient reference level on the meter when using the voltmeter RELative LEVEL FUNCTION.

18. FUNCTION control selects analyzer or voltmeter functions.

19. MONITOR terminals permit the signal applied to the meter circuitry to be monitored. The MONITOR output is 1 V rms for a full-scale meter deflection.

With an audio signal applied to the DISTORTION ANALYZER input the MONITOR output will be:

DISTORTION FUNCTION - Distortion products of the applied signal after the fundamental has been removed.

INPUT LEVEL - And RELative LEVEL FUNCTIONS. Scaled presentation of the applied signal.

With a modulated RF signal applied to the AM DETECTOR input the MONITOR output will provide:

DISTORTION FUNCTION - Scaled presentation of the demodulated input signal with the fundamental removed.

INPUT LEVEL and RELative LEVEL FUNCTIONS - Scaled presentation of the demodulated input signal.

The MONITOR terminals are disabled when using the OSCillator LEVEL FUNCTION.

20. LINE switch applies ac power to the instrument.

21. AC LINE connector provides connection for ac power.

22. AC VOLTAGE SELECTOR switches set the instrument to operate from 100 V, 120 V, 220 V, or 240 V ac power source.

23. FUSE protects the instrument circuits from excessive current.

Figure 3-1. Control, Connector and Indicator Descriptions.

SECTION III OPERATION

3-1. INTRODUCTION.

3-2. This section contains information and instructions necessary for operation of the Model 339A Distortion Measurement Set. Included is a description of operating characteristics, a description of operating controls and indicators, and functional checks to be performed by the operator.

3-3. OPERATING CHARACTERISTICS.

3-4. General.

3-5. The Model 339A is designed to measure Total Harmonic distortion (THD) of signals having a fundamental frequency between 10 Hz and 110 kHz. The analyzer section of this instrument measures total harmonic distortion levels from 100% (0 dB) full-scale to .01% (-80 dB) full-scale in nine ranges as selected by the DISTORTION RANGE control. To simplify operation, the analyzer section features both automatic "set level" and automatic "nulling".

3-6. The Auto Set Level feature automatically sets the measurement reference level over a 10 dB V range. If the input signal is outside this range, an LED on the front panel indicates whether the INPUT RANGE control setting must be increased or decreased to be within the "pull-in" range of the Auto Set Level.

3-7. The Auto Nulling feature is fully automatic when the 339A internal oscillator is used as the signal source. When using an external signal source, an LED on the front panel indicates which direction the FREQUENCY controls must be rotated to be within the Auto Nulling range.

3-8. The Model 339A includes an AM detector which has a carrier frequency range of 550 kHz to 1.6 MHz. The AM detector permits the measurement of THD of a modulation signal.

3-9. The signal source used in the Model 339A is a "bridged T" oscillator which provides a low distortion sine-wave signal from 10 Hz to 110 kHz. The operating

frequencies of the oscillator and the analyzer notch filter are set simultaneously. The output level of the oscillator is variable from 1 mV rms full-scale to 3 V rms full-scale into a 600 Ω load.

3-10. The ac voltmeter section of the Model 339A measures the true rms value of input voltages from 1 mV full-scale to 300 V full-scale in twelve ranges. Frequency response of the meter section is 10 Hz to 110 kHz.

3-11. True RMS VS Average Responding Detection.

3-12. Since the 339A employs a true rms converter to detect the measurement signal, it is less susceptible to errors than average responding devices. Most average responding meters are calibrated to indicate the rms value of a pure sine-wave. When reading a pure sine-wave, both the true rms and average responding meters will give the correct indication. However, when reading complex signals the average responding meter may be in error. The amount of error depends upon the particular signal being measured.

As an example; when measuring a square-wave, the true rms meter will give the correct indication of the rms value. The average responding meter however, will read 11% high. The average responding meter is also affected by signals with harmonic content. The amount of error introduced by an average responding meter due to harmonics is dependent upon the relative amplitude, phase, and order of the harmonic. The third harmonic usually causes the greatest amount of error. For example, when measuring a signal with third harmonic content, an average responding meter can be in error by +5% to -20% depending upon the amplitude and phase of the harmonic, relative to the fundamental frequency. Due to the errors inherent in average responding meters, a distortion analyzer which employs this type of detector will also be subject to the same measurement errors. These errors can cause indicated distortion readings to be as much as 1.3 dB below the actual rms value for certain combinations of second and third harmonics. The Model 339A is not affected by the errors associated with average responding detectors and will provide more accurate measurement indications.

3-13. Turn-On and Warm-Up.

3-14. Before connecting ac power to the 339A, be certain the rear panel voltage selector switches are set to correspond to the voltage of the available power line and that the proper fuse is installed for the voltage selected. For rated measurement accuracy, the 339A should be allowed to "warm-up" for at least 15 minutes.

3-15. DISTORTION MEASUREMENT.

3-16. Distortion Measurement Using the 339A Internal Oscillator.

3-17. The Model 339A Distortion Measurement Set is designed to provide complete capability for measuring Total Harmonic Distortion by combining an automatic, high resolution distortion analyzer and a low distortion signal source. Figure 3-2 illustrates the fundamental application of the Model 339A. The figure shows the equipment configuration and includes an operating procedure for making THD measurements.

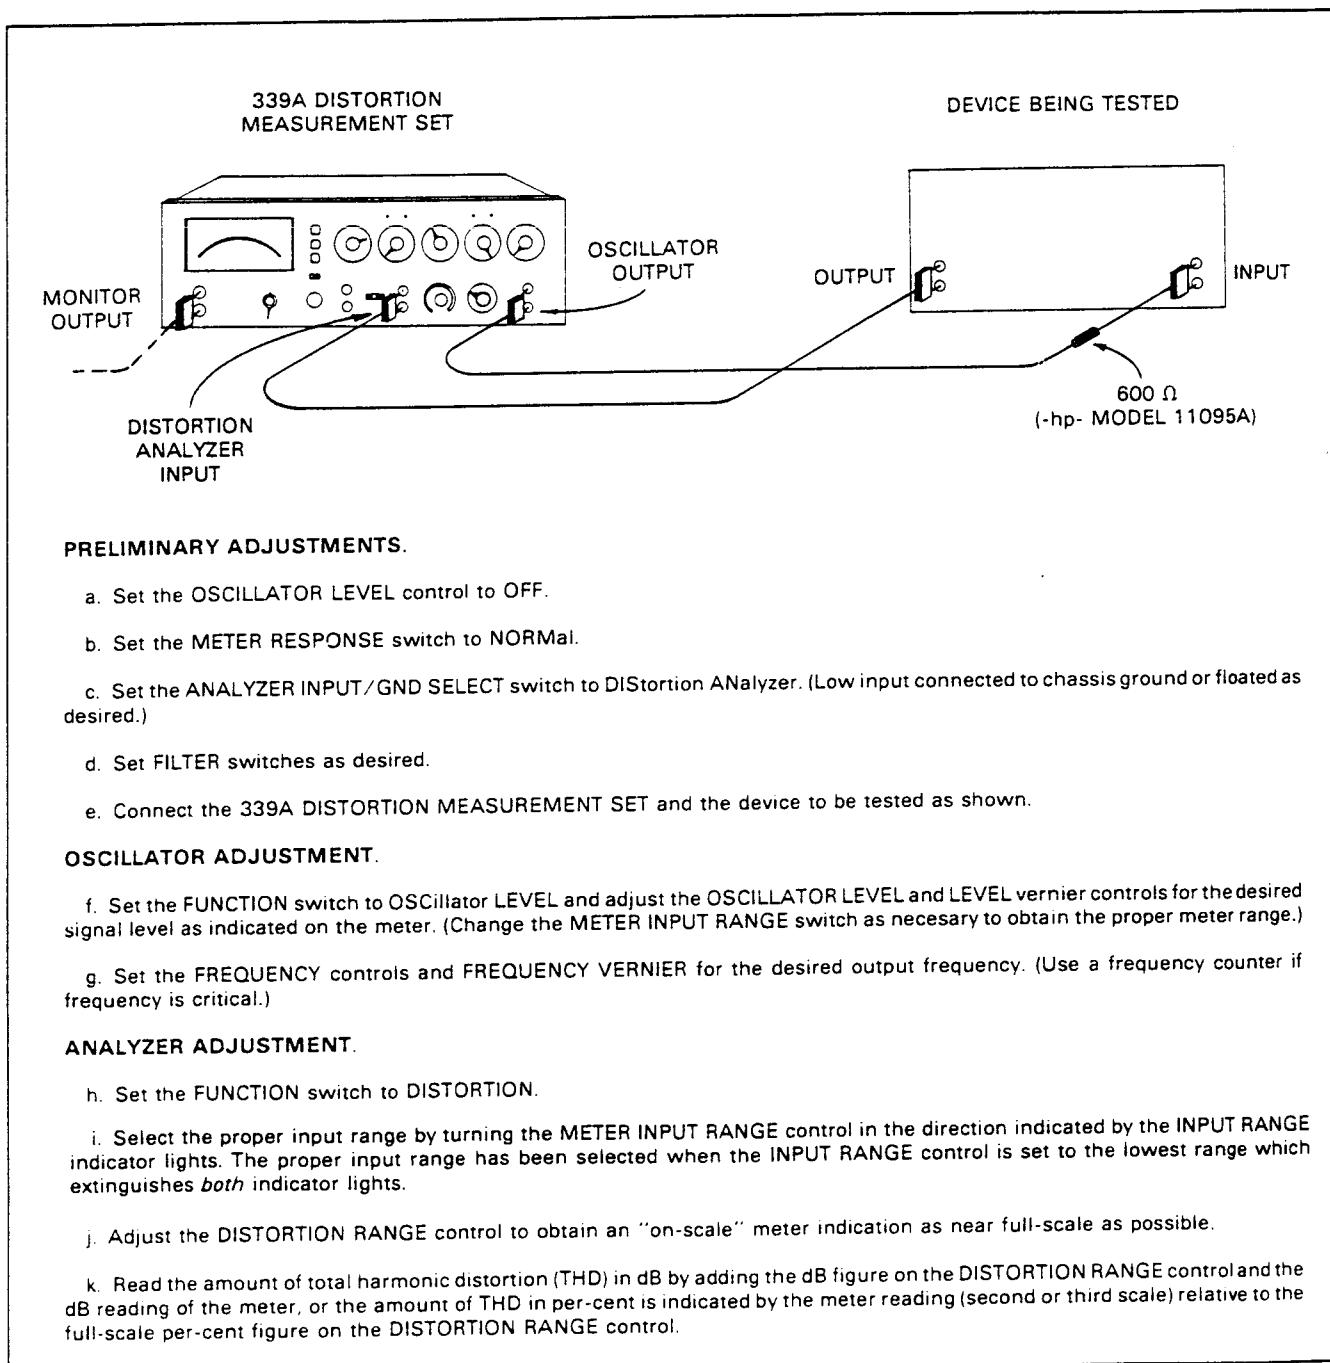


Figure 3-2. Distortion Measurement Using 339A Internal Oscillator.

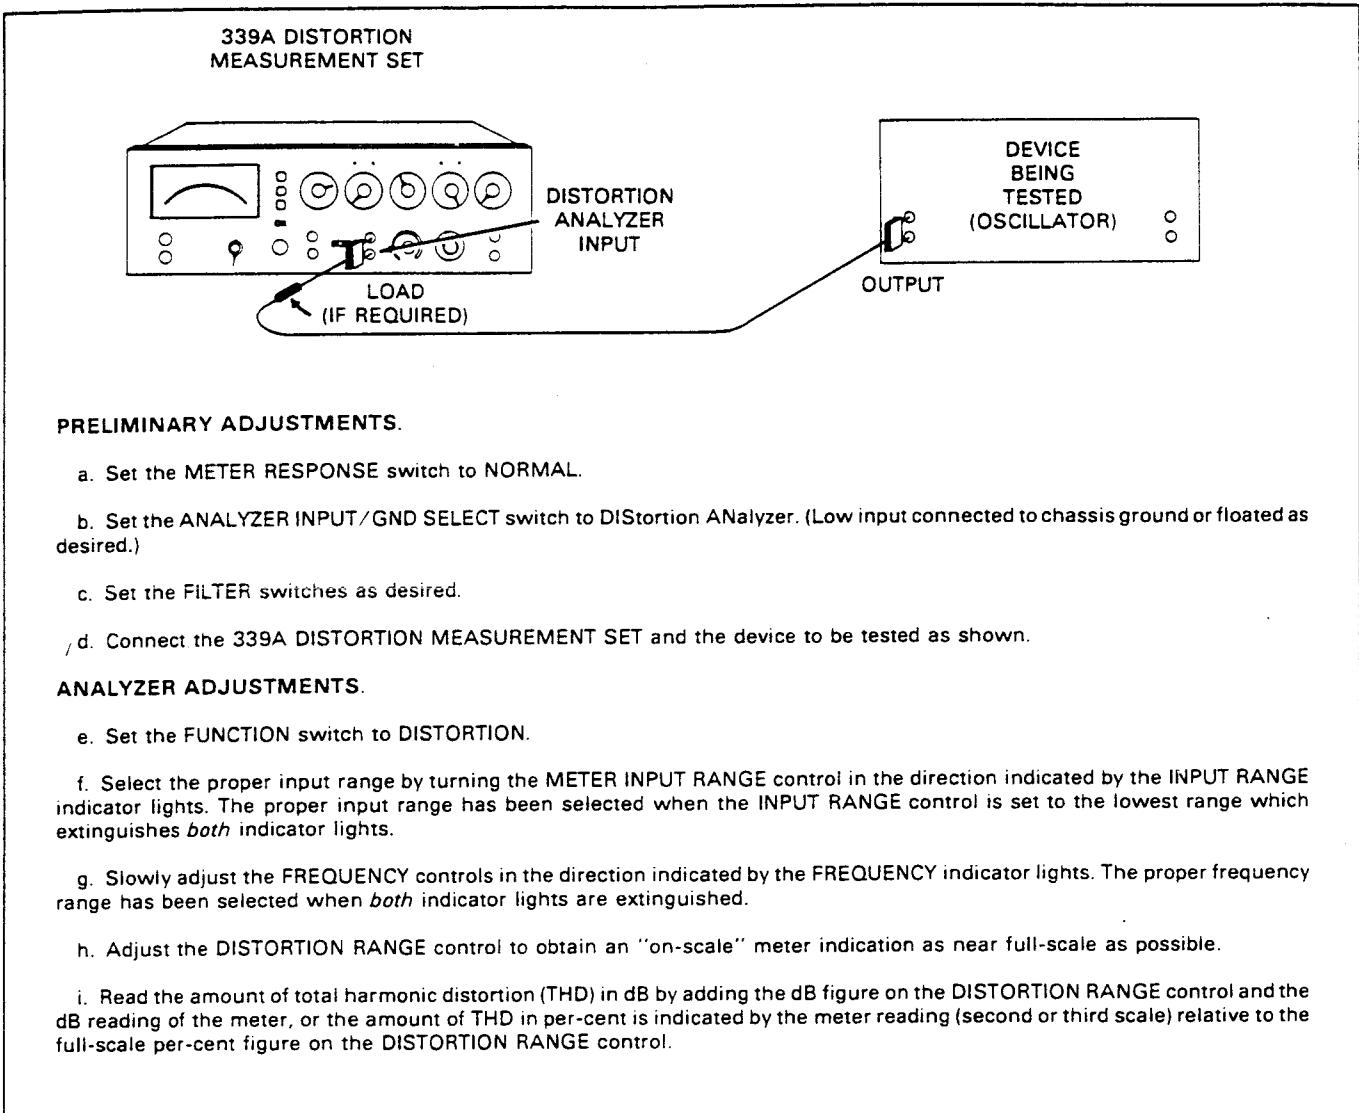


Figure 3-3. Distortion Measurement of an External Source.

3-18. Distortion Measurement of an External Source.

Figure 3-3 shows another measurement application. In this case the Model 339A is used to measure the THD of a signal source. The figure includes an illustration of the necessary equipment connections and an operating procedure for making the measurement.

3-20. AM DETECTOR.

3-21. The Model 339A includes an AM DETECTOR to permit the user to measure the total harmonic distortion of a modulation signal on an RF carrier. Equipment connection and measurement procedures are similar to those outlined in Figure 3-3 except the input is connected to the AM DETECTOR input.

3-22. VOLTMETER OPERATION.

3-23. The following procedures outline the operating procedures for the various voltmeter functions.

3-24. Normal Voltmeter Operation.

3-25. To use the Model 339A as a normal, true rms voltmeter, proceed as follows:

- Set the FUNCTION switch to INPUT LEVEL.
- Set the METER RESPONSE switch to NORMAL.
- Set the INPUT/GND SELECT switch to DIStortion ANalyzer (low input connected to chassis ground or floating as desired).

- d. Set the FILTER switches off (out).
- e. Connect the signal to be measured to the DISTORTION ANALYZER input connectors.
- f. Adjust the INPUT RANGE control in the direction indicated by the INPUT RANGE indicator lights until an "on-scale" meter indication, as near full-scale as possible, is obtained. (Both indicator lights will be off.)

3-26. RELATIVE LEVEL OPERATION.

3-27. The RELATIVE LEVEL FUNCTION permits the user to adjust the meter gain of the 339A to set a convenient reference level on the meter (usually 0 dB). This function is convenient for measuring signal levels relative to a reference level. To use the RELATIVE LEVEL FUNCTION, proceed as follows:

- a. Set the FUNCTION switch to RELATIVE LEVEL.
- b. Set the METER RESPONSE switch to NORMAL.
- c. Set the INPUT/GND SELECT switch to DISTORTION ANALYZER. (Low input connected to chassis ground or floating as desired.)
- d. Set the FILTER switches off (out).
- e. Connect the reference signal to the DISTORTION ANALYZER input connectors.
- f. Adjust the INPUT RANGE control in the direction indicated by the INPUT RANGE indicator lights until an "on-scale" meter indication is obtained.
- g. Use the RELATIVE ADJUST control to set the meter to the desired reference level.
- h. Measure other input levels relative to the reference just established. Do not change the RELATIVE ADJUST control.

3-28. Oscillator Level Operation.

3-29. In the OSCILLATOR LEVEL function, the analyzer inputs and the MONITOR output is disabled and the 339A meter circuit is used to monitor the output level of the oscillator. To measure the oscillator output level, perform the following:

- a. Set the FUNCTION switch to OSCILLATOR LEVEL.
- b. Set the METER RESPONSE switch to NORMAL.
- c. Set the FILTER switches to off (out).
- d. Adjust the INPUT RANGE control as necessary to obtain an "on-scale" meter indication as near full-scale as possible.

e. The meter reading, relative to the meter range selected by the INPUT RANGE control indicates the output level of the oscillator.

3-30. To adjust the oscillator output to a particular level, perform the following:

- a. Set the FUNCTION switch to OSCILLATOR LEVEL.
- b. Set the METER RESPONSE switch to NORMAL.
- c. Set the FILTER switches to off (out).
- d. Set the INPUT RANGE control to the appropriate meter range for the oscillator output level desired.
- e. Adjust the OSCILLATOR LEVEL control and LEVEL vernier until the desired output level is indicated on the meter.

3-31. VU MEASUREMENTS.

3-32. To measure volume units (VU), the meter response characteristics are changed to those of a VU meter by switching the METER RESPONSE switch to the VU position. VU measurements can be made in the INPUT LEVEL or RELATIVE LEVEL functions. Measurement results are normally read on the dBm 600 ohms meter scale. Operating procedures for making VU measurements are the same as those listed for Normal Voltmeter Operation or Relative Level Operation.

3-33. Filters.

3-34. Three 60 dB/decade active filters, one high-pass and two low-pass, are included to permit the user to eliminate unwanted frequencies and noise. These filters may be selected individually or in any combination by means of the front panel FILTER switch. The frequencies labeled beside each switch indicate the 3 dB "roll-off" point of that particular filter.

3-35. Input Ground Select.

3-36. The ANALYZER Low input reference is selected by the INPUT/GND SELECT switch. When using the DISTORTION ANALYZER input, the input low is connected to chassis ground (center switch position) or allowed to float (right switch position). When using the AM DETECTOR input (left switch position) the input low is connected to chassis ground.

CAUTION

To prevent damage to the analyzer input circuits, do not float the low input terminal more than ± 30 Vdc relative to earth ground.

3-37. Monitor Output.

3-38. The MONITOR output provides a means of driving external equipment to permit a more detailed analysis of the signal being measured. Instruments, such as an oscilloscope, wave analyzer, or spectrum analyzer can be used to determine the nature of the total harmonic distortion being measured. The monitor output level is 1 V rms for full-scale meter deflection. The MONITOR output is disabled when using the OSCILLATOR LEVEL FUNCTION.

3-39. OSCILLATOR OPERATION.

3-40. Frequency Selection.

3-41. The oscillator frequency is determined by the setting of the FREQUENCY and FREQUENCY VERNIER controls. The units and tenths controls determine the first and second digits of the desired frequency. These numbers are then multiplied by the range selected on the multiplier control. As an example: to set the oscillator to a frequency of 5.6 kHz; set the units control to 5, the tenths control to .6, and the multiplier to X1K. (The FREQUENCY VERNIER should be set to the CAL position.) The FREQUENCY VERNIER provides continuous frequency tuning between steps of the tenths control to permit continuous frequency selection from 10 Hz to 110 kHz.

3-42. Output Level.

3-43. The oscillator output level is controlled by the OSCILLATOR LEVEL control and LEVEL vernier. The OSCILLATOR LEVEL control selects output levels from 3 mV rms full-scale to 3 V rms full-scale in 10 dB V steps (600 ohm load). The level vernier varies the output level from greater than 3 V rms to less than 1 mV rms (600 ohm load).

3-44. OPERATIONAL VERIFICATION CHECKS.

3-45. The following procedures are designed to test the operational capabilities of the Model 339A. If so desired, these tests can be substituted for the performance tests outlined in Section IV for incoming inspection tests or to check operation after calibration. Keep in mind however, these tests check only the operational capabilities of the Models 339A. They *do not* check the performance accuracy. If the instrument fails any of the following tests, refer service to qualified service personnel.

3-46. Preliminary Procedure.

3-47. Before connecting power to the 339A, perform the following:

a. Be certain that the rear panel VOLTAGE SELECTOR switches are set to correspond to the

available power line voltage and that the proper fuse is installed.

b. Connect power to the 339A and turn the LINE switch ON.

c. Set the FILTER switches off (out).

d. Set the METER RESPONSE switch to NORMAL.

3-48. OSCILLATOR.

3-49. This procedure checks the output level of the 339A oscillator for all frequency settings. Frequency accuracy is not checked. To check the oscillator proceed as follows:

a. Set the FUNCTION switch to OSCILLATOR LEVEL.

b. Set the INPUT RANGE control to the 10 volt range.

c. Set the FREQUENCY controls fully counterclockwise.

d. Set the OSCILLATOR LEVEL control and level vernier fully clockwise. The meter should indicate more than 6 volts.

e. Set the level vernier fully counterclockwise. The meter should indicate less than 2 volts.

f. Set the INPUT RANGE control to the +10 dBm range and adjust the level vernier for a 0 dBm meter indication (blue scale).

g. While observing the meter, set the FREQUENCY controls to each dial position. (Allow time for the meter reading to stabilize at each setting.) The meter indication should not vary more than 0.6 dBm from the original setting.

h. Set the FREQUENCY controls for a frequency of 1 kHz.

i. Adjust the level vernier for a meter indication 0 dBm.

j. Simultaneously down-range the OSCILLATOR LEVEL and INPUT RANGE controls to the next lower range. The meter should indicate 0 dBm.

k. Repeat Steps i and j for each position of the OSCILLATOR LEVEL control.

3-50. AC VOLTMETER.

3-51. The following procedure checks the ac voltmeter functions and ranges. Perform the following steps:

- a. Set the FILTER switches off (out), the METER RESPONSE switch to NORMAL, and the INPUT/GND SELECT switch to the center position (DIStortion ANalyzer with input low connected to chassis ground.)
- b. Set the FUNCTION switch to INPUT LEVEL.
- c. Set the INPUT RANGE control to the 10 volt range.
- d. Set the FREQUENCY controls for a frequency of 1 kHz.
- e. Set the OSCILLATOR LEVEL control to the 3 volt range.
- f. Connect a cable from the OSCILLATOR OUTPUT terminals to the DISTORTION ANALYZER input terminals.
- g. Adjust the OSCILLATOR LEVEL vernier for a meter indication of 6 volts.
- h. While observing the meter, set the INPUT RANGE control to the 30, 100, and 300 volts ranges. The meter should indicate 6 volts on the respective ranges. The left hand INPUT RANGE indicator light should be lit on all three ranges.
- i. Set the INPUT RANGE switch to the 3 volt range. Observe that the right hand INPUT RANGE indicator is lit.
- j. Down-range the OSCILLATOR LEVEL control to the next lower range and adjust the level vernier for a meter indication -10 dB V.
- k. Down-range the INPUT RANGE control to the next lower range. The meter should indicate $0 \text{ dB V} \pm .2 \text{ dB V}$.
- l. Repeat Steps j and k until all input ranges except the .001 V range have been checked.
- m. Set the INPUT RANGE control to the 10 volt range and the OSCILLATOR LEVEL control to the 3 volt range.
- n. Adjust the level vernier for a meter indication of -12 dB V.
- o. Set the FUNCTION switch to the RELATIVE LEVEL position.
- p. Vary the RELATIVE ADJUST control to verify an adjustment range of greater-than 10 dB V.

3-52. Distortion Analyzer.

3-53. The following procedure checks the distortion

analyzer ranges and distortion measurement capability. Perform the following steps:

- a. Set the FILTER switches off (out), the METER RESPONSE switch to NORMAL, and the INPUT/GND SELECT switch to the center position (DIStortion ANalyzer with input low connected to chassis ground).
- b. Set the DISTORTION RANGE control to 0 dB.
- c. Set the INPUT RANGE control to the 1 volt range.
- d. Set the FREQUENCY controls to a frequency of 1 kHz.
- e. Set the OSCILLATOR LEVEL control to the 3 volt range.
- f. Connect a cable between the OSCILLATOR OUTPUT terminals and the DISTORTION ANALYZER input terminals.
- g. Set the FUNCTION switch to the DISTORTION position.
- h. Adjust the OSCILLATOR LEVEL vernier for a meter indication of -15 dB V.
- i. Down-range the DISTORTION RANGE control to the next lower range. The meter should indicate approximately -5 dB V.
- j. Repeat Steps h and i until all distortion ranges have been checked.

3-54. Filters.

3-55. The following procedure checks the "roll-off" of the filters.

- a. Set the FUNCTION switch to OSCILLATOR LEVEL.
- b. Set the INPUT RANGE control to the 3 volt range.
- c. Set the OSCILLATOR LEVEL control to the 3 volt range and adjust the level vernier for a meter indication of 0 dB V.
- d. Set the FREQUENCY controls for a frequency of 400 Hz.
- e. Set the 400 Hz FILTER switch on (in). The meter should indicate $-3 \text{ dB V} \pm 1 \text{ dB}$. Return the filter switch to off (out).
- f. Set the FREQUENCY controls for a frequency of 30 kHz. Readjust the level vernier for a meter indication 0 dB V if necessary.
- g. Set the 30 kHz filter switch on (in). The meter

should indicate $-3 \text{ dB V} \pm 2 \text{ dB}$. Return the filter switch to off (out).

h. Set the FREQUENCY controls for a frequency of 80 kHz. Readjust the level vernier for a meter indication of 0 dB V if necessary.

i. Set the 80 kHz filter switch on (in). The meter should indicate $-3 \text{ dB V} \pm 2 \text{ dB}$. Return the filter switch to off (out).

3-56. OPERATOR'S MAINTENANCE.

3-57. Fuse Replacement.

3-58. The ac line fuse is located on the rear panel of the instrument. Before checking or replacing the fuse, disconnect the ac line cord from the instrument. The fuse used in the Model 339A is a 250 mA, normal-blow fuse.

WARNING

For continued protection against fire hazard, replace only with the same type and rating of fuse as specified for the line voltage being used.

3-59. Adjustment of Meter Mechanical Zero.

3-60. The meter is properly zero-set when the pointer rests over the zero calibration mark with the instrument in its normal operating environment and turned off. Zero-set the meter as follows to obtain maximum accuracy and mechanical stability:

a. Turn instrument on and allow it to operate for at least 20 minutes to let meter movement reach normal operating temperature.

b. Turn instrument off and allow 30 seconds for all capacitors to discharge.

c. Rotate zero adjustment screw clockwise until pointer is left of zero and moving upscale.

d. Continue rotating screw clockwise; stop when pointer is exactly at zero.

e. When pointer is exactly over zero, rotate adjustment screw slightly counterclockwise to relieve tension on pointer suspension. If pointer moves off zero, repeat Steps c through e, but make counterclockwise rotation less.

SECTION IV

PERFORMANCE TEST

4-1. INTRODUCTION.

4-2. This section contains performance test procedures which can be used to verify that the Model 339A meets the specifications listed in Table 1-1. All tests can be performed without access to the interior of the instrument. A simpler operational verification procedure, included in Section III, may be used to check the operational capability of the 339A. The operational procedures do not, however, check specified accuracy of the instrument.

4-3. EQUIPMENT REQUIRED.

4-4. The test equipment required for the performance tests is listed at the beginning of each procedure and in the Recommended Test Equipment Table in Section I. If the recommended equipment is not available, any equipment that meets the critical specifications given in the table may be substituted.

4-5. TEST RECORD.

4-6. A Performance Test Record is included at the end of this section for your convenience in recording performance data. This record may be removed from the manual and used as a permanent record of the incoming

inspection or of a routine performance test. The Performance Test Record may be reproduced without written permission of Hewlett-Packard.

4-7. CALIBRATION CYCLE.

4-8. The Model 339A requires periodic verification of performance. The performance should be tested as part of the incoming inspection and at 90 day or 6 month intervals, depending upon the environmental conditions and your specific accuracy requirements.

4-9. VOLTMETER PERFORMANCE TESTS.

4-10. The following procedures check the accuracy of the voltmeter section of the 339A. These procedures should be performed and the voltmeter accuracy verified before performing the Distortion Analyzer Performance Tests.

4-11. Full-Scale Accuracy and Frequency Response Test.

Equipment Required:

AC Calibrator (-hp- Model 745A)
High Voltage Amplifier (-hp- Model 746A)

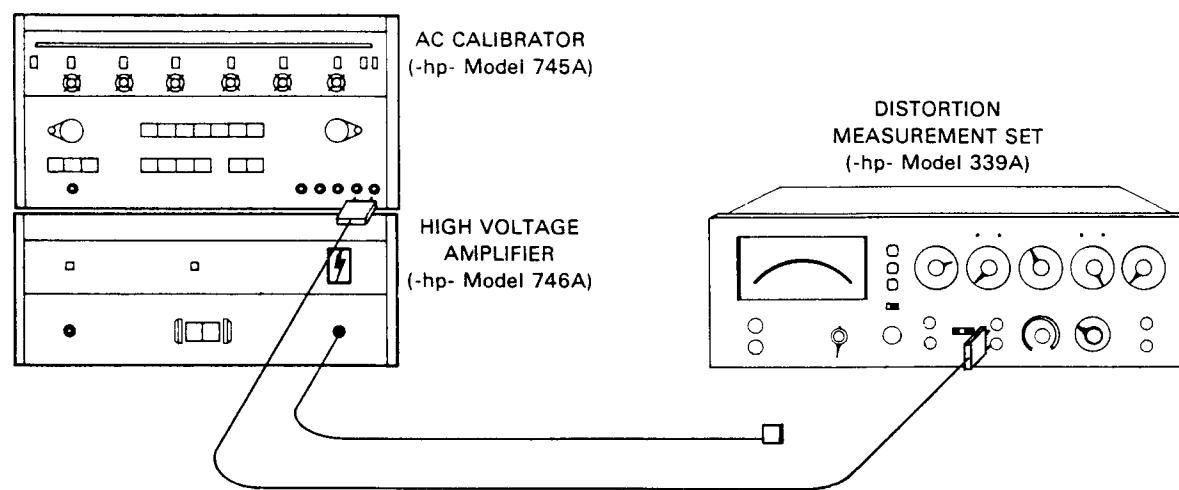


Figure 4-1. Full-Scale Accuracy and Frequency Response Test.

Table 4-1. Full-Scale Accuracy and Frequency Response Test Limits.

Input Range & Input Level	FREQUENCY						
	10 Hz	20 Hz	100 Hz	1 kHz	10 kHz	20 kHz	110 kHz
TEST LIMITS							
.001 V	.00096 - .00104			.00098 - .00102			.00096 - .00104
.003 V	.00288 - .00312			.00294 - .00306			.00288 - .00312
.01 V	.0096 - .0104			.0098 - .0102			.0096 - .0104
.03 V	.0288 - .0312			.0294 - .0306			.0288 - .0312
.1 V	.096 - .104			.098 - .102			.096 - .104
.3 V	.288 - .312			.294 - .306			.288 - .312
1 V	.96 - 1.04			.98 - 1.02			.96 - 1.04
3 V	2.88 - 3.12			2.94 - 3.06			2.88 - 3.12
10 V	9.6 - 10.4			9.8 - 10.2			9.6 - 10.4
30 V	28.8 - 31.2			29.4 - 30.6			28.8 - 31.2
100 V	96 - 104			98 - 102			96 - 104
300 V	288 - 312			294 - 306			288 - 312

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE001 V
 INPUT/GND SELECT DIS. AN./ \perp
 (center position)

b. Set the AC Calibrator controls for an output of 1 mV, 10 Hz.

c. Connect the output of the AC Calibrator to the 339A DISTORTION ANALYZER input.


d. The 339A 1 mV, 10 Hz meter indication should be within the Test Limits listed in Table 4-1.

e. Using the AC Calibrator and High Voltage Amplifier, verify the 339A Voltmeter accuracy for each Test Frequency, Input Level, and 339A Input Range listed in Table 4-1.

4-12. Meter Tracking and Monitor Output Accuracy Test.

Equipment Required:

AC Calibrator (-hp- Model 745A)
 True RMS Voltmeter (-hp- Model 3403C)

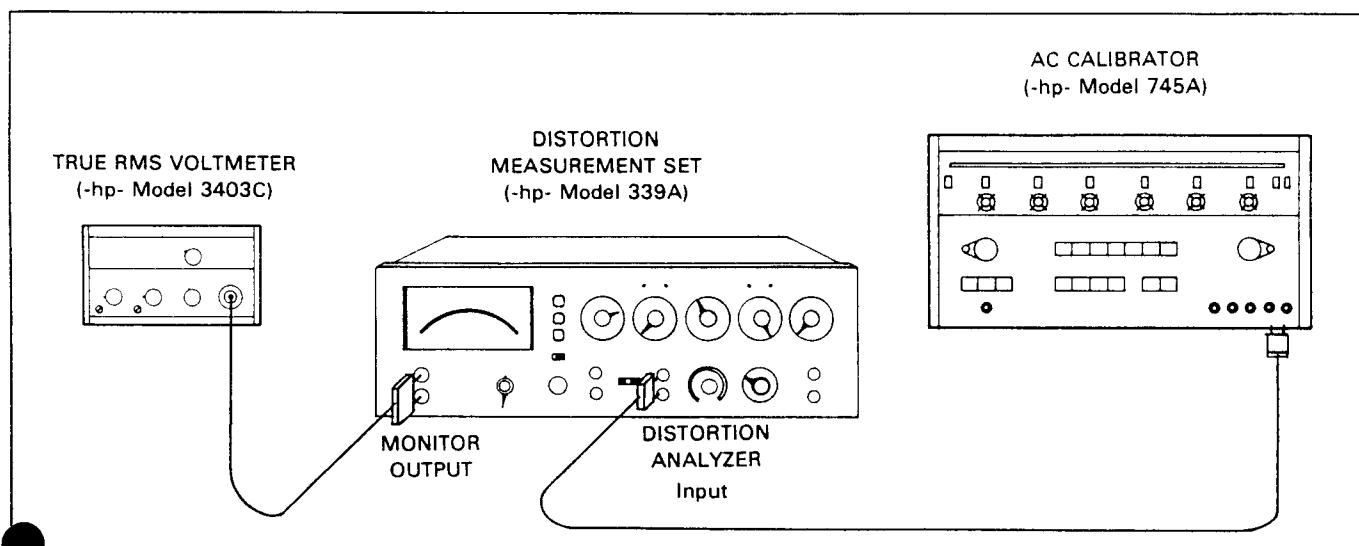**Figure 4-2. Meter Tracking and Monitor Output Accuracy Test.**

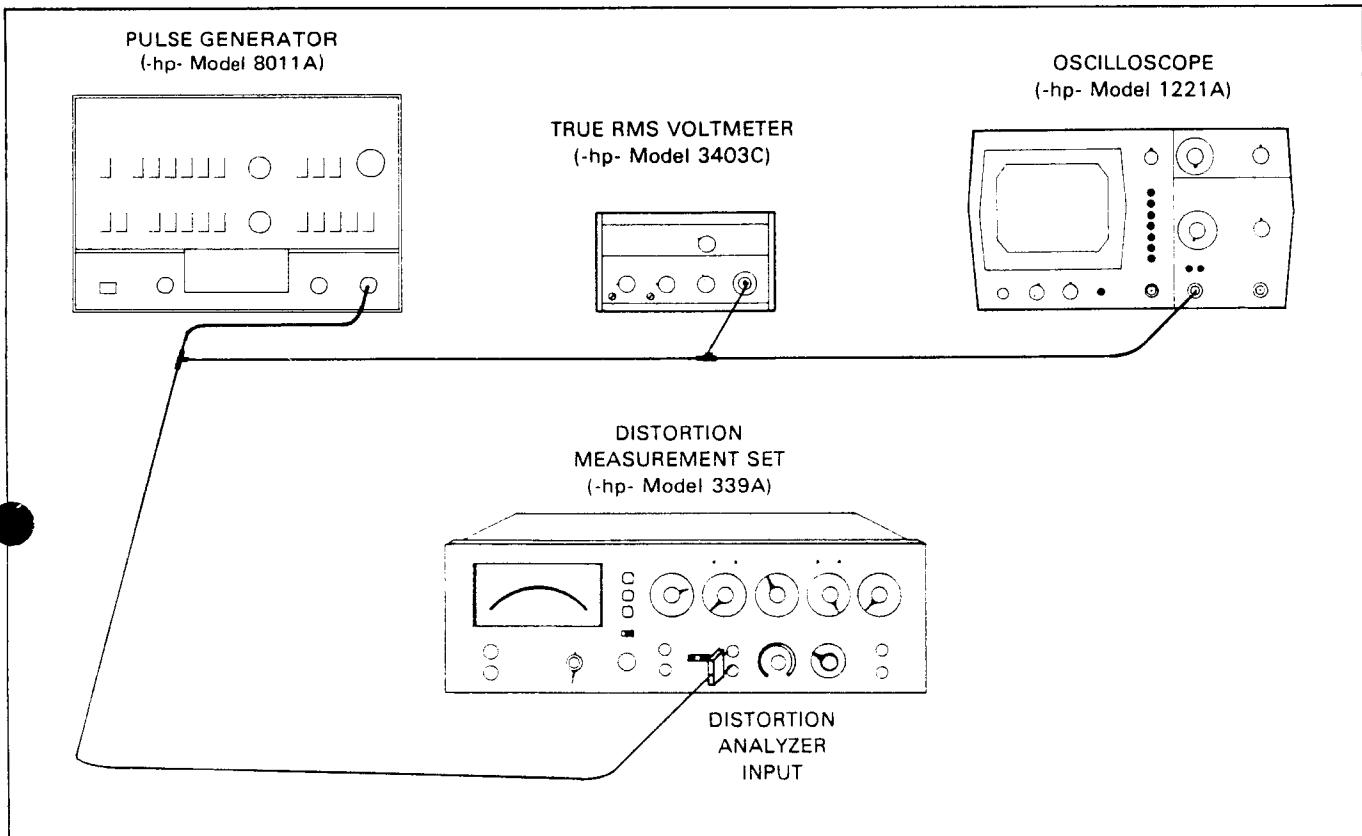


Figure 4-3. RMS Accuracy Test.

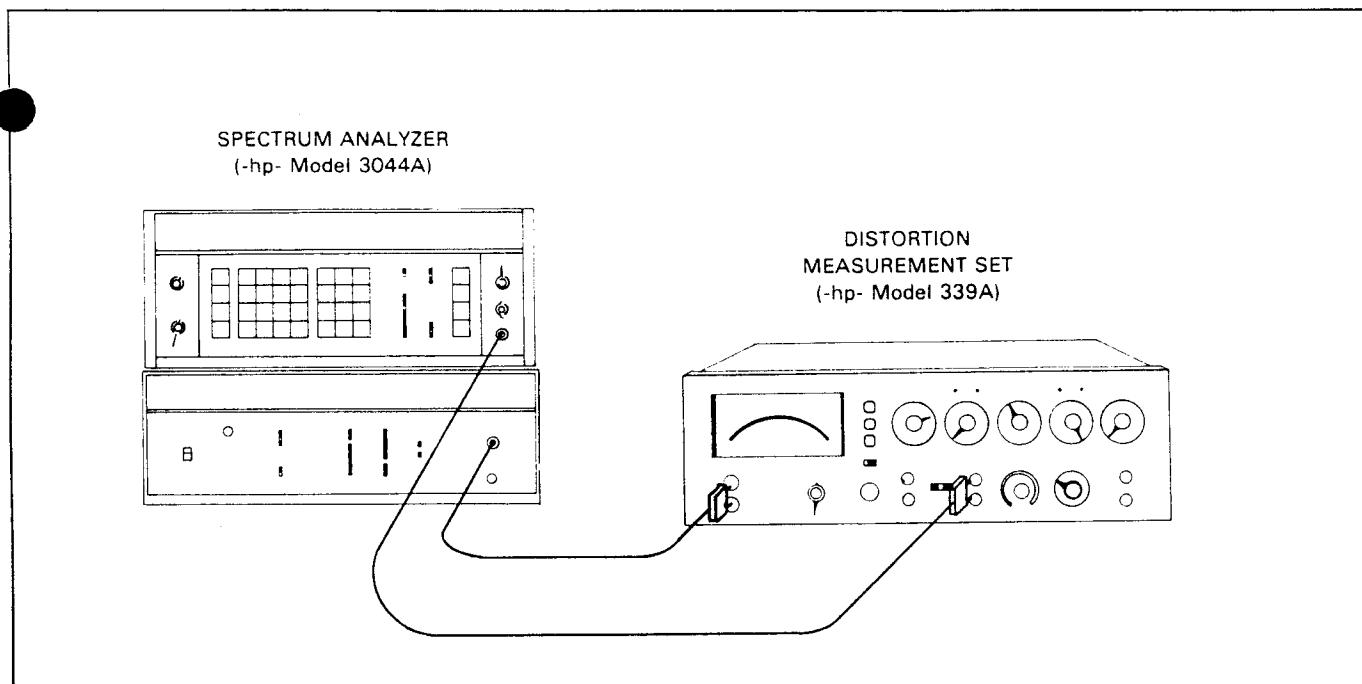


Figure 4-4. Filter Accuracy Test.

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN./ \perp
 (center position)

b. Set the AC Calibrator controls for an output of 1 V, 1 kHz.

c. Set the True RMS Voltmeter to read AC Volts on the 1 V range.

d. Connect the equipment as shown in Figure 4-2.

e. The 339A 1 V meter indication and MONITOR output level should be within the Test Limits listed in Table 4-2.

f. Using the AC Calibrator, verify the 339A meter accuracy and MONITOR output accuracy for each input level listed in Table 4-2.

Table 4-2. Meter Tracking and MONITOR Output Accuracy Tests.

Input Level	Meter Indication	Monitor Output Level
1.0 V	.98 - 1.02	.95 - 1.05
.9 V	.88 - .92	.85 - .95
.8 V	.78 - .82	.75 - .85
.7 V	.68 - .72	.65 - .75
.6 V	.58 - .62	.55 - .65
.5 V	.48 - .52	.45 - .55
.4 V	.38 - .42	.35 - .45
.3 V	.28 - .32	.25 - .35
.2 V	.18 - .22	.15 - .25
.1 V	.08 - .12	.05 - .15

4-13. RMS Accuracy (crest factor) Test.

Equipment Required:

Pulse Generator (-hp- Model 8011A)
 True RMS Voltmeter (-hp- Model 3403C)
 Oscilloscope (-hp- Model 1221A)

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE 3 V
 INPUT/GND SELECT DIS. AN./ \perp
 (center position)

b. Connect the equipment as shown in Figure 4-3.

c. Adjust the pulse generator for a 10 V peak-to-peak positive pulse with a repetition rate of 1 kHz (as observed on the oscilloscope).

d. Adjust the Pulse Generator symmetry until the true RMS voltmeter indicates 3.00 V rms.

NOTE

The pulse generator amplitude and symmetry controls may interact. Repeat adjustments as necessary to obtain a true rms meter indication of 3 V and an oscilloscope presentation of 10 V peak-to-peak.

e. The 339A meter indication must be 3 volts $\pm .06$ volts.

f. Change the Pulse Generator repetition rate to 100 Hz. Readjust the amplitude and symmetry as necessary to obtain a true RMS meter indication of 3 V and a 10 V peak-to-peak oscilloscope presentation.

g. The 339A meter indication must be 3 V $\pm .06$ volts.

h. Change the Pulse Generator repetition rate to 10 kHz. Readjust the amplitude and symmetry as necessary to obtain a True RMS meter reading of 3 V and a 10 V peak-to-peak oscilloscope presentation.

i. The 339A meter indication must be 3 V $\pm .12$ volts.

4-14. Filter Accuracy Test.

Equipment Required:

Spectrum Analyzer (-hp- Model 3044A)

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN./ \perp
 (center position)

b. Connect the equipment as shown in Figure 4-4.

c. Set the Synthesizer (3330B) output frequency to 400 Hz and adjust the output level for a full-scale meter reading on the 339A.

d. Set the Spectrum Analyzer (3571A) controls for an input impedance of $1 M\Omega$, an input range of $+10 \text{ dBV}$, a bandwidth of 3 Hz and a relative display reference.

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN./ \perp
 (center position)

b. Set the AC Calibrator controls for an output of 1 V, 1 kHz.

c. Set the True RMS Voltmeter to read AC Volts on the 1 V range.

d. Connect the equipment as shown in Figure 4-2.

e. The 339A 1 V meter indication and MONITOR output level should be within the Test Limits listed in Table 4-2.

f. Using the AC Calibrator, verify the 339A meter accuracy and MONITOR output accuracy for each input level listed in Table 4-2.

Table 4-2. Meter Tracking and MONITOR Output Accuracy Tests.

Input Level	Meter Indication	Monitor Output Level
1.0 V	.98 - 1.02	.95 - 1.05
.9 V	.88 - .92	.85 - .95
.8 V	.78 - .82	.75 - .85
.7 V	.68 - .72	.65 - .75
.6 V	.58 - .62	.55 - .65
.5 V	.48 - .52	.45 - .55
.4 V	.38 - .42	.35 - .45
.3 V	.28 - .32	.25 - .35
.2 V	.18 - .22	.15 - .25
.1 V	.08 - .12	.05 - .15

4-13. RMS Accuracy (crest factor) Test.

Equipment Required:

Pulse Generator (-hp- Model 8011A)
 True RMS Voltmeter (-hp- Model 3403C)
 Oscilloscope (-hp- Model 1221A)

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE 3 V
 INPUT/GND SELECT DIS. AN./ \perp
 (center position)

b. Connect the equipment as shown in Figure 4-3.

c. Adjust the pulse generator for a 10 V peak-to-peak positive pulse with a repetition rate of 1 kHz (as observed on the oscilloscope).

d. Adjust the Pulse Generator symmetry until the true RMS voltmeter indicates 3.00 V rms.

NOTE

The pulse generator amplitude and symmetry controls may interact. Repeat adjustments as necessary to obtain a true rms meter indication of 3 V and an oscilloscope presentation of 10 V peak-to-peak.

e. The 339A meter indication must be 3 volts $\pm .06$ volts.

f. Change the Pulse Generator repetition rate to 100 Hz. Readjust the amplitude and symmetry as necessary to obtain a true RMS meter indication of 3 V and a 10 V peak-to-peak oscilloscope presentation.

g. The 339A meter indication must be 3 V $\pm .06$ volts.

h. Change the Pulse Generator repetition rate to 10 kHz. Readjust the amplitude and symmetry as necessary to obtain a True RMS meter reading of 3 V and a 10 V peak-to-peak oscilloscope presentation.

i. The 339A meter indication must be 3 V $\pm .12$ volts.

4-14. Filter Accuracy Test.

Equipment Required:

Spectrum Analyzer (-hp- Model 3044A)

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE VU
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN./ \perp
 (center position)

b. Connect the equipment as shown in Figure 4-4.

c. Set the Synthesizer (3330B) output frequency to 400 Hz and adjust the output level for a full-scale meter reading on the 339A.

d. Set the Spectrum Analyzer (3571A) controls for an input impedance of $1 M\Omega$, an input range of $+10 \text{ dBV}$, a bandwidth of 3 Hz and a relative display reference.

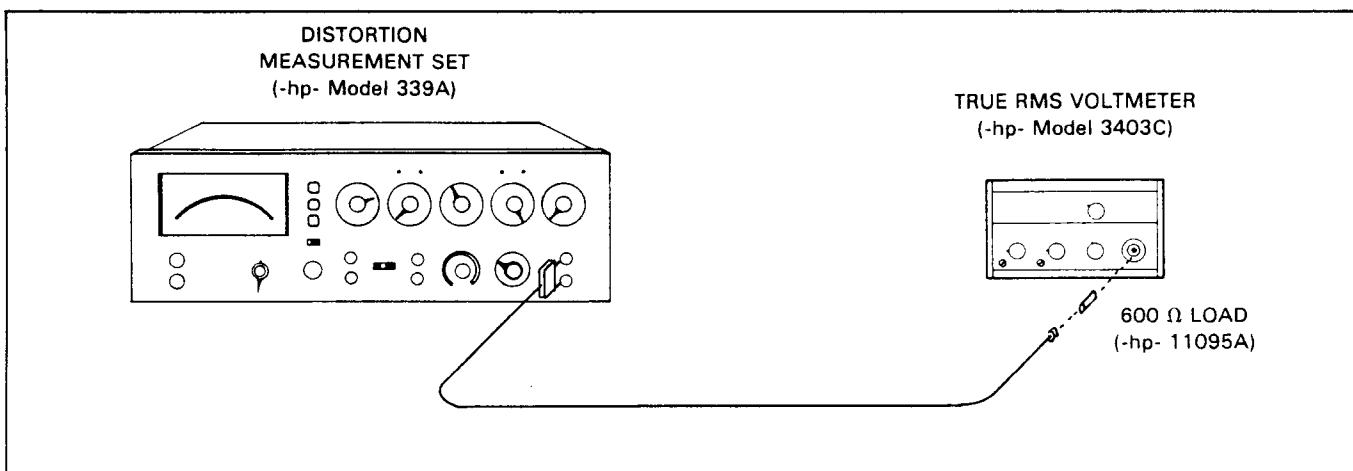


Figure 4-6. Oscillator Output Impedance Test.

FREQUENCY VERNIER CAL
OSCILLATOR 3 V

- b. Connect the equipment as shown in Figure 4-6 (without the 600 ohm load).
- c. Adjust the True RMS Voltmeter controls to measure AC volts on the 10 V range.
- d. Adjust the 339A LEVEL vernier control to obtain a reading of 6.00 V on the True RMS voltmeter.
- e. Disconnect the cable from the True RMS Voltmeter and install the 600 ohm load as shown in Figure 4-6.
- f. The True RMS Voltmeter reading must be between 2.927 and 3.077 V rms.

4-18. Oscillator Frequency Accuracy Test.

Equipment Required:

Frequency Counter (-hp- Model 5300A Mainframe,
5302A Frequency Module)
600 ohm Resistive Load (-hp- 11095A)

- a. Set the 339A controls as follows:

FREQUENCY 10 Hz (1.0 x 10)
FREQUENCY VERNIER CAL
OSCILLATOR LEVEL 3 V

Table 4-3. Oscillator Output Limits (Flatness Test).

Output Frequency	Output Level
10 Hz	2.930 - 3.070
20 Hz	2.965 - 3.035
100 Hz	2.965 - 3.035
10 kHz	2.965 - 3.035
20 kHz	2.965 - 3.035
110 kHz	2.930 - 3.070

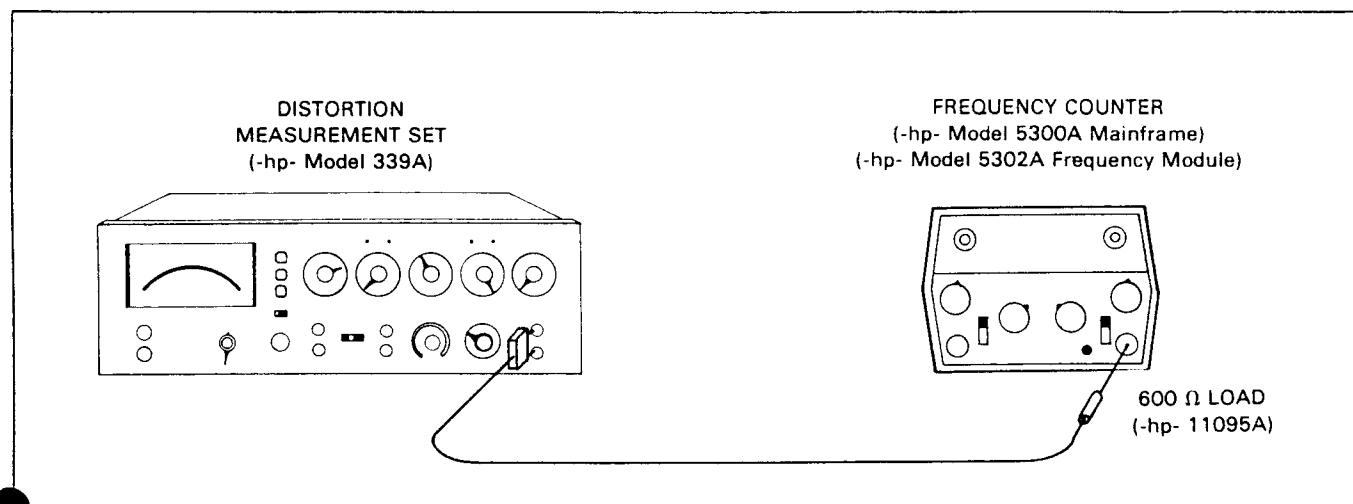


Figure 4-7. Oscillator Frequency Accuracy Test.

Table 4-4. Oscillator Frequency Accuracy Test.

Frequency	339A Frequency Range Setting	Frequency Counter Indication (Period)
10 Hz 20 Hz 50 Hz 100 Hz	X 10	102.04 mSec. - 98.04 mSec. 51.020 mSec. - 49.019 mSec. 20.408 mSec. - 19.608 mSec. 10.204 mSec. - 9.803 mSec.
100 Hz 200 Hz 500 Hz 1 kHz	X 100	10.204 mSec. - 9.803 mSec. 5.1020 mSec. - 4.9019 mSec. 2.0408 mSec. - 1.9608 mSec. 1.0204 mSec. - 9.803 mSec.
0.1 kHz 0.2 kHz 1.2 kHz 1.3 kHz 1.4 kHz 1.5 kHz 1.6 kHz 1.7 kHz 1.8 kHz 1.9 kHz 2.0 kHz 3.0 kHz 4.0 kHz 5.0 kHz 6.0 kHz 7.0 kHz 8.0 kHz 9.0 kHz 10.0 kHz	X 1K	1020.4 μ Sec. - 980.3 μ Sec. 927.64 μ Sec. - 891.26 μ Sec. 850.34 μ Sec. - 816.99 μ Sec. 784.93 μ Sec. - 754.14 μ Sec. 728.86 μ Sec. - 700.28 μ Sec. 680.27 μ Sec. - 653.59 μ Sec. 637.75 μ Sec. - 612.74 μ Sec. 600.24 μ Sec. - 576.70 μ Sec. 566.89 μ Sec. - 544.66 μ Sec. 537.05 μ Sec. - 515.99 μ Sec. 510.20 μ Sec. - 490.19 μ Sec. 340.13 μ Sec. - 326.79 μ Sec. 255.10 μ Sec. - 245.09 μ Sec. 204.08 μ Sec. - 196.08 μ Sec. 170.06 μ Sec. - 163.39 μ Sec. 145.77 μ Sec. - 140.05 μ Sec. 127.55 μ Sec. - 122.54 μ Sec. 113.37 μ Sec. - 108.93 μ Sec. 102.04 μ Sec. - 98.039 μ Sec.
10 kHz 20 kHz 50 kHz 100 kHz 199 kHz	X 10 K	102.04 μ Sec. - 98.039 μ Sec. 51.020 μ Sec. - 49.019 μ Sec. 20.408 μ Sec. - 19.608 μ Sec. 10.204 μ Sec. - 9.8039 μ Sec. 9.3615 μ Sec. - 8.9944 μ Sec.

- b. Connect the equipment as shown in Figure 4-7.
- c. Adjust the Frequency Counter controls to measure period.
- d. The 339A 10 Hz frequency should be within the limits listed in Table 4-4.
- e. Verify the 339A Oscillator Frequency Accuracy for each frequency listed in Table 4-4.

4-19. Oscillator Total Harmonic Distortion Test.

Equipment Required:

- Spectrum Analyzer (-hp- Model 3044A)
- Tuneable Notch Filter (-hp- Model 339A)
- 600 ohm Resistive Load (-hp- 11095A)

- a. Set the 339A controls as follows:

FUNCTION OSCillator LEVEL
FREQUENCY 10 Hz (1.0 x 10)
FREQUENCY VERNIER CAL
OSCILLATOR LEVEL 3 V

- b. Connect the equipment as shown in Figure 4-8.

- c. Adjust the 339A OSCILLATOR LEVEL vernier for an output level of 3 V rms as indicated on the 339A meter.

- d. Set the Tuneable Notch Filter (339A) Frequency to 10 Hz and set the Function to Input Level. Adjust the Input Range control as necessary to obtain an on-scale meter indication as near full-scale as possible.

- e. Set the Spectrum Analyzer (3571A) controls for an input impedance of $1 M\Omega$, an input range of +10 dB V, a bandwidth of 3 Hz, and a relative display reference.

- f. Tune the Spectrum Analyzer to the exact frequency of the 339A under test by varying the Synthesizer (3330B) frequency until the Spectrum Analyzer indicates maximum level. Enter this frequency as both the output frequency and step frequency of the Synthesizer.

- g. Reference the Spectrum Analyzer to the amplitude of the 339A fundamental frequency by pressing the Enter Offset button. (Observe a Spectrum Analyzer display of 00.00 dB.)

- h. Adjust the Tuneable Notch Filter controls as necessary to make a distortion measurement. (The purpose of this step is to null the fundamental frequency of the 339A Oscillator output. This puts the distortion products within the dynamic range of the Spectrum Analyzer.)

- i. Step the Synthesizer frequency to the second harmonic frequency of the 339A output.

- j. The amplitude of the second harmonic frequency, relative to the fundamental frequency is determined by adding the Spectrum Analyzer display reading and the range setting of the Notch Filter. (As an example: If the Notch Filter distortion range control is set to -80 dB and the Spectrum Analyzer display indicates -23 dB the amplitude of the second harmonic is -103 dB, relative to the fundamental.) Record the amplitude reading of the second harmonic.

- k. Step the Synthesizer frequency to the frequency of the third harmonic.

- l. Determine the relative amplitude of the third harmonic by adding the Spectrum Analyzer display reading and the range setting of the Notch Filter. Record the amplitude reading of the third harmonic.

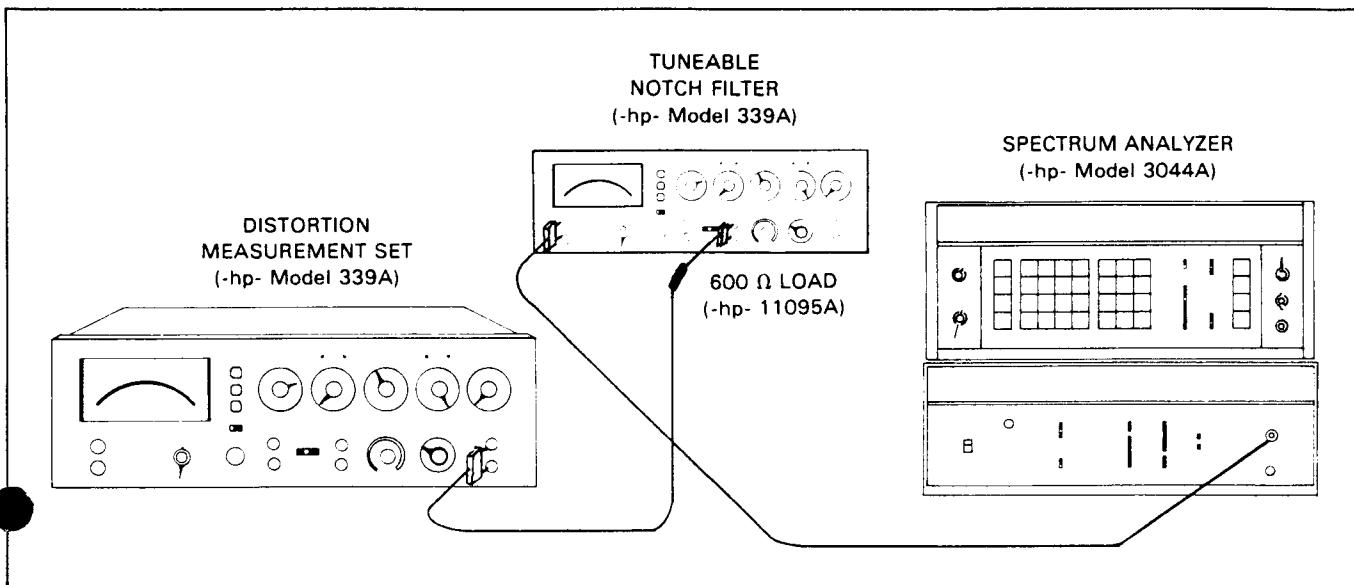


Figure 4-8. Oscillator Total Harmonic Distortion Test.

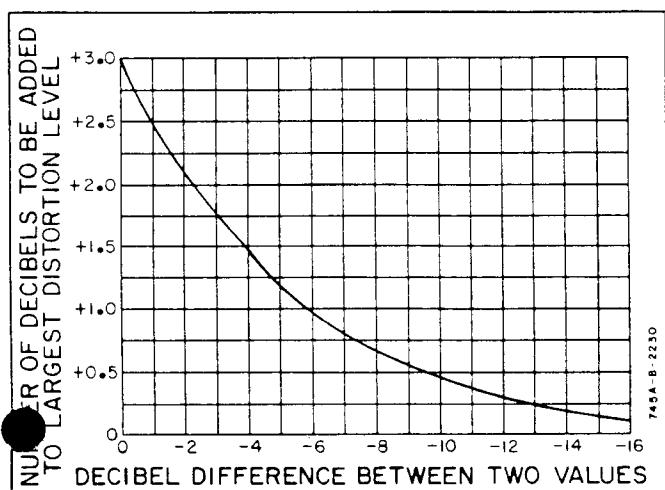


Figure 4-9. Logarithmic Addition of Harmonic Components.

Table 4-5. Oscillator Total Harmonic Distortion Test.

339A Frequency	THD Specification
10 Hz	> -95 dB
100 Hz	> -95 dB
1 kHz	> -95 dB
10 kHz	> -95 dB
20 kHz	> -95 dB
30 kHz	> -85 dB
50 kHz	> -80 dB
109 kHz	> -70 dB

m. Calculate the Total Harmonic Distortion using the graph shown in Figure 4-9. As an example: If the amplitude of the second harmonic is -110 dB and the third harmonic amplitude is -114 dB the dB difference between the two is -4 dB. Locate this number on the horizontal axis of the graph. The -4 line intersects the curve at approximately the +1.5 level on the vertical axis. The total harmonic distortion is therefore the amplitude of the largest harmonic (2nd harmonic) plus the number determined on the vertical axis (-110 dB + 1.5 dB = -108.5 dB).

n. The 339A should meet the 10 Hz THD specification listed in Table 4-5.

o. Repeat Steps f through m for each frequency listed in Table 4-5.

NOTE

It may be necessary to increase the Bandwidth of the Spectrum Analyzer at higher frequencies. Adjust as necessary to maintain a stable reading.

4-20. DISTORTION ANALYZER PERFORMANCE TESTS.

4-21. The Voltmeter Performance Tests, at the beginning of this section, should be performed and the Voltmeter accuracy verified before proceeding with the Distortion Analyzer Tests.

4-22. FUNDAMENTAL REJECTION AND INDUCED DISTORTION TEST.

4-23. The following test requires an exceptionally low

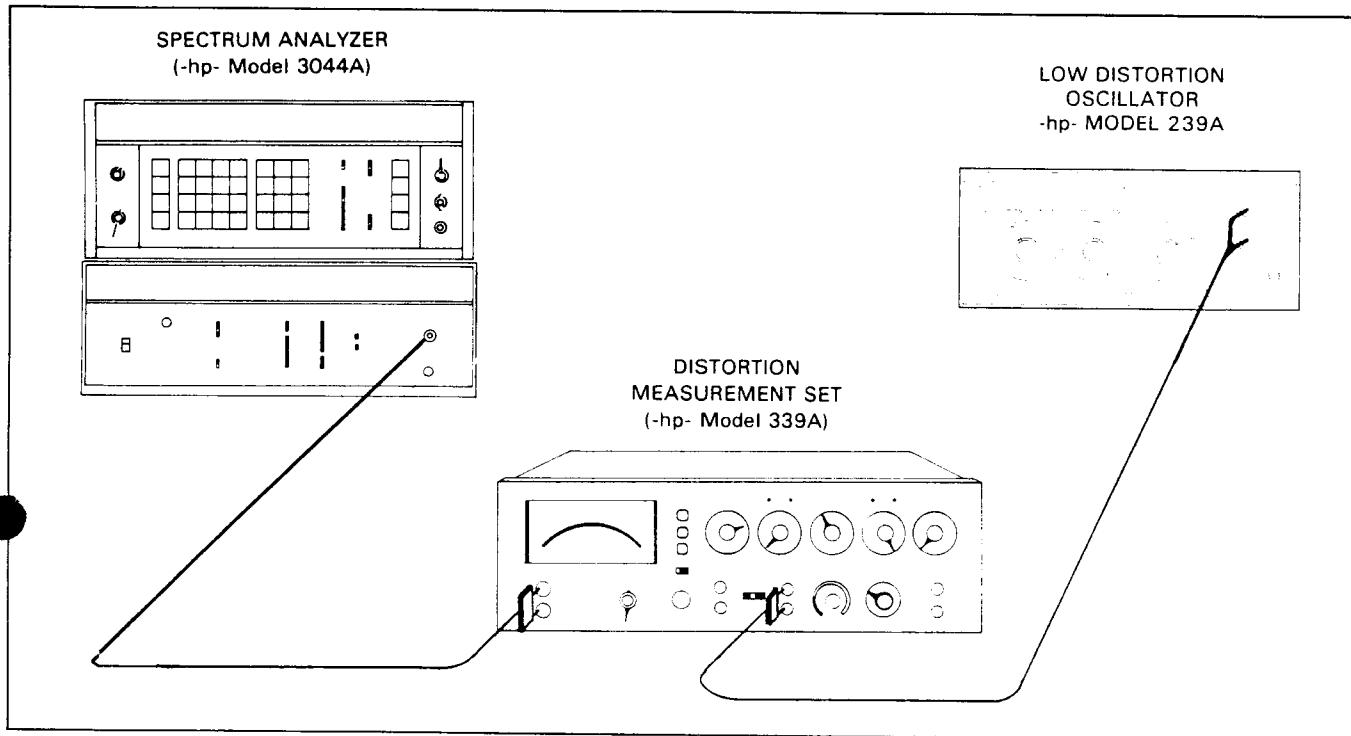


Figure 4-10. Fundamental Rejection and Induced Distortion Test.

distortion signal source. In most cases the Model 339A being used as a source will be sufficient. However, if the instrument under test does not meet the Induced Distortion specifications listed in Table 4-6, it must be determined whether the distortion is due to the signal source or the analyzer under test. In some cases this may be accomplished by exchanging the signal source with another. If this is not practical, low-pass filters may be constructed to enhance the signal purity of the source.

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 METER RESPONSE NORMAL
 INPUT RANGE 3 V
 INPUT/GND SELECT DIS. AN./
 (center position)
 FREQUENCY 10 Hz (1.0 x 10)

b. Connect the equipment as shown in Figure 4-10.

c. Set the Low Distortion Oscillator for an output frequency of 10 Hz. Adjust the output level for a full-scale (0 dB) meter indication on the 339A under test.

d. Adjust the frequency of the Synthesizer (3330B) for a maximum level indication on the Spectrum Analyzer (3571A). Enter this frequency as both the output frequency and step frequency of the synthesizer.

NOTE

When adjusting the frequency of the Synthesizer, use frequency steps equal to 10% of the fundamental frequency being measured. This insures adequate resolution.

e. Reference the Spectrum Analyzer to this level by pressing the enter offset button. The Spectrum Analyzer should indicate 00.00 dB.

f. Set the FUNCTION switch of the 339A under test to DISTORTION.

g. Adjust the DISTORTION RANGE control for an on-scale meter indication as near full-scale as possible.

h. Determine the fundamental rejection of the 339A under test by adding the display reading of the Spectrum Analyzer and the distortion range setting of the 339A under test. (As an example: If the 339A DISTORTION RANGE control is set to -80 dB and the Spectrum Analyzer display indicates -35 dB the fundamental rejection is -115 dB.)

i. The fundamental rejection level determined in the previous step must meet or exceed the specification listed in Table 4-6.

j. Step the Synthesizer frequency to the second harmonic frequency.

Table 4-6. Fundamental Rejection and Induced Distortion Test.

Test Frequency	Fundamental Rejection Specification	Induced Distortion Specification
10 Hz		
100 Hz		
1 kHz	> -100 dB	> -95 dB
10 kHz		
20 kHz		
30 kHz		> -90 dB
50 kHz	> -90 dB	> -85 dB
110 kHz		> -70 dB

k. Determine the relative amplitude of the second harmonic by adding the Spectrum Analyzer display reading and the distortion range setting of the 339A under test. Record the amplitude reading of the second harmonic.

l. Step the Synthesizer frequency to the third harmonic frequency.

m. Determine the relative amplitude of the third harmonic by adding the Spectrum Analyzer display reading and the distortion range setting of the 339A under test. Record the amplitude reading of the third harmonic.

n. Calculate the Induced Harmonic Distortion using the graph shown in Figure 4-9.

o. The induced distortion measurement must meet or exceed the specification listed in Table 4-6.

p. Set the FUNCTION switch of the 339A under test to INPUT LEVEL.

q. Repeat Steps c through p for each frequency listed in Table 4-6.

4-24. Distortion Measurement Accuracy Test.

Equipment Required:

Spectrum Analyzer (-hp- Model 3044A)
 Low Distortion Oscillator (-hp- Model 339A)
 600 Ω 1% Metal Film Resistor (-hp- Part No. 0698-5405)
 60 k Ω 1% Metal Film Resistor (-hp- Part No. 0698-5973)

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 DISTORTION RANGE -80 dB
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN./ \perp
 (center position)
 FREQUENCY 10 kHz (1.0 x 10 K)

b. Connect the equipment as shown in Figure 4-11.

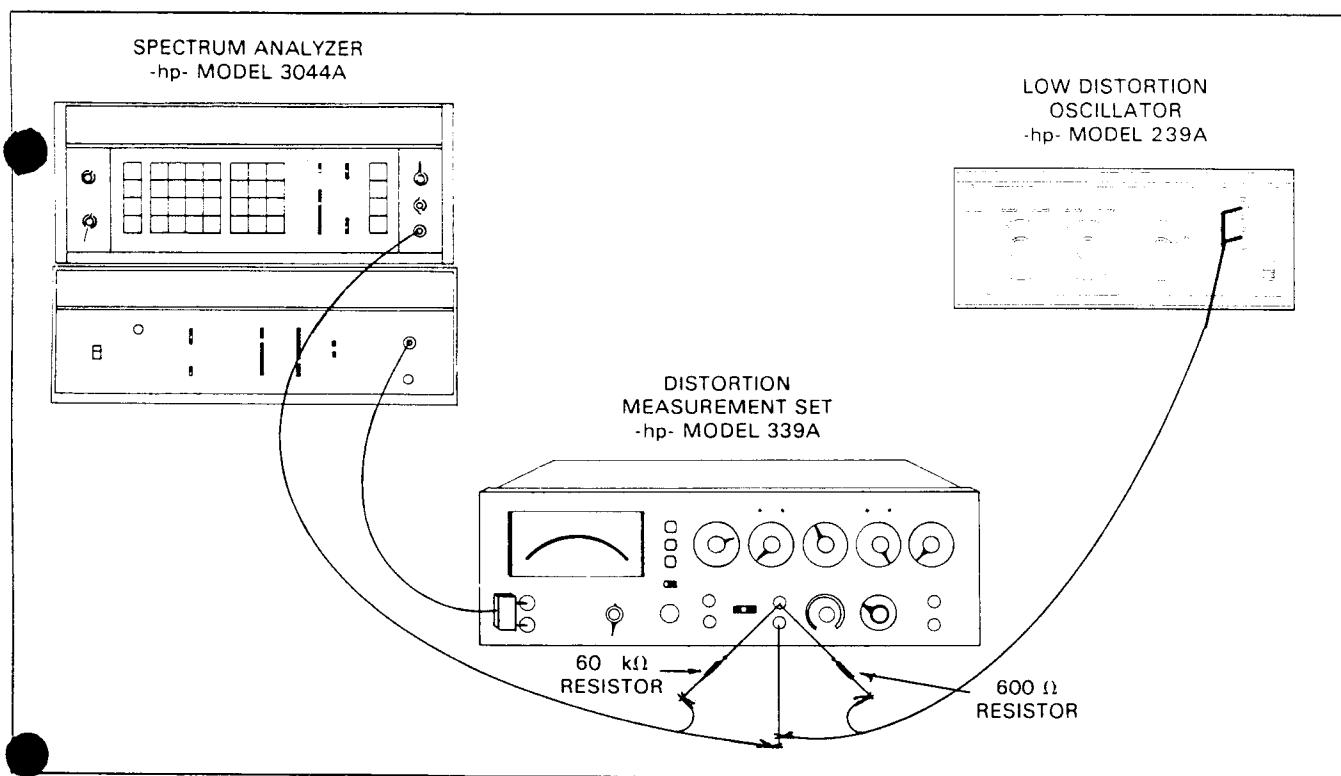


Figure 4-11. Distortion Measurement Accuracy Test.

Table 4-7. Distortion Measurement Accuracy Test.

Distortion Frequency	Accuracy Limits
10 Hz	+1.0 dB, -2.0 dB
20 Hz	± 1.0 dB
100 Hz	± 1.0 dB
20 kHz	± 1.0 dB
50 kHz	+1.0 dB, -2.0 dB
100 kHz	+1.5 dB, -4.0 dB
330 kHz	+1.5 dB, -4.0 dB

c. Adjust the Synthesizer (3330B) controls for an output frequency of 1 kHz and an output amplitude of 40 dBm.

d. Set the Low Distortion Oscillator for an output frequency of 10 kHz. Adjust the output level for a meter indication of 1 V on the 339A under test.

e. Set the FUNCTION switch of the 339A under test to DISTORTION.

f. Adjust the Synthesizer amplitude as necessary to obtain a distortion reading of -80 dB on the 339A under test (full-scale meter indication).

g. Set the Spectrum Analyzer (3571A) to a 3 Hz bandwidth, an input range of +10 dB V, an input impedance of $1 \text{ M}\Omega$, and a relative display reference. Reference the Spectrum Analyzer to the 339A measurement by pressing the Enter Offset button.

h. Set the Synthesizer to each frequency listed in Table 4-7, and verify that the Spectrum Analyzer reading is within the limits listed.

4-25. Residual Noise Test.

Equipment Required:

1 $\text{k}\Omega$ shielded load (Refer to Figure 4-12.)

a. Set the 339A controls as follows:

FUNCTION DISTORTION
 FILTERS 80 kHz ON (in)
 DISTORTION RANGE -80 dB
 INPUT RANGE 1 V
 FREQUENCY 20 kHz (2.0×10 K)
 INPUT/GND SELECT DIS. AN. \perp
 (center position)


b. Connect the $1 \text{k}\Omega$ shielded load to the DISTORTION ANALYZER input terminals. (See Figure 4-12 for construction details of $1 \text{k}\Omega$ load.)

c. The 339A measurement indication must be below -92 dB.

4-26. Input Impedance Test.

Equipment Required:

Spectrum Analyzer (-hp- Model 3044A)
 100 $\text{k}\Omega$ 0.1% Metal Film Resistor (-hp- Part No. 0698-4158)

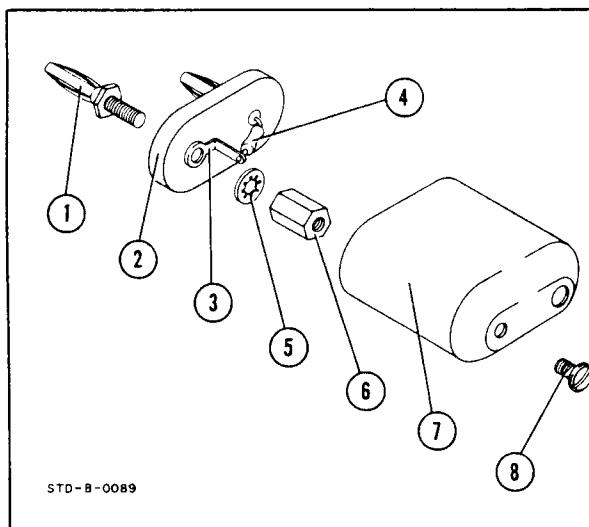

No.	Description	-hp- Part No.
1	Connector, male	1251-0174
2	Connector, male w/insulator	1251-0175
3	Lug, terminal 90°	0360-0042
4	Resistor, 1 $\text{k}\Omega$, 1/8 W, 1%, metal film	0757-0280
5	Washer, int. lock	2190-0007
6	Spacer, 6-32 threaded	0380-0058
7	Shield	1251-1073
8	Screw, pan head, 6-32 x 1/4 in.	2360-0113

Figure 4-12. Shielded Load Assembly.

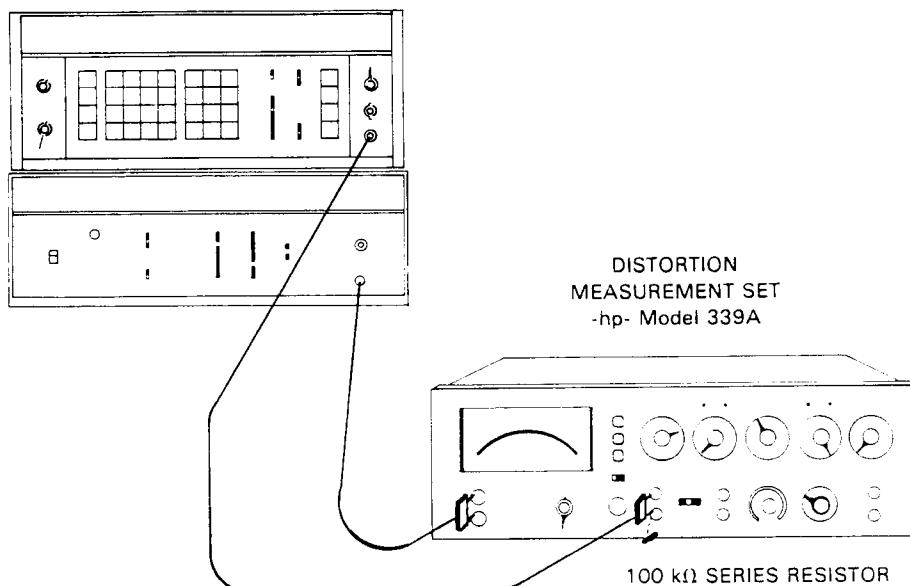


Figure 4-13. Input Impedance Test.

a. Set the 339A controls as follows:

FUNCTION INPUT LEVEL
 FILTERS OFF (out)
 INPUT RANGE 1 V
 INPUT/GND SELECT DIS. AN./ \perp
 (center position)

b. Connect the equipment as shown in Figure 4-13.

c. Set the Synthesizer (3330B) for an output frequency of 1 kHz and adjust the amplitude as necessary to obtain a meter reading of 0 dB on the 339A.

d. Set the Spectrum Analyzer (3571A) reference by pressing the Enter Offset button. Observe a display reading of 00.00 dB.

e. Disconnect the cable from the 339A and insert the 100 k Ω resistor in series with the input. The Spectrum Analyzer must indicate -6.02 dB \pm .05 dB.

f. Change the Synthesizer frequency to 17.000 kHz. The Spectrum Analyzer reading must be less than -9.00 dB indicating an input capacitance of less than 100 pF.

PERFORMANCE TEST RECORD

Hewlett-Packard Model 339A

Tests Performed By: _____

Distortion Measurement Set

Date: _____

Serial No. _____

VOLTMETER PERFORMANCE

Full-Scale Accuracy and Frequency Response Test:

Input Level	339A Input Range	339A 10 Hz Reading	339A 110 KHz Reading	Test Limits	339A 20 Hz Reading	339A 100 Hz Reading	339A 1 kHz Reading	339A 10 kHz Reading	339A 20 kHz Reading	Test Limits
.001 V	.001 V	_____	_____	.00096 - .00104	_____	_____	_____	_____	_____	.00098 - .00102
.003 V	.003 V	_____	_____	.00288 - .00312	_____	_____	_____	_____	_____	.00294 - .00306
.01 V	.01 V	_____	_____	.0096 - .0104	_____	_____	_____	_____	_____	.0098 - .0102
.03 V	.03 V	_____	_____	.0288 - .0312	_____	_____	_____	_____	_____	.0294 - .0306
.1 V	.1 V	_____	_____	.096 - .104	_____	_____	_____	_____	_____	.098 - .102
.3 V	.3 V	_____	_____	.288 - .312	_____	_____	_____	_____	_____	.294 - .306
1 V	1 V	_____	_____	.96 - 1.04	_____	_____	_____	_____	_____	.98 - 1.02
3 V	3 V	_____	_____	2.88 - 3.12	_____	_____	_____	_____	_____	2.94 - 3.06
10 V	10 V	_____	_____	9.6 - 10.4	_____	_____	_____	_____	_____	9.8 - 10.2
30 V	30 V	_____	_____	28.8 - 31.2	_____	_____	_____	_____	_____	29.4 - 30.6
100 V	100 V	_____	_____	96 - 104	_____	_____	_____	_____	_____	98 - 102
300 V	300 V	_____	_____	288 - 312	_____	_____	_____	_____	_____	294 - 306

Meter Tracking and Monitor Output Accuracy Test:

Input Level	339A Meter Reading	Test Limits	Monitor Output Level	Test Limits
1.0 V	_____	.98 - 1.02	_____	.95 - 1.05
.9 V	_____	.88 - .92	_____	.85 - .95
.8 V	_____	.78 - .82	_____	.75 - .85
.7 V	_____	.68 - .72	_____	.65 - .75
.6 V	_____	.58 - .62	_____	.55 - .65
.5 V	_____	.48 - .52	_____	.45 - .55
.4 V	_____	.38 - .42	_____	.35 - .45
.3 V	_____	.28 - .32	_____	.25 - .35
.2 V	_____	.18 - .22	_____	.15 - .25
.1 V	_____	.08 - .12	_____	.05 - .15

PERFORMANCE TEST RECORD (Cont'd)

RMS Accuracy (crest factor) Test:

RMS Input Level	Repetition Rate	339A Meter Reading	Test Limits
3 V	100 Hz	_____	2.94 - 3.06
	1 kHz	_____	2.94 - 3.06
	10 kHz	_____	2.88 - 3.12

Filter Accuracy Test:

339A Filter	-3 dB Frequency	Test Limits
400 Hz	_____	360 Hz - 435 Hz
30 kHz	_____	27 kHz - 32.6 kHz
80 kHz	_____	72.1 kHz - 87 kHz

OSCILLATOR PERFORMANCE

Output Level and Flatness Test:

339A Output Frequency	Output Level	Test Limits
10 Hz	_____	2.930 - 3.070
20 Hz	_____	2.965 - 3.035
100 Hz	_____	2.965 - 3.035
10 kHz	_____	2.965 - 3.035
20 kHz	_____	2.965 - 3.035
110 kHz	_____	2.930 - 3.070

Maximum Output Level into 600 Ω = _____ (> 3 V rms)

Output Impedance Test:

With an unloaded output level of 6.00 V rms, the output level into a 600 Ω load = _____
(test limit 2.927 - 3.077 V rms).

Oscillator Frequency Accuracy Test:

339A Output Frequency	339A Frequency Range Setting	Frequency Counter Indication (Period)	Test Limits
10 Hz	X 10	_____	98.04 - 102.04 msec.
20 Hz		_____	49.019 - 51.020 msec.
50 Hz		_____	19.608 - 20.408 msec.
100 Hz		_____	9.803 - 10.204 msec.
100 Hz	X 100	_____	9.803 - 10.204 msec.
200 Hz		_____	4.9019 - 5.1020 msec.
500 Hz		_____	1.9608 - 2.0408 msec.
1 kHz		_____	.9803 - 1.0204 msec.

PERFORMANCE TEST RECORD (Cont'd)

Oscillator Frequency Accuracy Test (Cont'd):

339A Output Frequency	339A Frequency Range Setting	Frequency Counter Indication (Period)	Test Limits
1.0 kHz			980.3 - 1020.4 μ sec.
1.1 kHz			891.26 - 927.64 μ sec.
1.2 kHz			816.99 - 850.34 μ sec.
1.3 kHz			754.14 - 784.93 μ sec.
1.4 kHz			700.28 - 728.86 μ sec.
1.5 kHz			653.59 - 680.27 μ sec.
1.6 kHz			612.74 - 637.75 μ sec.
1.7 kHz			576.70 - 600.24 μ sec.
1.8 kHz	X 1K		544.66 - 566.89 μ sec.
1.9 kHz			515.99 - 537.05 μ sec.
2.0 kHz			490.19 - 510.20 μ sec.
3.0 kHz			326.79 - 340.13 μ sec.
4.0 kHz			245.09 - 255.10 μ sec.
5.0 kHz			196.08 - 204.08 μ sec.
6.0 kHz			163.39 - 170.06 μ sec.
7.0 kHz			140.05 - 145.77 μ sec.
8.0 kHz			122.54 - 127.55 μ sec.
9.0 kHz			108.93 - 113.37 μ sec.
10 kHz			98.039 - 102.04 μ sec.
10 kHz			98.039 - 102.04 μ sec.
20 kHz			49.019 - 51.020 μ sec.
50 kHz	X 10K		19.608 - 20.408 μ sec.
100 kHz			9.8039 - 10.204 μ sec.
109 kHz			9.3615 - 8.9944 μ sec.

Oscillator Total Harmonic Distortion Test:

339A Output Frequency	Calculated THD	Test Limit
10 Hz		-95 dB
100 Hz		
1 kHz		
10 kHz		
20 kHz		
30 kHz		-85 dB
50 kHz		-80 dB
109 kHz		-70 dB

PERFORMANCE TEST RECORD (Cont'd)**DISTORTION ANALYZER PERFORMANCE****Fundamental Rejection and Induced Distortion Test:**

Test Frequency	339A Fundamental Rejection	Test Limit	339A Induced Distortion	Test Limit
10 Hz	_____		_____	
100 Hz	_____		_____	
1 kHz	_____	-100 dB	_____	-95 dB
10 kHz	_____		_____	
20 kHz	_____		_____	
30 kHz	_____		_____	-90 dB
50 kHz	_____	-90 dB	_____	-85 dB
110 kHz	_____		_____	-70 dB

Distortion Measurement Accuracy Test:

Distortion Frequency	Spectrum Analyzer Reading	Test Limit
10 Hz	_____	+1.0 dB, -2.0 dB
20 Hz	_____	±1.0 dB
100 Hz	_____	±1.0 dB
20 kHz	_____	±1.0 dB
50 kHz	_____	+1.0 dB, -2.0 dB
100 kHz	_____	+1.5 dB, -4.0 dB
330 kHz	_____	+1.5 dB, -4.0 dB

Residual Noise Test:

Residual Noise with 1 k Ω input load and 80 kHz Filter =
 _____ . Test Limit; below -92 dB.

Input Impedance Test:

Spectrum Analyzer indication for 100 k Ω resistance in series with 339A input, frequency -1 kHz = _____ .
 Test Limit -5.97 to -6.07 dB.

Spectrum Analyzer indication for frequency of 17 kHz =
 _____ . Test Limit -6.02 to -9.00 dB.

SECTION V ADJUSTMENTS

5-1. INTRODUCTION.

5-2. This section contains complete adjustment procedures for the Model 339A Distortion Measurement Set. After the instrument has been adjusted according to the procedures given in this section, it should meet the accuracy specifications listed in Table 1-1.

5-3. EQUIPMENT REQUIRED.

5-4. The test equipment required to perform the adjustments is listed at the beginning of each adjustment procedure and in the Recommended Test Equipment Table in Section I. If the recommended equipment is not available, substitute equipment which meets the critical specifications listed in the table may be used.

5-5. ADJUSTMENT LOCATIONS.

5-6. The location of all adjustments is shown in Figure 5-3 at the back of this section. The function of each adjustment is listed in Table 5-2.

5-7. FACTORY SELECTED COMPONENTS.

5-8. Certain components in the Model 339A are individually selected to compensate for varying circuit parameters. These components are noted on the schematics and in the material list by an asterisk (*). The value listed in the material list and on the schematic is the typical value of the selected component. The function of the factory selected components and their value ranges are listed in Table 5-1.

5-9. VOLTMETER ADJUSTMENTS.

5-10. Mechanical Meter Zero.

5-11. The mechanical meter-zero should be checked and adjusted, if necessary, before proceeding with the calibration procedures. The meter-zero is checked when the instrument is at its operating temperature and the power is off. The meter zero is correctly set when the pointer rests directly over the zero mark on the meter scale. To adjust the meter-zero, proceed as follows:

- a. Turn the instrument on and allow it to "warmup" for at least 20 minutes.
- b. Turn the instrument off and allow approximately 30 seconds for all capacitors to discharge.
- c. Rotate the zero adjustment screw clockwise until the pointer is left of zero and moving up-scale.

d. Continue rotating the screw clockwise until the pointer is exactly over the zero calibration mark.

e. Rotate the adjustment screw slightly counter-clockwise to relieve tension on the pointer suspension. If the pointer moves off zero, repeat Steps c through e, but make the counter-clockwise rotation less.

5-12. Gain Adjustments.

Equipment Required:

AC Calibrator (-hp- Model 745A).
Digital Voltmeter (-hp- Model 3465A).

- a. Set the 339A controls as follows:

FUNCTION	INPUT LEVEL
FILTERS	OFF (out)
METER RESPONSE	VU
INPUT RANGE	3 V
INPUT/GND SELECT	DIS. AN./ \perp
(center position)	

b. Set the AC Calibrator for an output of 3 V at 1 kHz. Connect the output of the AC Calibrator to the 339A DISTORTION ANALYZER input.

c. Adjust A2R17 (FULL SCALE ADJUST) for a meter indication of exactly 3 V.

d. Reduce the AC Calibrator output to 1 V at 1 kHz.

e. Adjust A2R37 (1/3 SCALE ADJUST) for a meter indication of exactly 1 V.

NOTE

The adjustment of A2R17 and A2R37 interact. Repeat Steps b through e until the meter indication is correct at both fullscale (3 V) and one-third scale (1 V).

f. Set the AC Calibrator for an output of 3.162 V at 1 kHz. Set the Digital Voltmeter to measure DC volts (20 volt range).

g. Connect the DVM's low input to the A2 assembly shield and the high input to A2TP2.

h. Adjust A2R36 (REFERENCE ADJUST) for a DVM reading of +3.162 V dc.

- i. Reduce the AC calibrator output to 0.94 V.
- j. Adjust A2R35 (LOW LIMIT ADJUST) until the INPUT RANGE low limit indicator just lights.
- k. Increase the AC Calibrator output to 0.95 V. The low limit indicator should turn off. If not, repeat Steps i and j.
- l. Increase the AC Calibrator output to 3.10 V. Note that both high and low INPUT RANGE indicator lights are OFF.
- m. Increase the AC Calibrator output to 3.4 V. The INPUT RANGE high limit indicator should light.



Set the LINE switch OFF before performing the following steps to prevent damaging A2U7.

- n. Set the 339A LINE switch OFF.
- o. Disconnect the cable from A2J2. Place the cable in such a manner that it will not short against the chassis or components on the PC assembly.
- p. Install a jumper wire between A2TP1 and A2TP8.
- q. Set the DVM to measure DC volts (20 volt range). Connect the DVM's high input to A2TP9 and the low input to the A2 assembly shield.
- r. Set the AC Calibrator for an output of 3 V at 1 kHz.
- s. Set the 339A LINE switch ON.
- t. Adjust A2R24 (AUTO SET-LEVEL FULL SCALE ADJUST) for a DVM reading of +3.162 V dc.
- u. Reduce the AC Calibrator output to 1 V.
- v. Adjust A2R22 (AUTO-SET LEVEL 1/3 SCALE ADJUST) for a DVM reading of +3.162 V dc.

NOTE

The adjustment of A2R22 and A2R24 interact. Repeat Steps r through v until the DVM indication at both full-scale and 1/3 scale is +3.162 V dc ± 0.02 V dc.

- w. While observing the DVM, set the AC Calibrator for output of 1.5, 2.0, 2.5, and 3 volts. The DVM should indicate 3.162 V dc ± 0.04 V dc for each setting.
- x. Set the 339A LINE switch to OFF.
- y. Remove the test jumper and DVM leads.

Reconnect the cable to A2J2. Return the LINE switch to ON.

5-13. OSCILLATOR ADJUSTMENTS.

5-14. Amplitude Adjustment.

Equipment Required:

Digital Voltmeter (-hp- Model 3465A).

- a. Set the 339A controls as follows:

FREQUENCY 10 Hz (1.0 x 10)
 FREQUENCY VERNIER CAL
 OSCILLATOR LEVEL 3 V
 (vernier fully CW)

- b. Set the DVM to measure DC volts (2 volt range). Connect the DVM's high input to A1TP8 and the low input to the A1 assembly shield.

- c. Adjust A1R30 (AMPLITUDE ADJUST) for a DVM reading of -0.4 V dc ± 0.1 V dc.

5-15. Frequency Adjustment.

Equipment Required:

Electronic Counter (-hp- Model 5300A mainframe,
 Model 5302A Universal Counter Module.)

- a. Set the 339A controls as follows:

FREQUENCY 10 kHz (1.0 x 10 K)
 FREQUENCY VERNIER CAL
 OSCILLATOR LEVEL 3 V
 (vernier fully CW)

- b. Connect the Electronic Counter input to the 339A Oscillator output.

- c. Adjust A1C7 (10 kHz adjust) for a counter indication of 10 kHz ± 10 Hz.

- d. Set the 339A FREQUENCY controls for a frequency of 100 kHz (10.0 x 10 K).

- e. Verify that the counter reads 100 kHz ± 1 kHz. If not, readjust A1C7 until both the 10 kHz and 100 kHz readings are within the specified limits.

5-16. ANALYZER ADJUSTMENTS.

5-17. Notch Filter Null Adjust.

Equipment Required:

Spectrum Analyzer (-hp- Model 3044A)
 Low Distortion Oscillator (-hp- Model 339A)

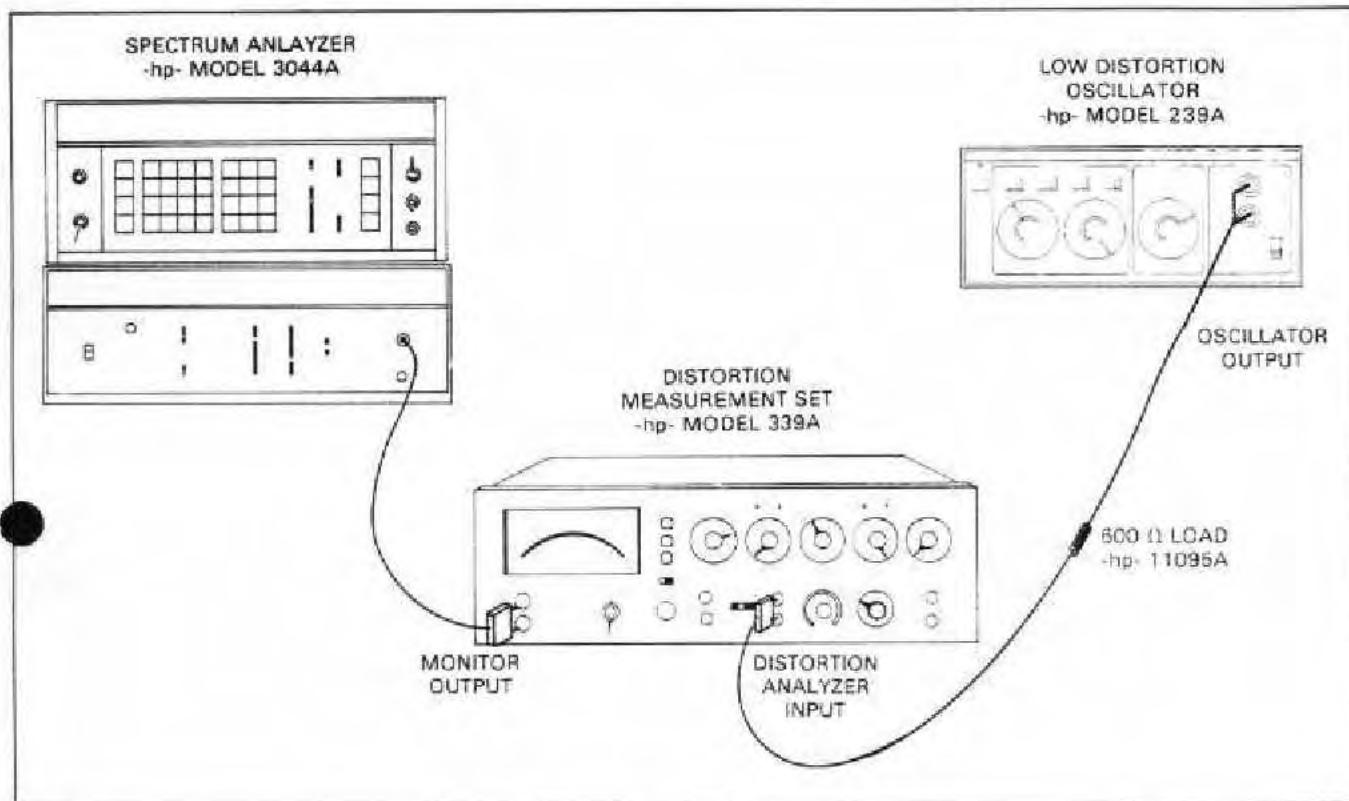


Figure 5-1. Notch Filter Null Adjustments.

a. Connect the equipment as shown in Figure 5-1.

LEVELING FAST
TIME/STEP 1000 in Sec

b. Set the 339A (under test) controls as follows:

Enter an output frequency of 1 kHz and a step frequency of 1 Hz.

FUNCTION INPUT LEVEL
FILTERS OFF (out)
METER RESPONSE NORMAL
DISTORTION RANGE -80 dB
INPUT RANGE 3V
INPUT/GND SELECT DIS. AN./±
(center position)
FREQUENCY 1 kHz (1.0 x 1 K)

f. Step the synthesizer up or down as necessary to obtain a peak reading on the 3571A.

g. Press the 3571A Enter Offset switch and observe a display reading of 00.00 dB V.

h. Set the FUNCTION switch of the 339A under test to DISTORTION.

i. Adjust A4R16 (NOTCH FILTER NULL ADJUST) and A4R43 (NOTCH FILTER FREQUENCY ADJUST) for maximum null (greatest negative reading) as indicated by the 3571A. The null depth must be >-100 dB. Null depth is determined by adding the 339A DISTORTION RANGE setting (-80 dB) and the 3571A display reading.

c. Set the controls of the 339A being used as a signal source to obtain a 1 kHz (1.0 x 1 K) signal. Adjust the output level for a meter indication of -10 dB V on the instrument under test.

d. Set the 3571A Tracking Spectrum Analyzer controls as follows:

DISPLAY REFERENCE....RELATIVE
DISPLAY SMOOTHING.....ON
BANDWIDTH..... 30 Hz
INPUT RANGE..... +10 (dB V)
INPUT IMPEDANCE..... 1 MΩ

e. Set the 3330B Automatic Synthesizer controls as follows:

NOTE

The adjustment of A4R16 and A4R43 interact. Repeat the adjustment of A4R16 and A4R43 until the maximum null is obtained.

j. Set the FUNCTION switch of the 339A under test to INPUT LEVEL.

k. Adjust the output of the 339A being used as a source for a meter indication of 0 dB V.

l. Return the 339A under test to the DISTORTION FUNCTION. The null depth must be > -100 dB. If not, readjust A4R16 and A4R43 until the null depth is > -100 dB at both input levels.

m. Set the FUNCTION switch of the 339A under test to INPUT LEVEL and the FREQUENCY controls for a frequency of 10 Hz (1.0 x 10).

n. Set the frequency of the 339A being used a signal source to 10 Hz (1.0 x 10). Adjust the output level for a meter indication of -10 dB V on the instrument under test.

o. Enter an output frequency of 10 Hz and a step frequency of 0.1 Hz into the 3330B.

p. Set the Bandwidth of the 3571A to 3 Hz.

q. Step the Synthesizer frequency up or down as necessary to obtain a peak reading on the 3571A.

r. Press the 3571A ENTER OFFSET button and observe a display reading of 00.00 dB V.

s. Enter the frequency displayed on the Synthesizer as the step frequency. Step the frequency of the Synthesizer to the second harmonic of the original frequency (one step).

t. Set the FUNCTION switch of the 339A under test to DISTORTION.

u. Adjust A4R65 (INPUT BALANCE ADJUST) for a minimum reading on the 3571A. (Greatest negative reading.)

5-18. High Frequency Adjustment.

Equipment Required:

Spectrum Analyzer (-hp- Model 3044A)

Low Distortion Oscillator (-hp- Model 339A)

600 Ω 1% Metal Film Resistor (-hp- Part No. 0698-5405)

60 k Ω 1% Metal Film Resistor (-hp- Part No. 0698-5973)

a. Connect the equipment as shown in Figure 5-2.

b. Set the 339A (under test) controls as follows:

FUNCTION	DISTORTION
FILTERS	OFF (out)
METER RESPONSE	NORMAL
DISTORTION RANGE	-80 dB
INPUT RANGE	1 V
INPUT/GND SELECT	DIS. AN./ \perp (center position)
FREQUENCY	10 kHz (1.0 x 10 K)
OSCILLATOR LEVEL	OFF

c. Adjust the 339A being used as a signal source to provide a 10 kHz, 1 V signal.

d. Set the 3571A Tracking Spectrum Analyzer controls as follows:

DISPLAY REFERENCE	RELATIVE
DISPLAY SMOOTHING	ON
BANDWIDTH	3 Hz
INPUT RANGE	+10 dB V
INPUT IMPEDANCE	1 M Ω

e. Set the 3330B Automatic Synthesizer controls as follows:

LEVELING	SLOW
TIME/STEP	3000 mSec.


Enter an output frequency of 1 kHz, an output amplitude of -40 dBm, and an amplitude step level of 1 + dBm.

f. Step the 3330B amplitude until the 339A under test indicates a distortion reading of -80 dB V.

g. Press the 3571A ENTER OFFSET button and observe a display reading of 00.00 dB.

h. Enter an output frequency of 20 kHz into the 3330B.

i. Adjust A3C18 (HIGH FREQUENCY ADJUST) for a 3571A display reading of -0.3 dB \pm 0.1 dB.

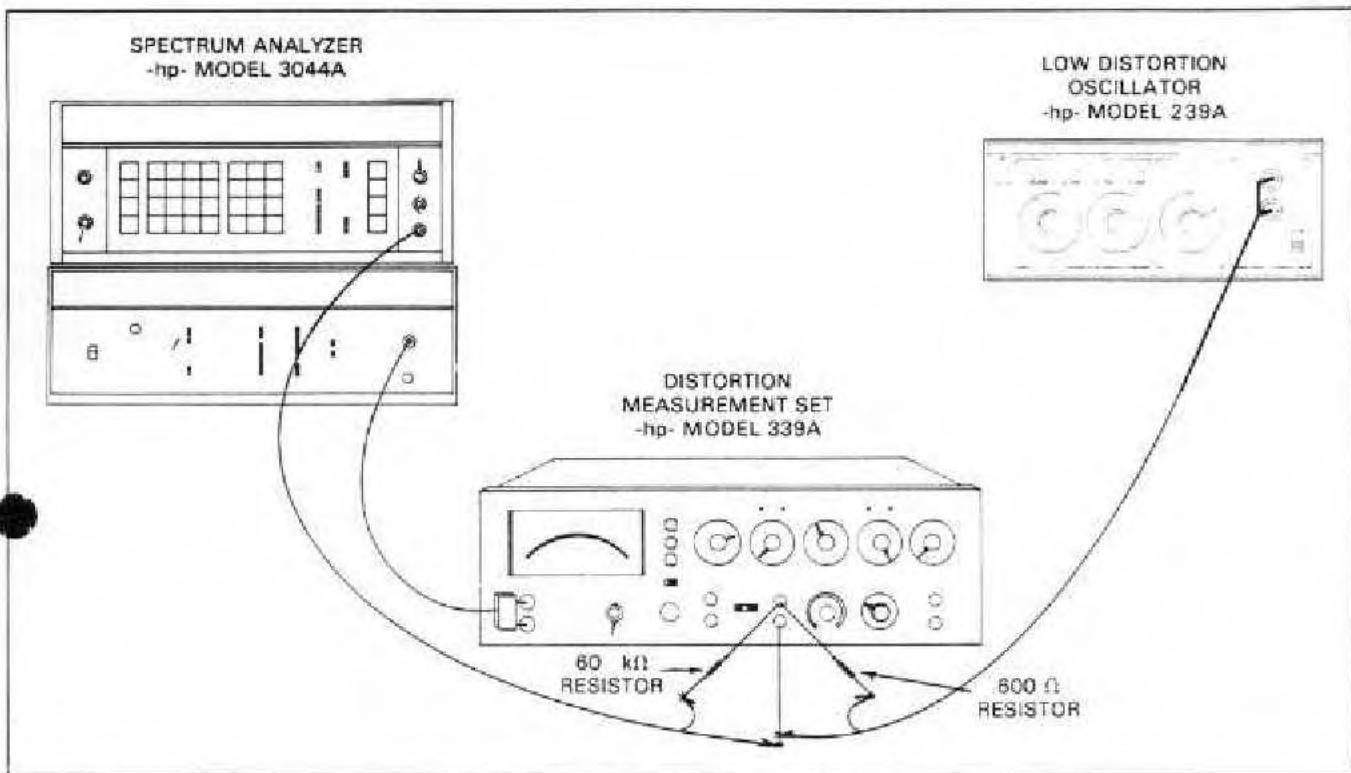

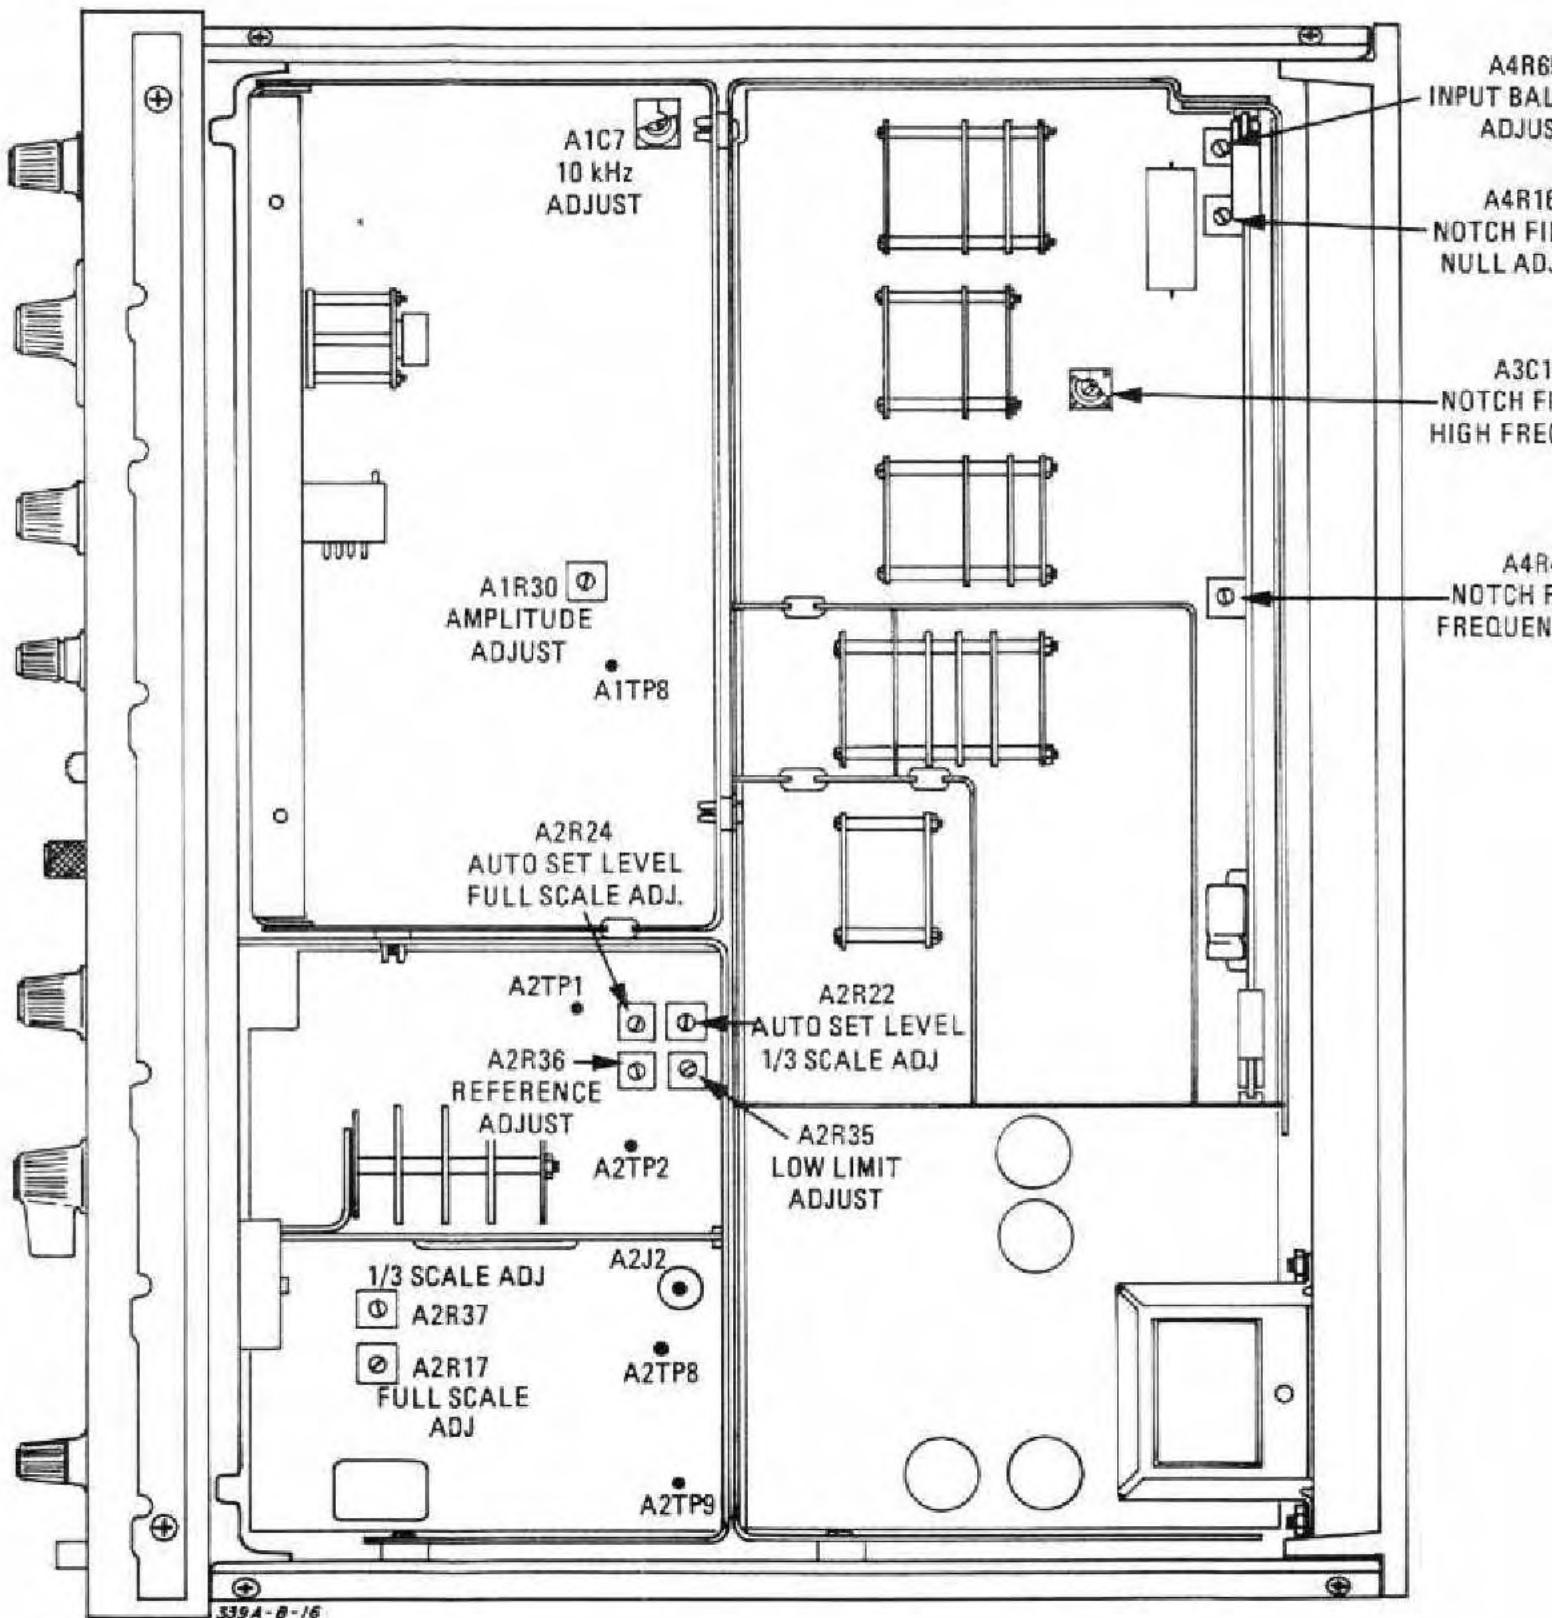


Figure 5-3. Adjustment Panel

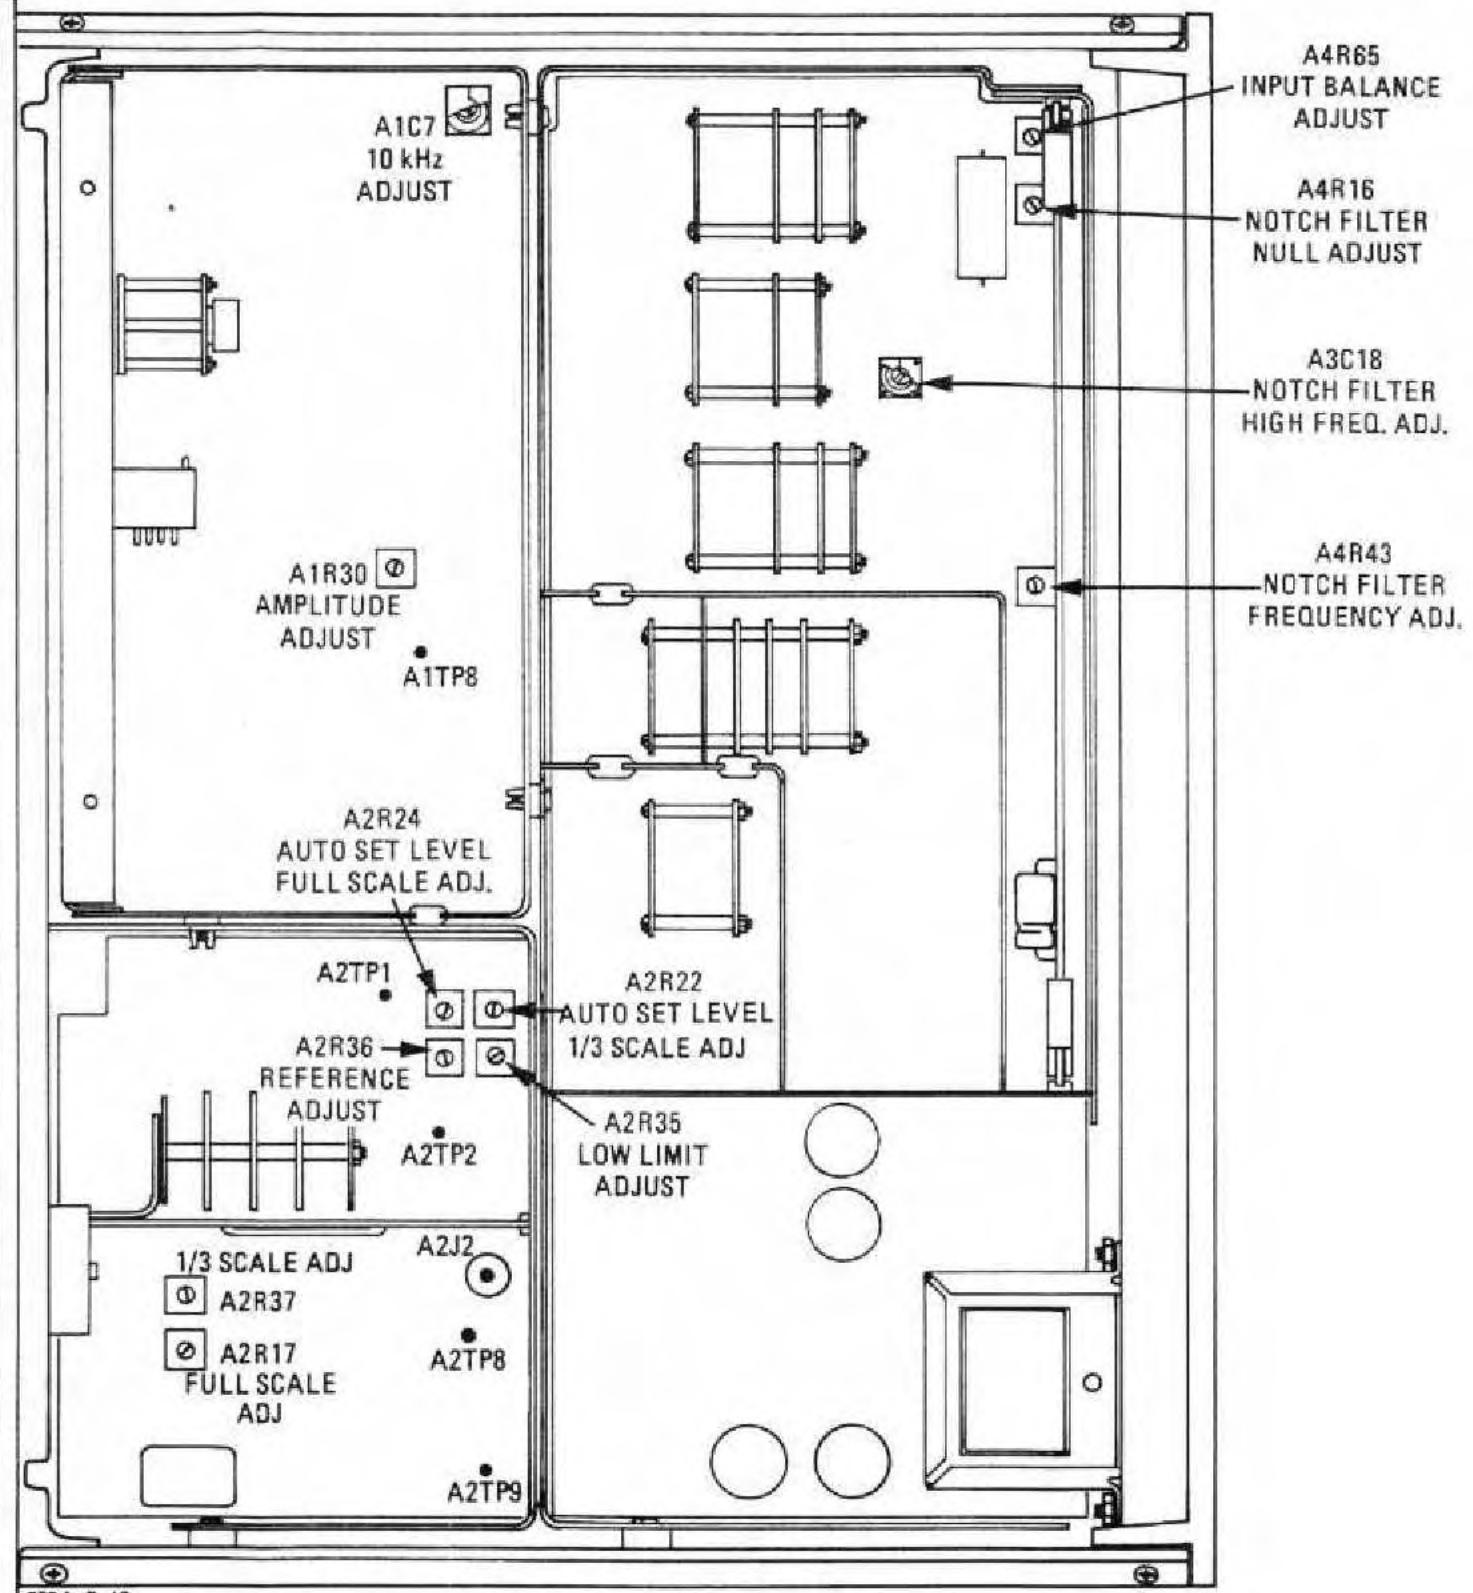


Figure 5-3. Adjustment Locations.
5-7/5-8

Table 5-1. Factory Selected Components.

Reference Designator	Range of Values	Description
A1C47	27 pF to 750 pF	Value selected for minimum second harmonic distortion at the oscillator output for fundamental frequencies of 20 kHz and above.
A3C132	4.7 pF to 15 pF	Value selected to prevent amplifier A3U101 from oscillating.

Table 5-2. Adjustable Components.

Adjustment Name	Reference Designator	Adjustment Paragraph	Description
10 kHz ADJUST	A1C7	5-13	Adjust oscillator frequency at 10 kHz.
AMPLITUDE ADJUST	A1R30	5-13	Adjust the basic output level of the oscillator amplifier.
FULL SCALE ADJUST	A2R17	5-12 (Step c)	Adjust meter amplifier for full-scale meter indication.
AUTO SET-LEVEL 1/3 SCALE ADJUST	A2R22	5-12 (Step v)	Adjusts the gain of the Auto Set-Level circuit for an applied input level equal to 1/3 full-scale.
AUTO SET-LEVEL FULL-SCALE ADJUST	A2R24	5-12 (Step t)	Adjusts the gain of the Auto Set-Level circuit for an applied input level equal to full-scale.
LOW LIMIT ADJUST	A2R35	5-12 (Step j)	Adjust the low limit reference of the Input Level indicator circuit. Input levels below this reference will cause the low input level indicator to light.
REFERENCE ADJUST	A2R36	5-12 (Step h)	Adjusts the Auto Set-Level full-scale reference voltage.
1/3 SCALE ADJUST	A2R37	5-12 (Step e)	Adjusts the meter amplifier gain for proper meter indication with an applied input level equal to 1/3 of full-scale.
HIGH FREQUENCY ADJUST	A3C18	5-18	Neutralizes the effects of capacitive loading of the Notch Filter.
NOTCH FILTER NULL ADJUST	A4R16	5-17	Adjusts the null depth of the Notch Filter.
NOTCH FILTER FREQUENCY ADJ.	A4R43	5-17	Adjusts the Notch Filter frequency to obtain maximum null depth.
INPUT BALANCE ADJUST	A4R65	5-17	Adjusts the input balance to the amplitude feedback demodulator to reduce distortion at low frequencies.

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-3 lists parts in alphabetic order of their reference designators and indicates the description, -hp- Part Number of each part, together with any applicable notes, and provides the following:

- Total quantity used in the instrument (Qty column). The total quantity of a part is given the first time the part number appears.
- Description of the part. (See abbreviations listed in Table 6-1.)
- Typical manufacturer of the part in a five-digit code. (See Table 6-2 for list of manufacturers.)
- Manufacturers part number.

6-3. Miscellaneous parts are listed at the end of Table 6-3.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or

inquiry to your local Hewlett-Packard Field Office.

(Field Office locations are listed at the back of the manual.) Identify parts by their Hewlett-Packard part numbers. Include instrument model and serial numbers.

6-6. NON-LISTED PARTS.

6-7. To obtain a part that is not listed, include:

- Instrument model number.
- Instrument serial number.
- Description of the part.
- Function and location of the part.

6-8. PARTS CHANGES.

6-9. Components which have been changed are so marked by one of three symbols; i.e., Δ , Δ with a letter subscript, e.g., Δ_a , or Δ with a number subscript, e.g.,

Δ is A Δ with no subscript indicates the component listed is the preferred replacement for an earlier component. A Δ with a letter subscript indicates a change which is explained in a note at the bottom of the page. A Δ with a number subscript indicates the related change is discussed in backdating (Section VII). The

Table 6-1. Standard Abbreviations.

ABBREVIATIONS	
Ag	silver
Al	aluminum
Amperes	ampere
Gold	gold
C	capacitor
Cer	ceramic
Coef	coefficient
Com	common
Comp	composition
Conn	connection
Dip	deposited
DPDT	double-pole double-throw
DPST	double-pole single-throw
elect	electrolytic
encap	encapsulated
F	farad
FET	field effect transistor
fixd	fixed
GaAs	pallium arsenide
GHz	gigahertz = 10^9 hertz
grd	grounded
Ge	germanium
grnd	grounded
H	henrys
Hg	mercury
A	assembly
motor	motor
B	battery
BT	battery
C	capacitor
CR	diode
diode	diode
delay line	delay line
lamp	lamp
MP	micro electronic part
F	fuse
Hz	hertz (cycles per second)
ID	inside diameter
imp	impregnated
med	insensitive
med	insensitive
ins	insulation
k Ω	kilohm(s) = 10^3 ohms
kHz	kilohertz = 10^3 hertz
L	inductor
lin	linear taper
log	logarithmic taper
mA	milliamperes = 10^{-3} amperes
MHz	megahertz = 10^6 hertz
MΩ	megohm(s) = 10^6 ohms
met film	metal film
mf	manufacturer
ms	millisecond
mv	millivolt(s) = 10^{-3} volts
μF	microfarad(s)
μV	microvolt(s) = 10^{-6} volts
μW	microwatt(s) = 10^{-6} watts
μy	Mylar(R)
NA	nanokampere(s) = 10^{-9} amperes
NC	normally closed
Ne	neon
NO	normally open
R	resistor
rhm	rhodium
rm.s.	root-mean-square
rot	rotary
Se	semit
sec	section(s)
Si	silicon
DESIGNATORS	
FL	filter
HR	heater
IC	integrated circuit
J	jack
RT	relay
K	inductor
L	meter
M	mechanical part
P	plug
G	transistor
DCR	transistor diode
R	resistor
V	thermistor
K	switch
S	transformer
T	terminal
TB	terminal board
TC	thermocouple
TP	test point
TS	terminal strip
U	microcircuit
V	vacuum tube, neon bulb, photocell, etc.
W	cable
X	socket
XF	transformer
Y	fuseholder
Z	crystal network

© Dupont de Nemours

* optimum value selected at factory.
** average value shown (part may be omitted)
** no standard type number assigned
selected or special type

number of the subscript indicates the number of the change in backdating which should be referred to.

6-10. PROPRIETARY PARTS.

6-11. Items marked by a dagger (†) in the reference designator column are available only for repair and service of Hewlett-Packard Instruments.

Table 6-2. Code List of Manufacturers.

Mfr. No.	Manufacturer Name	Address
01121	Allen-Bradley Co.	Milwaukee, WI 53204
01928	RCA Corp Solid State Div	Somerville, NJ 08876
03888	KDI Pyrofilm Corp	Whippany, NJ 07981
04713	Motorola Semiconductor Products	Phoenix, AZ 85062
06001	GE Co Elek Cap & Bat Prod Dept	Irmo, SC 29063
13103	Thermalloy Co	Dallas, TX 75234
17856	Siliconix Inc	Santa Clara, CA 95054
18178	Vactec Inc	Maryland Hgts, MO 63043
19701	Mepco/Electra Corp	Mineral Wells, TX 67067
24546	Corning Glass Works (Bradford)	Bradford, PA 16701
27014	National Semiconductor Corp	Santa Clara, CA 95051
28480	Hewlett-Packard Co Corporate Hq	Palo Alto, CA 94304
34371	Harris Semicon Div Harris-Intertype	Melbourne, FL 32901
56289	Sprague Electric Co	North Adams, MA 01247
72136	Electro Motive Corp Sub IEC	Willimantic, CT 06226
74970	Johnson E F Co	Waseca, MN 56093
75915	Littlefuse Inc	Des Plaines, IL 60016
91637	Dale Electronics Inc	Columbus, NE 68601

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1	00434-06591	1	PC ASSEMBLY, OSCILLATOR	26480	00434-06591
A1C1	0160-04601	1	CAPACITOR-FIXED 5.6UF +/-1% 200VDC	26480	0160-04601
A1C2	0160-04601	1	CAPACITOR-FIXED 5.6UF +/-1% 200VDC	26480	0160-04601
A1C3	0160-04598	1	CAPACITOR-FIXED 0.068UF +/-7% 200VDC	26480	0160-04598
A1C4	0160-04595	1	CAPACITOR-FIXED 560PF +/-1% 200VDC	26480	0160-04595
A1C5	0160-04594	1	CAPACITOR-FIXED 560PF +/-1% 200VDC	26480	0160-04594
A1C6	0160-01190	1	CAPACITOR-FIXED 3.9PF +/-5% 300VDC	72136	00160-01190-300VDC
A1C7	0160-01197	2	CAPACITOR-FIXED 1.0UF +/-20% 100VDC CER	72074	160050745
A1C10	0160-38222	47	CAPACITOR-FIXED .1UF +/-20% 100VDC CER	26480	0160-38222
A1C11	0160-38222	1	CAPACITOR-FIXED .1UF +/-20% 100VDC CER	26480	0160-38222
A1C12	0160-38222	1	CAPACITOR-FIXED .1UF +/-20% 100VDC CER	26480	0160-38222
A1C13	0160-38222	1	CAPACITOR-FIXED .1UF +/-20% 100VDC CER	26480	0160-38222
A1C14	0160-03633	2	CAPACITOR-FIXED 620PF +/-5% 300VDC CER	26480	0160-03633
A1C15	0160-22011	1	CAPACITOR-FIXED 51PF +/-5% 300VDC	26480	0160-22011
A1C16	0160-22011	1	CAPACITOR-FIXED 3PF +/-25% 500VDC	26480	0160-22011
A1C17	0160-22016	3	CAPACITOR-FIXED 2.7PF +/-5% 300VDC	26480	0160-22016
A1C20 A1	0160-01705	1	CAPACITOR-FIXED 1.5UF +/-10% 21VDC TA	04204	15n01554902042
A1C21	0160-01705	1	CAPACITOR-FIXED .153UF +/-20% 21VDC TA	04204	15n01554901542
A1C22	0160-01705	1	CAPACITOR-FIXED .15UF +/-10% 35VDC TA	04204	15n01554901542
A1C23	0160-02118	1	CAPACITOR-FIXED .15UF +/-10% 35VDC TA	04204	15n01554901542
A1C24	0160-01705	1	CAPACITOR-FIXED .15UF +/-10% 200VDC POLY	04204	0035155490042
A1C25	0160-01704	7	CAPACITOR-FIXED .7UF +/-10% 40VDC TA	04204	15n0176x900662
A1C26	0160-01704	7	CAPACITOR-FIXED 1.0UF +/-10% 20VDC TA	04204	15n0166x902062
A1C27	0160-02291	6	CAPACITOR-FIXED 1.0UF +/-10% 35VDC TA	04204	15n01654903542
A1C28	0160-01704	1	CAPACITOR-FIXED .1UF +/-10% 35VDC TA	04204	15n0164x903542
A1C29	0160-01006	1	CAPACITOR-FIXED 0.01UF +/-20% 40VDC TA	04204	15n0086x900662
A1C32	0160-22008	1	CAPACITOR-FIXED 2.7PF +/-5% 300VDC	26480	0160-22055
A1C35	0160-38222	1	CAPACITOR-FIXED .1UF +/-20% 100VDC CER	26480	0160-38222
A1C40	0160-03637	1	CAPACITOR-FIXED .07UF +/-5% 200VDC	26480	15n0176x902062
A1C41	0160-03637	1	CAPACITOR-FIXED .07UF +/-5% 200VDC	26480	15n0176x902062
A1C42	0160-38222	1	CAPACITOR-FIXED .1UF +/-20% 100VDC CER	26480	0160-38222
A1C43	0160-38222	1	CAPACITOR-FIXED .1UF +/-20% 100VDC CER	26480	0160-38222
A1C44	0160-22008	1	CAPACITOR-FIXED .3PF +/-25% 500VDC	26480	0160-22055
A1C45	0160-22008	1	CAPACITOR-FIXED 2.7PF +/-5% 300VDC	26480	0160-22055
A1C46	0160-03633	1	CAPACITOR-FIXED .020PF +/-5% 300VDC	26480	0160-03633
A1C47	0160-03632	1	CAPACITOR-FIXED .020PF +/-5% 300VDC	26480	0160-03632
A1C48	0160-03632	1	CAPACITOR-FIXED .01UF +/-5% 300VDC CER	26480	0160-03632
A1C49	0160-22011	2	CAPACITOR-FIXED 1.0PF +/-5% 500VDC CER	26480	0160-22011
A1CR1 A1	1901-05118	2	DIODE-SCHOTTKY	26480	19n1-05118
A1CR2	1901-05118	10	DIODE-SWITCHING 30V 50MA 245 UD-55	26480	19n1-05118
A1CR3	1901-05118	10	DIODE-SWITCHING 30V 50MA 245 UD-55	26480	19n1-05118
A1CR4	1901-05118	10	DIODE-SWITCHING 30V 50MA 245 UD-55	26480	19n1-05118
A1CR5	1901-05118	10	DIODE-SWITCHING 30V 50MA 245 UD-55	26480	19n1-05118
A1CR6	1901-00400	1	DIODE-SWITCHING 30V 50MA 245 UD-55	26480	19n1-00400
A1CR10	1901-00225	6	DIODE-GEN PNP 10V 200mA 30-7	26480	19n1-00225
A1CR11	1902-00229	2	DIODE-ZIN 1A-1V 5% DO-15 P01411 T01411, P01412 T01412	26480	19n2-00229
A1CR12	1901-00225	2	DIODE-GEN PNP 10V 200mA 30-7	26480	19n1-00225
A1CR13	1902-00229	2	DIODE-ZIN 1A-1V 5% DO-15 P01411 T01411, P01412 T01412	26480	19n2-00229
A1CR14	1901-00400	1	DIODE-SWITCHING 30V 2NS 50MA DO-35	26480	1901-00400
A1J1	1251-3192	3	CONNECTOR 3-PIN + POST TYPE	27264	04-000-1031(2403-034)
A1J2	1251-3192	3	CONNECTOR 3-PIN + POST TYPE	27264	04-000-1031(2403-064)
A1J3	1251-3198	2	CONNECTOR 3-PIN + POST TYPE	27264	04-000-1011(2403-064)
A1J4	1251-05113	1	CONNECTOR 3-PIN + POST TYPE	27264	04-000-1011
A1J5	1251-2269	12	CONNECTOR 1P/ONO, SINGLE JACK	27264	15-000-0301
A1J6	1251-38116	1	CONNECTOR 2-PIN N POST TYPE	27264	04-000-1021
A1K1	0690-01137	2	RELAY, REED	26480	0690-01137
A1Q1 A1	1855-02655	1	TRANSISTOR FET VCR2N	26480	1855-02655
A1R1	0699-00225	2	RESISTOR 28.42K 25% 125W F TC=0+50	26480	0699-00225
A1R2	0699-00225	2	RESISTOR 28.42K 25% 125W F TC=0+50	26480	0699-00225
A1R3	0699-00226	2	RESISTOR 14.21K 25% 125W F TC=0+50	26480	0699-00226
A1R4	0699-00226	2	RESISTOR 14.21K 25% 125W F TC=0+50	26480	0699-00226
A1R5	0699-00227	2	RESISTOR 9.474K 25% 125W F TC=0+50	26480	0699-00227
A1R6	0699-00227	1	RESISTOR 9.474K 25% 125W F TC=0+50	26480	0699-00227
A1R7	0699-00228	2	RESISTOR 7.105K 25% 125W F TC=0+50	26480	0699-00228
A1R8	0699-00228	2	RESISTOR 7.105K 25% 125W F TC=0+50	26480	0699-00228
A1R9	0699-00229	4	RESISTOR 5.684K 25% 125W F TC=0+50	21070	8
A1R10	0699-00229	2	RESISTOR 5.684K 25% 125W F TC=0+50	21070	8
A1R11	0699-00229	2	RESISTOR 5.684K 25% 125W F TC=0+50	21070	8
A1R12	0699-00229	2	RESISTOR 5.684K 25% 125W F TC=0+50	21070	8
A1R13	0699-00229	2	RESISTOR 2.641K 25% 125W F TC=0+50	21070	8
A1R14	0699-00235	2	RESISTOR 2.641K 25% 125W F TC=0+50	21070	8
A1R15	0699-00236	2	RESISTOR 14.21K 25% 125W F TC=0+50	21070	8

See introduction to this section for ordering information

ΔA The oscillator circuit has been changed beginning with serial number 1730A00266. For instruments with lower serial numbers, refer to Section VII.

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1R16	0699-0036		RESISTOR 142.1K .25W .125W P TCR04-50	01070	
A1R17	0699-0031	2	RESISTOR 94.7K .25W .125W P TCR04-50	01070	
A1R18	0699-0031		RESISTOR 94.7K .25W .125W P TCR04-50	01070	
A1R19	0699-0032	2	RESISTOR 71.05K .25W .125W P TCR04-50	01070	
A1R20	0699-0032		RESISTOR 71.05K .25W .125W P TCR04-50	01070	
A1R21	0699-0031	2	RESISTOR 56.9K .25W .125W P TCR04-50	01070	
A1R22	0699-0033		RESISTOR 66.84K .25W .125W P TCR04-50	01070	
A1R23, 824	0698-0030		RESISTOR 23K 1% .125W P TCR04-100	03298	04-178-TC-2323-1
A1R27	0698-00318	2	RESISTOR 7.2K 1% .125W P TCR04-100	03298	04-178-10-7321-1
A1R28	0698-00302	2	RESISTOR 2.87K 1% .125W P TCR04-100	03298	04-178-10-2671-1
A1R29	0757-0001	8	RESISTOR 100 1% .125W P TCR04-100	03298	04-178-10-101-1
A1R30	2100-0587	2	RESISTOR-THERM 2K 10% C TCR-40J 1-TRN	73138	72-156-0
A1R31	0698-00308	1	RESISTOR 3.2K 1% .125W P TCR04-100	03298	04-178-10-3091-1
A1R32 1A					
A1R33 1A					
A1R34	0698-0040	2	RESISTOR 3.4K 1% .125W P TCR04-100	03298	04-178-TC-00401-1
A1R35	0698-0029	7	RESISTOR 4.7K 1% .125W P TCR04-100	03298	04-178-TC-00409-1
A1R36	0698-0094	1	RESISTOR 5.1K .25W P TCR04-100	03298	04-178-0094-1
A1R37	0757-00401		RESISTOR 10K 1% .125W P TCR04-100	03298	04-178-TC-00401-1
A1R38	0757-00472	2	RESISTOR 20K 1% .125W P TCR04-100	03298	04-178-TC-00408-1
A1R41	0698-0028	10	RESISTOR 4.7K 1% .125W P TCR04-100	03298	
A1R42	0757-00402	8	RESISTOR 10K 1% .125W P TCR04-100	03298	04-178-TC-00402-1
A1R43	0757-00402		RESISTOR 10K 1% .125W P TCR04-100	03298	04-178-TC-00402-1
A1R44	0757-00415	1	RESISTOR 50K 1% .125W P TCR04-100	03298	04-178-TC-00415-1
A1R45	0757-00402		RESISTOR 10K 1% .125W P TCR04-100	03298	04-178-TC-00402-1
A1R48	0698-00279		RESISTOR 4.99K 1% .125W P TCR04-100	03298	04-178-00499-1
A1R50	0757-00283	8	RESISTOR 2K 1% .125W P TCR04-100	03298	04-178-TC-00201-1
A1R51	0757-00283		RESISTOR 2K 1% .125W P TCR04-100	03298	04-178-TC-00201-1
A1R52	0757-00401		RESISTOR 100 1% .125W P TCR04-100	03298	04-178-TC-00401-1
A1R53	0757-00407	5	RESISTOR 200 1% .125W P TCR04-100	03298	04-178-TC-00407-1
A1R61	0698-00406	1	RESISTOR 3.57K 1% .125W P TCR04-100	03298	04-178-TC-00406-1
A1R62	0698-00279		RESISTOR 4.99K 1% .125W P TCR04-100	03298	04-178-00499-1
A1R63	0698-00279	2	RESISTOR 604 1% .5W P TCR04-100	05522	04-653-2
A1R64	0698-00402	1	RESISTOR 1.87K 1% .5W P TCR04-100	05522	04-653-2
A1R65	0698-00408	1	RESISTOR 1.23K 1% .5W P TCR04-100	05522	04-653-2
A1R66	0698-00279	5	RESISTOR 1.74K 1% .5W P TCR04-100	05520	04-653-2
A1R67	0698-00288	4	RESISTOR 1.18K 1% .5W P TCR04-100	05520	04-653-2
A1R68	0698-00279		RESISTOR 1.74K 1% .5W P TCR04-100	05520	04-653-2
A1R69	0698-00288		RESISTOR 1.18K 1% .5W P TCR04-100	05520	04-653-2
A1R70	0698-00279		RESISTOR 1.74K 1% .5W P TCR04-100	05520	04-653-2
A1R71	0698-00288		RESISTOR 1.18K 1% .5W P TCR04-100	05520	04-653-2
A1R72	0698-00279		RESISTOR 1.74K 1% .5W P TCR04-100	05520	04-653-2
A1R73	0698-00288		RESISTOR 1.18K 1% .5W P TCR04-100	05520	04-653-2
A1R74	0698-00279		RESISTOR 1.74K 1% .5W P TCR04-100	05520	04-653-2
A1R75	0698-00278	1	RESISTOR 600 1% .5W P TCR04-100	05520	04-653-2
A1R76	0698-00270		RESISTOR 604 1% .5W P TCR04-100	05520	04-653-2
A1R77	0757-00201		RESISTOR 100 1% .125W P TCR04-100	03298	04-178-TC-00201-1
A1R78	0757-00280	4	RESISTOR 1K 1% .125W P TCR04-100	03298	04-178-TC-00200-1
A1R79	00339-001902	1	SWITCH ASSEMBLY, MULTIPLIER	28480	00339-001902
A1R87	00339-001921	1	SWITCH, ROTARY	28480	310-0-1411
	00339-001903	1	SWITCH ASSEMBLY, UNITS	28480	00339-001903
A1R89	3100-03422	2	SWITCH, ROTARY	28480	310-0-3422
	00339-001904	1	SWITCH ASSEMBLY, TENTHS	28480	00339-001904
A1R90	3100-03422		SWITCH, ROTARY	28480	310-0-3422
	5040-00259	10	SHAFT, EXTENDER	28480	9040-00259
	1500-00119	12	COUPLER, RIBBON	0510H	120
A1U1	1826-0487	3	IC OP AMP	28480	1826-0487
A1U2	1826-0315	6	IC OP AMP	28480	LW1487
A1U3 A	1826-0487	7	IC OP AMP TO 99	28480	1826-0487
A2	00339-006502	1	PC ASSEMBLY, DETECTOR	28480	00339-006502
A2C1	0160-00163	3	CAPACITOR-FXO .033uF +/-10% 200VDC POLY	0420J	28480-331142
A2C2	0160-00163		CAPACITOR-FXO .033uF +/-10% 200VDC POLY	0420J	28480-331142
A2C3	0160-00163		CAPACITOR-FXO .033uF +/-10% 200VDC POLY	0420J	28480-331142
A2C4	0160-00341	1	CAPACITOR-FXO 6.8nPF +/-1% 100VDC MICAP+70	28480	0160-00341
A2C5	0160-00201		CAPACITOR-FXO 51PF +/-5% 300VDC	28480	0160-00201
A2C6	0160-04317	1	CAPACITOR-FXO 120uPF +/-1% 100VDC	28480	0160-04317
A2C7	0160-03150	1	CAPACITOR-FXO 750PF +/-1% 100VDC MICAP+70	28480	0160-03150
A2C8	0160-03691	1	CAPACITOR-FXO 750PF +/-1% 100VDC	28480	0160-03691
A2C9	0160-03024	1	CAPACITOR-FXO 170uPF +/-1% 100VDC	28480	0160-03024
A2C10	0170-00338	1	CAPACITOR-FXO 2.2uPF +/-1% 200VDC POLY	28480	0170-00338
A2C11	0160-02257	5	CAPACITOR-FXO 1uPF +/-5% 500VDC CERAMIC	28480	0160-02257
A2C12	0160-01622		CAPACITOR-FXO 1uF +/-20% 100VDC CER	28480	0160-01622
A2C13	0160-2244	4	CAPACITOR-FXO 3PF +/-25% 500VDC	28480	0160-2244
A2C14	0160-3622		CAPACITOR-FXO 1uF +/-20% 100VDC CER	28480	0160-3622
A2C15	0160-2201		CAPACITOR-FXO 51PF +/-5% 300VDC	28480	0160-2201

See introduction to this section for ordering information

AA The oscillator circuit has been changed beginning with serial number 1730A00266. For instrument with lower serial numbers, refer to Section VII.

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2C16	0180-2062	2	CAPACITOR-FXD 120UF +20% 10VDC TA	04204	15n01d7x0102z
A2C17	0180-2062	1	CAPACITOR-FXD 120UF +20% 10VDC TA	04204	15n01d7x0102z
A2C18	0180-0573	1	CAPACITOR-FXD .00056UF +10% 35VDC TA	04204	15n00564x90354z
A2C19	0180-3622	1	CAPACITOR-FXD .1UF +80-20% 10VDC CER	24480	0180-3622
A2C20	0180-3622	1	CAPACITOR-FXD .1UF +80-20% 10VDC CER	24480	0180-3622
A2C21	0180-2460	2	CAPACITOR-FXD .01UF +5% 35VDC MICAP+70	24484	0180-2460
A2C22	0180-1775	1	CAPACITOR-FXD .1UF +5% 35VDC TA	04204	15n01b5150192z
A2C23	0180-1746	2	CAPACITOR-FXD .01UF +5% 35VDC TA	04204	15n01b5150192z
A2C24	0180-0559	1	CAPACITOR-FXD .1UF +80-20% 10VDC TA	04204	15n0055601042
A2C25	0180-2204	6	CAPACITOR-FXD 100PF +5% 35VDC MICAP+70	24480	0180-2204
A2C27	0180-3622	1	CAPACITOR-FXD .1UF +80-20% 10VDC CER	24480	0180-3622
A2C28	0180-3622	1	CAPACITOR-FXD .1UF +80-20% 10VDC CER	04204	15n01b5150192z
A2C29	0180-1746	1	CAPACITOR-FXD .01UF +5% 35VDC TA	24480	0180-1746
A2C31	0180-3622	1	CAPACITOR-FXD .1UF +80-20% 10VDC CER	04204	0180-3622
A2C32	0180-2204	1	CAPACITOR-FXD 100PF +5% 35VDC MICAP+70	24480	0180-2204
A2C33	0180-0105	1	CAPACITOR-FXD .01UF +5% 35VDC TA	04204	15n0075x903584
A2C34	0180-3622	1	CAPACITOR-FXD .1UF +80-20% 10VDC CER	24480	0180-3622
A2C35	0180-0291	1	CAPACITOR-FXD .1UF +10% 35VDC TA	04204	15n01b5150192z
A2C36	0180-3622	1	CAPACITOR-FXD .1UF +80-20% 10VDC CER	24480	0180-3622
A2C37	0180-3622	1	CAPACITOR-FXD .1UF +80-20% 10VDC CER	24480	0180-3622
A2C38	0180-2261	1	CAPACITOR-FXD 10PF +5% 50VDC C1450-34	24480	0180-2261
A2C91 ^Δ	1902-0938	6	DIODE-ZINN 3.92V 5A 100W PDS4A TA881,0493	28480	1902-0938
A2C92 ^Δ	1902-0938	1	DIODE-ZINN 3.92V 5A 100W PDS4A TA881,0493	28480	1902-0938
A2C93	1901-0446	1	DIODE-SWITCHING 30V 50mA 2x5 DO45	28480	1901-0446
A2C94	1901-0446	1	DIODE-SWITCHING 30V 50mA 2x5 DO45	28480	1901-0446
A2C95	1902-3128	1	DIODE-ZINN 7.12V 5A 100W PDS4A TA881,0493	28480	1902-3128
A2E1	1900-0630	1	PHOTO-MODULE	28480	1900-0630
A2F1	2110-0651	2	FUSE .062A 250V NORMALBLD 1.25x.25 AL TEC	04704	2110-0652
	2110-0659	2	FUSE-HOLDUP-CLIP TYPE .250-A FUSE	28480	2110-0659
A2J1	1251-2969	1	CONNECTOR-PIPHONO, SINGLE JACK	27260	15-24-0501
A2J2	1251-2969	1	CONNECTOR-PIPHONO, SINGLE JACK	27260	15-24-0501
A2J3	1251-2969	1	CONNECTOR-PIPHONO, SINGLE JACK	27260	15-24-0501
A2J4	1251-2969	1	CONNECTOR-PIPHONO, SINGLE JACK	27260	15-24-0501
A2J200	1251-3196	1	CONNECTOR 84PIN H POST TYPE	27264	00-00-1061(2403-084)
A2J201	1251-3195	1	CONNECTOR 48PIN H POST TYPE	27264	09-00-1041(2403-084)
A2J202	1251-3195	1	CONNECTOR 84PIN H POST TYPE	27264	09-00-1021
A2J203	1251-2034	1	CONNECTOR-PIPC EDGE 160CONTACTS TA8808	28506	25g-10-30-300
A2K1	0698-0563	1	RELAY 2C 12VDC-COIL 5A 115VDC	28480	0698-0563
	0698-0568	1	RELAY 2C 12VDC-COIL 5A 115VDC	28480	0698-0568
A2G1	1855-0062	1	TRANSISTOR J-FET N-CHAN DIODE 5I	28480	1855-0062
A2G2	1855-0071	2	TRANSISTOR NPN 5I PDS400N TA881,0493	28480	1855-0071
A2G3	1855-0366	2	TRANSISTOR J-FET 2N4382 N-CHAN DIODE	28480	284382
A2R1	0698-1498	1	RESISTOR 8.2K 1% .125W F TC040+100	03298	00-1/8-T0-8688-F
A2R2	0698-0440	1	RESISTOR 34.6K 1% .125W F TC040+100	03298	00-1/8-T0-3001-F
A2R3	0698-0501	1	RESISTOR 5.7K 1% .125W F TC040+100	03298	00-1/8-T0-5902-F
A2R4	0698-0445	5	RESISTOR 5.7K 1% .125W F TC040+100	03298	00-1/8-T0-5761-F
A2R5	0698-0445	5	RESISTOR 5.7K 1% .125W F TC040+100	03298	00-1/8-T0-5761-F
A2R6	0698-0445	1	RESISTOR 5.7K 1% .125W F TC040+100	03298	00-1/8-T0-5761-F
A2R7	0698-3246	1	RESISTOR 11.5K 1% .125W F TC040+100	03298	00-1/8-T0-1152-F
A2R8	0698-3246	1	RESISTOR 11.5K 1% .125W F TC040+100	03298	00-1/8-T0-1152-F
A2R9	0698-3246	1	RESISTOR 11.5K 1% .125W F TC040+100	03298	00-1/8-T0-1152-F
A2R10	0698-7332	1	RESISTOR 11.5K 1% .125W F TC040+100	03298	00-1/8-T0-1004-F
A2R11	0698-0053	1	RESISTOR 60.51 25% 125W F TC040+100	28480	0698-0053
A2R12	0698-3237	1	RESISTOR 50.51 25% 125W F TC040+100	28480	0698-3237
A2R13	0612-0099	2	RESISTOR 1K 5% 5W PTH TC040+20	05520	06-5
A2R14	0757-0401	1	RESISTOR 100 1% .125W F TC040+100	03298	04-1/8-T0-1011-F
A2R15	0757-0442	1	RESISTOR 10K 1% .125W F TC040+100	03298	04-1/8-T0-1002-F
A2R16	0757-0422	1	RESISTOR 900 1% .125W F TC040+100	03298	04-1/8-T0-9098-F
A2R17	2100-3012	1	RESISTOR-PIPC 200 10% C TOP-A0J 1-TEN	04568	72-103-0
A2R18	0757-0278	1	RESISTOR 1.78K 1% .125W F TC040+100	03298	04-1/8-T0-1781-F
A2R20	0757-0442	1	RESISTOR 10K 1% .125W F TC040+100	03298	04-1/8-T0-1002-F
A2R21	0757-0442	1	RESISTOR 10K 1% .125W F TC040+100	03298	04-1/8-T0-1002-F
A2R22	2100-0568	1	RESISTOR-PIPC 100 10% C TOP-A0J 1-TEN	73138	72-102-0
A2R23	0698-4442	1	RESISTOR 4.42K 1% .125W F TC040+100	03298	04-1/8-T0-4421-F
A2R24	2100-3211	1	RESISTOR-PIPC 1K 10% C TOP-A0J 1-TEN	73138	72-105-0
A2R25	0698-3455	1	RESISTOR 1.96K 1% .125W F TC040+100	03298	04-1/8-T0-1963-F
A2R26	0757-0447	1	RESISTOR 825K 1% .125W F TC040+100	03298	04-8-55-1
A2R27 ^Δ	0698-3557	1	RESISTOR 806 1% .125W F TC040+100	03298	04-1/8-T0-8068-F
A2R28	0757-0442	1	RESISTOR 10K 1% .125W F TC040+100	03298	04-1/8-T0-1002-F
A2R29	0698-3279	1	RESISTOR 4.99K 1% .125W F TC040+100	03298	04-1/8-T0-4991-F
A2R30	0757-0444	1	RESISTOR 17.1K 1% .125W F TC040+100	03298	04-1/8-T0-1212-F
A2R31	0757-0420	1	RESISTOR 750 1% .125W F TC040+100	03298	04-1/8-T0-751-F

See introduction to this section for ordering information

ΔA Refer to note ΔA on Figure 8-16.

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2832	0757-0410	1	RESISTOR 301 1% 125W F TCR041-100	03298	04-178-T0-301R-#
A2833	0649-1225	1	RESISTOR 1.43K 1% 125W F TCR041-100	03294	04-178-T0-1431-#
A2834	0757-0442	1	RESISTOR 10K 1% 125W F TCR041-100	03296	04-178-T0-1002-#
A2835	2101-0557	1	RESISTOR-TMR 2K 10% C TMR-ADJ 1-TRN	73138	72-178-#-0
A2836	2101-3213	1	RESISTOR-TMR 20K 1% C TMR-ADJ 1-TRN	73139	72-178-#-0
A2837	2101-3210	1	RESISTOR-TMR 10K 10% C TMR-ADJ 1-TRN	73138	72-178-#-0
A2838	0649-0420	3	RESISTOR 5K 1% 125W F TCR041-25	03295	04-178-T0-0420-#
A2839	0649-0554	3	RESISTOR 2.312K 25% 125W F TCR041-50	03178	8
A2840	0757-0442	3	RESISTOR 10K 1% 125W F TCR041-100	03298	04-178-T0-1002-#
A2841	0757-0442	3	RESISTOR 10K 1% 125W F TCR041-100	03298	04-178-T0-1002-#
A2842	0649-0443	1	PFETSTOR 4.53K 1% 125W F TCR041-100	03298	04-178-T0-4531-#
A2U1	1626-0315	1	IC OP AMP	03468	163468
A2U4	1626-0487	1	IC OP AMP	28480	1626-0487
A2U5	1626-0421	2	IC LINEAR 5051	28480	1626-0421
A2U6	1626-0203	3	IC TUN OP AMP	28480	741C009
A2U7	1626-0421	3	IC LINEAR 5051	28480	1626-0421
A2U8	1626-0315	1	IC OP AMP	03468	163468
A2U9	1626-0203	1	IC TUN OP AMP	03760	163760
A2U10	1626-0041	5	IC 115 OP AMP	03760	163760
A2U12	1626-0203	5	IC 741 OP AMP	02201	164741HC
A2U13	1626-0041	2	IC OP AMP	03468	163468
A3	00339-06503	1	PC ASSEMBLY, ANALYZER/POWER SUPPLY	28480	00339-06503
A3C1	0160-2132	1	CAPACITOR-FXO .56UF +/-10% 50VDC POLYE	28481	0160-2132
A3C2	0160-0165	1	CAPACITOR-FXO .056UF +/-10% 200VDC POLYE	28480	0160-0165
A3C3	0160-0158	1	CAPACITOR-FXO .560PF +/-10% 200VDC POLYE	28480	0160-0158
A3C4	0160-1515	1	CAPACITOR-FXO .56UF +/-5% 300VDC POLYESTER	28480	0160-1515
A3C5	0160-1622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-1622
A3C6	0160-3622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-3622
A3C7	0160-2250	1	CAPACITOR-FXO .51PF +/-5PF 50VDC	28480	0160-2250
A3C10	0160-2257	1	CAPACITOR-FXO 1.0PF +/-5% 500VDC CER	28480	0160-2257
A3C11	0160-4589	1	CAPACITOR-FXO 1.0UF +/-1% 200VDC POLYE	28480	0160-4589
A3C12	0160-4590	1	CAPACITOR-FXO 1.0UF +/-1% 200VDC POLYE	28480	0160-4590
A3C13	0160-4591	1	CAPACITOR-FXO 0.01UF +/-1% 200VDC POLYE	28481	0160-4591
A3C14	0160-4592	1	CAPACITOR-FXO 0.01UF +/-1% 200VDC POLYE	28480	0160-4592
A3C15	0160-2206	1	CAPACITOR-FXO 1.68PF +/-5% 300VDC MICA/470	28480	0160-2206
A3C16	0160-3622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-3622
A3C17	0160-3622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-3622
A3C18	0160-0147	1	CAPACITOR-HV TRIMMATE 2E14.3PF 35KV	28480	16450-0147
A3C19	0160-2250	1	CAPACITOR-FXO .51PF +/-5PF 50VDC	28480	0160-2250
A3C20	0160-3622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-3622
A3C21	0160-3622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-3622
A3C22	0160-2257	1	CAPACITOR-FXO 1.0PF +/-5% 500VDC CER	28480	0160-2257
A3C23	0160-5622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-5622
A3C24	0160-3622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-3622
A3C25	0160-2257	1	CAPACITOR-FXO 1.0PF +/-5% 500VDC CER	28480	0160-2257
A3C26	0160-2201	1	CAPACITOR-FXO 51PF +/-5% 50VDC	28480	0160-2201
A3C27	0160-2201	1	CAPACITOR-FXO 51PF +/-5% 50VDC	28480	0160-4201
A3C100	0160-2251	4	CAPACITOR-FXO .56PF +/-25PF 500VDC	28480	0160-2251
A3C102	0160-3622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-3622
A3C103	0160-1200	2	CAPACITOR-FXO 1.0PF +/-5% 300VDC MICA/470	28480	DM15F131J0300WV1CR
A3C104	0160-1200	2	CAPACITOR-FXO 1.0PF +/-5% 300VDC MICA/470	28480	DM15F131J0300WV1CR
A3C105	0160-3622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-3622
A3C106	0160-2200	1	CAPACITOR-FXO 43PF +/-5% 300VDC	28480	0160-2200
A3C107	0160-3622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-3622
A3C108	0160-2249	2	CAPACITOR-FXO .7PF +/-25PF 500VDC	28480	0160-2249
A3C109	0160-3622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-3622
A3C110	0160-0192	1	CAPACITOR-FXO 68PF +/-5% 300VDC	28480	0160-4201
A3C111	0160-1715	2	CAPACITOR-FXO 1500PF +/-10% 35VDC TA	04201	1560-15749066R2
A3C112	0160-1715	2	CAPACITOR-FXO 1500PF +/-10% 35VDC TA	04201	1560-15749066R2
A3C113	0160-2204	1	CAPACITOR-FXO 100PF +/-5% 300VDC MICA/470	28480	0160-2204
A3C114	0160-0363	1	CAPACITOR-FXO 820PF +/-5% 300VDC MICA/470	28480	0160-0363
A3C115	0160-2263	1	CAPACITOR-FXO 18PF +/-5% 50VDC	28480	0160-2263
A3C116	0140-0105	1	CAPACITOR-FXO 130PF +/-5% 300VDC MICA	04522	DM15F131J0300WV1CR
A3C117	0160-2249	1	CAPACITOR-FXO .47PF +/-25PF 500VDC	28480	0160-2249
A3C120	0160-2220	1	CAPACITOR-FXO 1200PF +/-5% 300VDC	28480	0160-2220
A3C121	0160-2204	1	CAPACITOR-FXO 360PF +/-5% 300VDC MICA/470	28480	0160-2204
A3C122	0160-2201	1	CAPACITOR-FXO 51PF +/-5% 300VDC	28480	0160-2201
A3C130	0160-1622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-3602
A3C131	0160-1622	1	CAPACITOR-FXO .1UF +/-60-20% 100VDC CER	28480	0160-3622
A3C132 ^{AA}	0160-2249	1	CAPACITOR-FXO .47PF +/-25PF 500VDC	28480	0160-2249
A3C133	0160-2254	1	CAPACITOR-FXO 100PF +/-5% 300VDC MICA/470	28480	0160-2254
A3C134	0160-2264	1	CAPACITOR-FXO 100PF +/-5% 300VDC MICA/470	28480	0160-2264

See introduction to this section for ordering information

ΔA Refer to note ΔA on Figure 8-13.

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A3C135	0180-2257		CAPACITOR-FXO .1UF --5% 500VDC CER	28480	0180-2257
A3C200	0180-3622		CAPACITOR-FXO .1UF --5% 100VDC CER	28480	0180-3622
A3C201	0180-3622		CAPACITOR-FXO .1UF --5% 100VDC CER	28480	0180-3622
A3C202	0180-2250		CAPACITOR-FXO .51PF --25PF 500VDC	28480	0180-2250
A3C203	0180-2204		CAPACITOR-FXO 100PF --5% 300VDC MICA+TA	28480	0180-2204
A3C204	0180-2201		CAPACITOR-FXO .51PF --5% 300VDC	28480	0180-2201
A3C205	0180-2204	1	CAPACITOR-FXO .20UF --5% 500VDC CER+TA	28480	0180-2204
A3C206	0180-1754		CAPACITOR-FXO .47UF+10% 500VDC TA	0420J	15n0078x000032
A3C207	0180-1700		CAPACITOR-FXO .47UF+10% 500VDC TA	0420J	15n0078x000032
A3C300	0180-3622		CAPACITOR-FXO .1UF+10% 100VDC CER	28480	0180-3622
A3C301	0180-3622		CAPACITOR-FXO .1UF+10% 100VDC CER	28480	0180-3622
A3C302	0180-2628	2	CAPACITOR-FXO .033UF --20% 500VDC CER	28480	0180-2628
A3C303	0180-2628		CAPACITOR-FXO .1UF+10% 500VDC CER	28480	0180-2628
A3C304	0180-2635	4	CAPACITOR-FXO 1000UF+50+10% 35VDC AL	28480	0180-2635
A3C305	0180-2635		CAPACITOR-FXO 1000UF+50+10% 35VDC AL	28480	0180-2635
A3C306	0180-2635		CAPACITOR-FXO 1000UF+50+10% 35VDC AL	28480	0180-2635
A3C307	0180-2635		CAPACITOR-FXO 1000UF+50+10% 35VDC AL	28480	0180-2635
A3C308	0180-3622		CAPACITOR-FXO .1UF+10% 100VDC CER	28480	0180-3622
A3C309	0180-3622		CAPACITOR-FXO .1UF+10% 100VDC CER	28480	0180-3622
A3C310	0180-3621		CAPACITOR-FXO .1UF+10% 35VDC TA	0420J	15n0105x003542
A3C311	0180-0374		CAPACITOR-FXO 100UF+10% 20VDC TA	0420J	15n0105x002082
A3C312	0180-0374		CAPACITOR-FXO 100UF+10% 20VDC TA	0420J	15n0105x002082
A3C320	0180-0291		CAPACITOR-FXO .1UF+10% 35VDC TA	0420J	15n0105x003542
A3C321	0180-0291		CAPACITOR-FXO .1UF+10% 35VDC TA	0420J	15n0105x003542
A3C322	0180-0291		CAPACITOR-FXO .1UF+10% 35VDC TA	0420J	15n0105x003542
A3C323	0180-0374		CAPACITOR-FXO .1UF+10% 20VDC TA	0420J	15n0105x002082
A3C324	0180-0374		CAPACITOR-FXO .1UF+10% 20VDC TA	0420J	15n0105x002082
A3CR106	1901-0059	2	DIODE-ZNR 10V 5A 00-15 P001A T00+,00+	28480	1901-0059
A3CR101	1901-0025		DIODE-GEN PNP 100V 200mA 00-7	28480	1901-0025
A3CR102	1901-0025		DIODE-GEN PNP 100V 200mA 00-7	28480	1901-0025
A3CR103	1901-0025		DIODE-GEN PNP 100V 200mA 00-7	28480	1901-0025
A3CR104	1901-0025		DIODE-GEN PNP 100V 200mA 00-7	28480	1901-0025
A3CR105	1902-0554		DIODE-ZNR 10V 5A 00-15 P001A T00+,00+	28480	1902-0554
A3CR106	1901-0080		DIODE-SWITCHING 30V 50mA 200 00-35	28480	1901-0080
A3CR200	1901-0049		DIODE-SWITCHING 30V 50mA 200 00-35	28480	1901-0049
A3CR201	1901-0040		DIODE-SWITCHING 30V 50mA 200 00-35	28480	1901-0040
A3CR300	1900-0076	2	DIODE-SWITCHING 30V 50mA 200 00-35	28480	1900-0076
A3CR301	1902-0096		DIODE-FA 600V 200V 2A	02036	400202
A3CR302	1902-0093	2	DIODE-ZENER 56.2V	28480	1902-0093
A3CR303	1902-0093		DIODE-ZENER 56.2V	28480	1902-0093
A3E1	1990-0644	2	PHOTODIODE	28480	1990-0644
A3E2	1990-0644		PHOTODIODE	28480	1990-0644
A3F100	2110-0011		FUSE .062A 250V NORM-BLO 1.25X.25 AL IEC	0470E	310.002
	2110-0059		FUSEHOLDER-CLIP TYPE .250-FUSE	28480	2110-0059
A3J1	1251-2969		CONNECTOR-PHONE, SINGLE JACK	27260	15-24-0501
A3J2	1251-2969		CONNECTOR-PHONE, SINGLE JACK	27260	15-24-0501
A3J3	1251-2035	1	CONNECTOR-PC EDGE 15-CONTINUOUS 2-00-8	0450E	252-15-30-300
A3J100	1251-2969		CONNECTOR-PHONE, SINGLE JACK	27260	15-24-0501
A3J101	1251-2969		CONNECTOR-PHONE, SINGLE JACK	27260	15-24-0501
A3J102	1251-2969		CONNECTOR-PHONE, SINGLE JACK	27260	15-24-0501
A3J201	1251-2969		CONNECTOR-PHONE, SINGLE JACK	27260	15-24-0501
A3J202	1251-2969		CONNECTOR-PHONE, SINGLE JACK	27260	15-24-0501
A3J300	1251-3181	1	CONNECTOR-PAIR IN POST TYPE	27264	79-00-1091
A3J301	1251-3192		CONNECTOR-PAIR IN POST TYPE	27264	79-00-1011(2803-033)
A3J302	1251-3618		CONNECTOR 2-PAIR IN POST TYPE	27264	79-00-1021
A3Q100	1855-0360	1	TRANSISTOR MOSFET N-CHAN D-MODE T0-72 S1	28480	1855-0360
	1205-0333		HEAT SINK	28480	12n5-0333
A3Q300	1854-0072	2	TRANSISTOR NPN 2N3604 S1 T0-72E P0x250	0192A	243050
	1205-0333		HEAT SINK	28480	12n5-0333
A3Q301	1854-0072		TRANSISTOR NPN 2N3604 S1 T0-72E P0x250	0192A	243050
A3R1	0698-3469	2	RESISTOR 26.7K 1% .125W F T008+100	03298	04-1/8-T0-2872-F
A3R2	0698-0307	2	RESISTOR 14.3K 1% .125W F T008+100	03298	04-1/8-T0-1432-F
A3R3	0698-4020	2	RESISTOR 9.53K 1% .125W F T008+100	03298	04-1/8-T0-0931-F
A3R4	0698-4471	2	RESISTOR 7.15K 1% .125W F T008+100	03298	04-1/8-T0-0715-F
A3R5	0757-0200	2	RESISTOR 5.62K 1% .125W F T008+100	03298	04-1/8-T0-0521-F
A3R6	0757-0200		RESISTOR 5.62K 1% .125W F T008+100	03298	04-1/8-T0-0521-F
A3R7	0698-3456	3	RESISTOR 20.7K 1% .125W F T008+100	03298	04-1/8-T0-2873-F
A3R8	0698-0520	3	RESISTOR 14.3K 1% .125W F T008+100	03298	04-1/8-T0-1433-F
A3R9	0757-0478	3	RESISTOR 9.53K 1% .125W F T008+100	03298	04-1/8-T0-0932-F
A3R10	0698-4505	3	RESISTOR 7.15K 1% .125W F T008+100	03298	04-1/8-T0-0715-F
A3R11	0757-0459	1	RESISTOR 56.2K 1% .125W F T008+100	03298	04-1/8-T0-0522-F
A3R12	0757-0462		RESISTOR 10K 1% .125W F T008+100	03298	04-1/8-T0-1002-F
A3R13	0757-0462		RESISTOR 10K 1% .125W F T008+100	03298	04-1/8-T0-1002-F
A3R14	0757-0462		RESISTOR 100 1% .125W F T008+100	03298	04-1/8-T0-101-F
A3R20	0698-3449		RESISTOR 26.7K 1% .125W F T008+100	03298	04-1/8-T0-2872-F

See introduction to this section for ordering information

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A3R21	0698-0307		RESISTOR 14.3K 1% .125W F TCR044-100	03298	C411/H-T0-1432-F
A3R22	0698-0020		RESISTOR 9.53K 1% .125W F TCR044-100	03298	C411/H-T0-9531-F
A3R23	0698-0471		RESISTOR 7.15K 1% .125W F TCR044-100	03298	C411/H-T0-7151-F
A3R24	0698-0445		RESISTOR 5.76K 1% .125W F TCR044-100	03298	C411/H-T0-5761-F
A3R25	0698-0445		RESISTOR 5.76K 1% .125W F TCR044-100	03298	C411/H-T0-5761-F
A3R26	0698-0454		RESISTOR 287K 1% .125W F TCR044-100	03298	C411/H-T0-2873-F
A3R27	0698-0520		RESISTOR 143K 1% .125W F TCR044-100	03298	C411/H-T0-1433-F
A3R28	0757-0978		RESISTOR 95.3K 1% .125W F TCR044-100	03298	C411/H-T0-9532-F
A3R29	0698-0505		RESISTOR 71.5K 1% .125W F TCR044-100	03298	C411/H-T0-7152-F
A3R30	0698-0500	2	RESISTOR 57.1K 1% .125W F TCR044-100	03298	C411/H-T0-5762-F
A3R31	0757-0455	1	RESISTOR 36.5K 1% .125W F TCR044-100	03298	C411/H-T0-3652-F
A3R32	0698-0481	1	RESISTOR 16.4K 1% .125W F TCR044-100	03298	C411/H-T0-1652-F
A3R33	0698-0477	1	RESISTOR 10.3K 1% .125W F TCR044-100	03298	C411/H-T0-1052-F
A3R34	0698-0359	1	RESISTOR 7.87K 1% .125W F TCR044-100	03298	C411/H-T0-7871-F
A3R35	0757-0290	1	RESISTOR 6.19K 1% .125W F TCR044-100	03298	W411/H-T0-6191-F
A3R36	0698-0315	1	RESISTOR 5.49K 1% .125W F TCR044-100	03298	C411/H-T0-5491-F
A3R37	0698-0456	1	RESISTOR 287K 1% .125W F TCR044-100	03298	C411/H-T0-2873-F
A3R38	0698-0452	1	RESISTOR 14.3K 1% .125W F TCR044-100	03298	C411/H-T0-1433-F
A3R39	0757-0478	1	RESISTOR 95.3K 1% .125W F TCR044-100	03298	C411/H-T0-9532-F
A3R40	0698-0455	1	RESISTOR 71.5K 1% .125W F TCR044-100	03298	C411/H-T0-7152-F
A3R41	0698-0500		RESISTOR 57.1K 1% .125W F TCR044-100	03298	C411/H-T0-5762-F
A3R42	0698-0316	1	RESISTOR 36.5K 1% .125W F TCR044-100	03298	C411/H-T0-3652-F
A3R43	0757-0451	1	RESISTOR 24.3K 1% .125W F TCR044-100	03298	C411/H-T0-2432-F
A3R44	0698-0483	1	RESISTOR 18.7K 1% .125W F TCR044-100	03298	C411/H-T0-1873-F
A3R45	0757-0280	1	RESISTOR 1K 1% .125W F TCR044-100	03298	C411/H-T0-1001-F
A3R46	0757-0280		RESISTOR 1K 1% .125W F TCR044-100	03298	C411/H-T0-1001-F
A3R47	0757-0280		RESISTOR 1K 1% .125W F TCR044-100	03298	C411/H-T0-1001-F
A3R48	0757-0448	1	RESISTOR 1K 1% .125W F TCR044-100	03298	C411/H-T0-1001-F
A3R49	0698-0352	1	RESISTOR 3.49K 1% .125W F TCR044-100	03298	C411/H-T0-3481-F
A3R50	0698-0421	1	RESISTOR 20.9 1% .125W F TCR044-100	03298	C411/H-T0-209-F
A3R51	0757-0283		RESISTOR 2K 1% .125W F TCR044-100	03298	C411/H-T0-2001-F
A3R56	0757-0440	1	RESISTOR 7.5K 1% .125W F TCR044-100	03298	C411/H-T0-7501-F
A3R57	0698-0382	1	RESISTOR 5.49K 1% .125W F TCR044-100	03298	C411/H-T0-5491-F
A3R100	0699-0030	1	RESISTOR 60.3K 1.25%	26480	0699-0030
A3R101	0699-0029	1	RESISTOR 21.62K 1.25%	26480	0699-0029
A3R102	0698-0497	1	RESISTOR 6.03K 1.25%	26480	0698-0497
A3R103	0699-0024	1	RESISTOR 2.162K 1.25%	26480	0699-0024
A3R104	0698-0439	1	RESISTOR 1K .25% .125W F TCR044-50	03298	0698-0439
A3R106	0698-0492	1	RESISTOR 2.67K 1% .125W F TCR044-100	03298	0698-0492
A3R107	0698-0316	1	RESISTOR 7.33K 1% .125W F TCR044-100	03298	C411/H-T0-7321-F
A3R110	0611-1858	1	RESISTOR 500 5K 5W TCR044-20	03520	065
A3R111	0757-0283		RESISTOR 2K 1% .125W F TCR044-100	03298	C411/H-T0-2001-F
A3R112	0757-0283		RESISTOR 2K 1% .125W F TCR044-100	03298	C411/H-T0-2001-F
A3R113	0757-0042		RESISTOR 10K 1% .125W F TCR044-100	03298	C411/H-T0-1001-F
A3R114	0698-0320		RESISTOR 3K 1% .125W F TCR044-100	03298	0698-0320
A3R116	0757-0401		RESISTOR 100 1% .125W F TCR044-100	03298	C411/H-T0-101-F
A3R120	0698-0039	2	RESISTOR 16.3 1.25% .125W F TCR044-50	01070	8
A3R121	0698-0058	2	RESISTOR 55.5 1.25% .125W F TCR044-50	01070	8
A3R122	0698-0034	2	RESISTOR 2.412K 1.25% .125W F TCR044-50	01070	8
A3R130	0698-0030	2	RESISTOR 3.419K 1.25% .125W F TCR044-100	03298	0698-0030
A3R131	0698-0197	2	RESISTOR 1.081K 1.25% .125W F TCR044-100	03298	0698-0197
A3R132	0698-0198	2	RESISTOR 341.9 1.25% .125W F TCR044-100	03298	0698-0198
A3R133	0698-0192	2	RESISTOR 10.81 1.25% .125W F TCR044-100	03298	0698-0192
A3R134	0698-0192	2	RESISTOR 341.9 1.25% .125W F TCR044-100	01070	8
A3R135	0698-0192	2	RESISTOR 16.81 1.25% .125W F TCR044-50	01070	8
A3R140	0150-3375		RESISTOR 1.081K 1.25% .125W F TCR044-100	04672	ZEROHM
A3R150	0757-0471		RESISTOR 100 1% .125W F TCR044-100	03298	C411/H-T0-101-F
A3R151	0698-0327		RESISTOR 4.49K 1% .125W F TCR044-100	03298	0698-0327
A3R208	0698-0420		RESISTOR 3.419K 1.25% .125W F TCR044-100	03298	0698-0420
A3R201	0698-0197		RESISTOR 1.081K 1.25% .125W F TCR044-100	03298	0698-0197
A3R202	0698-0193		RESISTOR 341.9 1.25% .125W F TCR044-100	03298	0698-0193
A3R203	0698-0192		RESISTOR 10.81 1.25% .125W F TCR044-100	03298	0698-0192
A3R204	0698-0095		RESISTOR 341.9 1.25% .125W F TCR044-50	01070	8
A3R205	0698-0099		RESISTOR 15.81 1.25% .125W F TCR044-100	01070	8
A3R210	0698-0320		RESISTOR 3K 1% .125W F TCR044-25	03298	0698-0320
A3R212	0698-0039		RESISTOR 163.3 1.25% .125W F TCR044-50	01070	8
A3R213	0698-0038		RESISTOR 55.5 1.25% .125W F TCR044-50	01070	8
A3R219	0698-0034	2	RESISTOR 2.312K 1.25% .125W F TCR044-50	01070	8
A3R300	0698-0085	2	RESISTOR 6.18 1.25% .125W F TCR044-50	01070	0698-0085
A3R301	0623-0085	2	RESISTOR 6.18 1.25% .125W F TCR044-50	01070	0623-0085
A3R302	0757-0042		RESISTOR 10K 1% .125W F TCR044-100	03298	C411/H-T0-1002-F
A3R303	0757-0442		RESISTOR 10K 1% .125W F TCR044-100	03298	C411/H-T0-1002-F
A3R310	0698-0275	1	RESISTOR 2.7 1.25% .125W F TCR044-102	01060	0698-0275
A3R311	0698-0037	1	RESISTOR 2.4 1.25% .125W F TCR044-102	08080	0698-0037
A3R312	0757-0442	1	RESISTOR 10K 1% .125W F TCR044-100	03298	C411/H-T0-1002-F
A3R313	0757-0042	1	RESISTOR 10K 1% .125W F TCR044-100	03298	C411/H-T0-1002-F

See introduction to this section for ordering information

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A381	00339-01905	1	SWITCH ASSEMBLY, MULTIPLIER	28480	00339-01905
	3100-3416	1	SWITCH, ROTARY	28480	3100-3416
A382	00339-01906	1	SWITCH ASSEMBLY, UNITS	28480	00339-01906
	3100-3417	1	SWITCH, ROTARY	28480	3100-3417
A383	00339-01907	1	SWITCH ASSEMBLY, TENTHS	28480	00339-01907
	3100-3418	1	SWITCH, ROTARY	28480	3100-3418
A384	00339-01908	1	SWITCH ASSEMBLY, INPUT RANGE	28480	00339-01908
	3100-3419	1	SWITCH, ROTARY	28480	3100-3419
A385	00339-01909	1	SWITCH ASSEMBLY, DISTORTION RANGE	28480	00339-01909
	3100-3420	1	SWITCH, ROTARY	28480	3100-3420
	5040-8259	1	SHAFT, EXTENDER	28480	5040-8259
	1500-0019	1	COUPLER, RIGID	05104	126
A391	1820-0081	1	IC 318 OP AMP	03790	L7318
A392	1820-0081	1	IC 318 OP AMP	03790	L7318
A393	1820-0109	1	IC OP AMP	03791	L7325+80593
A394	1820-0109	1	IC OP AMP	03791	L7325+80593
A395	1820-0487	1	IC OP AMP, TO-99	28480	1820-0487
A396	1820-0109	1	IC OP AMP	03791	L7325+80593
A397	1820-0457	2	IC LINEAR LM325H	28480	1820-0457
	1205-0050	1	HEAT SINK TO-5/T0-19-PKG	28480	1205-0050
A398	1820-0457	1	IC LINEAR LM325H	28480	1820-0457
A4	00339-06508	1	PC ASSEMBLY, ERROR CONTROL	28480	00339-06508
A4C1	0180-1702	1	CAPACITOR-FXO 180UF+020% 50VDC TA	04204	15801873000082
A4C3	0180-3622	1	CAPACITOR-FXO .1UF +00-20% 100VDC CER	28480	0180-3622
A4C4	0180-3622	1	CAPACITOR-FXO .1UF +00-20% 100VDC CER	28480	0180-3622
A4C5	0180-1704	1	CAPACITOR-FXO .1UF+00% 50VDC TA	04204	15801873000082
A4C7	0180-3647	2	CAPACITOR-FXO .1UF+000000 50VDC CER	28480	0180-3647
A4C8	0180-0387	1	CAPACITOR-FXO .47UF+05% 20VDC TA	04204	15801873000082
A4C9	0180-3622	1	CAPACITOR-FXO .1UF +00-20% 100VDC CER	28480	0180-3622
A4C10	0180-3622	1	CAPACITOR-FXO .1UF +00-20% 100VDC CER	28480	0180-3622
A4C11	0180-0374	1	CAPACITOR-FXO .1UF+000000 20VDC TA	04204	15801873000082
A4C12	0180-0374	1	CAPACITOR-FXO .1UF+000000 20VDC TA	04204	15801873000082
A4C13	0180-3622	1	CAPACITOR-FXO .1UF +00-20% 100VDC CER	28480	0180-3622
A4C14	0180-3622	1	CAPACITOR-FXO .1UF +00-20% 100VDC CER	28480	0180-3622
A4C15	0180-3622	1	CAPACITOR-FXO .1UF +00-20% 100VDC CER	28480	0180-3622
A4C21	0180-1704	1	CAPACITOR-FXO .47UF+05% 20VDC TA	04204	15801873000082
A4C22	0180-1704	1	CAPACITOR-FXO .47UF+05% 20VDC TA	04204	15801873000082
A4C24	0180-3687	1	CAPACITOR-FXO .1UF+000000 50VDC CER	28480	0180-3687
A4C25	0180-2135	1	CAPACITOR-FXO 650UF+020% 15VDC TA	04204	0180-2135
A4C26	0180-0228	2	CAPACITOR-FXO 22UF+00% 15VDC TA	04204	15802263001582
A4C27	0180-0228	1	CAPACITOR-FXO 22UF+00% 15VDC TA	04204	15802263001582
A4C28	0180-3622	1	CAPACITOR-FXO .1UF +00-20% 100VDC CER	28480	0180-3622
A4C29	0180-3622	1	CAPACITOR-FXO .1UF +00-20% 100VDC CER	28480	0180-3622
A4C30	0180-3622	1	CAPACITOR-FXO .47UF+05% 20VDC TA	04204	15801873000082
A4C31	0180-1704	1	CAPACITOR-FXO .47UF+05% 20VDC TA	04204	15801873000082
A4CR1	1902-1335	1	DIODE-ZINR 3.92V 5A 00-7 P04,4N T04+,049X	28480	1902-1335
A4CR2	1902-1335	1	DIODE-ZINR 3.92V 5A 00-7 P04,4N T04+,049X	28480	1902-1335
A4CR3	1901-0040	1	DIODE-ZINR SWITCHING 30V 50MA 2N5-00-35	28480	1901-0040
A4CR4	1901-0040	1	DIODE-ZINR SWITCHING 30V 50MA 2N5-00-35	28480	1901-0040
A4CR5	1902-3119	2	DIODE-ZINR 9.09V 5A 00-7 P04,4N T04+,057X	02230	PT2256
A4CR6	1901-0040	1	DIODE-SWITCHING 30V 50MA 2N5-00-35	28480	1901-0040
A4CR7	1902-1335	1	DIODE-SWITCHING 30V 50MA 2N5-00-35	28480	1902-1335
A4CR8	1902-1335	1	DIODE-ZINR 3.92V 5A 00-7 P04,4N T04+,049X	28480	1902-1335
A4CR9	1901-0040	1	DIODE-SWITCHING 30V 50MA 2N5-00-35	28480	1901-0040
A4CR10	1901-0040	1	DIODE-SWITCHING 30V 50MA 2N5-00-35	28480	1901-0040
A4CR11	1902-3119	1	DIODE-ZINR 9.09V 5A 00-7 P04,4N T04+,057X	02230	PT2256
A4CR12	1901-0040	1	DIODE-SWITCHING 30V 50MA 2N5-00-35	28480	1901-0040
A4CR13	1902-3119	1	DIODE-ZINR 3.92V 5A 00-7 P04,4N T04+,049X	02030	PT1939-05
A4CR14	1902-3082	1	DIODE-ZINR 3.92V 5A 00-7 P04,4N T04+,049X	02030	PT1939-05
A4CR15	1901-0040	1	DIODE-SWITCHING 30V 50MA 2N5-00-35	28480	1901-0040
A4CR16	1901-0040	1	DIODE-SWITCHING 30V 50MA 2N5-00-35	28480	1901-0040
A4CR17	1901-0040	1	DIODE-SWITCHING 30V 50MA 2N5-00-35	28480	1901-0040
A4CR18, 19, 20	1901-0040	1	DIODE-SWITCHING 30V 50MA 2N5-00-35	28480	1901-0040
A4CR21	1901-0035	1	DIODE, SCHOTTKY	28480	1901-0035
A4R1	0490-1137	1	RELAY, REED	28480	0490-1137
A4L3, L4, AA	9170-0894	2	CORE-SHIELDING BEAD	28480	9170-0894
A4L1	9100-1843	2	COIL-MLD 300UH 5X 0.065 .190X,4NLD	03270	194303
A4L2	9100-1843	2	COIL-MLD 300UH 5X 0.065 .190X,4NLD	03270	194303
A4S1	1854-0071	1	TRANSISTOR NPN S1 F184300W F182004H1	28480	1854-0071
A4S2	1854-0071	1	TRANSISTOR NPN S1 F184300W F182004H1	28480	1854-0071
A4S3	1855-0388	1	TRANSISTOR J-FET 2N4342A N-CH DM901	02610	PT2610
A4R1	0757-0280	1	RESISTOR 1K 1% .125W F T0403+100	03298	C411/B-T041001#
A4R2	0757-0472	1	RESISTOR 200K 1% .125W F T0403+100	03298	C411/B-T042003#
A4R3	0757-0280	1	RESISTOR 1K 1% .125W F T0403+100	03298	C411/B-T041001#
A4R4	0757-0438	6	RESISTOR 5.11K 1% .125W F T0403+100	03298	C411/B-T045111#
A4R5	0757-0465	4	RESISTOR 160K 1% .125W F T0403+100	03298	C411/B-T041001#

See introduction to this section for ordering information

△A Components L3 and L4 have been added to instruments with serial numbers 1730A00196 and greater. Refer to note △A on Figure 8-15.

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A4R6	0757-0465		RESISTOR 100K 1% .125W F TCR04-100	03298	CA-1/8-T0-1003-F
A4R7	0757-0462		RESISTOR 10K 1% .125W F TCR04-100	03298	CA-1/8-T0-1002-F
A4R8	0757-0462		RESISTOR 10K 1% .125W F TCR04-100	03298	CA-1/8-T0-1002-F
A4R9	0757-0289	2	RESISTOR 13.2K 1% .125W F TCR04-100	03298	CA-1/8-T0-1332-F
A4R10	0757-0273	2	RESISTOR 3.01K 1% .125W F TCR04-100	03298	CA-1/8-T0-3011-F
A4R11	0757-0469	4	RESISTOR 20K 1% .125W F TCR04-100	03298	CA-1/8-T0-2002-F
A4R12	0698-3228	2	RESISTOR 9.31K 1% .125W F TCR04-100	05292	CA-1/8-T0-9311-F
A4R13	0698-4431	2	RESISTOR 2.05K 1% .125W F TCR04-100	03292	CA-1/8-T0-2051-F
A4R14	0757-0438		RESISTOR 5.11K 1% .125W F TCR04-100	03298	CA-1/8-T0-5111-F
A4R15	0757-0438		RESISTOR 5.11K 1% .125W F TCR04-100	03298	CA-1/8-T0-5111-F
A4R16	2100-3351	2	RESISTOR 14.9K 500 10% C SIDE-ADJ 1-TEN	73138	72-142-F
A4R17	0698-3228		RESISTOR 49.9K 1% .125W F TCR04-100	01606	CC
A4R18	0698-3228		RESISTOR 49.9K 1% .125W F TCR04-100	01606	CC
A4R19	0698-3228		RESISTOR 49.9K 1% .125W F TCR04-100	01606	CC
A4R20	0698-3228		RESISTOR 49.9K 1% .125W F TCR04-100	01606	CC
A4R21	0698-4486		RESISTOR 24.9K 1% .125W F TCR04-100	03292	CA-1/8-T0-2492-F
A4R22	0698-4486		RESISTOR 24.9K 1% .125W F TCR04-100	03292	CA-1/8-T0-2492-F
A4R23	0698-3445	2	RESISTOR 348 1% .125W F TCR04-100	03298	CA-1/8-T0-348-F
A4R24	0757-0407		RESISTOR 230 1% .125W F TCR04-100	03298	CA-1/8-T0-2301-F
A4R25	0757-0408		RESISTOR 20K 1% .125W F TCR04-100	03298	CA-1/8-T0-2002-F
A4R26	0698-0064		RESISTOR 9.31K 1% .125W F TCR04-100	05292	CA-1/8-T0-9311-F
A4R27	0757-0409		RESISTOR 20K 1% .125W F TCR04-100	03298	CA-1/8-T0-9002-F
A4R28	0698-0064		RESISTOR 9.31K 1% .125W F TCR04-100	05292	CA-1/8-T0-9311-F
A4R29	0757-0438		RESISTOR 5.11K 1% .125W F TCR04-100	03298	CA-1/8-T0-5111-F
A4R30	0757-0438		RESISTOR 100K 1% .125W F TCR04-100	03298	CA-1/8-T0-1003-F
A4R31	0757-0449		RESISTOR 9.31K 1% .125W F TCR04-100	05292	CA-1/8-T0-9311-F
A4R32	0757-0449		RESISTOR 20K 1% .125W F TCR04-100	03298	CA-1/8-T0-1003-F
A4R33	0757-0465		RESISTOR 100K 1% .125W F TCR04-100	03298	CA-1/8-T0-1003-F
A4R34	0757-0462		RESISTOR 10K 1% .125W F TCR04-100	03298	CA-1/8-T0-1002-F
A4R35	0757-0462		RESISTOR 10K 1% .125W F TCR04-100	03298	CA-1/8-T0-1002-F
A4R36	0757-0289		RESISTOR 13.2K 1% .125W F TCR04-100	03298	CA-1/8-T0-1332-F
A4R37	0757-0449		RESISTOR 20K 1% .125W F TCR04-100	03298	CA-1/8-T0-2002-F
A4R38	0698-0064		RESISTOR 9.31K 1% .125W F TCR04-100	05292	CA-1/8-T0-9311-F
A4R39	0757-0273		RESISTOR 3.01K 1% .125W F TCR04-100	03298	CA-1/8-T0-3011-F
A4R40	0698-4431		RESISTOR 2.05K 1% .125W F TCR04-100	03292	CA-1/8-T0-2051-F
A4R41	0757-0438		RESISTOR 5.11K 1% .125W F TCR04-100	03298	CA-1/8-T0-5111-F
A4R42	0757-0438		RESISTOR 100K 1% .125W F TCR04-100	03298	CA-1/8-T0-1003-F
A4R43	2100-3351		RESISTOR 500 10% C SIDE-ADJ 1-TEN	73138	72-142-F
A4R44	0698-3228		RESISTOR 49.9K 1% .125W F TCR04-100	01606	CC
A4R45	0698-3228		RESISTOR 49.9K 1% .125W F TCR04-100	01606	CC
A4R46	0698-3228		RESISTOR 49.9K 1% .125W F TCR04-100	01606	CC
A4R47	0698-3228		RESISTOR 49.9K 1% .125W F TCR04-100	01606	CC
A4R48	0698-4435	2	RESISTOR 2.49K 1% .125W F TCR04-100	03292	CA-1/8-T0-2481-F
A4R49	0757-0447		RESISTOR 18.2K 1% .125W F TCR04-100	03292	CA-1/8-T0-1822-F
A4R50	0757-0280		RESISTOR 1K 1% .125W F TCR04-100	03298	CA-1/8-T0-1001-F
A4R51	0757-0447		RESISTOR 18.2K 1% .125W F TCR04-100	03292	CA-1/8-T0-1822-F
A4R52	0698-4435		RESISTOR 2.49K 1% .125W F TCR04-100	03292	CA-1/8-T0-2481-F
A4R53	0757-0280	1	RESISTOR 1K 1% .125W F TCR04-100	03298	CA-1/8-T0-1001-F
A4R54	0698-0491	1	RESISTOR 30.9K 1% .125W F TCR04-100	03298	CA-1/8-T0-3092-F
A4R55	0698-4543		RESISTOR 400 1% .125W F TCR04-100	03298	CA-1/8-T0-402R-F
A4R56	0757-0407		RESISTOR 200 1% .125W F TCR04-100	03298	CA-1/8-T0-201-F
A4R57	0757-0426	2	RESISTOR 1.3K 1% .125W F TCR04-100	03298	CA-1/8-T0-1301-F
A4R58	0757-0426		RESISTOR 1.3K 1% .125W F TCR04-100	03298	CA-1/8-T0-1301-F
A4R59	0757-0407		RESISTOR 200 1% .125W F TCR04-100	03298	CA-1/8-T0-201-F
A4R60	0757-0407		RESISTOR 200 1% .125W F TCR04-100	03298	CA-1/8-T0-201-F
A4R61	0698-4453	1	RESISTOR 402 1% .125W F TCR04-100	03298	CA-1/8-T0-402R-F
A4R62	0698-0085	1	RESISTOR 2.81K 1% .125W F TCR04-100	03298	CA-1/8-T0-2811-F
A4R63	0698-4460	2	RESISTOR 649 1% .125W F TCR04-100	03298	CA-1/8-T0-649R-F
A4R64	0698-4460		RESISTOR 649 1% .125W F TCR04-100	03298	CA-1/8-T0-649R-F
A4R65	2100-3274	1	RESISTOR-TRMR 10K 10% C SIDE-ADJ 1-TEN	73138	72-142-F
A4R66	0757-0446		RESISTOR 15K 1% .125W F TCR04-100	03298	CA-1/8-T0-1502-F
A4R67	1826-0081		IC 518 OP AMP	03790	L4318
A4R68	1826-0027	2	IC 1896 MODULATOR	02036	HC1896
A4R69	1826-0315		IC 1496 MODULATOR	02036	HC1496
A4R70	1826-0027		IC 1496 OP AMP	02404	HC1496
A4R71	1826-0315		IC 1496 OP AMP	02404	HC1496
A4R72	1826-0315		IC 1496 OP AMP	02404	HC1496
A4R73	1826-0315		IC 1496 OP AMP	02404	HC1496
A4R74	1826-0021		IC 1496 OP AMP	02404	HC1496
A4R75	0403-0214	1	EXTRACTOR-PC BOARD YEL POLYC	28080	0403-0214
A4R76	1480-0116	1	EXTRACTOR-PC BOARD YEL POLYC	73995	08P4-083295012
A5	00339-06505	1	PC ASSEMBLY, INPUT FUNCTION	26480	80339-06505
ASC500	0160-3456	1	CAPACITOR-FWD 1000PF +/-1% 1KVDC CER	28480	0160-3456
ASC501	0180-0147	2	CAPACITOR-FWD 2.2UF +/-1% 2KVDC TA	10204	15002252402042
ASC502	0180-0147		CAPACITOR-FWD 2.2UF +/-1% 2KVDC TA	04204	15002252402042
ASC503	0180-0980	1	CAPACITOR-FWD 6200PF +/-5% 3KVDC	28480	0180-0980

See introduction to this section for ordering information.

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
ASC504	0160-2222	1	CAPACITOR-FXD 1500PF +/-5% 300VDC	28480	0160-2222
ASC505	0160-2204	1	CAPACITOR-FXD 100PF +/-5% 300VDC MIEG#70	28480	0160-2204
ASC506	0160-2207	1	CAPACITOR-FXD 300PF +/-5% 300VDC MIEG#70	28480	0160-2207
ASC510	0160-4593	1	CAPACITOR-FXD 1.5UF +/-20% 400VDC	28480	0160-4593
ASCR500	1901-0518	1	DIODE-SCHOTTKY	28480	1901-0518
ASL500	9100-1864	1	COIL-MLD 3MH 5% Q#70 .2150X.56L2	02176	28-1312-30J
ASL501	9100-1872	1	COIL-MLD 6.2MH 5% Q#80 .240X.76L2	03270	28-1824
ASL502	9100-1868	1	COIL-MLD 9.3MH 5% Q#80 .290X.76L2	02178	28-1313-21J
ASMP1	00339-01204	1	BRACKET, FUNCTION SWITCH	28480	00339-01204
ASR500	0698-3572	1	RESISTOR 60.4K 1% .125W F TC#0+100	03298	04.1/8-70-0042-F
ASR501	0757-0280	1	RESISTOR 1K 1% .125W F TC#0+100	03298	04.1/8-70-1001-F
ASR502	0757-0424	1	RESISTOR 1.1K 1% .125W F TC#0+100	03298	04.1/8-70-1101-F
ASR9	06339-61901	1	SWITCH ASSEMBLY, FUNCTION	28480	00339-61901
	3100-3423	1	SWITCH, ROTARY	28480	3100-3423

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
CHASSIS PARTS					
C1	0150-0012	1	CAPACITOR-FXU .01UF =±20% 1KVDC CER	04280	003410221034838
D81	1490-0487	2	LED-VISIBLE LUM-INT-14VDC 1F=20MA-HAS	28480	1490-0487
D82	1490-0408	4	LENS CAP CLR-TL .125-OIA	28480	1490-0408
D83	1490-0487	1	LED-VISIBLE LUM-INT-14VDC 1F=20MA-HAS	28480	1490-0487
D84	1490-0404	1	LENS CAP CLR-TL .125-OIA	28480	1490-0404
D85	1490-0487	1	LED-VISIBLE LUM-INT-14VDC 1F=20MA-HAS	28480	1490-0487
D86	1490-0404	1	LENS CAP CLR-TL .125-OIA	28480	1490-0404
D87	1490-0487	1	LED-VISIBLE LUM-INT-14VDC 1F=20MA-HAS	28480	1490-0487
D88	1490-0404	1	LENS CAP CLR-TL .125-OIA	28480	1490-0404
F1	2110-0004	1	FUSE .25A 250V FAST-TRD 1.25X.25 UL 162	04100	312-250
F2	2110-0384	1	FUSE .062A 125V FAST-TRD .25X.193	04100	275-0382
F11	0100-3875	1	FILTER	28480	0100-3875
J1	1510-0090	2	BINDING POST SGL SGL-TUR JCK	28480	1510-0090
J1	1510-0093	3	BINDING POST SGL SGL-TUR 08P BLK	28480	1510-0093
J2	2950-0144	3	NUT-HEX-08L-CHAN 3/8-32-THD .188-IN-THK	28480	2950-0144
J3	1510-0083	1	CONNECTOR-FR HNF FEM SGL-THOLE-FR 50-024	03318	2610-01301
J3	1510-0058	1	BINDING POST SGL THD-STUD	28480	1510-0058
J4	1510-0091	1	BINDING POST SGL SGL-TUR JCK RED	28480	1510-0091
J4	1510-0093	1	BINDING POST SGL SGL-TUR 08P BLK	28480	1510-0093
J5	2950-0144	1	NUT-HEX-08L-CHAN 3/8-32-THD .188-IN-THK	28480	2950-0144
J5	1510-0090	1	BINDING POST SGL SGL-TUR JCK	28480	1510-0090
J5	1510-0093	1	BINDING POST SGL SGL-TUR 08P BLK	28480	1510-0093
J5	2950-0144	1	NUT-HEX-08L-CHAN 3/8-32-THD .188-IN-THK	28480	2950-0144
L1	0100-3467	1	SOIL GAUG 25%	28480	0100-3467
L2	0100-3458	3	WIRE BAND CHOKE	28480	0100-3458
L3	0100-3458	1	WIRE BAND CHOKE	28480	0100-3458
L4	0100-3458	1	WIRE BAND CHOKE	28480	0100-3458
M1	1120-0991	1	METER	28480	1120-0991
S13	3101-1877	1	SWITCH, SLIDE 3PST-8 (INPUT SELECT)	28480	3101-1877
S14	00339-61610	1	SWITCH ASSEMBLY, OSC, LEVEL	28480	00339-61610
S14a1	3100-3424	1	SWITCH, ROTARY INCLUDES R3 (10KOHM)	28480	3100-3424
S14a1	00339-61601	1	CABLE ASSEMBLY, OSC, LEVEL	28480	00339-61601
S14a1	1251-3278	2	CONNECTOR, 8-PIN FEMALE	27284	06-50-7081
S14a1	1251-3073	29	CONTACT, CONNECTOR	27284	06-50-0107
S14a2	00339-61606	1	CABLE ASSEMBLY, OSCILLATOR LEVEL	28480	00339-61606
S14a2	1251-3201	1	CONNECTOR 3-PIN F POST TYPE	27284	06-50-7031
S14a2	1251-3613	3	CONNECTOR 2-PIN F POST TYPE	27284	06-50-7021
S14a2	1251-3073	1	CONTACT-CONN U/H=POST-TYPE FEM CER	27284	06-50-0107
S17	3101-2042	2	SWITCH, SLIDE	28480	3101-2042
S18	3101-2042	2	SWITCH, SLIDE	28480	3101-2042
T1	0100-4012	1	TRANSFORMER, POWER	28480	0100-4012
T1	1251-3078	1	CONNECTOR 8-PIN F	27284	06-50-7091
T1	1251-3073	1	CONTACT-CONN U/H=POST-TYPE FEM CER	27284	06-50-0107
W2	00339-61602	1	CABLE ASSEMBLY, OSC, POWER	28480	00339-61602
W2P2	1251-3201	1	CONNECTOR 3-PIN F POST TYPE	27284	06-50-7031
W2P301	1251-3201	1	CONNECTOR 3PIN F POST TYPE	27284	06-50-7031
W3	00339-61603	1	CABLE ASSEMBLY, DETECTOR POWER	28480	00339-61603
W3P202	1251-3613	1	CONNECTOR 2-PIN F POST TYPE	27284	06-50-7021
W3P302	1251-3613	1	CONNECTOR 2-PIN F POST TYPE	27284	06-50-7021
W3	1251-3073	1	CONTACT-CONN U/H=POST-TYPE FEM CER	27284	06-50-0107
W4	00339-61604	1	CABLE ASSEMBLY, METER RESPONSE	28480	00339-61604
WEP201	1251-3277	1	CONNECTOR 8-PIN F POST TYPE	27284	06-50-7041
WEP201	1251-3073	1	CONTACT-CONN U/H=POST-TYPE FEM CER	27284	06-50-0107
WEP1	2100-3680	1	RESISTOR, VAR 5K (RELATIVE LEVEL)	28480	2100-3680
W4S12	3101-1235	1	SWITCH-SL DROT-NG STD 1.5A 125VAC	28480	11a-1235
W5	00339-61605	1	CABLE ASSEMBLY, FILTER	28480	00339-61605
WSP200	1251-5276	1	CONNECTOR 8-PIN F POST TYPE	27284	06-50-7061
WSP200	1251-3073	1	CONTACT-CONN U/H=POST-TYPE FEM CER	27284	06-50-0107
WSP11	3101-2247	1	FILTER SWITCH	28480	3101-2247
WSP11	5041-0117	1	KEY CAP, FILTER SWITCH	28480	5041-0117

See introduction to this section for ordering information

Table 6-3. Replaceable Parts


Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
n7	00339-01607	1	CABLE ASSEMBLY, AC POWER	28480	06339-01607
n7810-4	3101-1688	1	SWITCH-TGL-BASIC DPDT NS3A 125VAC	28480	3101-1688
	5040-5932	1	COVER, AC POWER SWITCH	28480	5040-5932
n8	00339-01608	1	CABLE ASSEMBLY, FREQUENCY INC.	28480	00339-01608
n9	00339-01609	1	CABLE ASSEMBLY, LEVEL INC.	28480	00339-01609
n10	00339-01610	1	CABLE ASSEMBLY, FREQUENCY VERNIER	28480	00339-01610
	50140-44702	3	SPACERS, FOAM	28480	50140-44702
n10P4	1251-0512	1	HOUSING, CONNECTOR, 5PIN FEMALE	27284	1251-0512
	1251-3073	1	CONTACT, CONNECTOR	27284	1251-0107
n10R2	2100-3681	1	RESISTOR, VAR SWEG (FRED, VERNIER)	28480	2100-3681
n11*	8120-2574	4	CABLE ASSEMBLY	28480	8120-2574
n12*	8120-2574		CABLE ASSEMBLY	28480	8120-2574
n13*	8120-2574		CABLE ASSEMBLY	28480	8120-2574
n14*	8120-2574		CABLE ASSEMBLY	28480	8120-2574
n15*	8120-2574		CABLE ASSEMBLY	28480	8120-2574
n16*	8120-2574		CABLE ASSEMBLY	28480	8120-2574
n17*	8120-2575	4	CABLE ASSEMBLY	28480	8120-2575
n18*	8120-2575		CABLE ASSEMBLY	28480	8120-2575
n19*	8120-2575		CABLE ASSEMBLY	28480	8120-2575
n20*	8120-2575		CABLE ASSEMBLY	28480	8120-2575
	0370-2898	1	KNOB, POINTERTHIN, CAP (FUNCTION)	28480	0370-2898
	00339-03701	1	SHAFT, NV	28480	00339-03701
	3030-0690	20	SCREW-SET #4-40 ,13-INCH SMALL CUP-PT	28480	3030-0690
	1500-0019		COUPLER-ADG ,75ALG 888	05104	120
	0370-1099	2	KNOB-BASE-PT# 1/2 INCH ,25A1N=10	28480	0370-1099
	3030-0690		SCREW-SET #4-40 ,13-INCH SMALL CUP-PT	28480	3030-0690
	00339-04001	1	KNOB, DISTORTION RNG	28480	00339-04001
	3130-0533	1	DETENT, 9-POSITION	28480	3130-0533
	00339-04002	1	KNOB, INPUT RNG	28480	00339-04002
	3030-0690		SCREW-SET #4-40 ,13-INCH SMALL CUP-PT	28480	3030-0690
	3130-0534	1	DETENT, 12-POSITION	28480	3130-0534
	3030-0690		SCREW-SET #4-40 ,13-INCH SMALL CUP-PT	28480	3030-0690
	00339-04004	1	KNOB, TENS	28480	00339-04004
	3130-0535	2	DETENT, 14-POSITION	28480	3130-0535
	00339-04005	1	KNOB, UNITS	28480	00339-04005
	3030-0690		SCREW-SET #4-40 ,13-INCH SMALL CUP-PT	28480	3030-0690
	3130-0535	1	DETENT, 16-POSITION	28480	3130-0535
	00339-04006	1	KNOB, MULTIPLIER	28480	00339-04006
	3030-0690		SCREW-SET #4-40 ,13-INCH SMALL CUP-PT	28480	3030-0690
	3130-0536	1	DETENT, 18-POSITION	28480	3130-0536
	0370-1099		KNOB, POINTERT (FREQUENCY VERNIER)	28480	0370-1099
	00339-03702	1	SHAFT, NON-METALLIC	28480	00339-03702
	1500-0019		COUPLER-ADG ,75ALG 888	05104	120
	00339-04003	1	KNOB, OSC, LEVEL	28480	00339-04003
	3030-0690		SCREW-SET #4-40 ,13-INCH SMALL CUP-PT	28480	3030-0690
	0370-2899	10	KNOB, FWD WHEEL	28480	0370-2899
	3030-0690		SCREW-SET #4-40 ,13-INCH SMALL CUP-PT	28480	3030-0690
	0370-1125	1	KNOB, POINTER (LEVEL VERNIER)	28480	0370-1125
	3030-0531	2	SCREW-SET #4-40 ,13-INCH SMALL CUP-PT	28480	3030-0531
xF1	2110-0465	1	CAP, FUSEHOLDER	28480	2110-0465
	2110-0467	1	NUT, HEX SINGLE CHAMFER 1/2-28 THREAD	25912	4074670
	2110-0470	1	FUSEHOLDER-HEX POST 20A 300V ULVIEC	24702	346010-010

See introduction to this section for ordering information

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
HP1	50339-00201	1	MECHANICAL PARTS	28480	50339-00201
HP2	50339-00202	1	PANEL, FRONT	28480	50339-00202
HP3	50741-01212	2	FRONT SUB-PANEL	28480	50741-01212
HP4	5020-8803	1	BRACKET, METER	28480	5020-8803
HP5	5020-8835	2	FRONT FRAME	28480	5020-8835
HP6	50339-01206	1	CORNER, STRUT	28480	50339-01206
HP7	5040-8258	1	BRACKET, SHIELD MOUNTING	28480	5040-8258
HP8	5020-8804	1	FASTENER, CAPTIVE	28480	5020-8804
HP9	50339-00203	1	REAR, CASTING	28480	50339-00203
HP10	50339-00603	1	PANEL, REAR	28480	50339-00603
HP11	50339-00123	1	SHIELD, DETECTOR	28480	50339-00123
	5040-8123	1	GUIDE-PC BOARD GBN POLYC .062-80-THIN	28480	5040-8123
	5040-8503	6	FASTENER, CAPTIVE	28480	5040-8503
HP12	50339-00601	1	SHIELD, OSC., FRONT	28480	50339-00601
HP13	50339-00602	1	SHIELD, OSC., BACK	28480	50339-00602
HP14	5040-8503	1	FASTENER, CAPTIVE	28480	5040-8503
HP15	50339-00102	1	PLATE, OSC. TOP	28480	50339-00102
	50339-00101	1	PLATE, OSC. BOTTOM	28480	50339-00101
	50339-00609	1	SHIELD, P. S., FRONT	28480	50339-00609
	50339-00608	1	SHIELD, P. S., BACK	28480	50339-00608
	5040-8158	2	GUIDE-PC BOARD YEL POLYC .062-80-THIN	28480	5040-8158
	5040-8258	1	FASTENER, CAPTIVE	28480	5040-8258
HP16	50339-00606	1	SHIELD, P. S.	28480	50339-00606
	5040-8158	1	GUIDE-PC BOARD YEL POLYC .062-80-THIN	28480	5040-8158
HP17	50339-00607	1	SHIELD, INPUT AMPLIFIER	28480	50339-00607
HP18	50339-00608	1	SHIELD, ATTENULATOR	28480	50339-00608
HP19	5040-9833	1	COVER, TOP (STANDARD)	28480	5040-9833
HP20	5060-9845	1	COVER, BOTTOM (STANDARD)	28480	5060-9845
HP21	5040-7201	4	FOOT(STANDARD)	28480	5040-7201
HP22	1460-1345	2	TIKT STAND SET	28480	1460-1345
HP23	5060-9878	2	COVER, SIDE (STANDARD)	28480	5060-9878
HP24	5060-9802	2	HANDLE, STRAP	28480	5060-9802
HP25	5040-7219	2	STRAP, HANDLE, CAP-FRONT	28480	5040-7219
HP26	5040-7220	2	STRAP, HANDLE, CAP-REAR	28480	5040-7220
HP27	5040-7202	1	TRIM, TOP	28480	5040-7202
HP28	5001-0434	2	SIDE TRIM	28480	5001-0434
HP29	50339-00609	1	TRANSFORMER SHIELD	28480	50339-00609

See introduction to this section for ordering information.

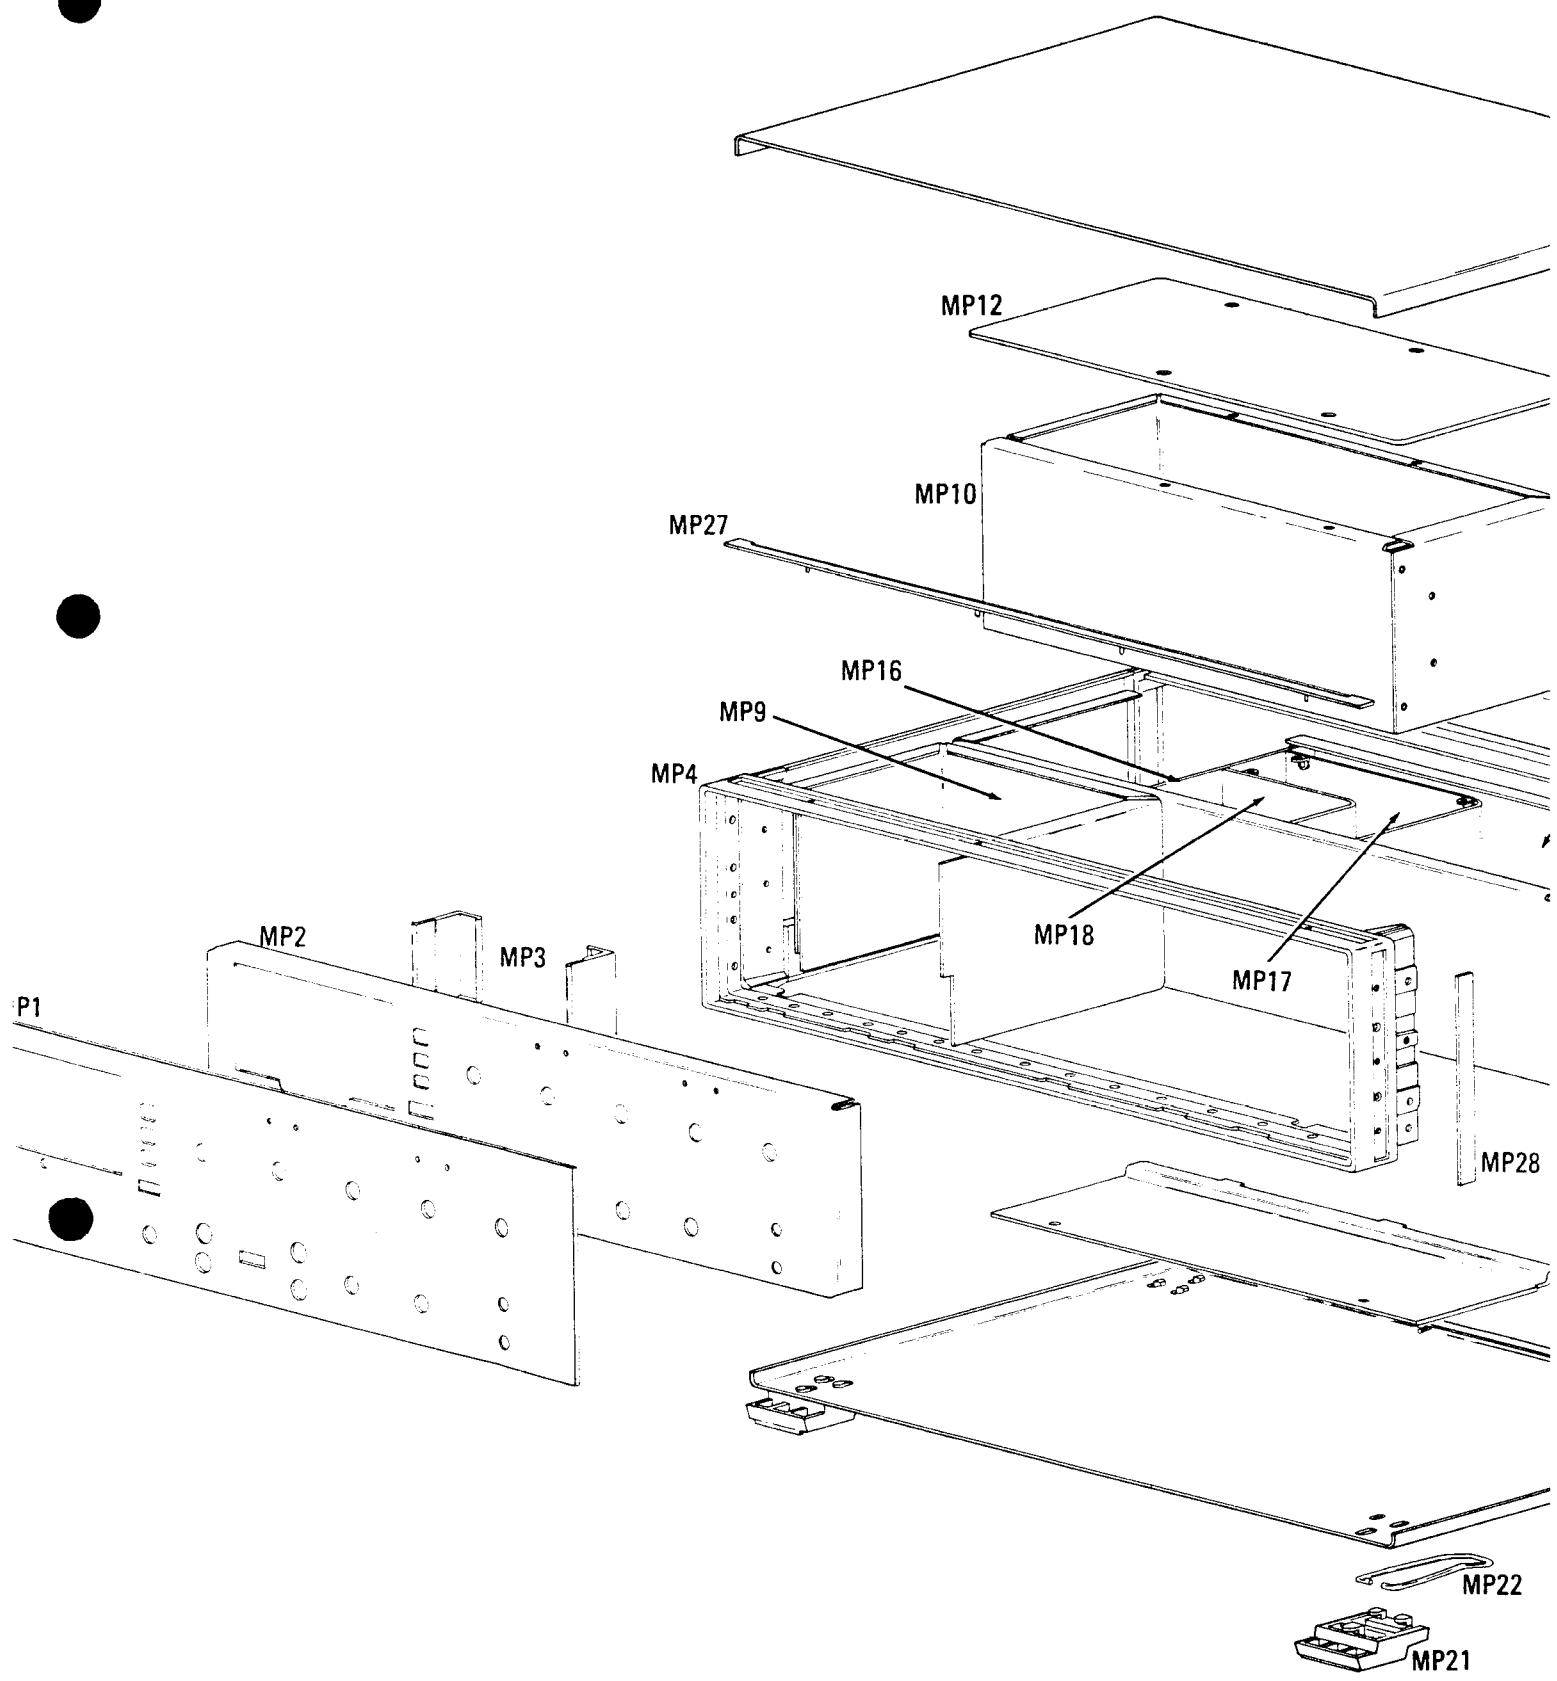

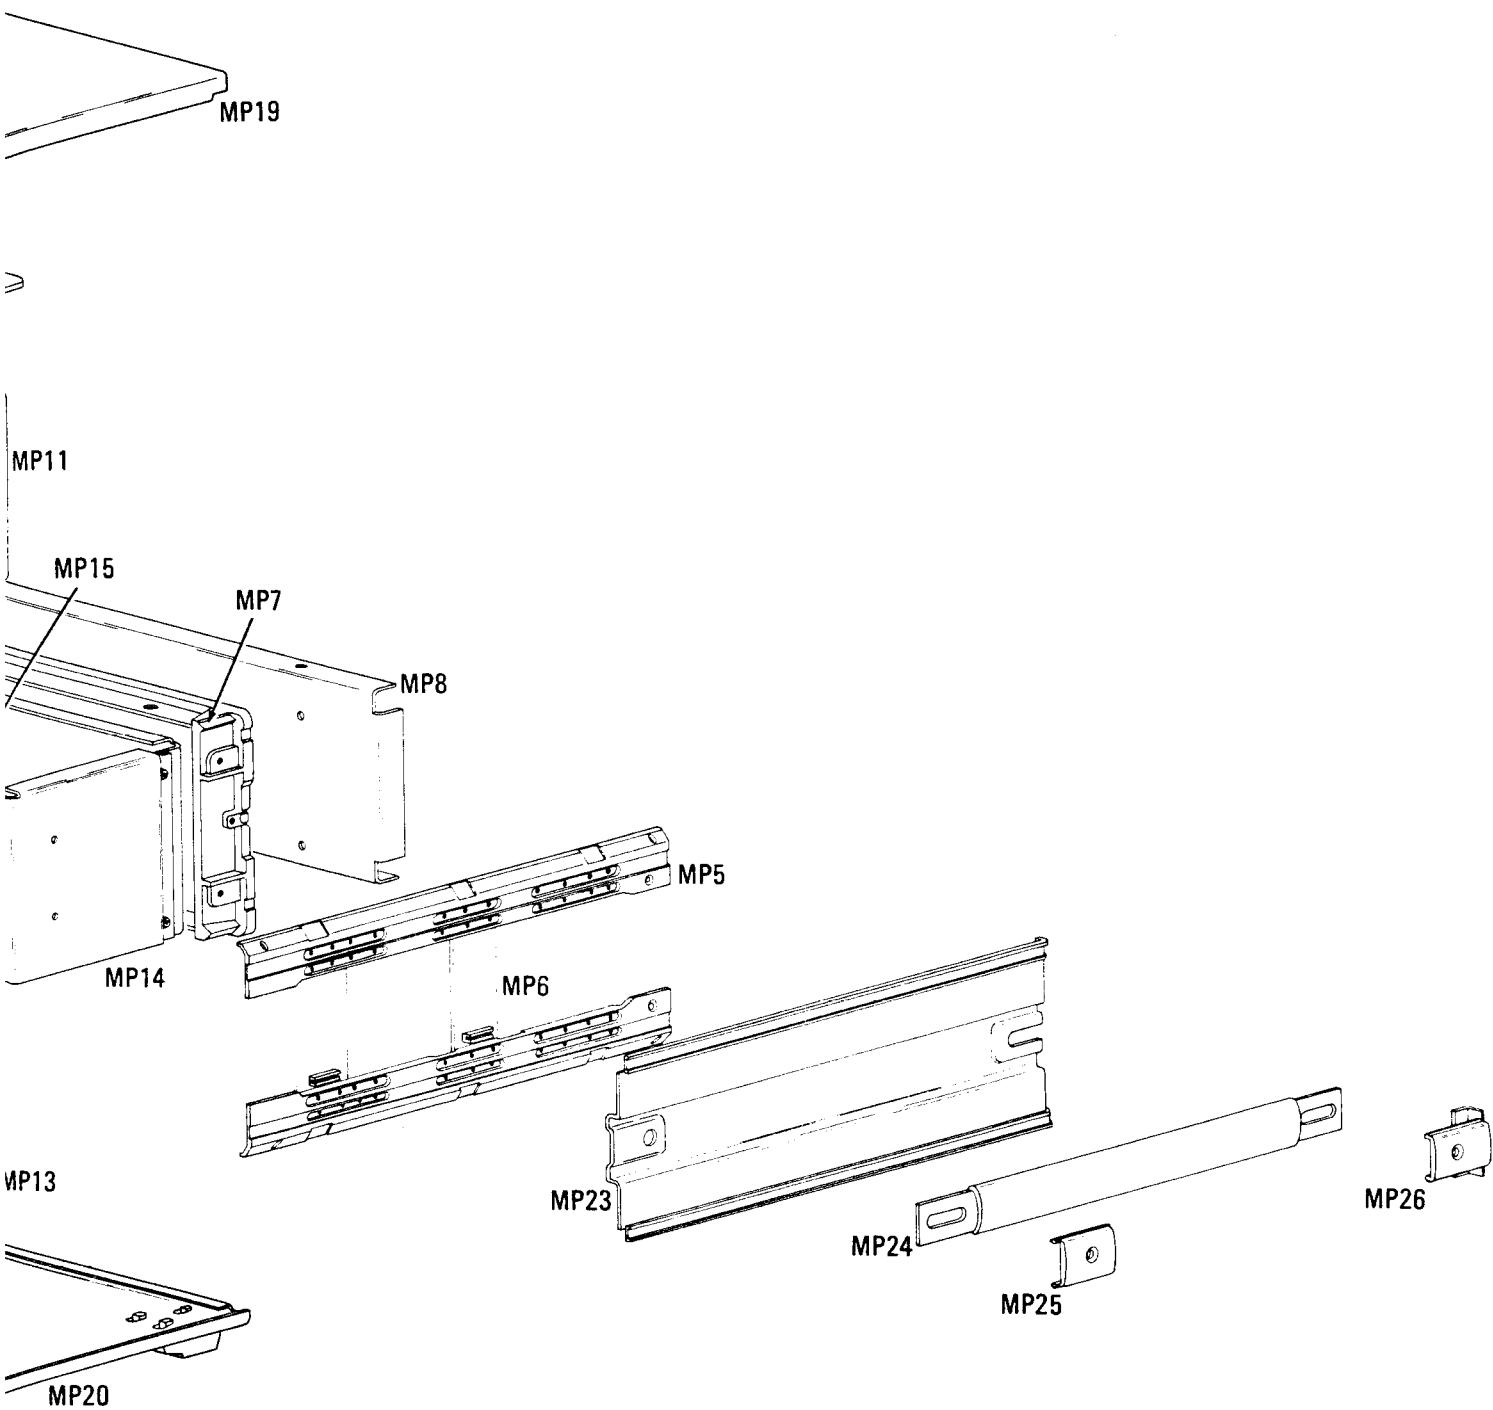


Figure 6-1. Mechanical Parts Locator.
6-15/6-16

SECTION VII

MANUAL CHANGES

7-1. INTRODUCTION.

7-2. This section contains information necessary to adapt this manual to instruments with serial numbers lower than the number listed on the title page.

7-3. MANUAL CHANGES.

7-4. To adapt this manual to your instrument, refer to Table 7-1 and make the manual changes listed opposite your instrument serial number. These changes should be performed in the sequence listed.

7-5. If your instrument serial number is not listed on the title page of this manual or in Table 7-1, it may be documented in a yellow MANUAL CHANGES supplement included with the manual. For additional information, refer to INSTRUMENT AND MANUAL IDENTIFICATION in Section I.

Table 7-1. Manual Changes by Serial Number.

Instrument Serial No.	Make Manual Change
1730A00101 to 1730A00266	A

7-6. MANUAL CHANGE INSTRUCTIONS.

CHANGE A

The oscillator circuitry was simplified beginning with instrument serial number 1730A00266. To adapt this manual to prior instruments make the following changes.

Page 6-3, Table 6-3.

Add:

A1C20, 0180-0291, Cap-Fxd 1 μ F \pm 10% 35 VDC TA
A1CR1, 1901-0518, Diode-Schottky

A1Q1, 1855-0360, Transistor Mosfet N-Chan D-Mode
A1R32, R33, 0698-7332, Resistor 1 M 1% .125 W F
TC = 0 \pm 100

Delete:

A1CR14, 1901-0040, Diode-Switching 30 V 5 mA

Page 8-21/8-22, Figure 8-17.

Change:

Modify the amplitude control circuitry as shown in Figure 7-1.

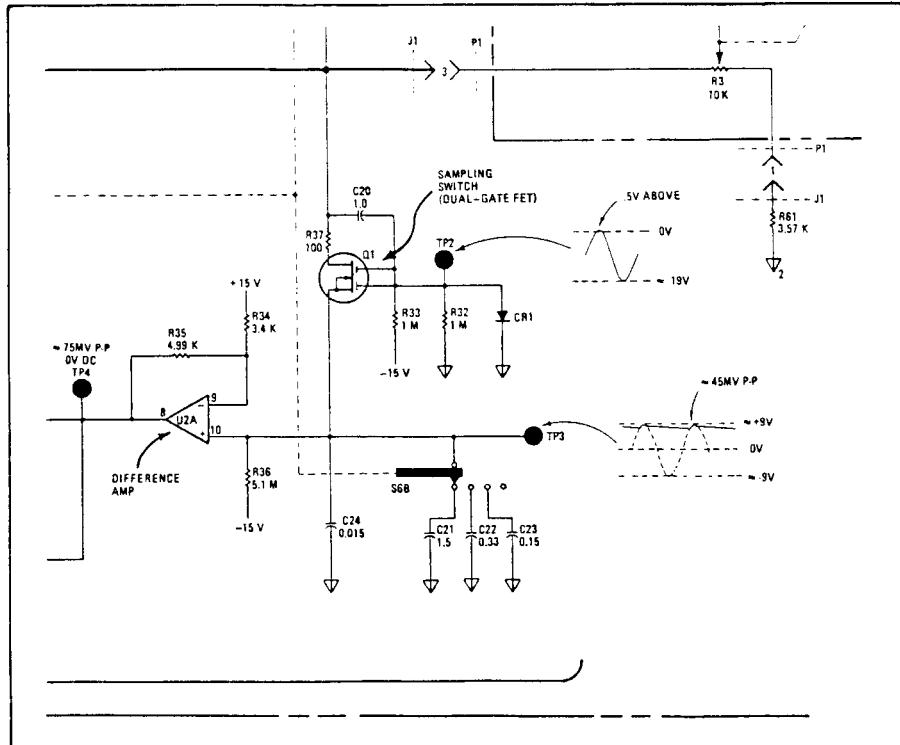


Figure 7-1. Amplitude Control Circuit Change.

SECTION VIII SERVICE

8-1. INTRODUCTION.

8-2. This section contains theory of operation, troubleshooting information, safety considerations, and general service information for the Model 339A Distortion Measurement Set.

8-3. SAFETY CONSIDERATIONS.

8-4. Although this instrument has been designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to ensure safe operation and to maintain the instrument in safe operating condition. Service and adjustments should be performed only by qualified service personnel.

8-5. Any adjustment, maintenance, and repair of the opened instrument while any power or voltage is applied should be avoided as much as possible, and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

WARNING

Any interruption of the protective grounding conductor (inside or outside the instrument) or disconnection of the protective earth

terminal is likely to make the instrument dangerous. Intentional interruption of the protective grounding conductor is strictly prohibited.

8-6. It is possible for capacitors inside the instrument to still be charged even if the instrument has been disconnected from its power source.

8-7. Be certain that only fuses with the required current rating and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuse holders must be avoided.

WARNING

The service information presented in this manual is normally used with the protective covers removed and power applied to the instrument. Energy available at many points may, if contacted, result in personal injury.

8-8. RECOMMENDED TEST EQUIPMENT.

8-9. Test equipment required to maintain the Distortion Measurement Set is listed in Table I-3. Equipment other than that listed may be used if it meets the critical specifications.

THEORY OF OPERATION

8-10. GENERAL DESCRIPTION.

8-11. Figure 8-1 shows a simplified block diagram of the Model 339A Distortion Measurement Set. The 339A combines an automatic, high resolution distortion analyzer/voltmeter and a low distortion oscillator to provide a drive signal to the device under test. The frequency of both the oscillator and the fundamental rejection circuit (notch filter) of the distortion analyzer are tuned simultaneously to simplify operation.

8-12. The Model 339A features an AM DETECTOR input, in addition to the normal analyzer/voltmeter input, which permits the user to measure the distortion of a modulating signal on an RF carrier. Selection of the AM DETECTOR input or DISTORTION ANALYZER input is made by a front panel switch.

8-13. An OSCILLATOR LEVEL function is provided

to allow the operator to monitor the oscillator output level without connecting external cables.

8-14. The selected input signal is applied to the input attenuator/amplifier which provides the proper amount of attenuation or gain required to place the signal within the input range of the analyzer circuits.

8-15. The Fundamental Rejection Circuit consists of a "bridged T" filter network in conjunction with a "notch amplifier" and feed-back amplifier which enhance the rejection characteristics. The "nulling" process of the circuit is fully automatic to simplify operation and to provide maximum accuracy. If the fundamental frequency of the input signal is not within the "pull-in" range of the rejection circuit (in cases where an external signal source is used), a front panel LED indicator is lit to indicate which direction to turn the FREQUENCY controls to bring the rejection circuit within range. The

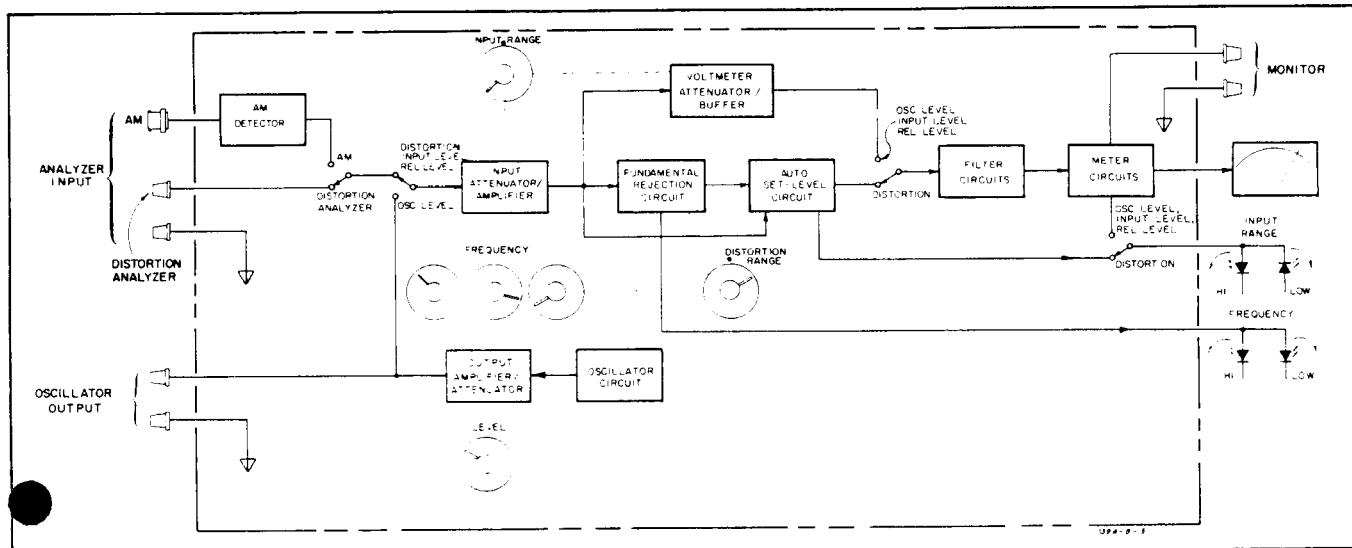


Figure 8-1. Model 339A Simplified Block Diagram.

rejection circuit attenuates the fundamental frequency of the input signal approximately -100 dB. The distortion signal (output signal) of the rejection circuit is attenuated or amplified (depending upon the setting of the DISTORTION RANGE control) by the distortion amplifier and applied to the input of the Auto Set-Level circuit.

8-16. The Automatic Set-Level Circuit, as the name implies, automatically adjust the distortion signal to provide a distortion measurement which is relative to a full-scale input level. The Auto Set-Level circuit eliminates the necessity of manually setting a reference level before making a distortion measurement.

8-17. When using the voltmeter function of the 339A, OSCILLATOR LEVEL, INPUT LEVEL, and RELATIVE LEVEL, the Voltmeter Attenuator Buffer supplies the necessary amount of attenuation to bring the input signal within the input range of the meter circuits and provides isolation between the input amplifier and meter circuits.

8-18. The Filter Circuits, included with the Model 339A, are three-pole active filters and include a 400 Hz high-pass filter, a 30 kHz low-pass filter, and an 80 kHz low-pass filter. These filters may be selected individually or in any combination to provide the filter characteristics required.

8-19. The Meter Circuits include an input amplifier, and RMS detector, a variable gain amplifier, and a voltage to current converter. The input amplifier amplifies the input signal by +40 dB to drive the rms detector and supply an output signal to the MONITOR terminals. The full-scale output of this amplifier is 1 V rms. The rms detector converts the input signal to a dc voltage proportional to the rms value of the input (1 V dc full-scale). The output of the rms detector is applied to the input of a variable gain amplifier which acts as a buffer in all functions except RELATIVE LEVEL. In this function, the variable

gain amplifier is enabled to permit the user to set a convenient reference level on the meter. The output of the variable gain amplifier is applied to both the voltage-to-current converter which drives the meter and the input range comparators. These comparators are used to light front panel LED indicators when the meter drive signal is greater than full-scale or less than 1/3 full-scale. The LEDs indicate which direction to turn the INPUT RANGE control to bring the drive signal within the range of the meter.

8-20. The Oscillator Circuit of the 339A uses a "bridged T" filter network to determine the operating frequency and employs a sampling feedback circuit to control the oscillator output level. The amplitude feedback circuit is designed to provide cycle-to-cycle amplitude control while minimizing distortion caused by regulating the output level.

8-21. The Output Amplifier/Attenuator circuit of the oscillator provides isolation between the oscillator circuit and the output terminals and varies the output level from 1 mV rms to greater than 3 V rms into a 600 ohm load.

8-22. CIRCUIT DESCRIPTIONS.

8-23. Input Circuitry.

8-24. The front panel **FUNCTION** switch permits the user to select one of four input functions, as follows:

OSCillator LEVEL - In this function the meter circuit monitors the rms output level of the oscillator.

DISTORTION - The distortion function measures the rms value of total harmonic distortion (THD) of the input signal.

INPUT LEVEL — In this function, the meter

indicates the rms value of the input signal (voltmeter function).

RELATIVE LEVEL - The relative level function permits the user to measure the rms value of the input signal relative to a pre-set reference (dB and VU measurements).

8-25. In addition to the DIStortion ANalyzer input, the 339A also includes an AM DETECTOR INPUT which detects the AM modulation signal of an RF carrier. This allows the user to measure the total harmonic distortion of the modulation signal.

8-26. Input Amplifier.

8-27. The 339A input amplifier is an operational amplifier circuit which uses a combination of attenuation and gain to limit the full-scale output of the amplifier to 3 V rms. Figure 8-2 shows a simplified schematic of the input amplifier and lists the attenuation and gain for each INPUT RANGE setting. The output signal of the buffer amplifier is applied to the fundamental rejection circuit (notch filter) and auto set-level circuit of the analyzer section. The voltmeter attenuator provides the necessary attenuation to maintain a 10 mV rms full-scale output signal to the voltmeter buffer amplifier.

8-28. Input Overload Protection.

8-29. The input amplifier is protected from the application of high voltage to the input by a zener

referenced protection circuit which limits the input voltage to approximately 11 volts peak. The input is further protected by a fuse which limits the input current to approximately 60 mA. During normal operation, FET A3Q100 supplies a feedback signal which is equal in phase and amplitude to the input signal to eliminate leakage caused by the capacitance of the protection diodes.

8-30. Analyzer Circuitry.

8-31. Notch Filter.

8-32. The purpose of the Notch Filter is to eliminate the fundamental frequency of the signal being measured. The basic notch filter circuit, as shown in Figure 8-3, is a "bridged T" RC filter network. The filter is tuned to approximately the fundamental frequency of the input signal by the front panel FREQUENCY controls and is fine tuned to the exact frequency by the phase control circuit. The notch filter by itself attenuates the fundamental frequency only about -16 dB. To improve the "notch" characteristics, a portion of the input signal is "fed-forward" and algebraically summed with the output of the notch filter by notch amplifier A3U3. The Application of the feed-forward signal cancels the remaining fundamental signal. The correct level of feed-forward signal necessary to cancel the fundamental frequency is regulated by the amplitude control circuit. The combination of feed-forward signal and the automatic frequency tuning provided by the phase control circuit improves the "notch depth" to

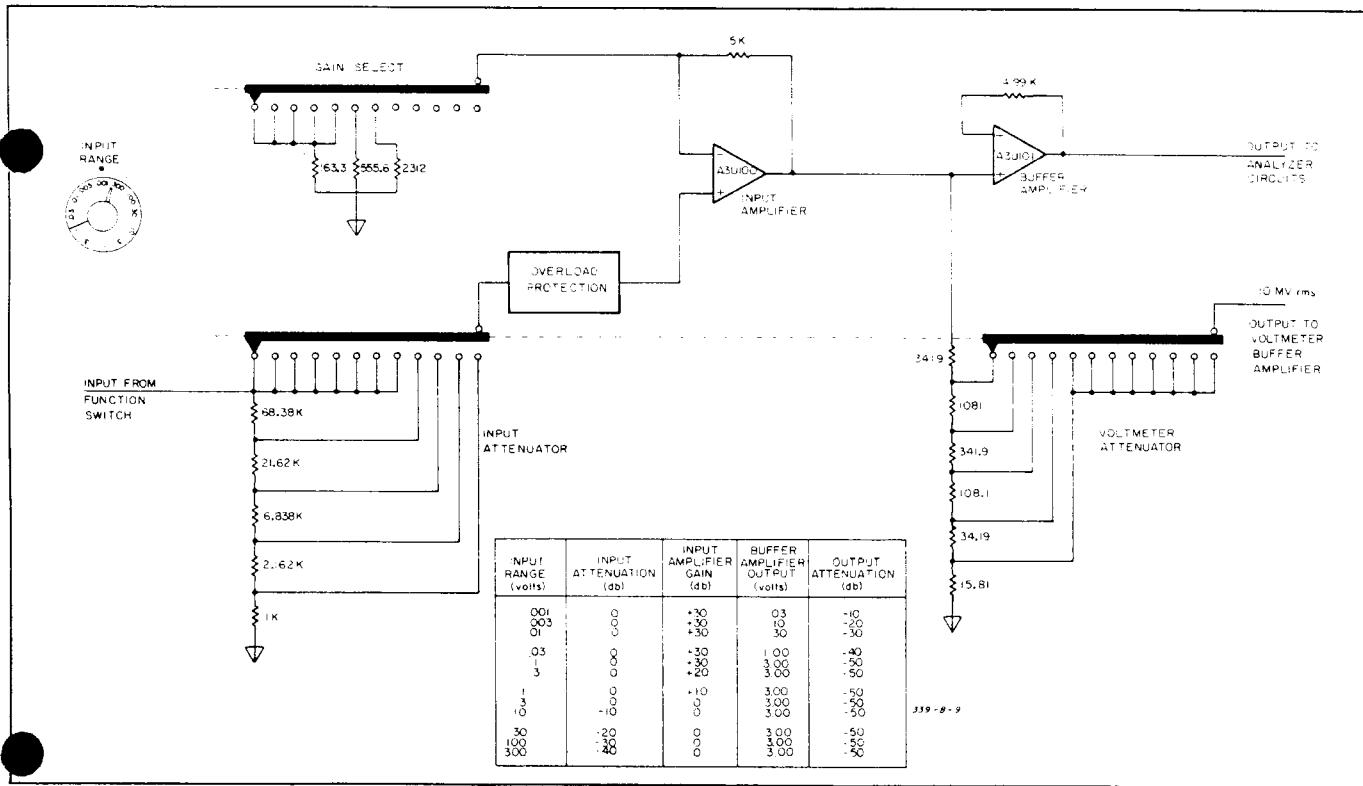


Figure 8-2. Simplified Input Amplifier Schematic.

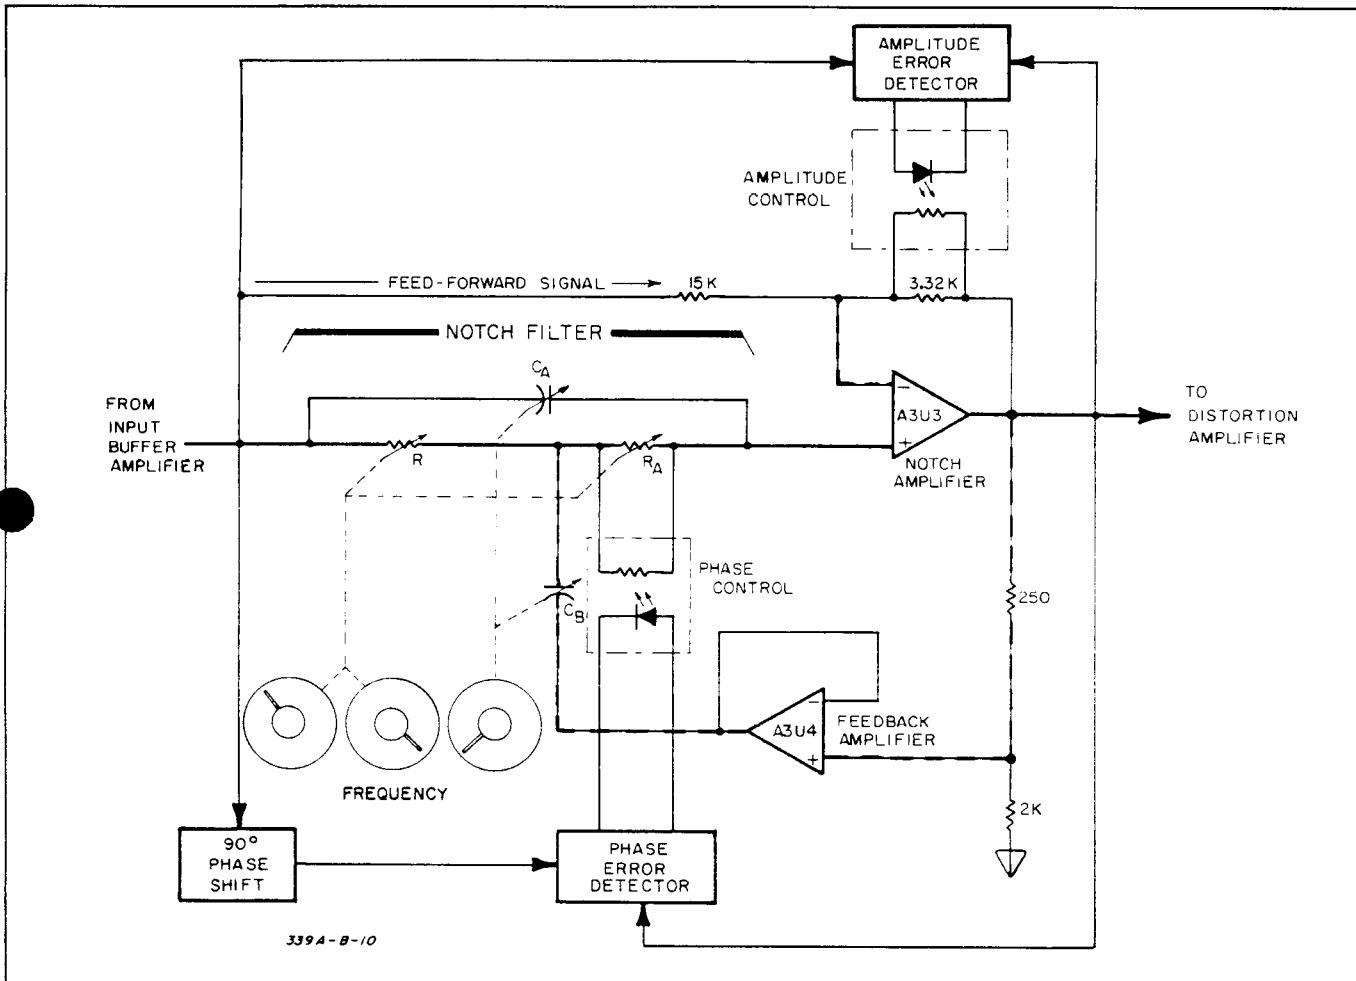


Figure 8-3. Simplified Notch Filter Schematic.

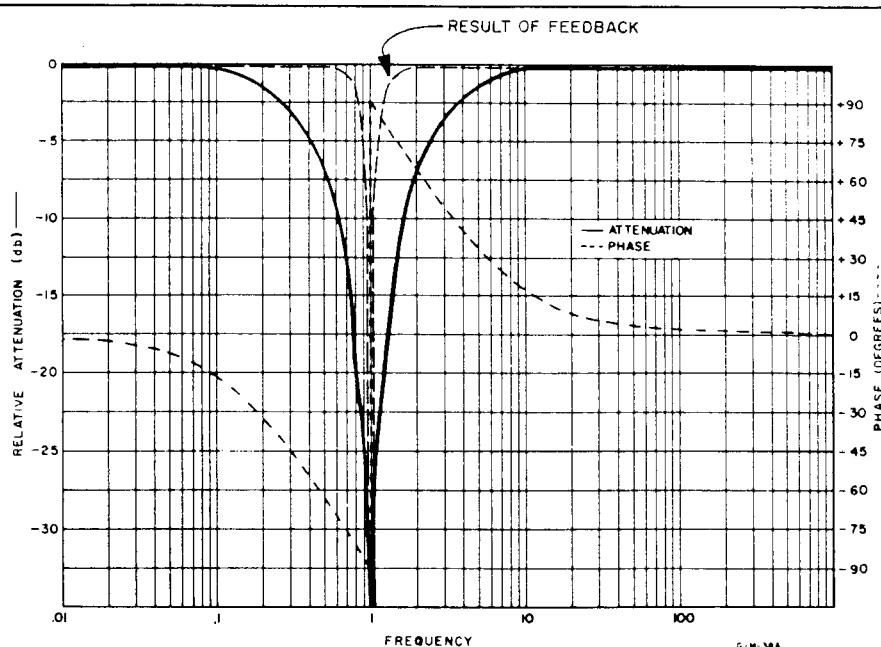


Figure 8-4. Effect of Feedback.

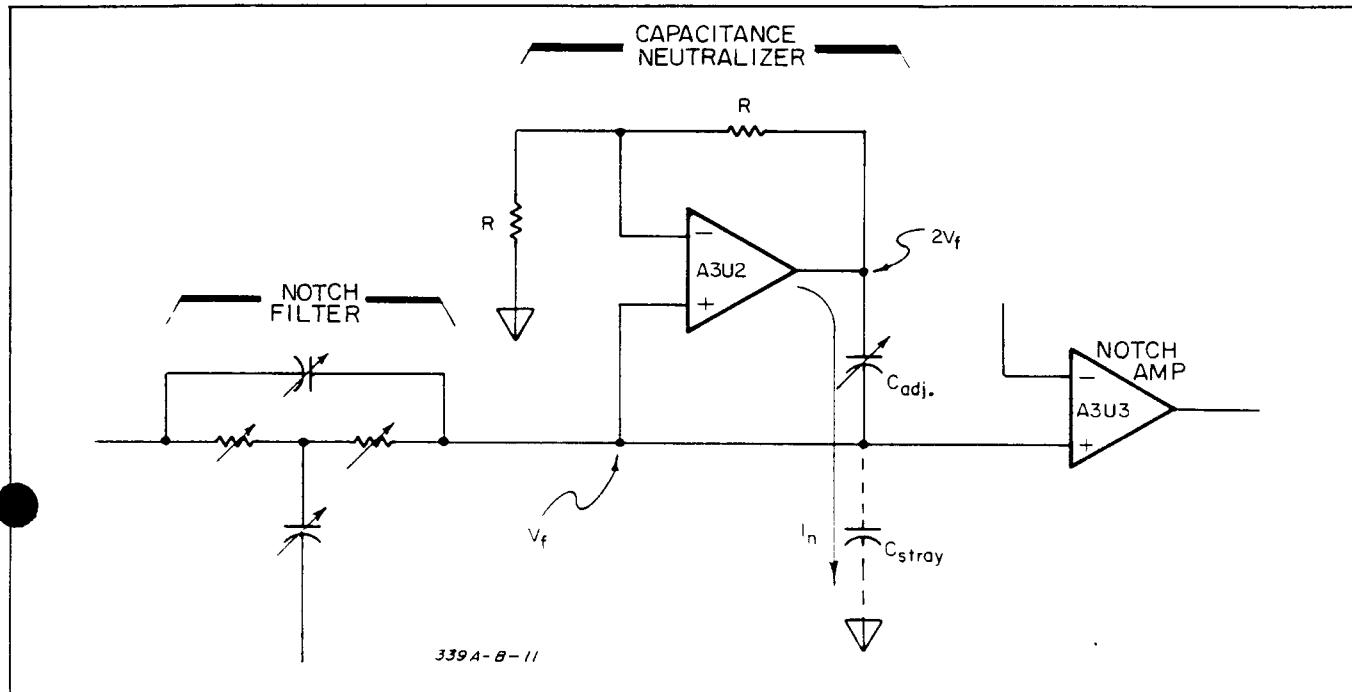


Figure 8-5. Simplified Capacitance Neutralizer Schematic.

approximately -100 dB. To improve the "notch width", a portion of the output signal from A3U3 is fed-back to the notch filter circuit. The effects of this feed-back are illustrated in Figure 8-4. Feed-back amplifier A3U4 is a unity gain amplifier which provides isolation between notch amplifier A3U3 and the notch filter circuitry. The notch filter output (from A3U3) is applied to the input of distortion amplifier A3U200 and to the input of the amplitude and phase error detector circuits.

8-33. Capacitance Neutralizer.

8-34. The purpose of the Capacitance Neutralizer is to neutralize the effects of stray capacitance at the output of the notch filter. The neutralizer circuit (shown in Figure 8-5) consists of an operational amplifier whose gain is set by resistors "R". The output voltage of A3U2 is equal to: $V_f (1 + R/R)$ or $2V_f$, where V_f is the output voltage from the notch filter. The output of A3U2 drives

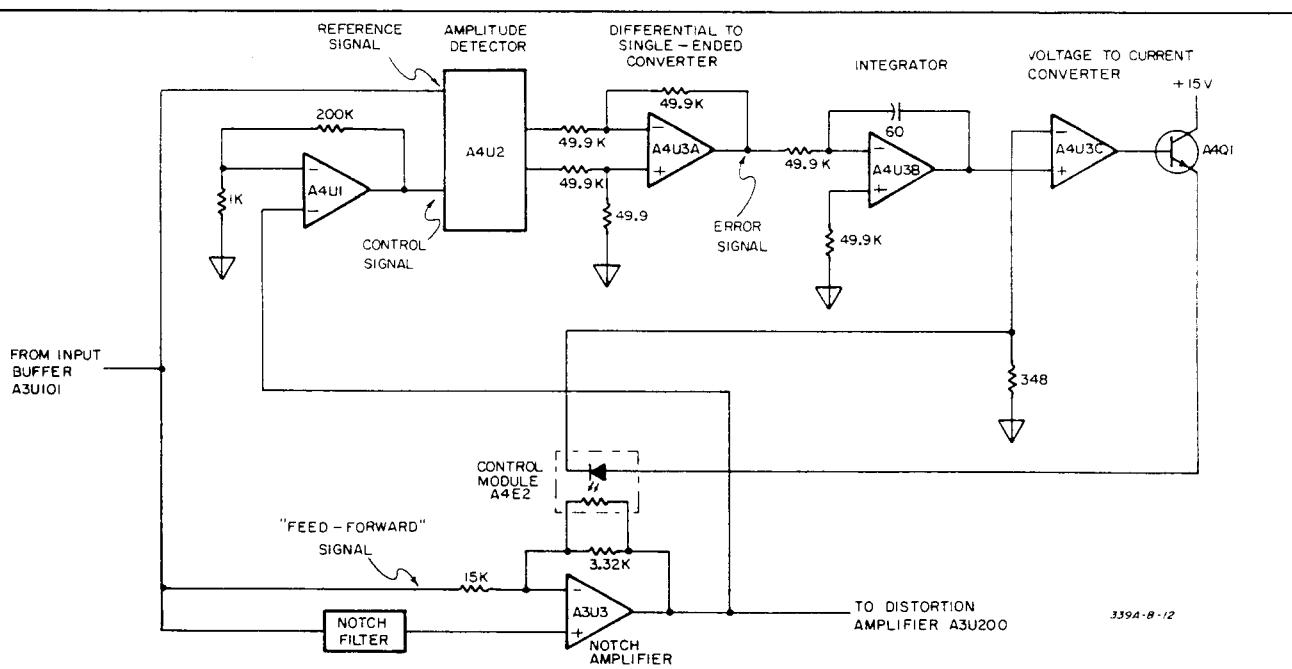


Figure 8-6. Simplified Amplitude Error Detector Schematic.

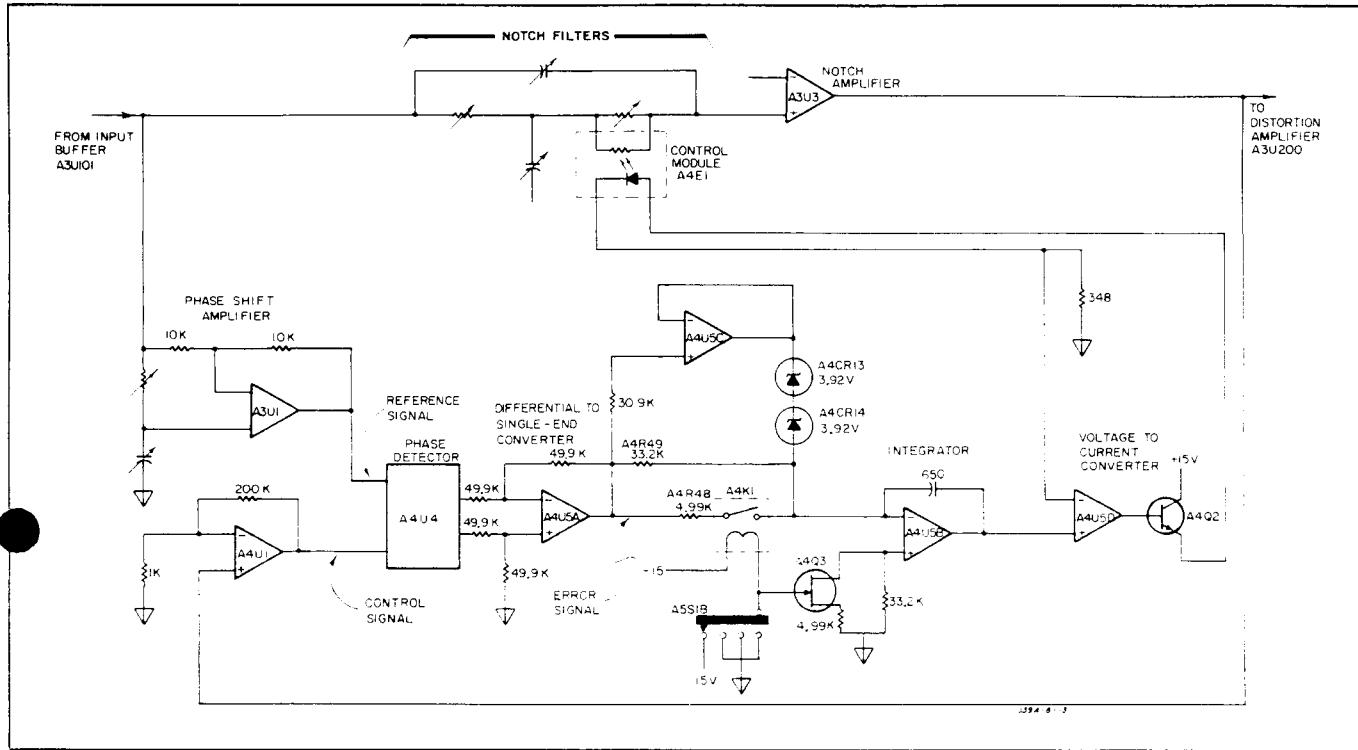


Figure 8-7. Simplified Phase Error Detector Schematic.

capacitors C_{adj} and C_{stray} . C_{adj} is adjusted to be equal to C_{stray} so that $1/2$ of the output of A3U2 (a voltage = V_f) is dropped across each. Since the current necessary to drive the stray capacitance (C_{stray}) is supplied by the neutralizer circuit, the output of the notch filter is not loaded.

8-35. Amplitude Error Detector.

8-36. The purpose of the Amplitude Error Detector is to regulate the amount of "feed-forward" signal required to optimize the depth of the notch filter. Figure 8-6 shows a simplified schematic of the amplitude error detector circuit. The input signal to the notch filter (from input buffer amplifier A3U101) is used as the reference signal for amplitude detector A4U2. The output of the notch amplifier (A3U3) is amplified by A4U1 and is used as the control signal to A4U2. Amplifier A4U1 supplies a gain of 200, which is necessary to achieve "notch depths" in excess of -100 dB. The output of amplitude detector A4U2 is the product of the two input signals. Mathematically, the output of A4U2 (V_o) is equal to the reference signal ($A_1 \cos \omega t$) times the control signal ($A_2 \cos \omega t + \phi$), or $V_o = A_1 A_2 [\cos(\omega t + \phi)]$. By trig identity, this expression is equal to:

$$V_o = 1/2 A_1 A_2 [\cos(2\omega t + \phi) + \cos \phi].$$

The differential output of A4U2 is converted to a single ended output by A4U3A and applied to the integrator. The integrator (A4U3B) acts as a low-pass filter to the output signal from the amplitude detector and responds only to the low frequency component of the signal. The

error signal is, therefore, effectively equal to:

$$V_o = 1/2 A_1 A_2 \cos \phi \text{ times a constant "K".}$$

Since the notch filter is tuned to the fundamental frequency of the input signal, the phase difference term of the error signal ($\cos \phi$) is equal to 1 ($\cos 0^\circ = 1$). The error signal as seen by the integrator, is therefore a dc voltage equal to:

$$K \frac{(A_1 A_2)}{2}$$

Since the amplitude of the reference signal (A_1) is held constant, any changes in the error signal are caused by the amplitude changes of the control signal (A_2). The error signal to the integrator can therefore be expressed as:

$$V_o = A_2 \frac{(K A_1)}{2}$$

The output of the integrator is applied to a voltage-to-current converter (A4U3C and A3Q1) which drives amplitude control module A3E2. Control module A3E2 adjusts the gain of notch amplifier A3U3 to provide the proper amount of feed-forward signal necessary to cancel the fundamental frequency at the output of the notch amplifier and therefore reduce the error signal to zero.

8-37. Phase Error Detector.

8-38. The purpose of the Phase Error Detector circuit is to "fine tune" the notch filter to the fundamental frequency of the input signal. The circuit shown in Figure 8-7 is a simplified schematic of the phase detector circuit.

The input signal from input buffer amplifier A3U101 is retarded 90° by phase shift amplifier A3U1 and applied to the input of A4U4 as the reference signal. The output of the notch amplifier (A3U3) is amplified by A4U1 and is used by the phase detector (A4U4) as the control signal. The output of the error detector is equal to the product of the two input signals. Mathematically, the output of A4U4 (V_o) is equal to the reference signal [$A_1 \cos(\omega t - 90^\circ)$] times the control signal ($A_2 \cos \omega t + \phi$) or, $V_o = A_1 A_2 [(\cos \omega t - 90^\circ) (\cos \omega t + \phi)]$. By trig identity, this expression is equal to:

$$[\cos(2\omega t + \phi - 90^\circ) + \cos(\phi + 90^\circ)] \text{ or; } V_o = 1/2 A_1 A_2 [\sin(2\omega t + \phi) - \sin \phi]$$

The differential output of A4U4 is converted to a single-ended output by A4U5A and applied to the integrator. The integrator (A4U5B) acts as a low-pass filter to the output signal from the phase detector and responds only to the low frequency component of the signal. The error signal is, therefore, effectively equal to:

$$V_o = 1/2 A_1 A_2 \sin \phi \text{ times a constant "K".}$$

The amplitude and phase of the reference signal ($A_1 \cos 90^\circ$) is held constant. Therefore, the error signal (V_o) is zero only when the phase difference between the reference signal and control signal is equal to 90° ($\cos 90^\circ = 0$). Since the reference signal has purposely been shifted by 90°, this condition can only occur when the notch filter is perfectly "tuned", resulting in 0° phase shift of the signal through it. The error signal from the output of A4U5A is applied to the input circuit of the integrator. Resistors A4R48 and A4R49 determine the time constant of integrator A4U5B. On the X10 frequency range (10 Hz - 100 Hz) relay A4K1 opens to increase the time constant. The time constant is increased on this range to prevent distortion which might be caused by the phase control circuit at low frequencies. On frequency ranges X100 through X10 K (100 Hz - 110 kHz), relay A4K1 is closed to parallel A4R49 with A4R48 to reduce the time constant. FET switch A4Q3 switches the integrator bias resistance to prevent offsets at the output caused by input imbalance. Amplifier A4U5C and diodes A4CR13 and A4CR14 provide a "fast-charge" path for the integrator when the notch filter is extremely off frequency. In this case, the output of A4U5A exceeds the break-down voltage of A4CR13 or A4CR14 to provide increased charge current to the integrator. As the notch filter approaches the proper frequency, the output of A4U5A no longer exceeds the break-down voltage of A4CR13 or A4CR14 and normal operation resumes. The output of integrator A4U5B is applied to the voltage-to-current converter (A4U5D) and A4Q2 which drives phase control module A3E1. Control module A3E1 changes the resonant frequency of the notch filter.

8-39. Auto Set-Level Circuit.

8-40. The Auto Set-Level circuit automatically adjusts the gain of the distortion analyzer circuitry to provide a

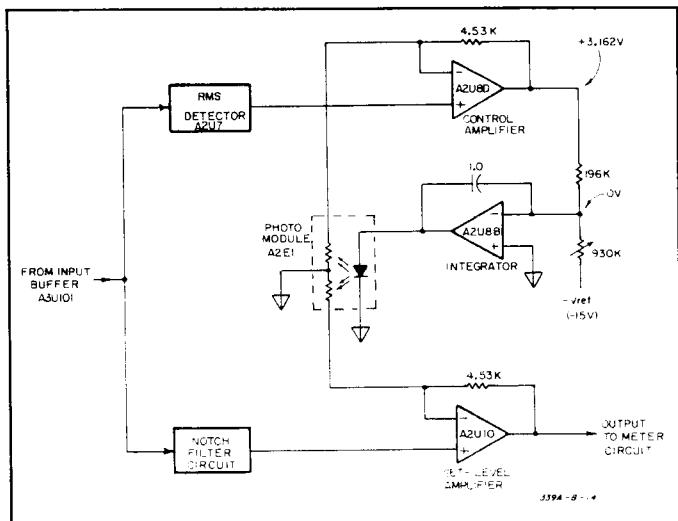


Figure 8-8. Simplified Auto Set-Level Circuit.

full-scale reference level for distortion measurements. Figure 8-8 shows a simplified schematic of the auto setlevel circuit used in the Model 339A. The input signal from amplifier A3U101 is applied to the input of rms detector A2U7. The output of A2U7 is a dc voltage equivalent to the rms value of the input signal. This signal is applied to control amplifier A2U8D whose output is connected to one end of a resistive summing network. The other end of the summing network is referenced to -15 V dc. The output of the summing network is applied to the input of integrator A2U8B which drives photomodule A2E1. Photo-module A2E1 consists of an LED driver and two balanced, photo-sensitive resistors which are part of the gain determining circuits of control amplifier A2U8D and set-level amplifier A2U10. Integrator A2U8B drives the photo-module until the gain of control amplifier A2U8D is such that its output is equal to a full-scale input level (3.162 V dc). At this point, the output of the summing network is zero and the circuit is stable. Since the set-level amplifier and control amplifier circuits are identical, the gain of set-level amplifier A2U10 is equal to that established by control amplifier A2U8D. Therefore, the set-level amplifier amplifies the distortion signal by the amount of gain which would be required to give a full-scale meter reading of the input signal or, the distortion signal is referenced to a full-scale input level.

8-41. Meter Circuits.

8-42. Figure 8-9 shows a simplified schematic of the meter circuitry used in the Model 339A. The voltmeter input shown includes the OSCillator LEVEL, INPUT LEVEL, and RELATIVE LEVEL input functions. The distortion input is the distortion signal from the analyzer circuitry. The input signal to the meter circuitry may be filtered to remove unwanted frequencies and noise. The filters are three-pole active filters and include a 400 Hz high-pass filter and 30 kHz and 80 kHz low-pass filter. The signal from the filter circuits is amplified 40 dB by

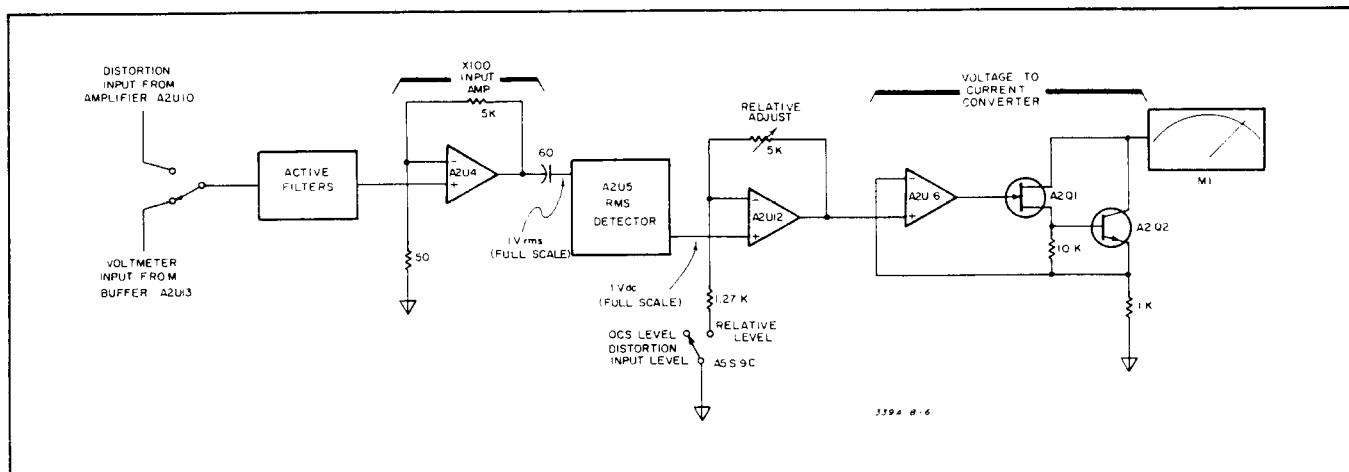


Figure 8-9. Simplified Meter Circuit Schematic.

input amplifier A2U4 to provide a 1 V rms (full-scale) input signal to the RMS detector A2U5. The dc output of the RMS detector is applied to the input of the relative adjust amplifier A2U12 which, in all function except RELATIVE LEVEL, acts as a X1 buffer amplifier. In the RELATIVE LEVEL function, the feed-back path of A2U1 is completed by switch A5S9C to allow the gain of A2U1 to be varied. This permits the user to set a reference level on the meter. The output of the relative adjust amplifier is applied to a voltage-to-current converter (A2U6, A2Q1, and A2Q2) to drive meter M1. Full-scale output current is 1 mA.

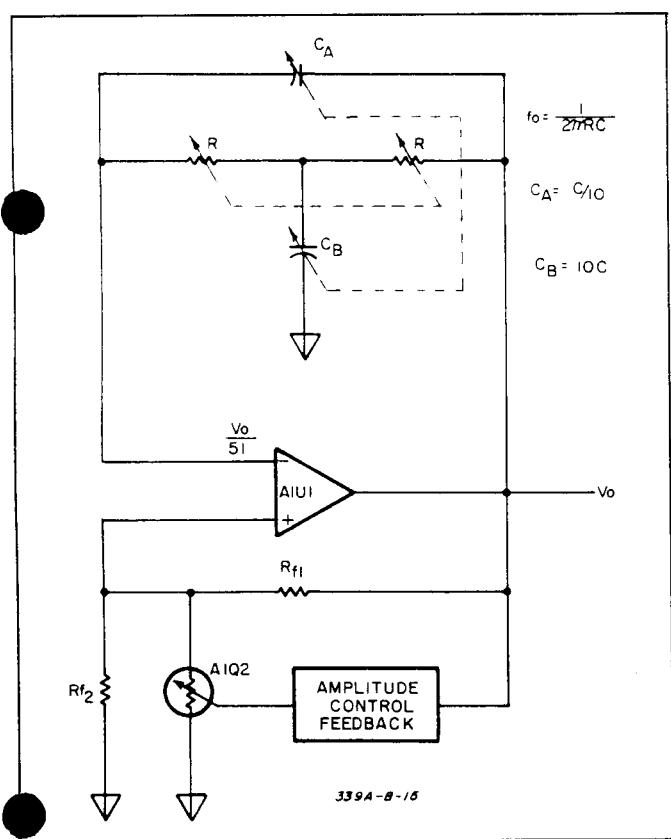


Figure 8-10. Simplified Oscillator Circuit.

8-43. Oscillator Circuit.

8-44. Frequency Generation. Figure 8-10 shows a simplified schematic diagram of the oscillator circuitry used in the Model 339A. The operating frequency of the circuit is determined by a "bridged T" filter network in the negative feed-back path of amplifier A1U1. At resonant frequency, the filter network is at maximum impedance and the negative feed-back to amplifier A1U1 is minimum. The frequency range of the oscillator circuit is determined by the selection of capacitors C_A and C_B while the particular operating frequency is controlled by the selection of resistors R.

8-45. Amplitude Control. The basic oscillator output level is determined by positive feed-back resistors R_{f1} and R_{f2} and is regulated by the amplitude control circuitry shown in Figure 8-11. The purpose of the amplitude control circuitry is to monitor the oscillator output level and derive an error signal to control the gain of amplifier A1U1. The oscillator output is sampled during the positive peaks by the peak detector circuit which stores a charge equal to the peak amplitude of the output signal on capacitor C_h. The charge on C_h is compared to a reference voltage by difference amplifier A1U2A. The output of A1U2A represents the instantaneous amplitude error of the oscillator signal. This signal is applied to integrator A1U2B and through the fast response bypass circuit to summing amplifier A1U2C. The output of the integrator (A1U2B) represents the average or long-term amplitude error while the signal from the fast response bypass circuit represents the amplitude error on a cycle-to-cycle basis. These two signals are added by summing amplifier A1U2C. The resulting output of A1U2C drives control FET A1Q2 which acts as a variable resistor in parallel with feed-back resistor R_{f2} to adjust the gain of oscillator amplifier A1U1.

8-46. Output Buffer and Attenuator. The oscillator signal is applied to the output buffer amplifier (A1U3) through the output LEVEL VERNIER control. The level vernier varies the output level of the buffer amplifier from approximately 6.5 V rms to 1.8 V rms. The output of the buffer amplifier is divided by the output attenuator in 10 dB V steps from 3 V rms full-scale to 3 mV rms full-scale into a 600 ohm load. The attenuator also includes an OFF position which disables the oscillator output and

terminates the OUTPUT terminals with a 600 ohm resistive load. The combination of the output attenuator and level vernier permit the selection of output levels from 1 mV rms to greater-than 3 V rms into 600 ohms. The oscillator output level may be monitored on the meter when the OSCillator LEVEL function is selected. A zener diode protection circuit protects the oscillator circuitry from the accidental application of voltage to the oscillator OUTPUT terminals.


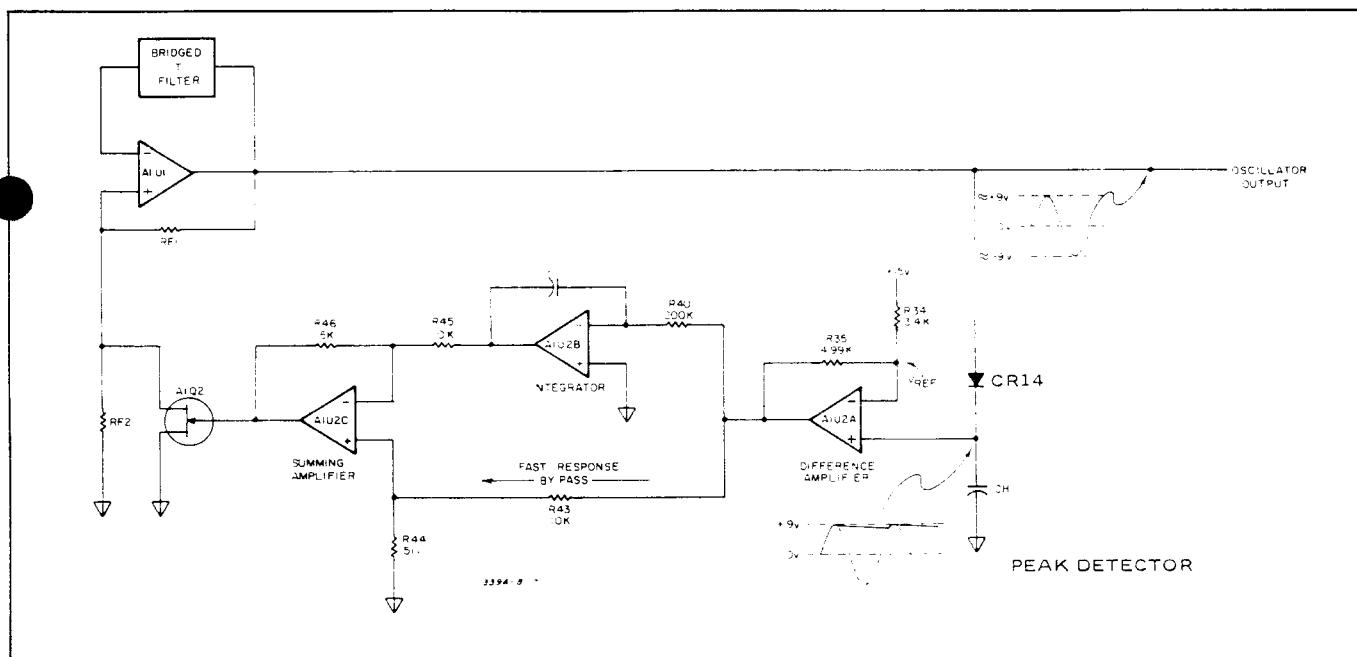


Figure 8-11. Simplified Amplitude Control Circuit.



SCHEMATIC DIAGRAM NOTES

1. Partial component reference designations are shown. For complete reference designations, prefix with assembly designation. Example: R1 mounted on circuit assembly A1 becomes A1R1.
2. Unless otherwise noted, all resistance values are in ohms, all capacitance values are in microfarads.
3.  Denotes Earth Ground
4.  Denotes Chassis Ground
5.  Denotes Circuit Ground
6.  Denotes Assembly Borderline
7.  Denotes Main Signal Path
8.  Denotes Feedback Path
9.  Denotes Mechanical Connection
10.  Denotes Screwdriver Adjustment
11. * Denotes Factory Selected Component
Average Value shown on schematic
12.  Indicates wire colors. Color code same as resistors. For example, 947 indicates white base, yellow wide stripe, and violet narrow stripe
13.  Indicates numbered Test Point

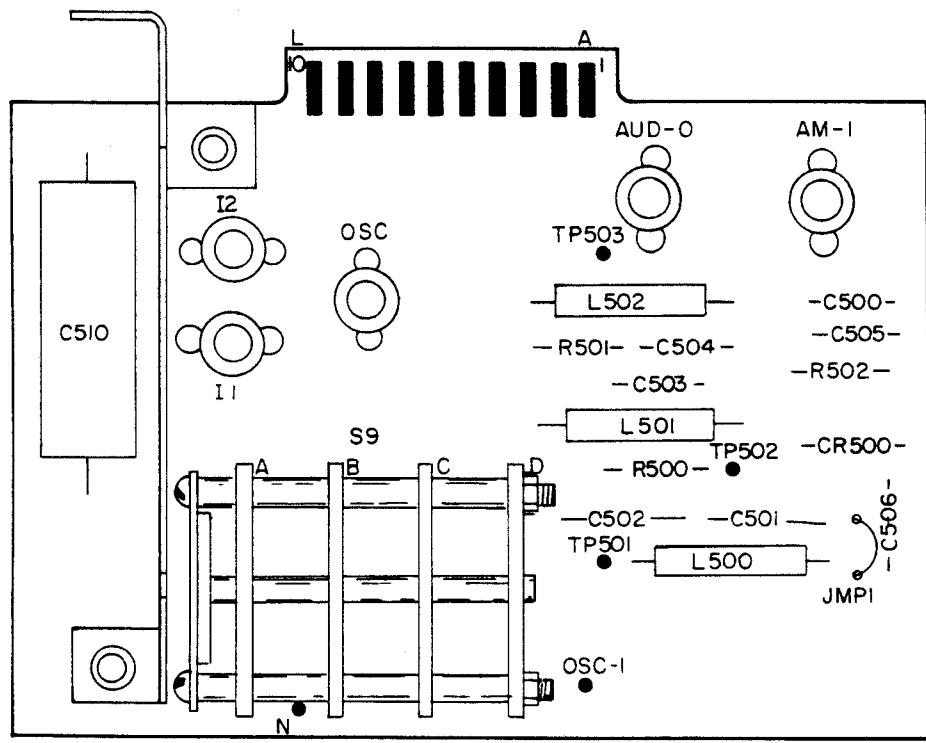

339A-8-8

A5
00339-66505
Rev. B

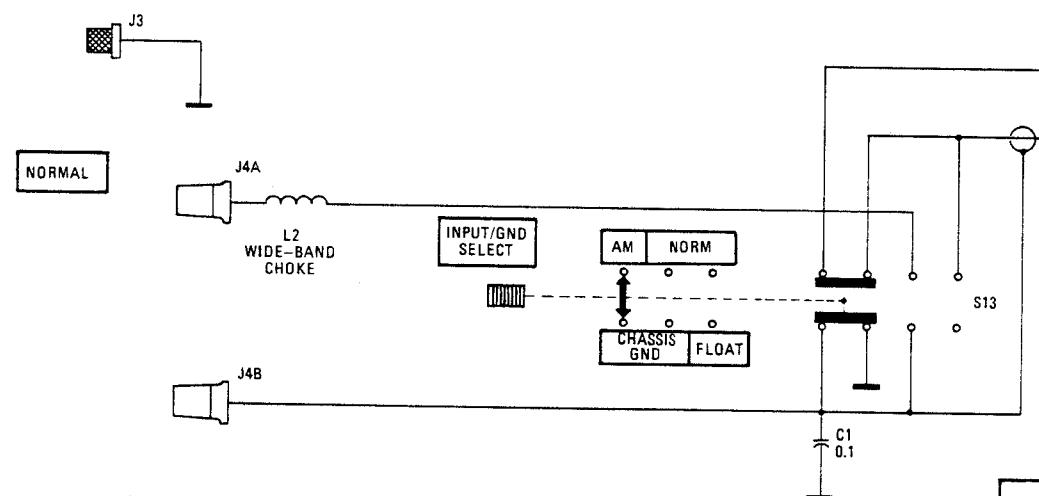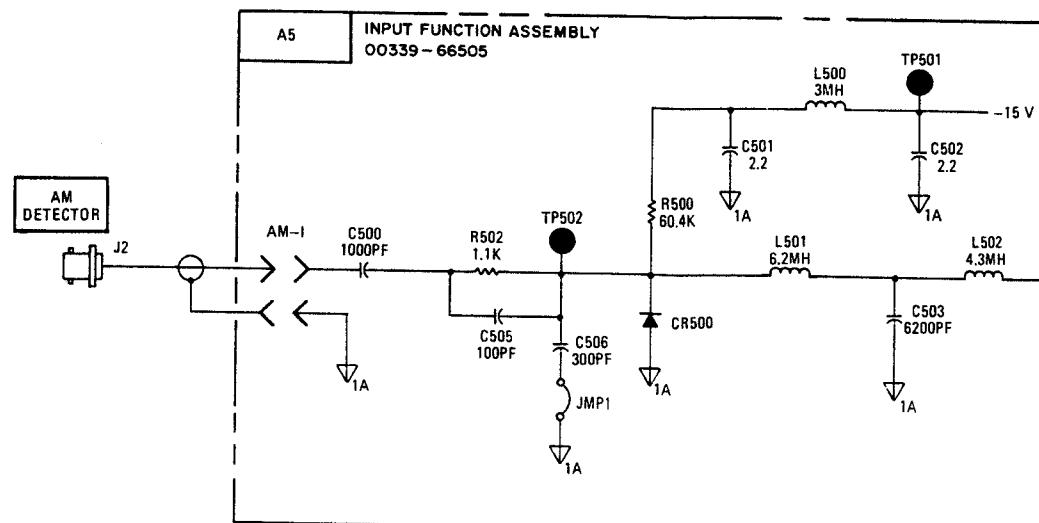


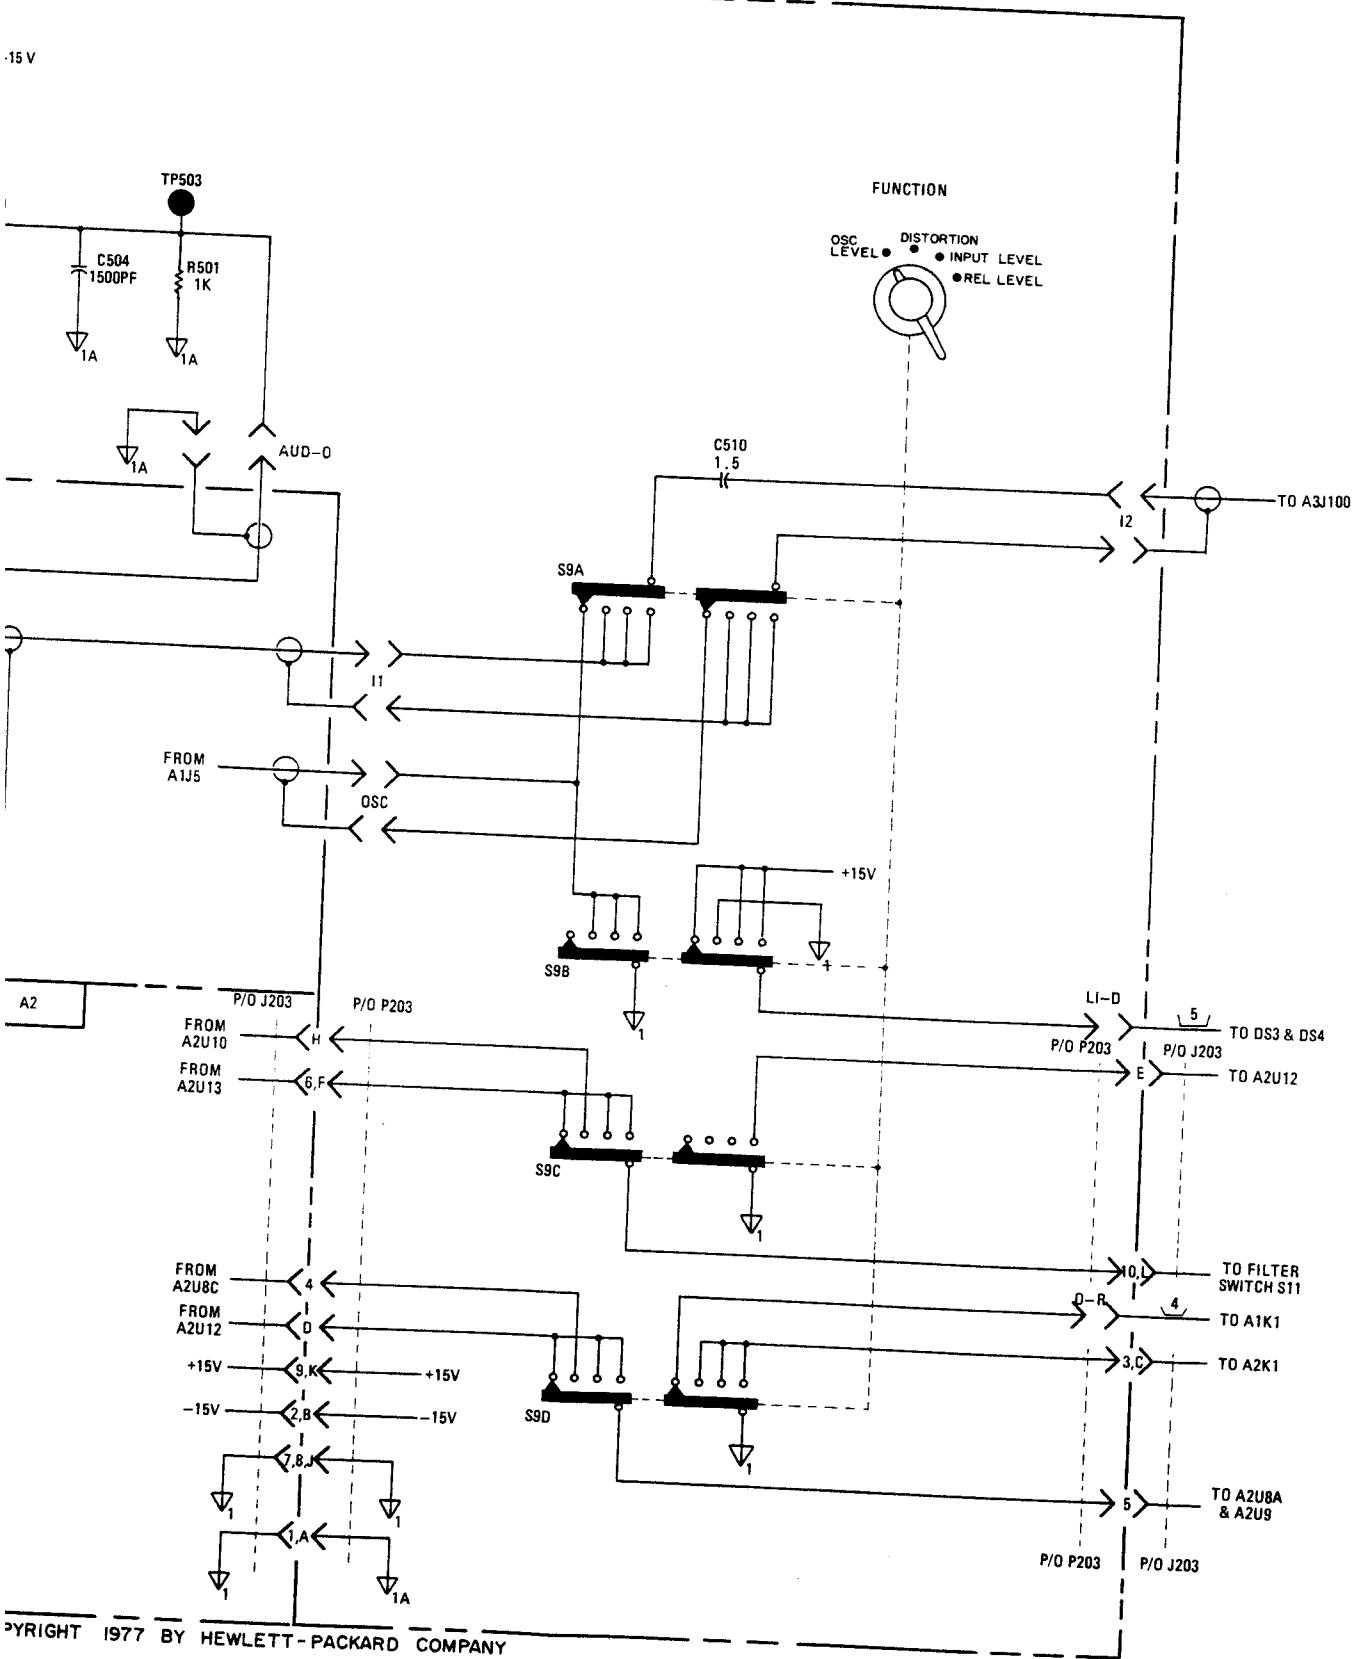



Figure 8-12. AM Detector and Input Switching.
8-11/8-12

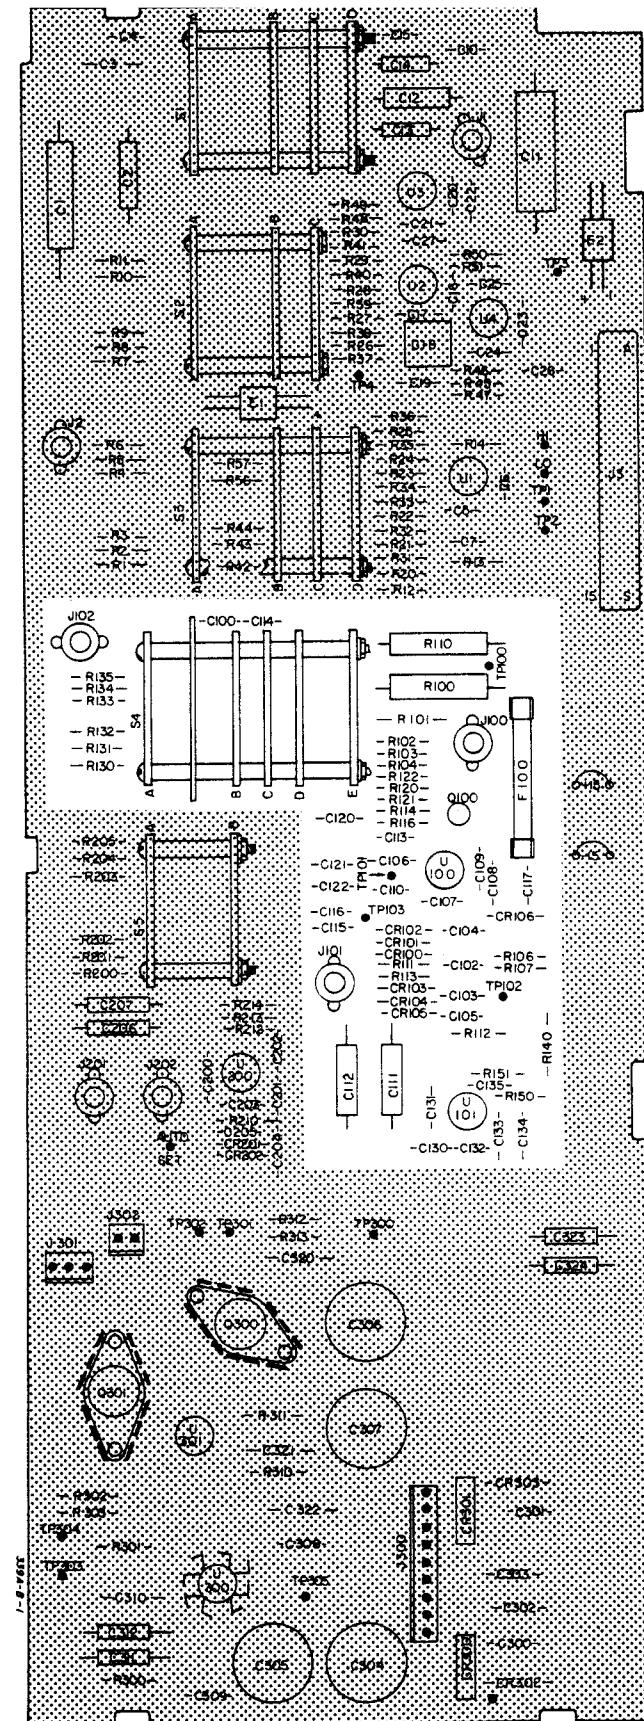


P/O A5

INPUT FUNK
00339-66505

ΔA CAPACITOR A3C132 HAS BEEN CHANGED TO A SELECTED COMPONENT TO COMPENSATE FOR GAIN BANDWIDTH DIFFERENCES. IN AMPLIFIER A3U101 CAPACITANCE RANGE IS FROM 4.7 pF TO 15 pF.

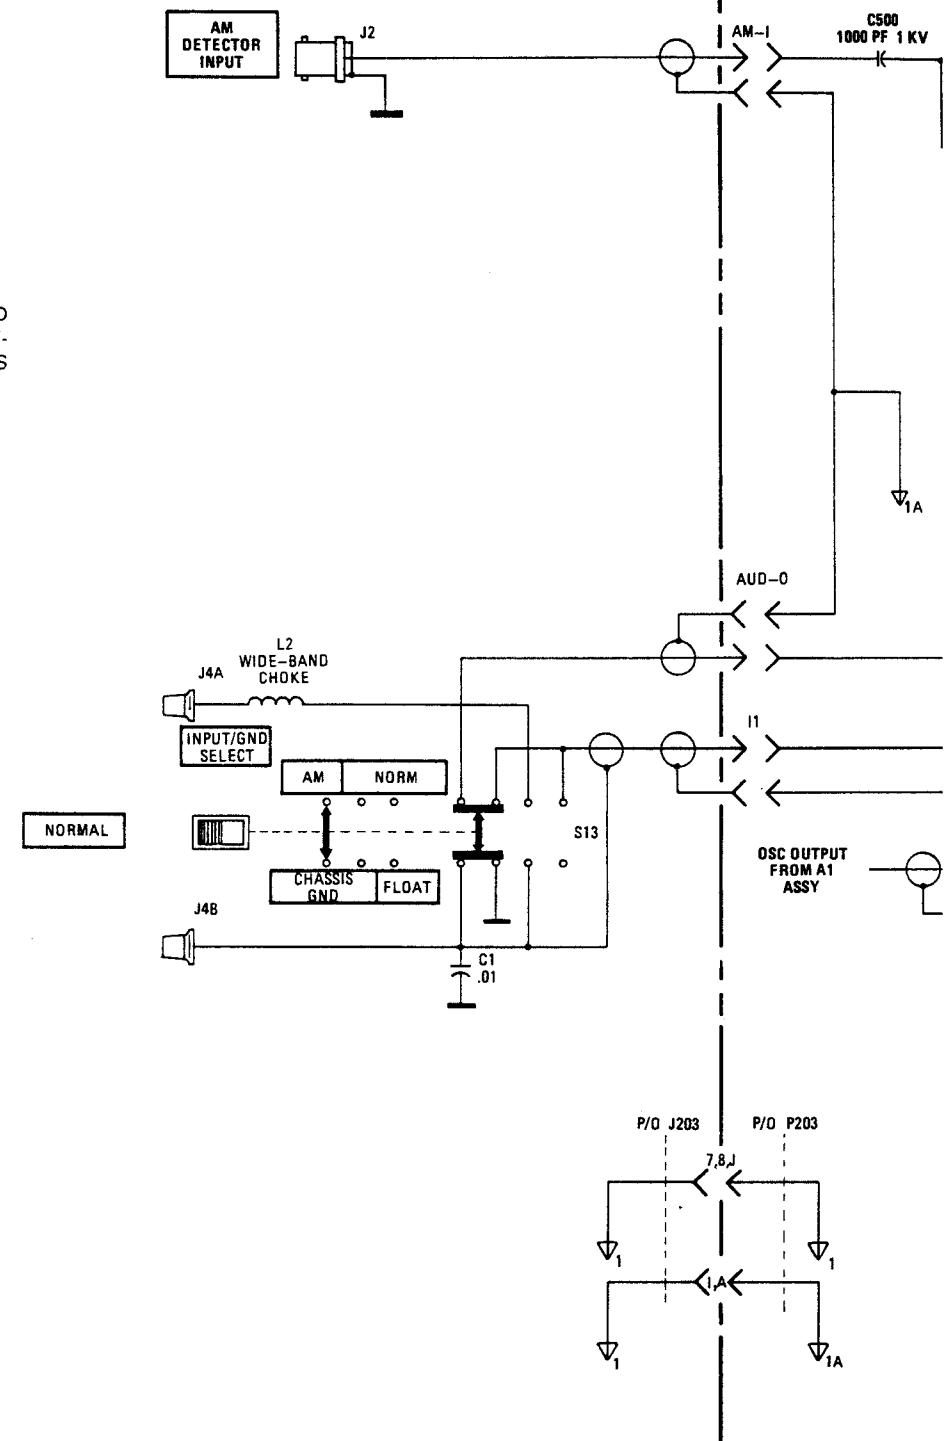


COPYRIGHT 1977 BY

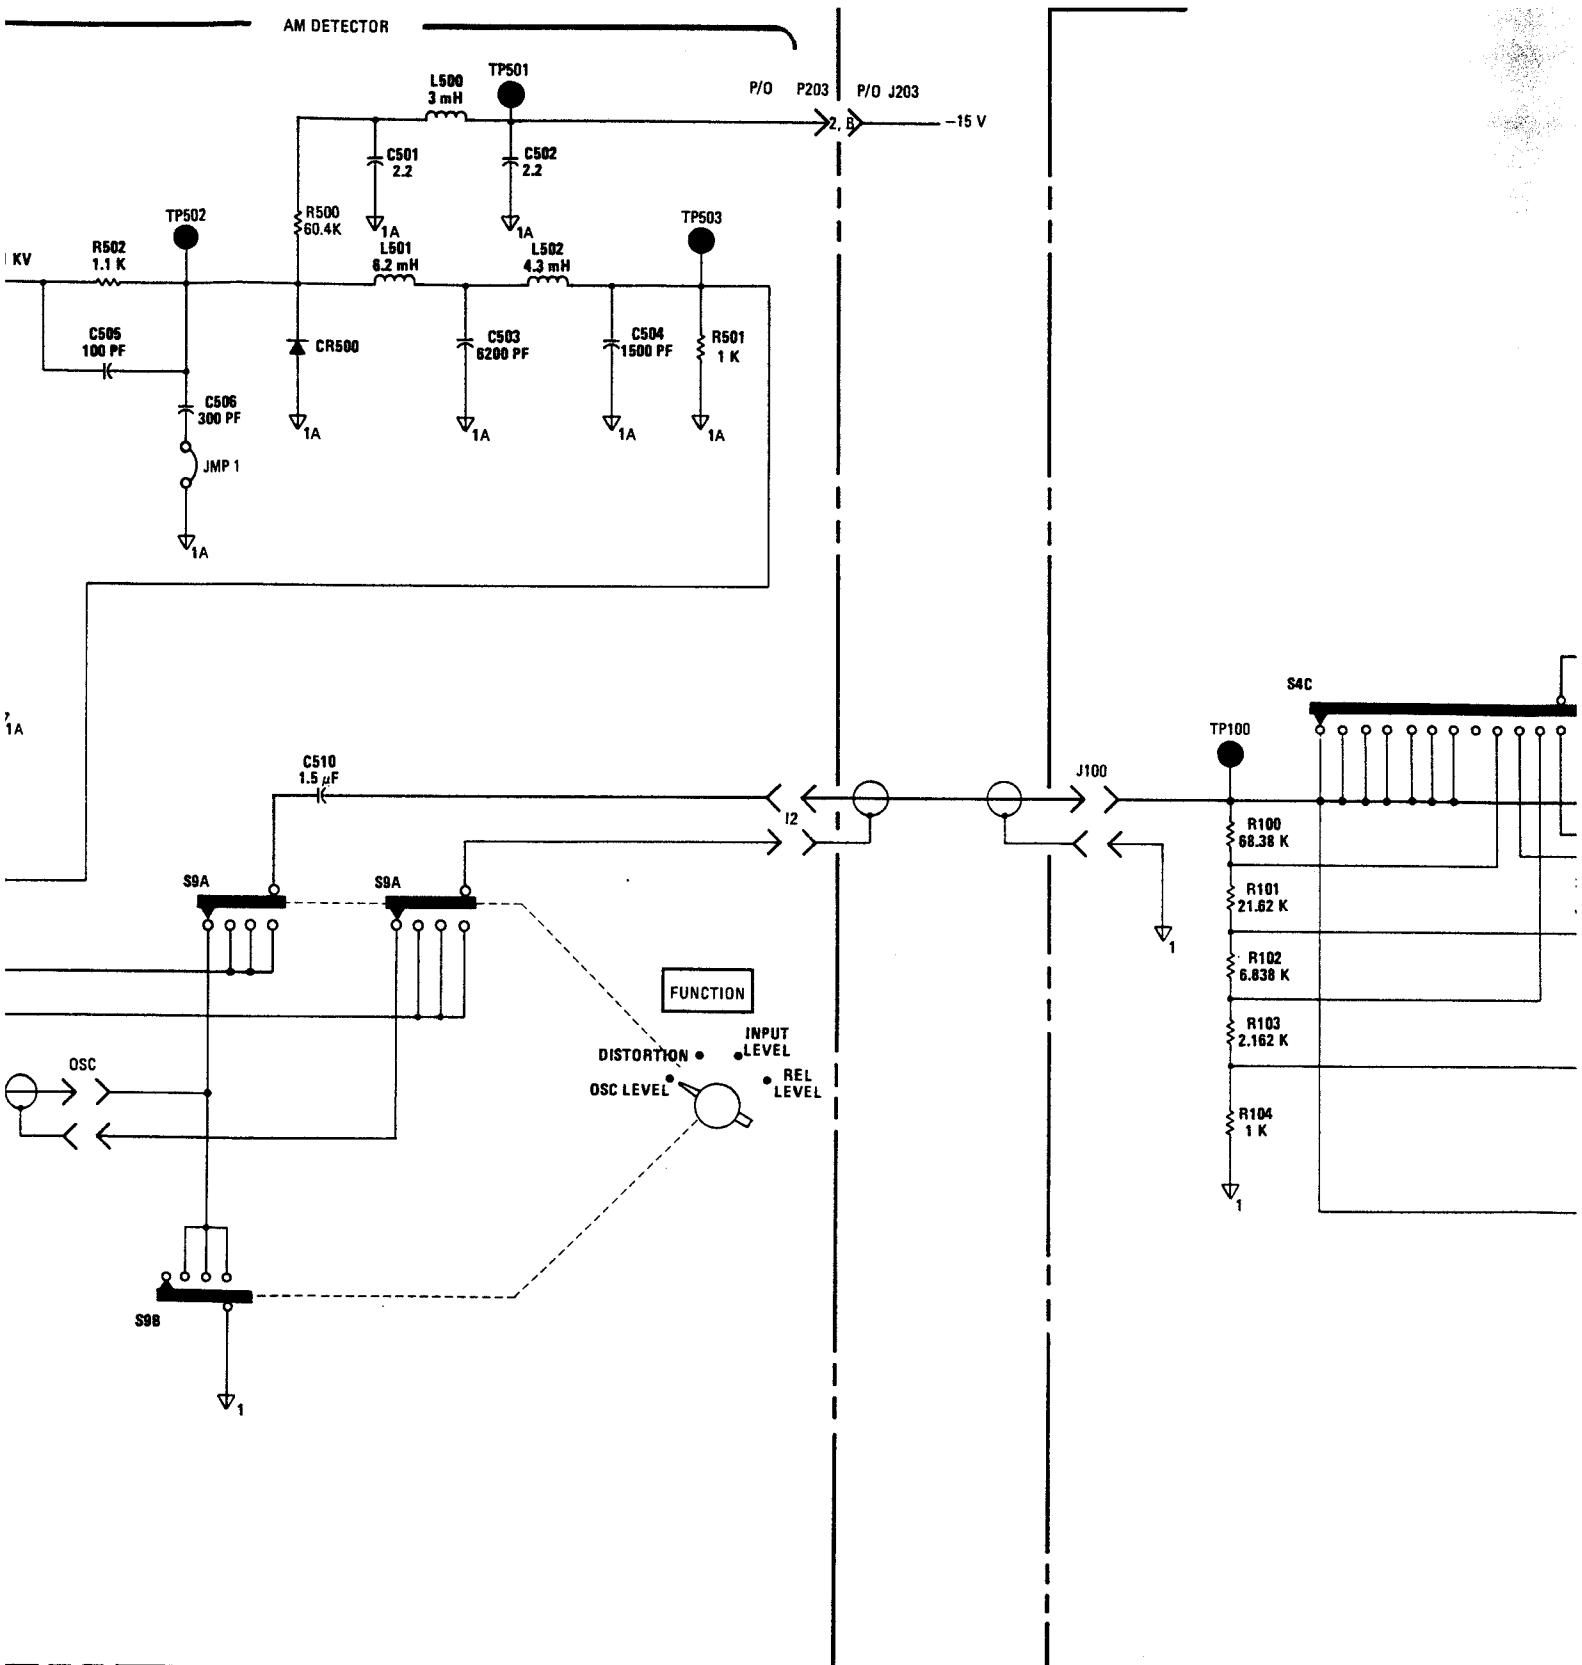

J203

-15 V

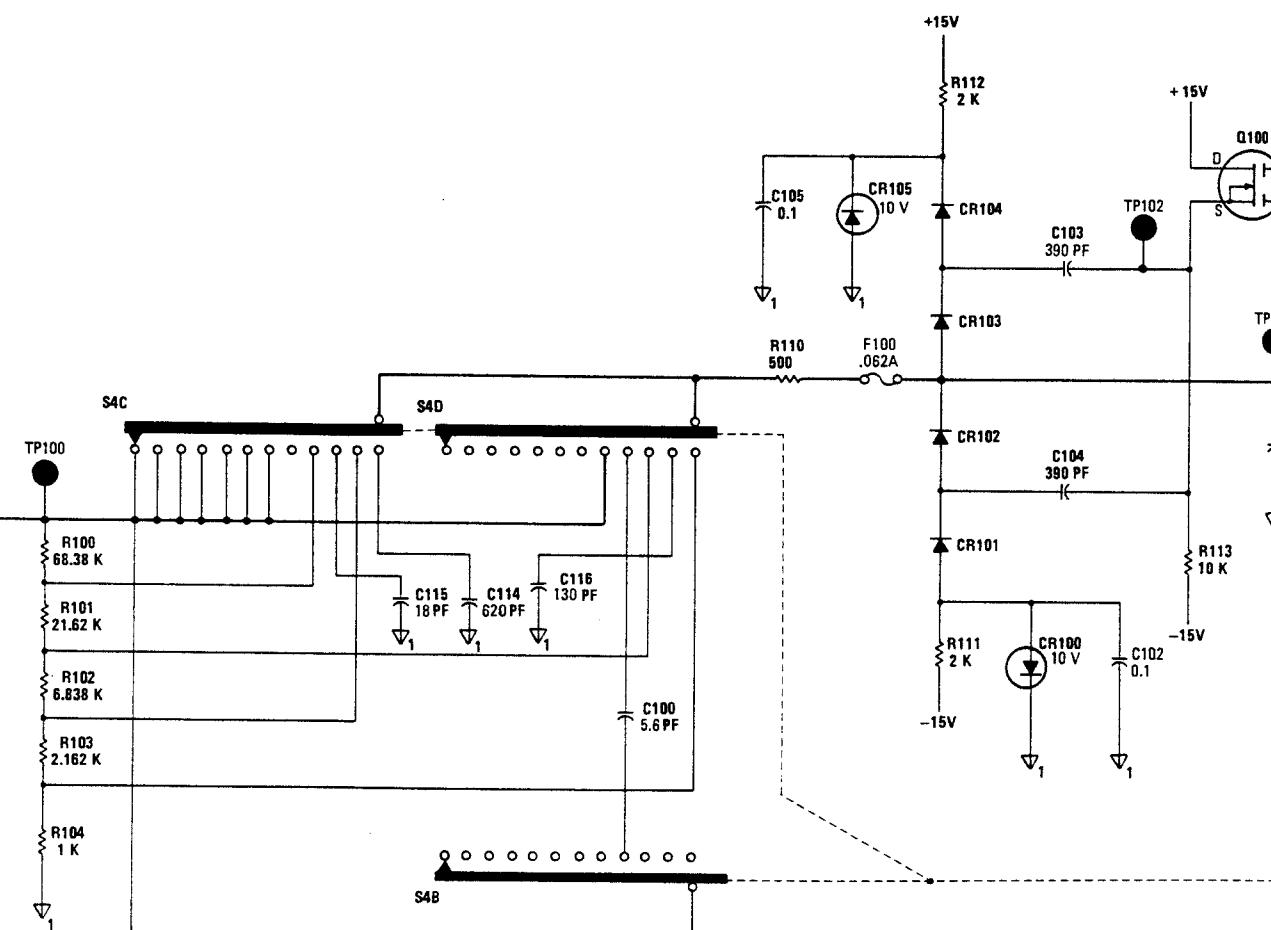

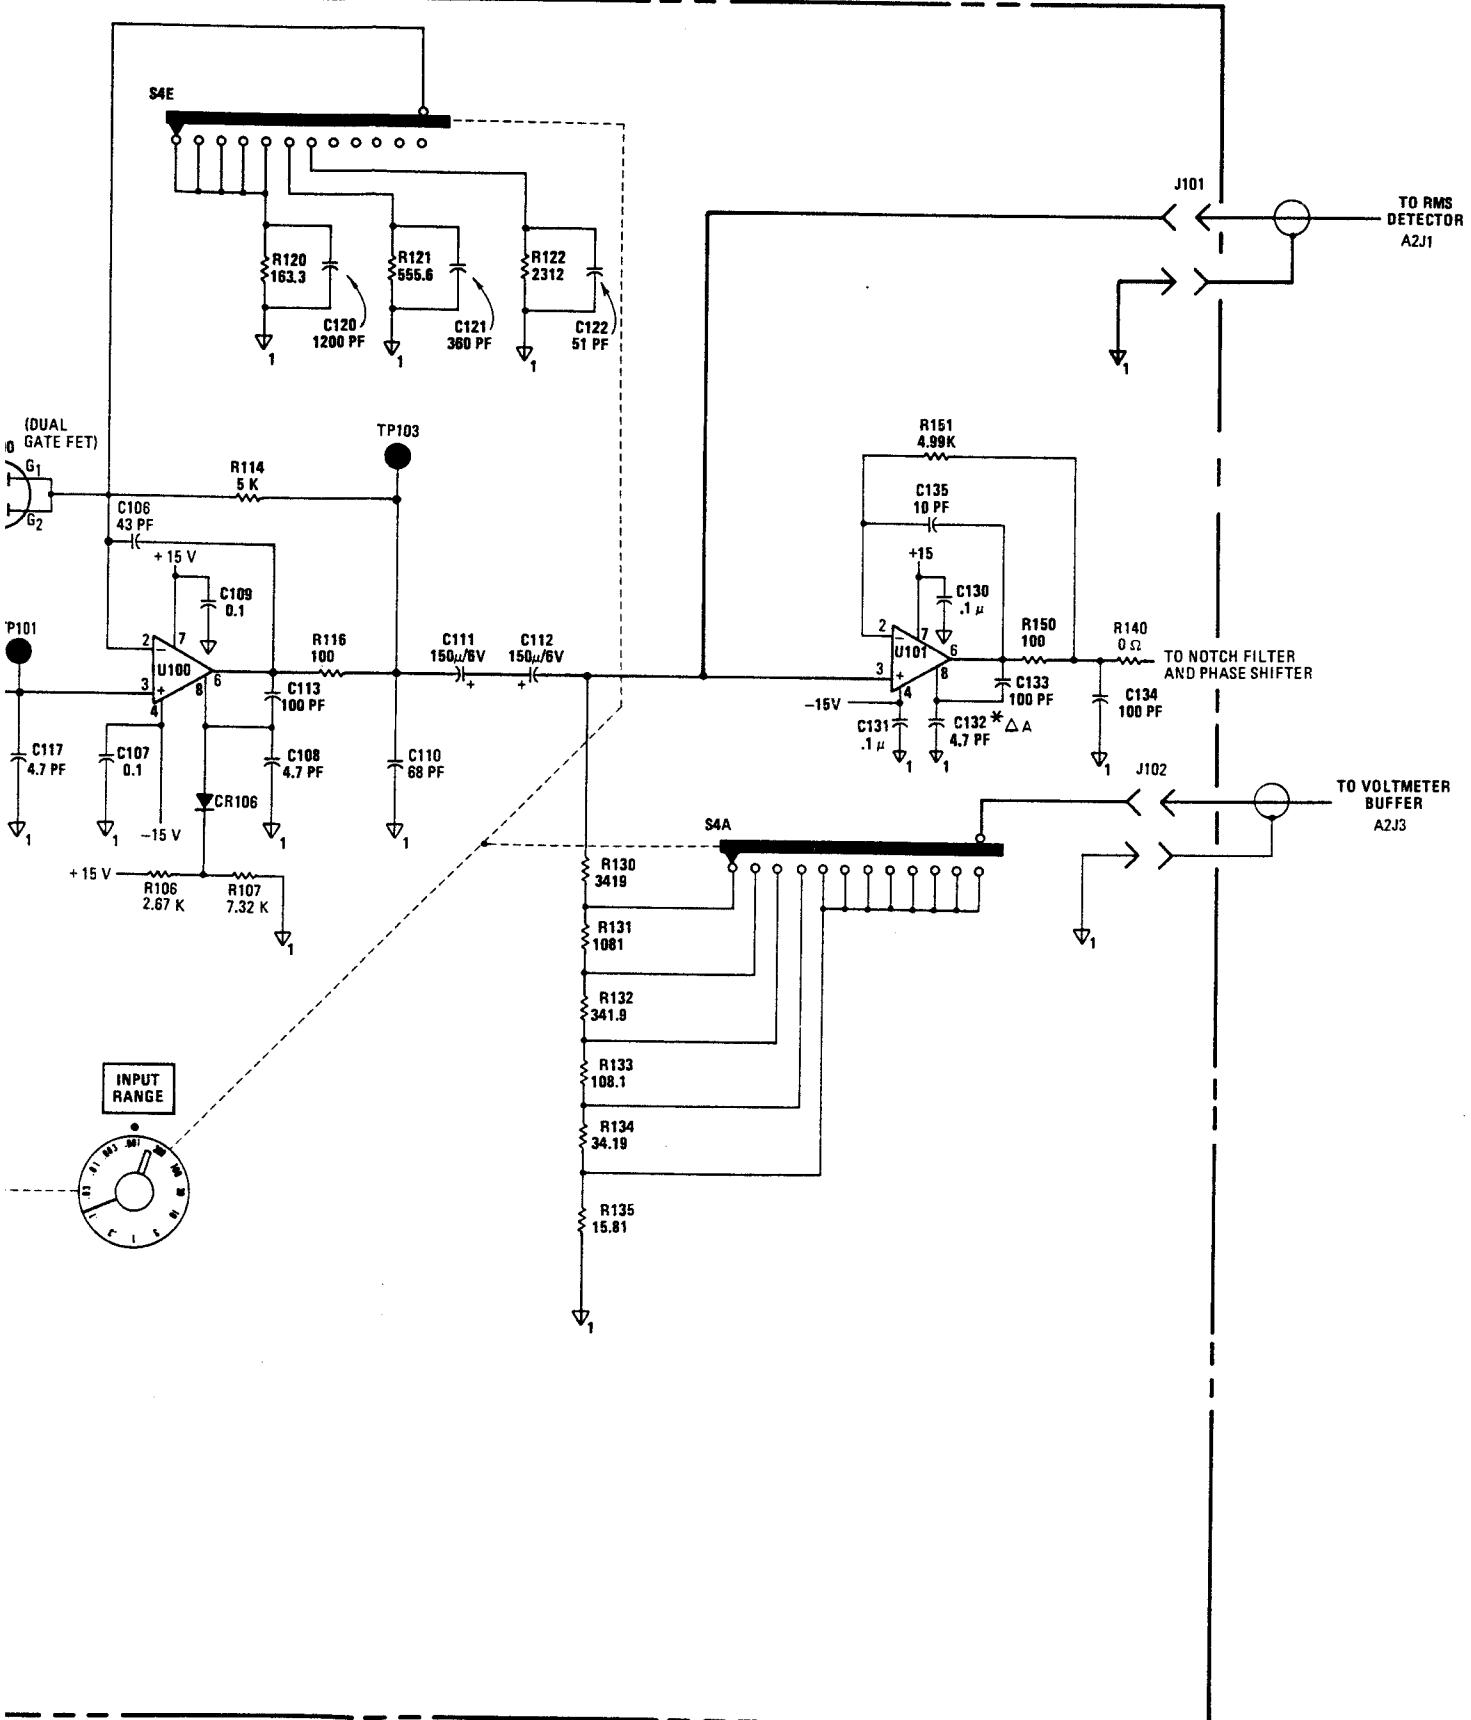


Figure 8-13. Input Attenuator and Input Amplifier.
8-13/8-14

P/O A3

ANALYZER/POWER SUPPLY ASSEMBLY
00339-66503


NOTCH FILTER

FROM
BUFFER AMPLIFIER
A3U101


UNITS

TENTH

S3D

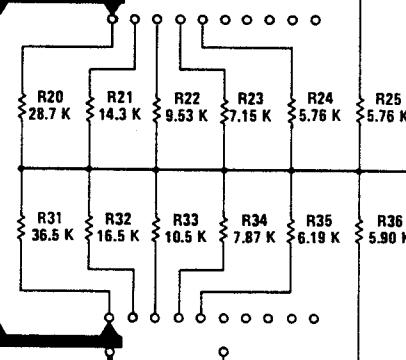


S2C

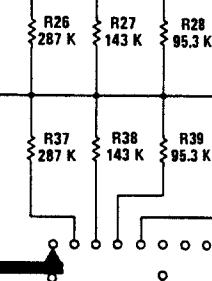



S2B

A3J2

S3A

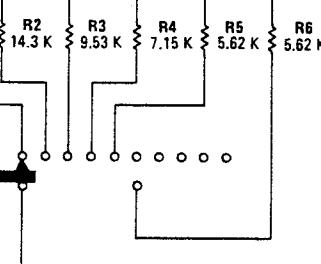



S2A

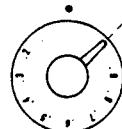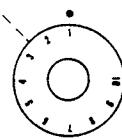

FREQUENCY

COPYRIGHT 1977 BY HEWLETT - PACKARD COMPANY

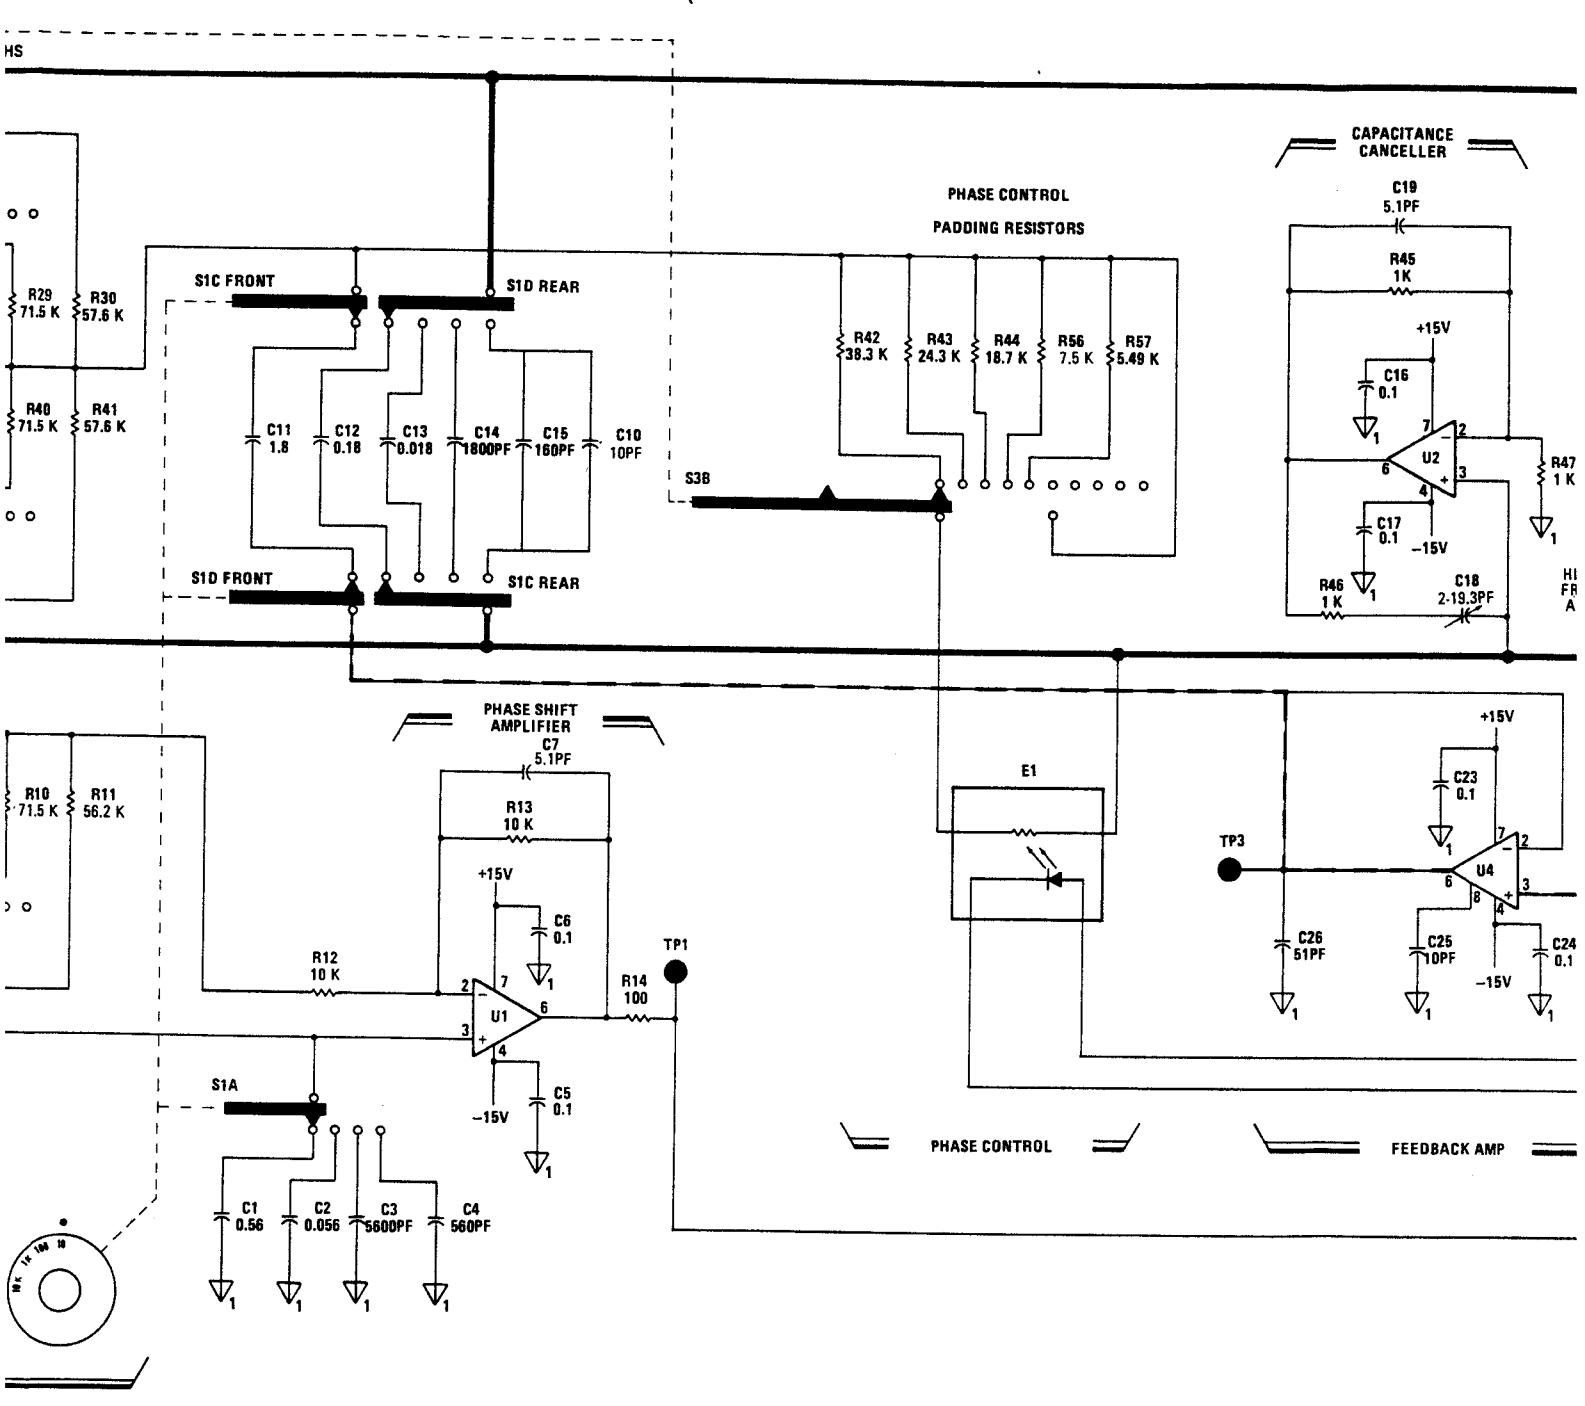

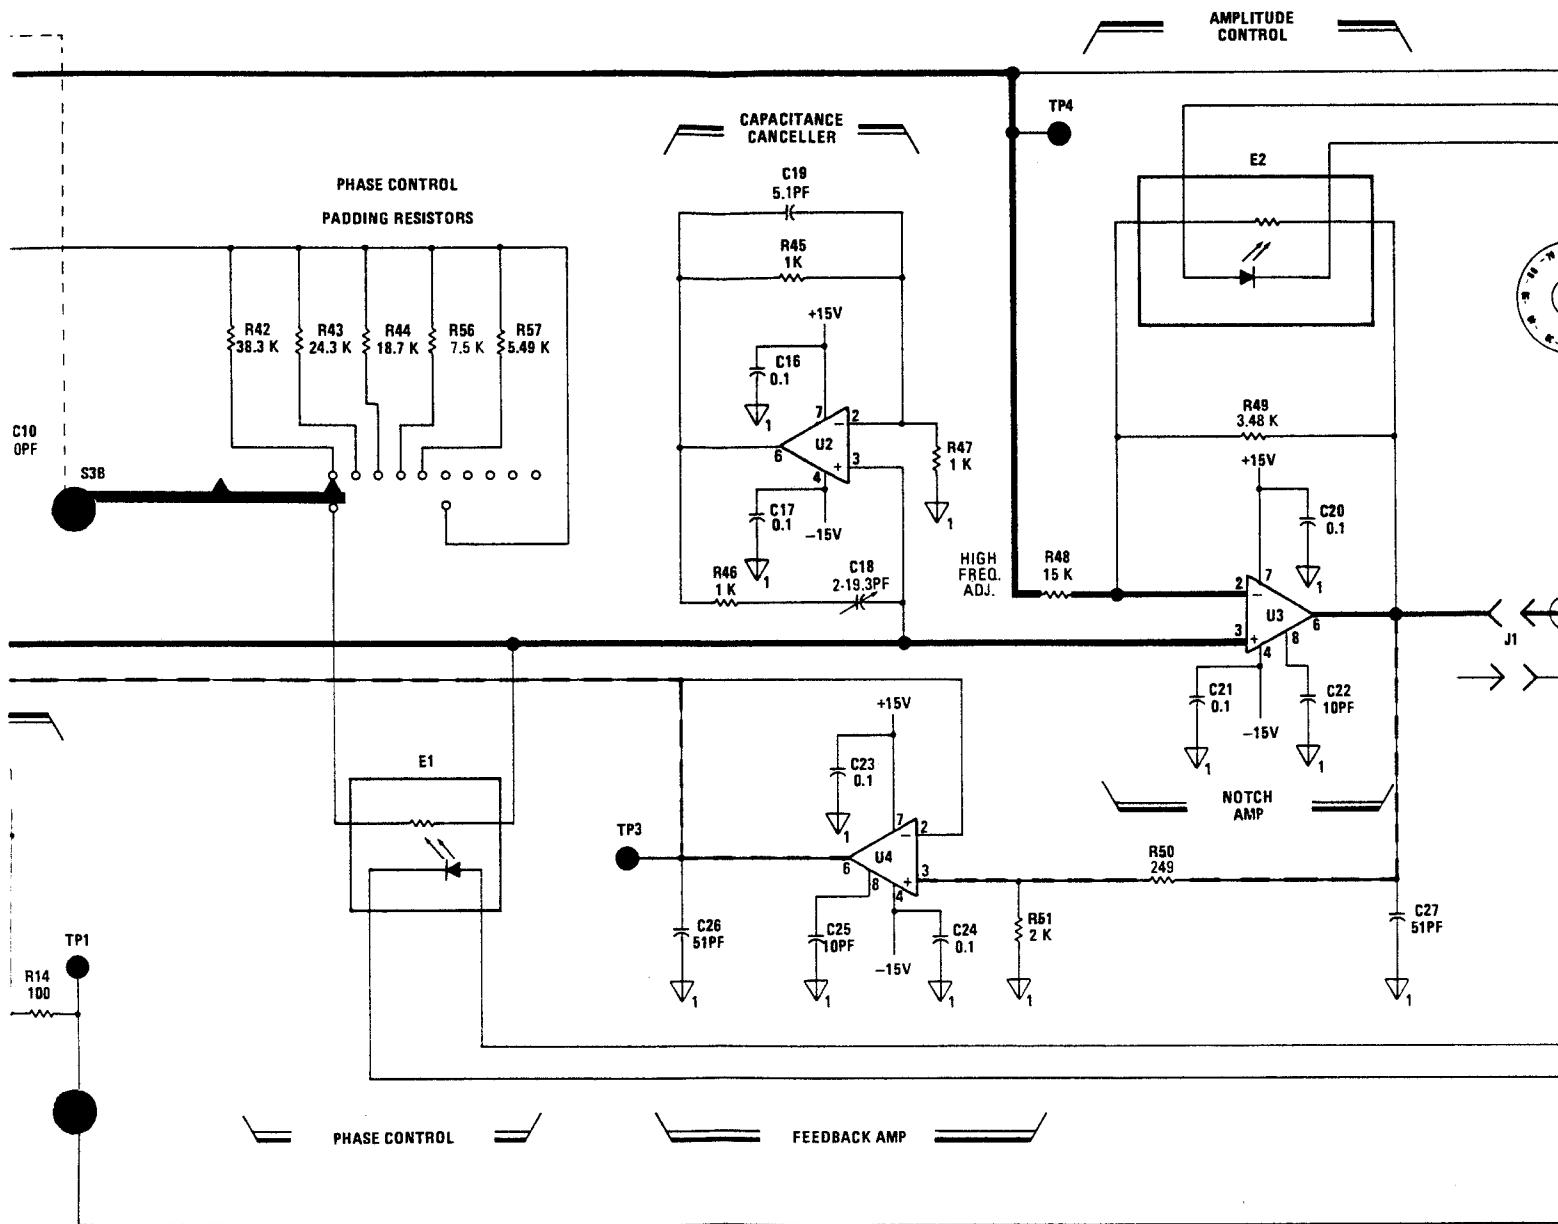



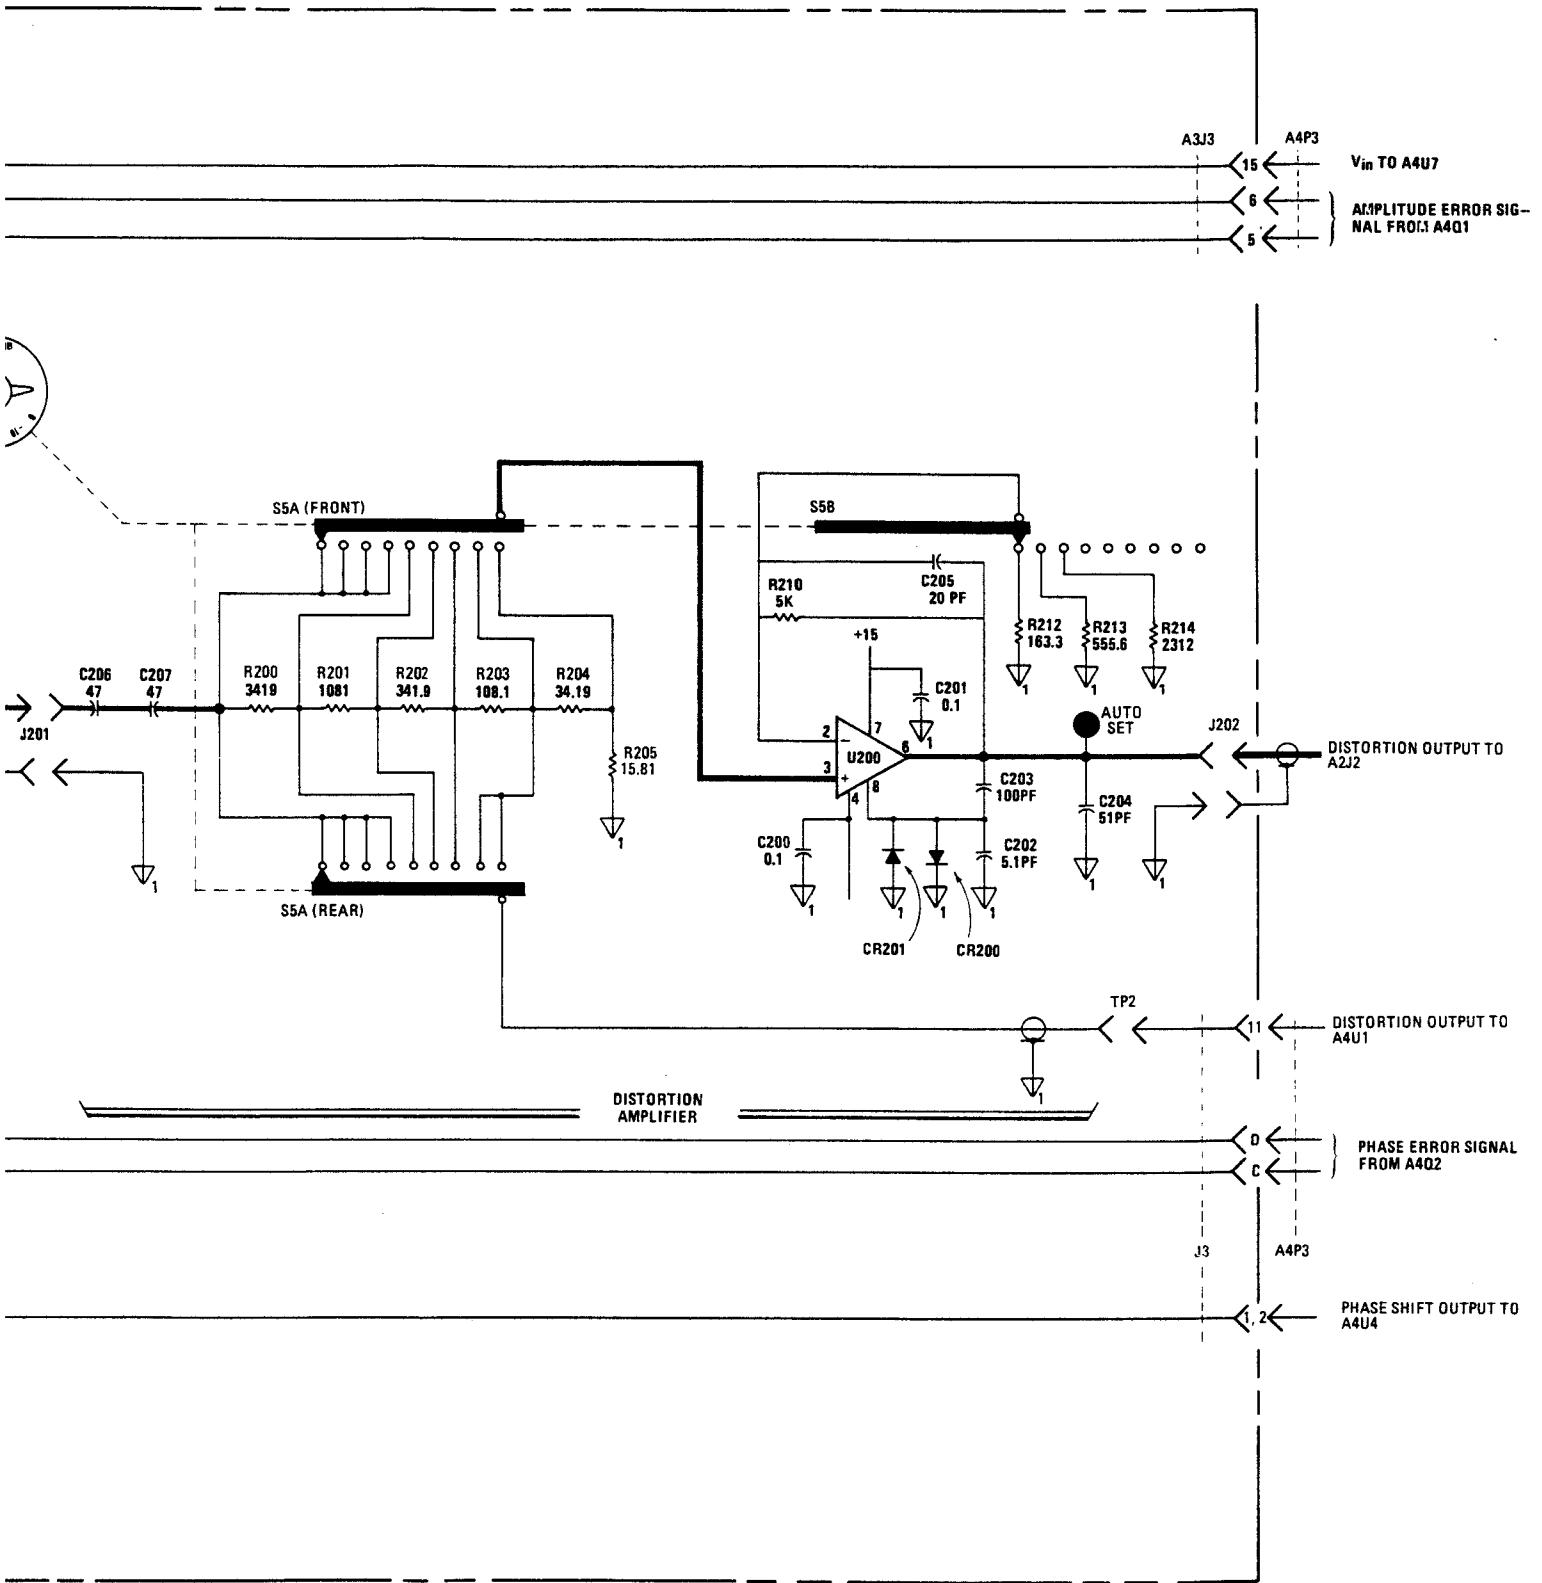



Figure 8-14. Fundamental Rejection Circuit.
8-15/8-16

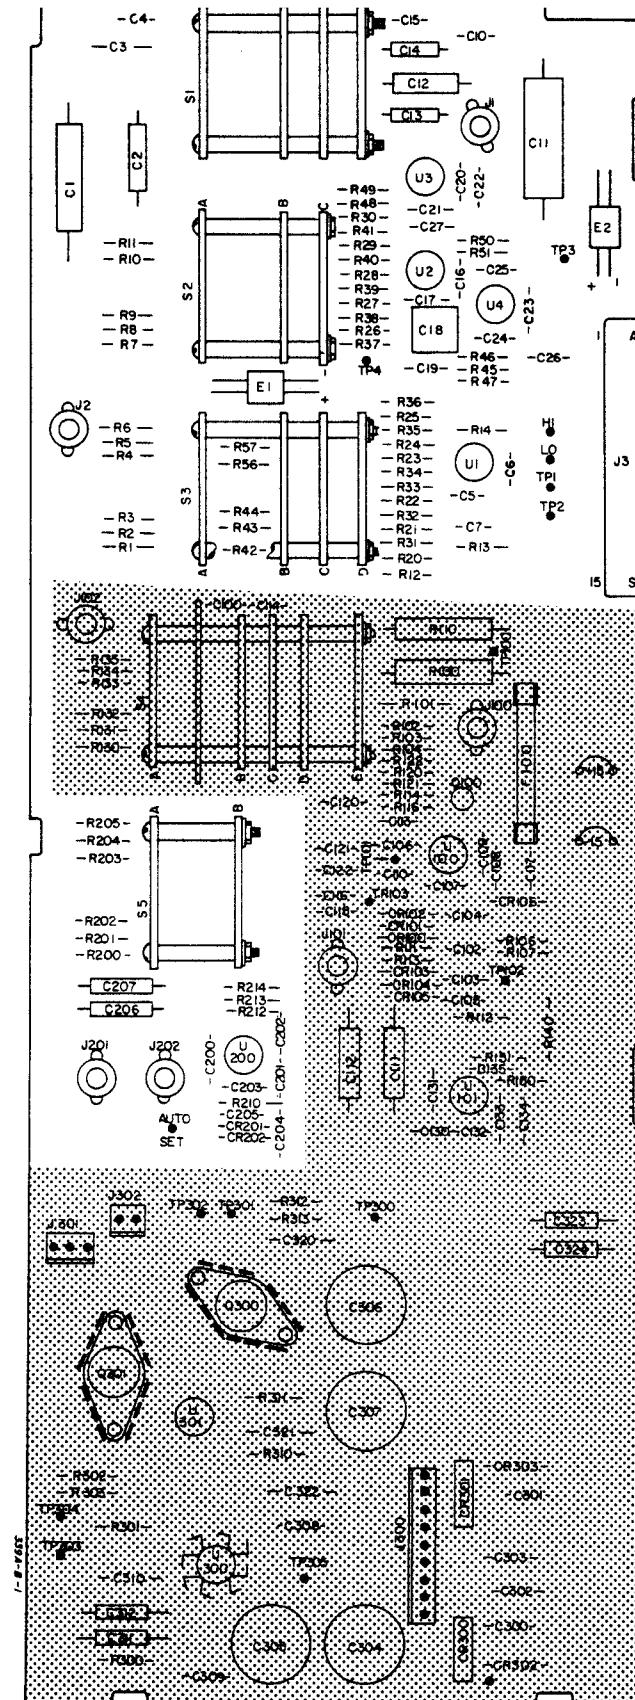


A3
00339-6650
Rev. B

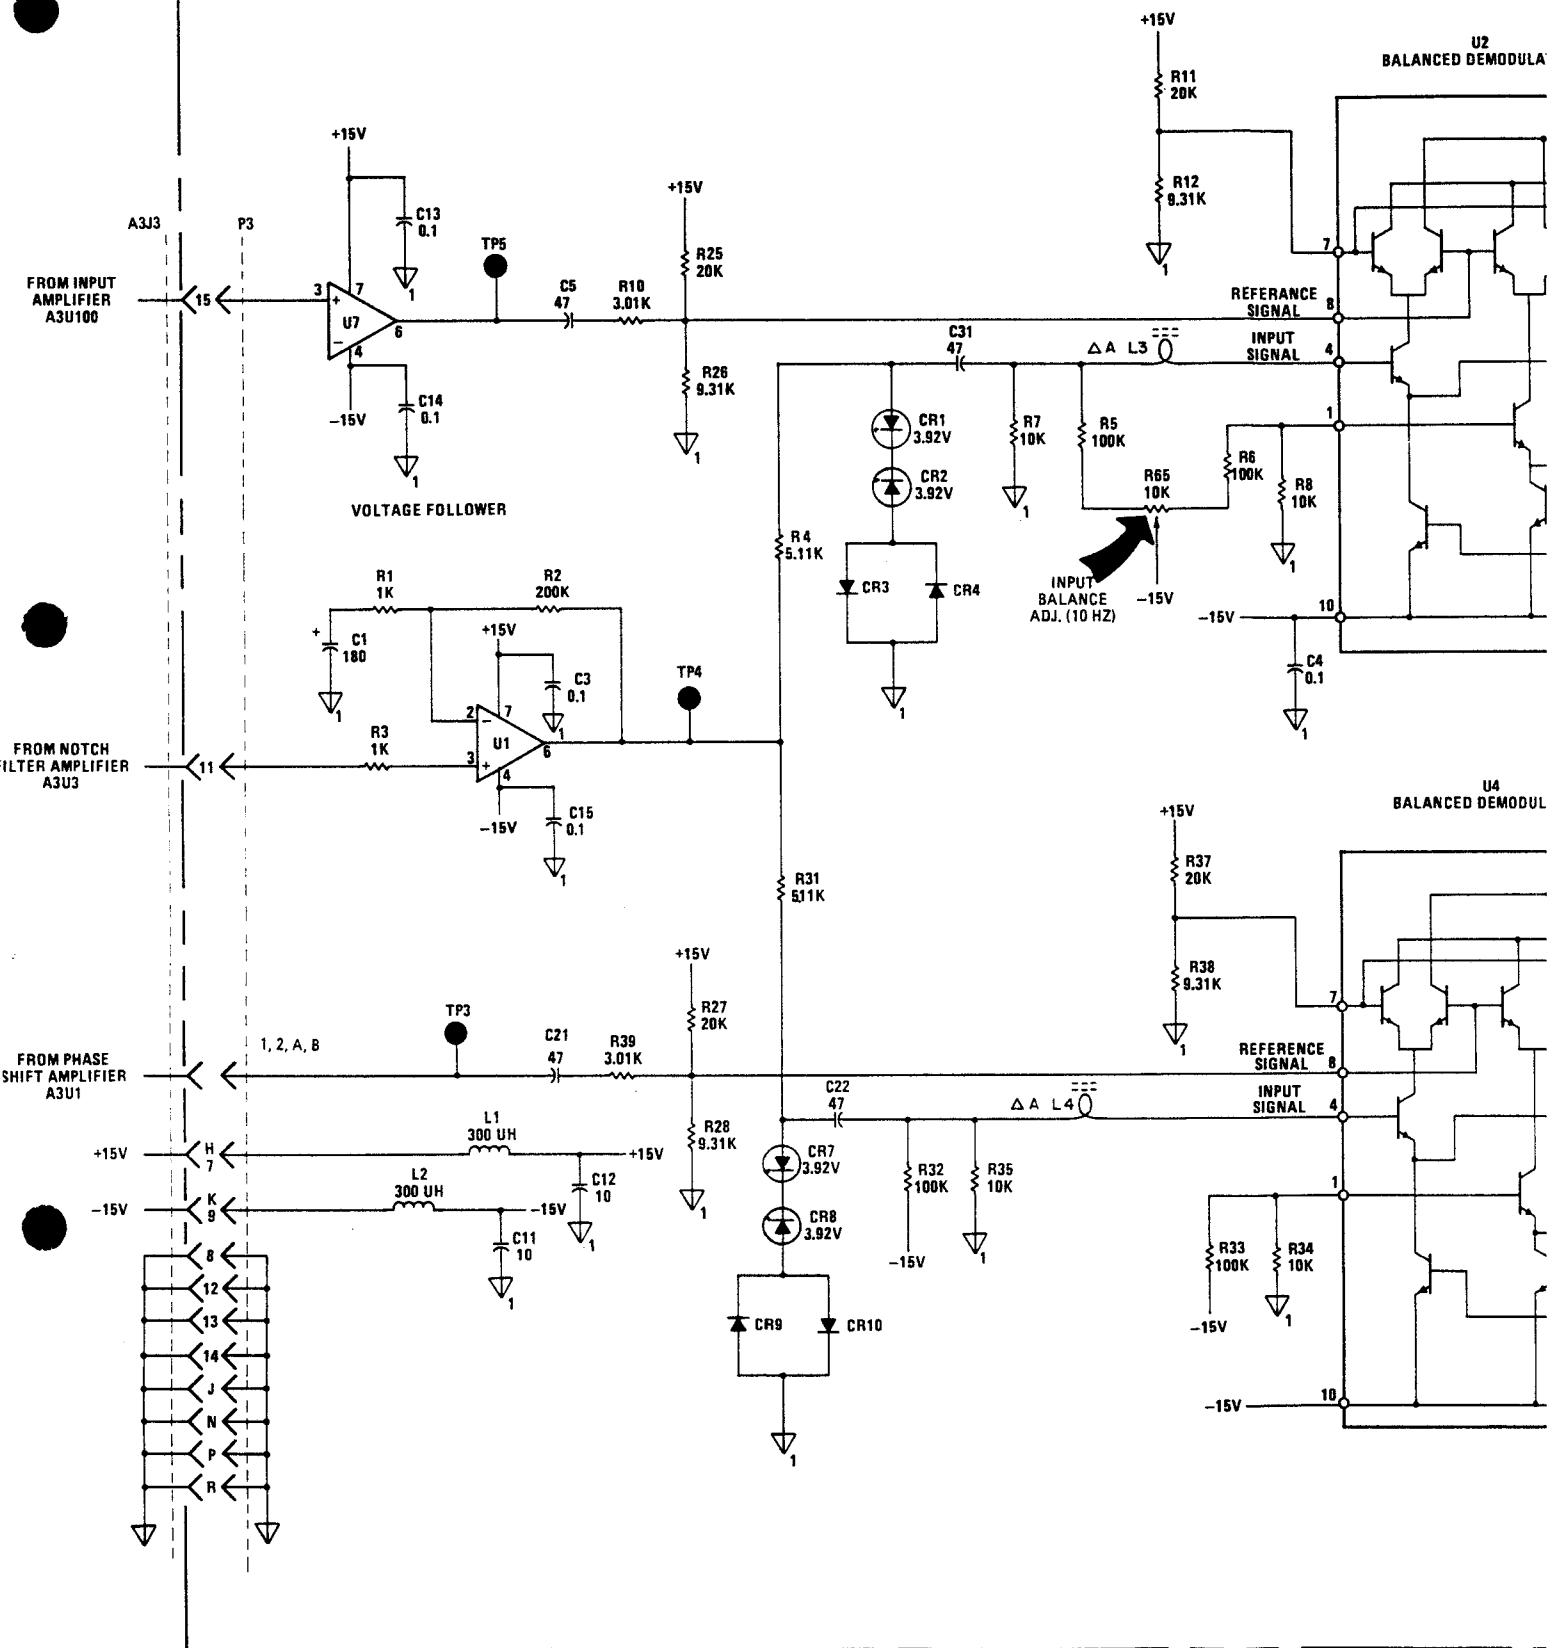


ULATOR

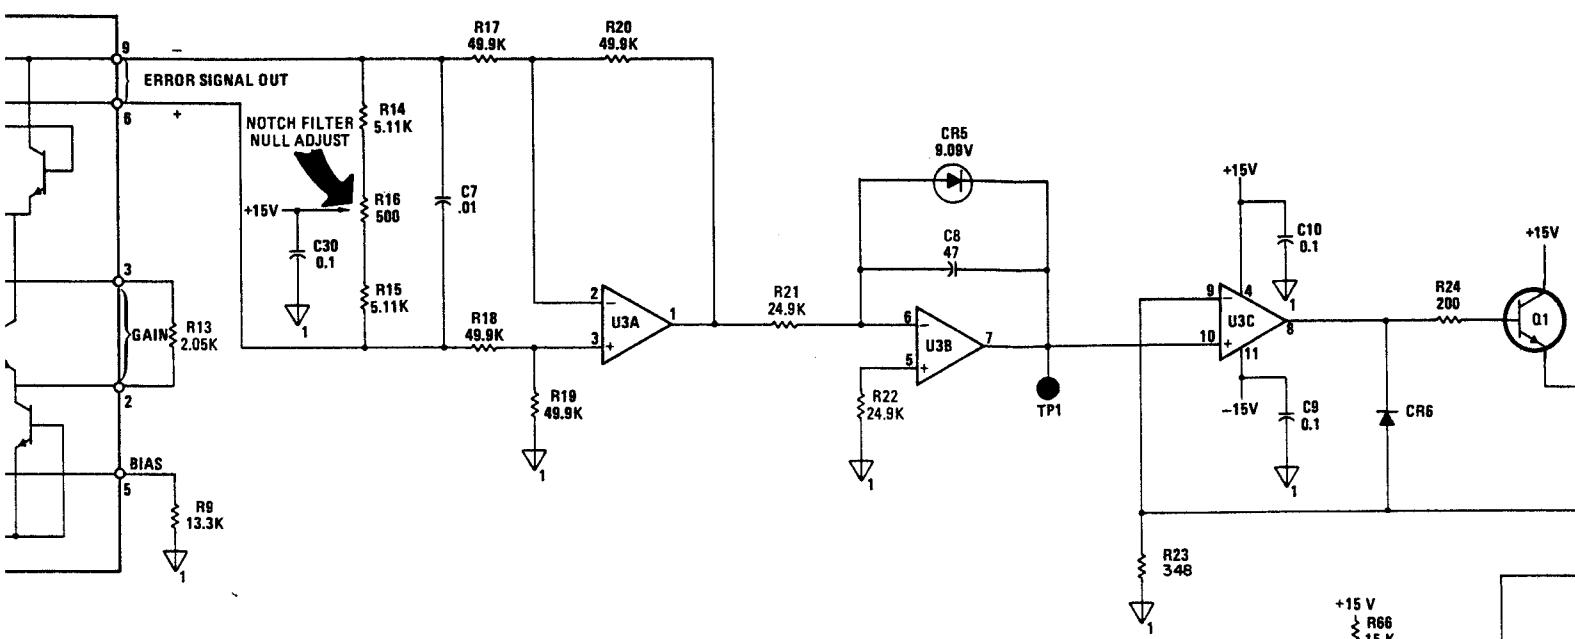

ULATOR

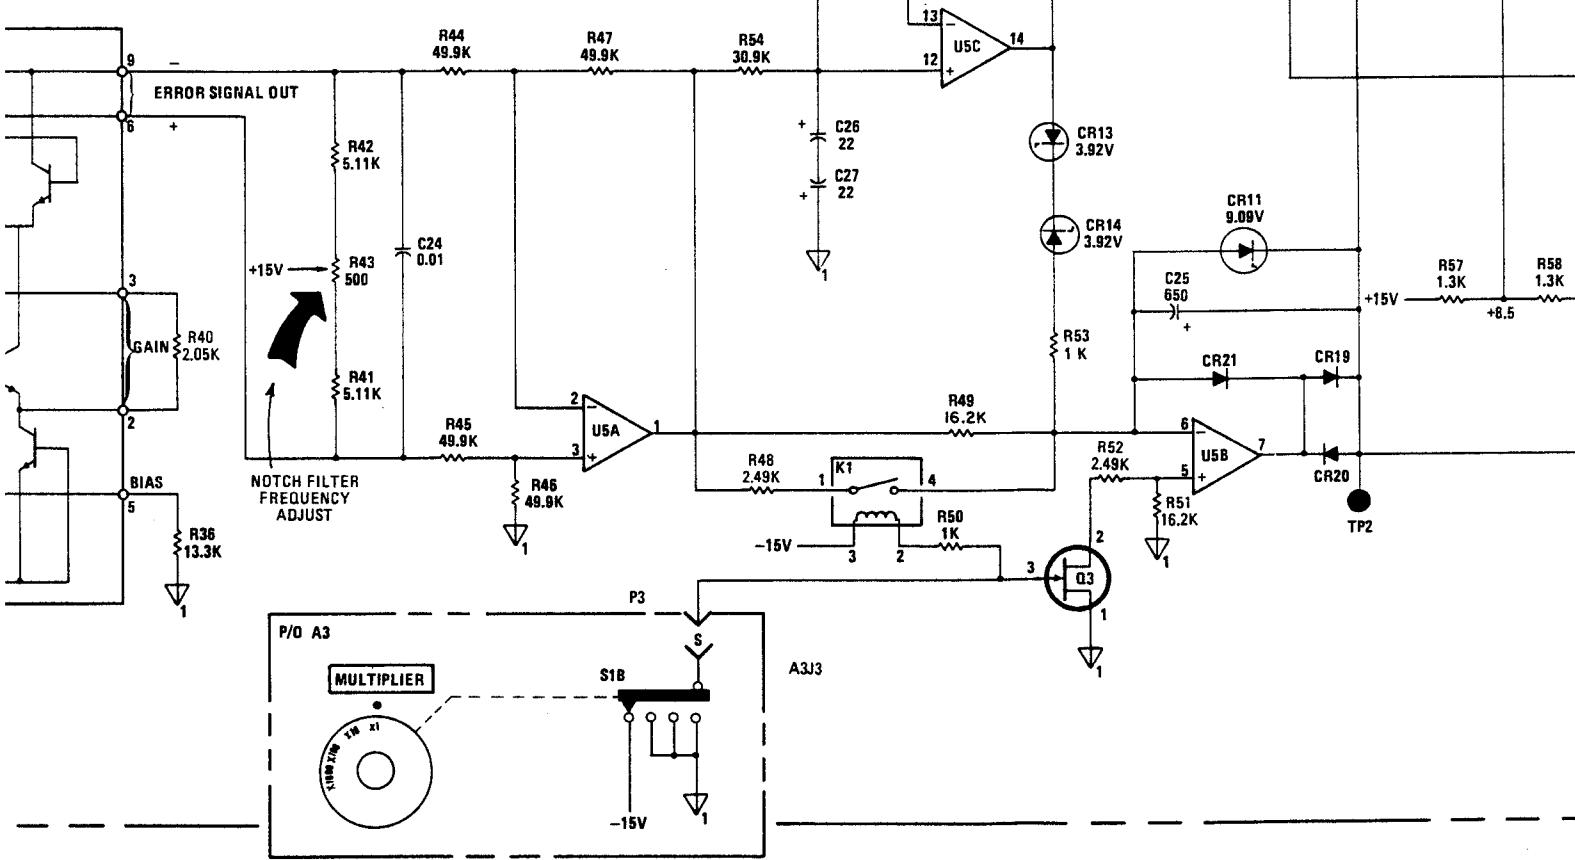

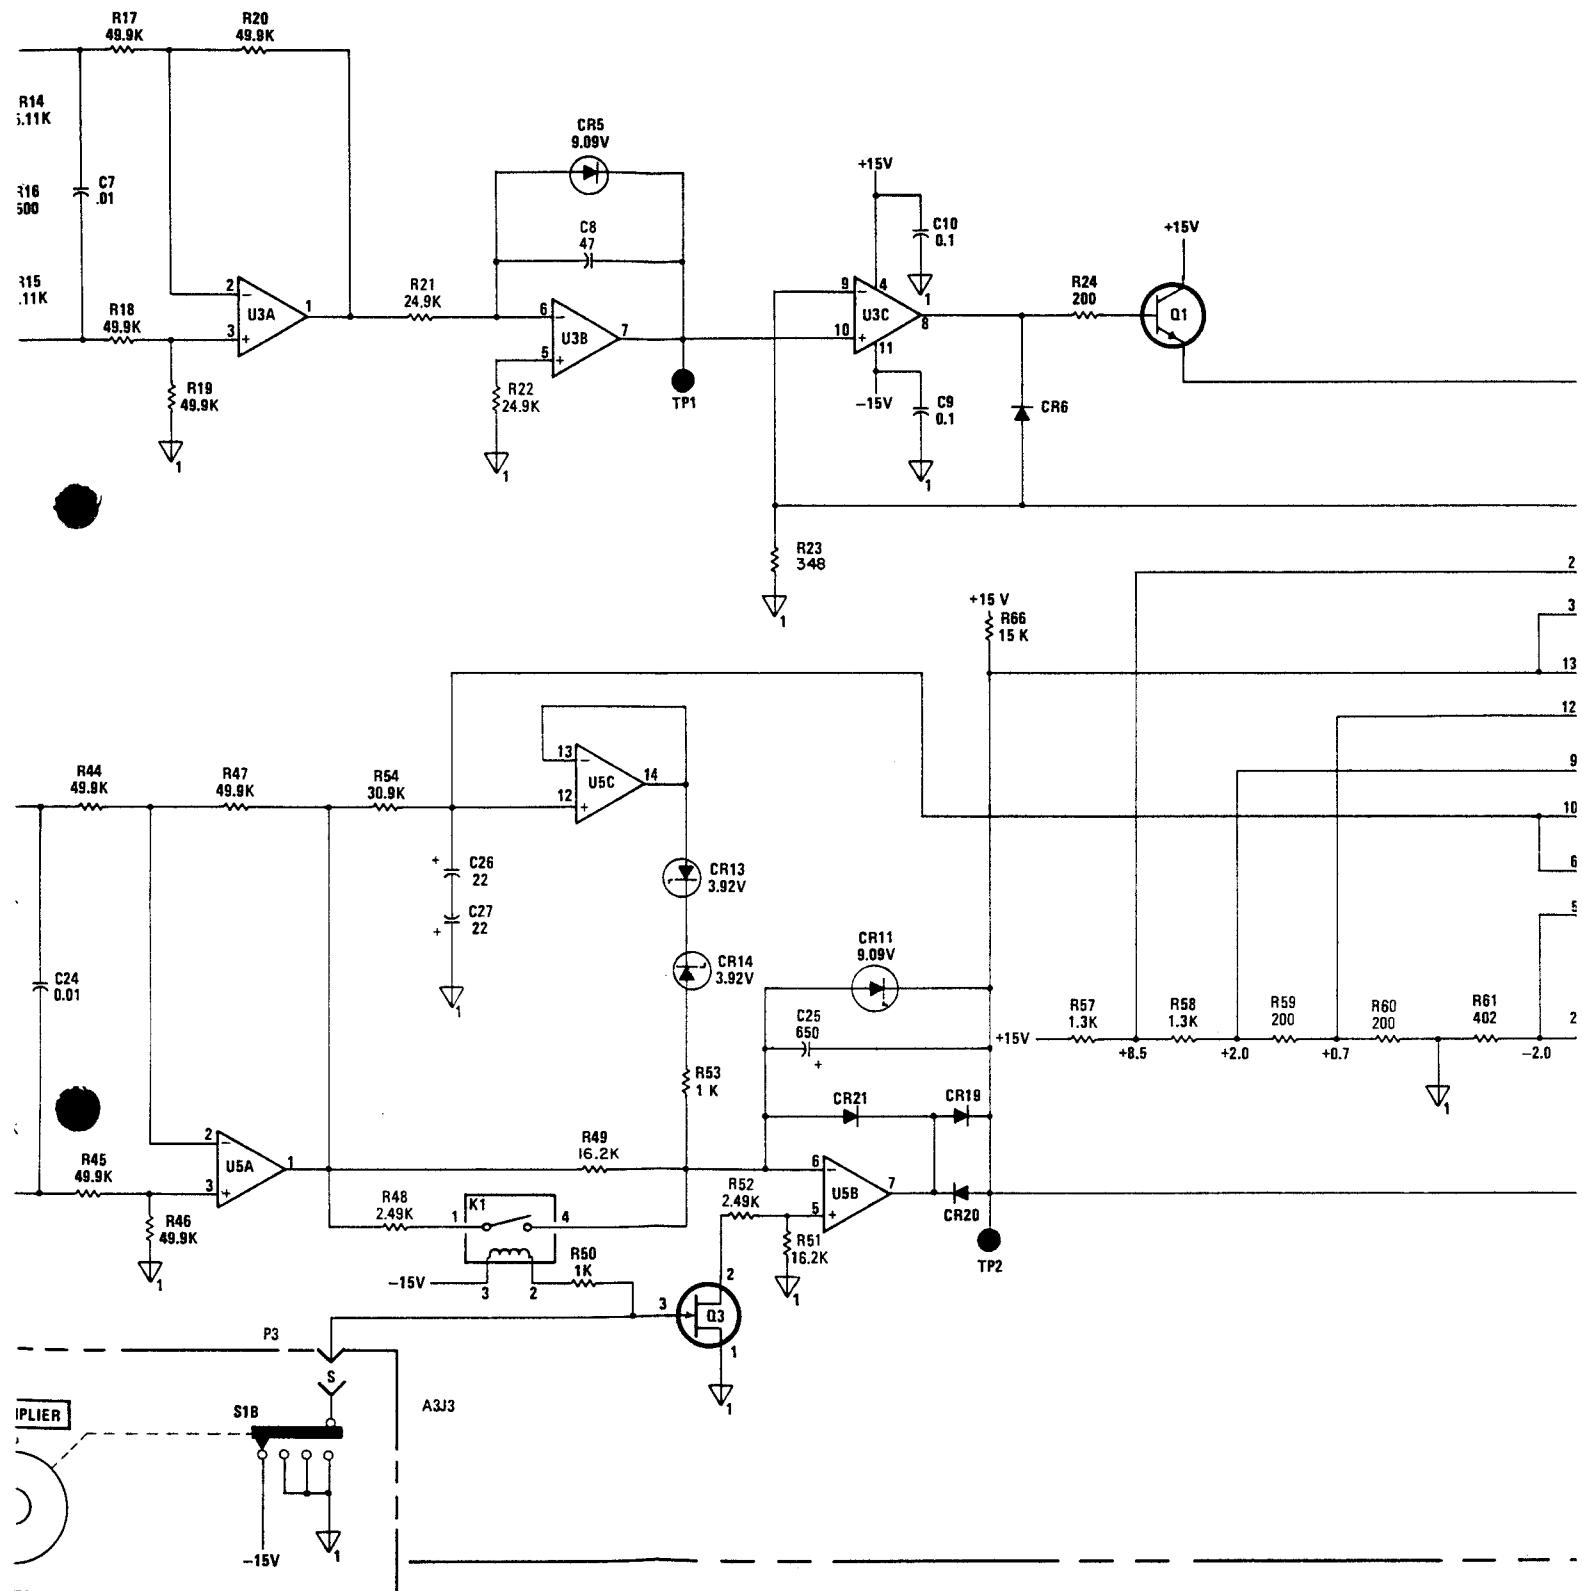



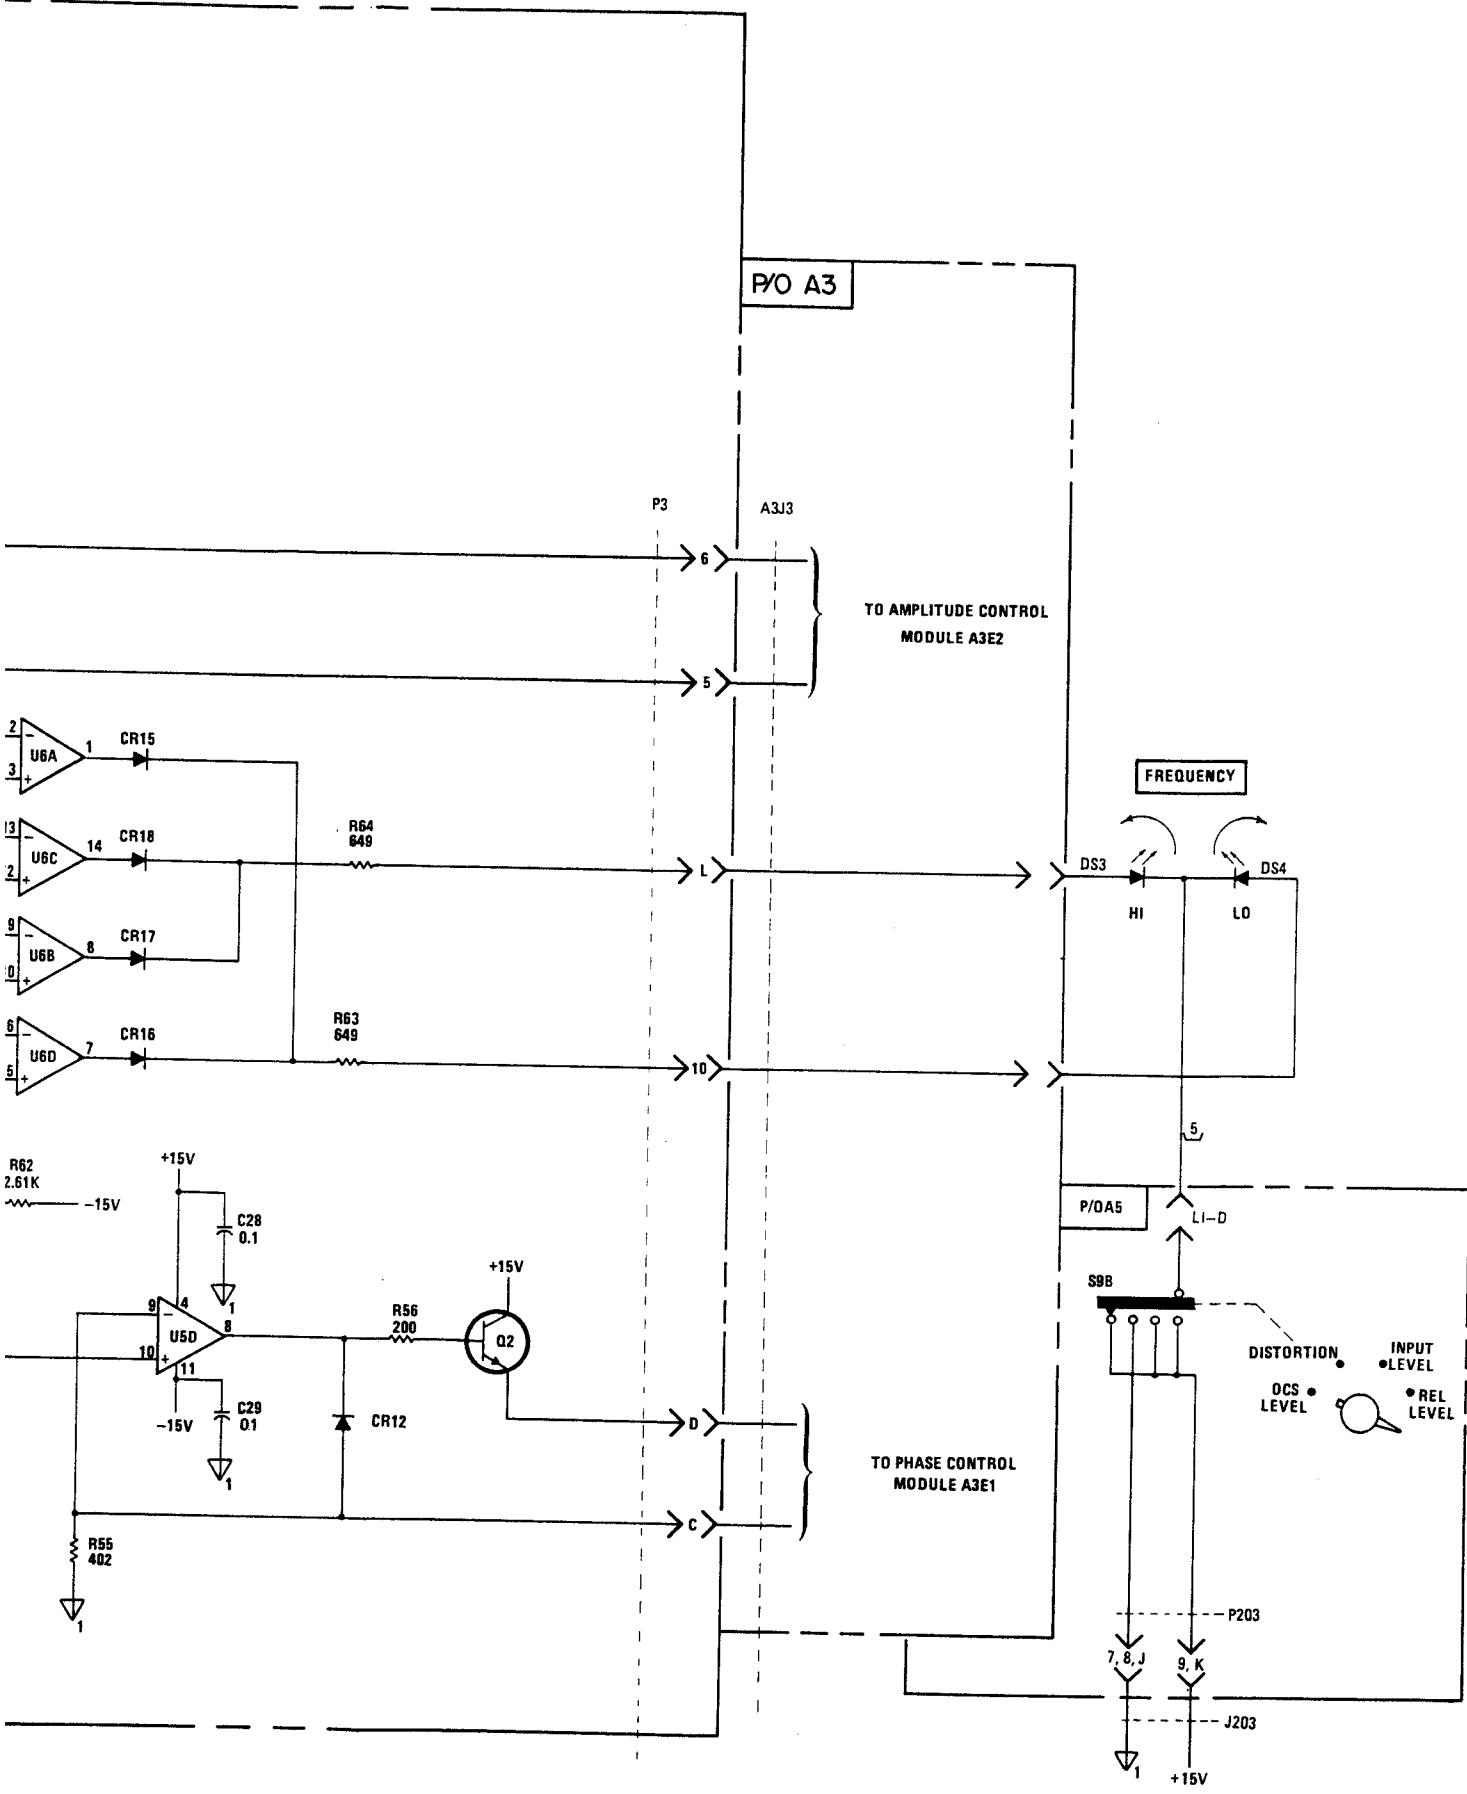


Figure 8-15. Error Detector Circuits.
8-17

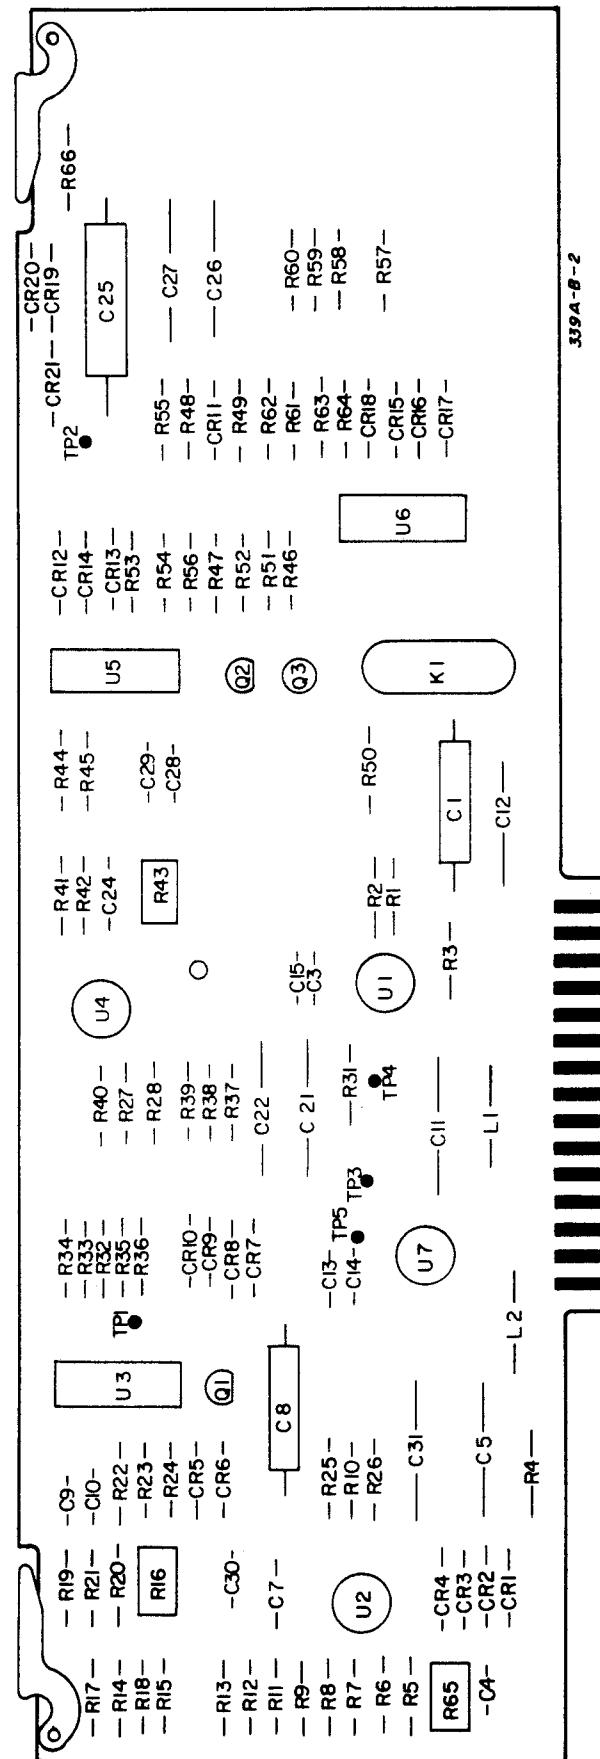

ΔA FERRITE BEADS (L3 & L4) HAVE BEEN ADDED TO PIN 4 OF U2 AND U4 TO PREVENT HIGH FREQUENCY OSCILLATIONS (APPROXIMATELY 300 MHZ).


A4
00339-66304
Baw C

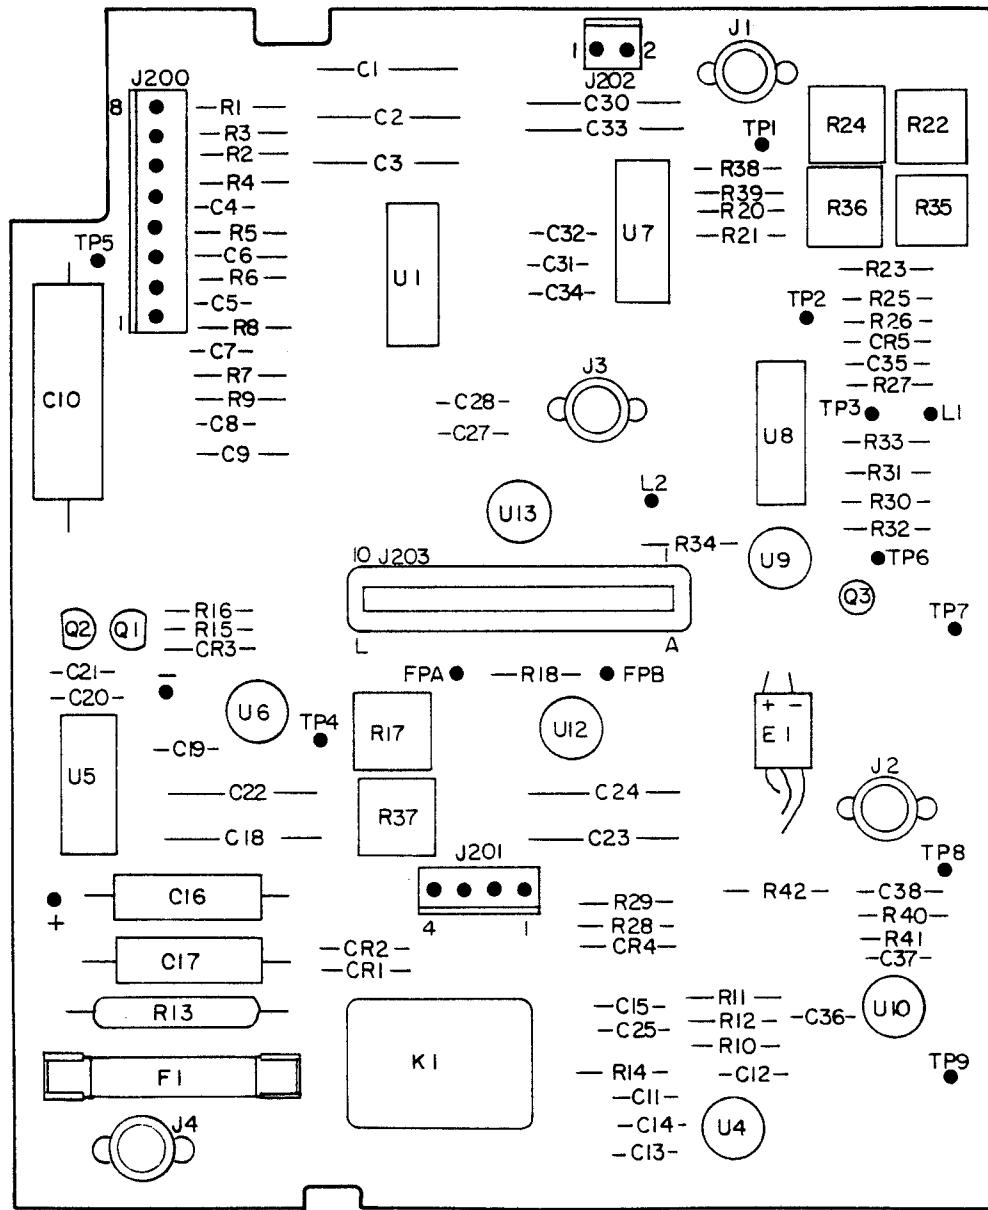


339A-B-4

A2
00339-66502
Rev. A


AUTO SET LEVEL




FROM INPUT AMPLIFIER A3J101

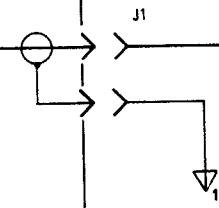

CHANGED FROM $1\text{ k}\Omega$ to $806\text{ }\Omega$
DRIVE FOR PHOTO MODULE E1
CONDITIONS. INSTRUMENTS
DA00196 AND GREATER HAVE
D.

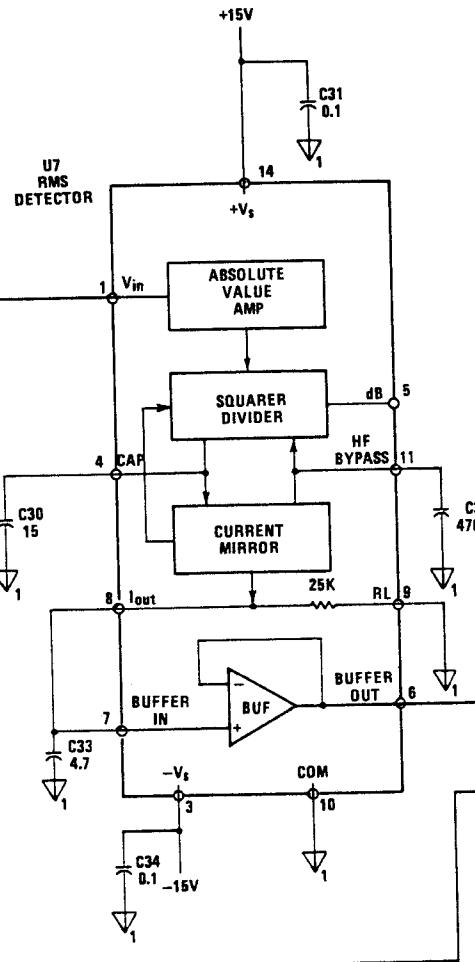


AUTO SET-LEVEL FULL SCALE ADJUST

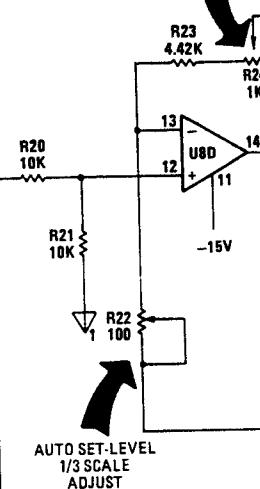


AUTO SET-LEVEL 1/3 SCALE ADJUST


TP1


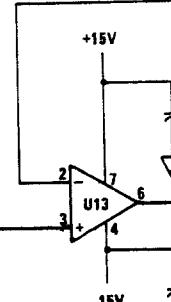



FROM DISTORTION AMPLIFIER A3J202

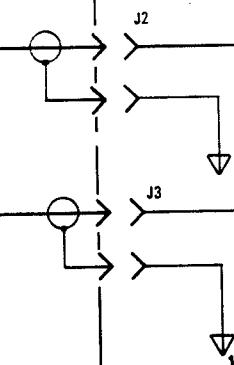

FROM VOLTMETER ATTENUATOR A3J102

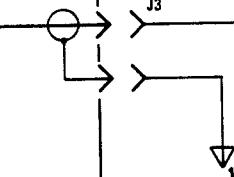

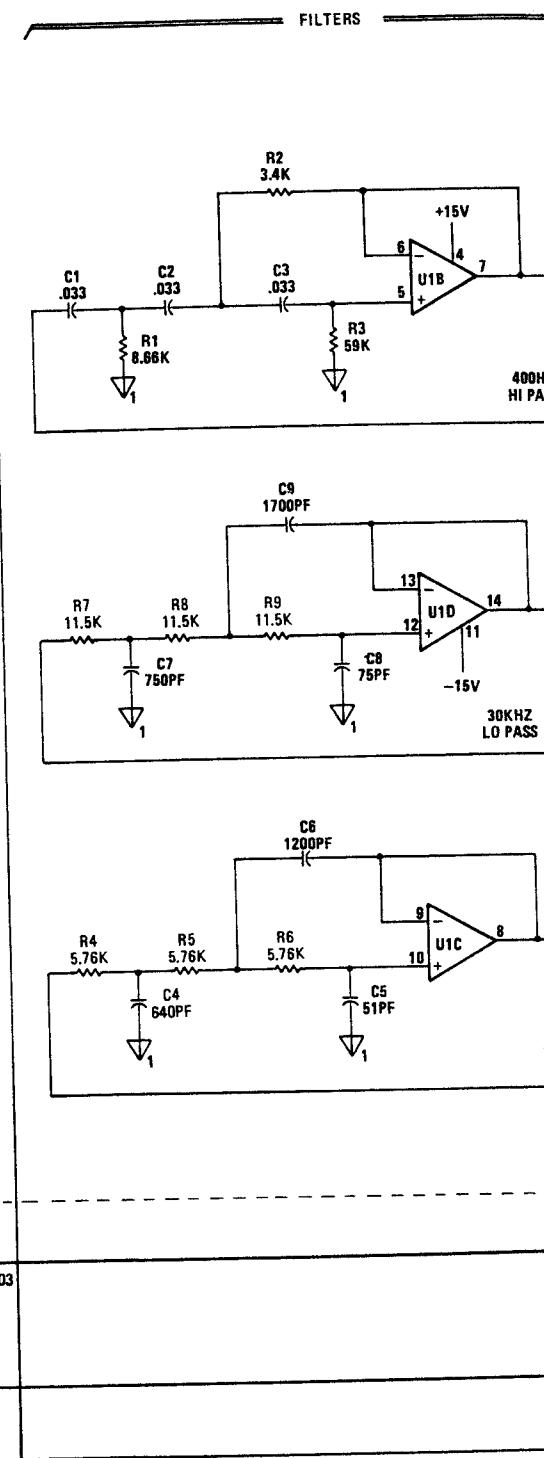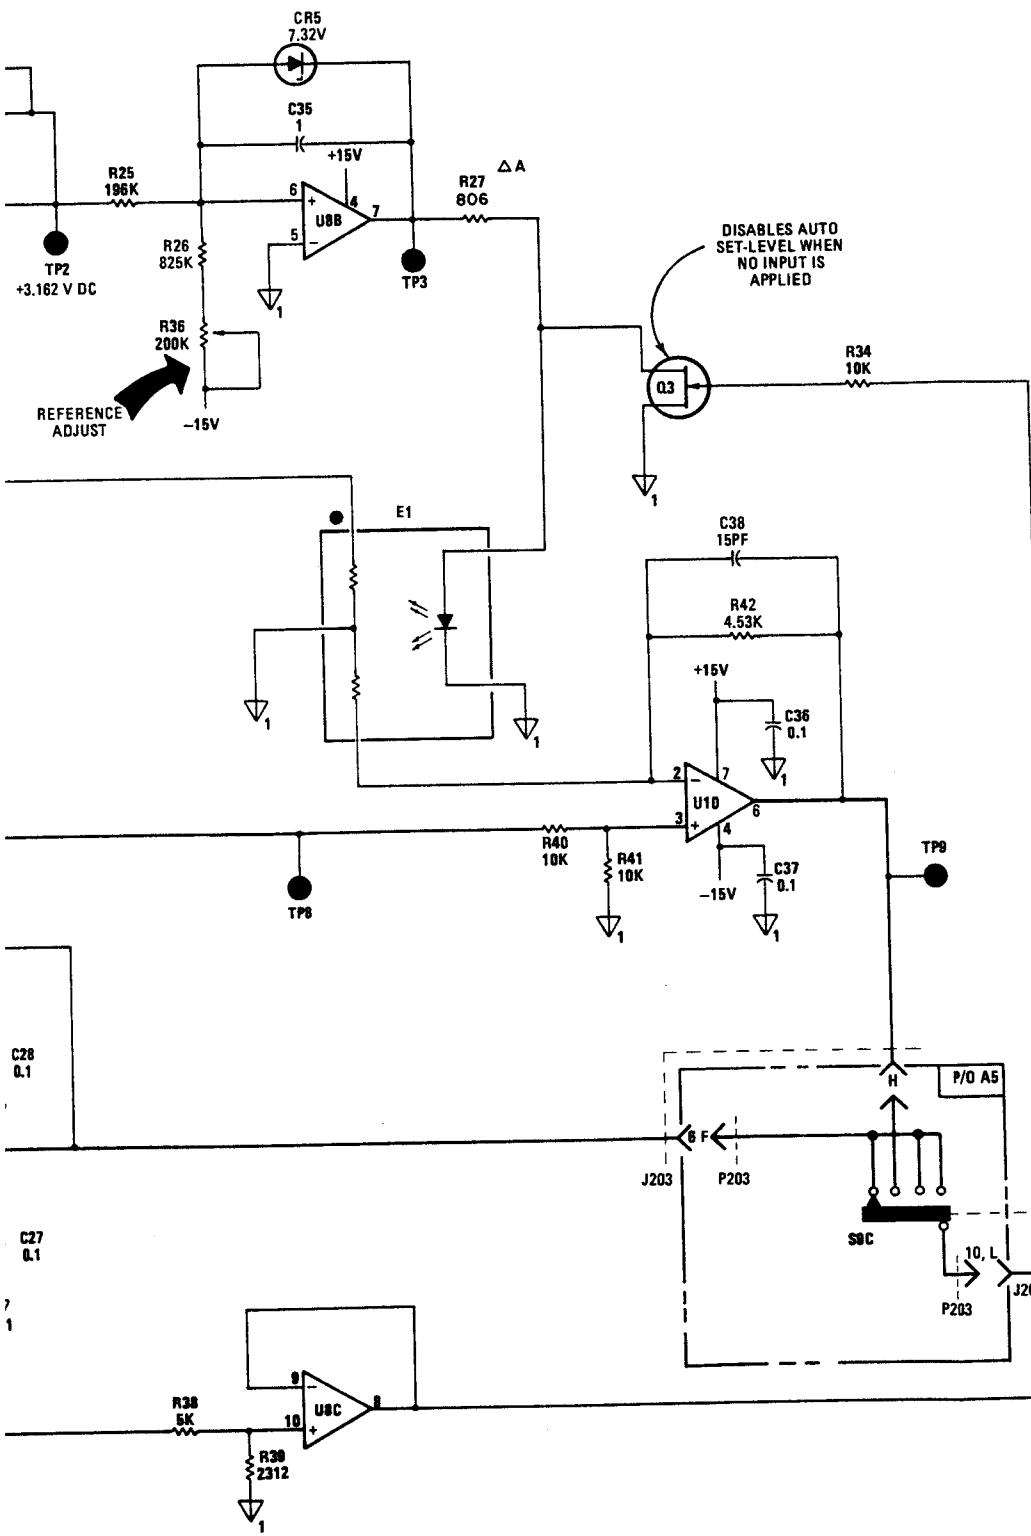

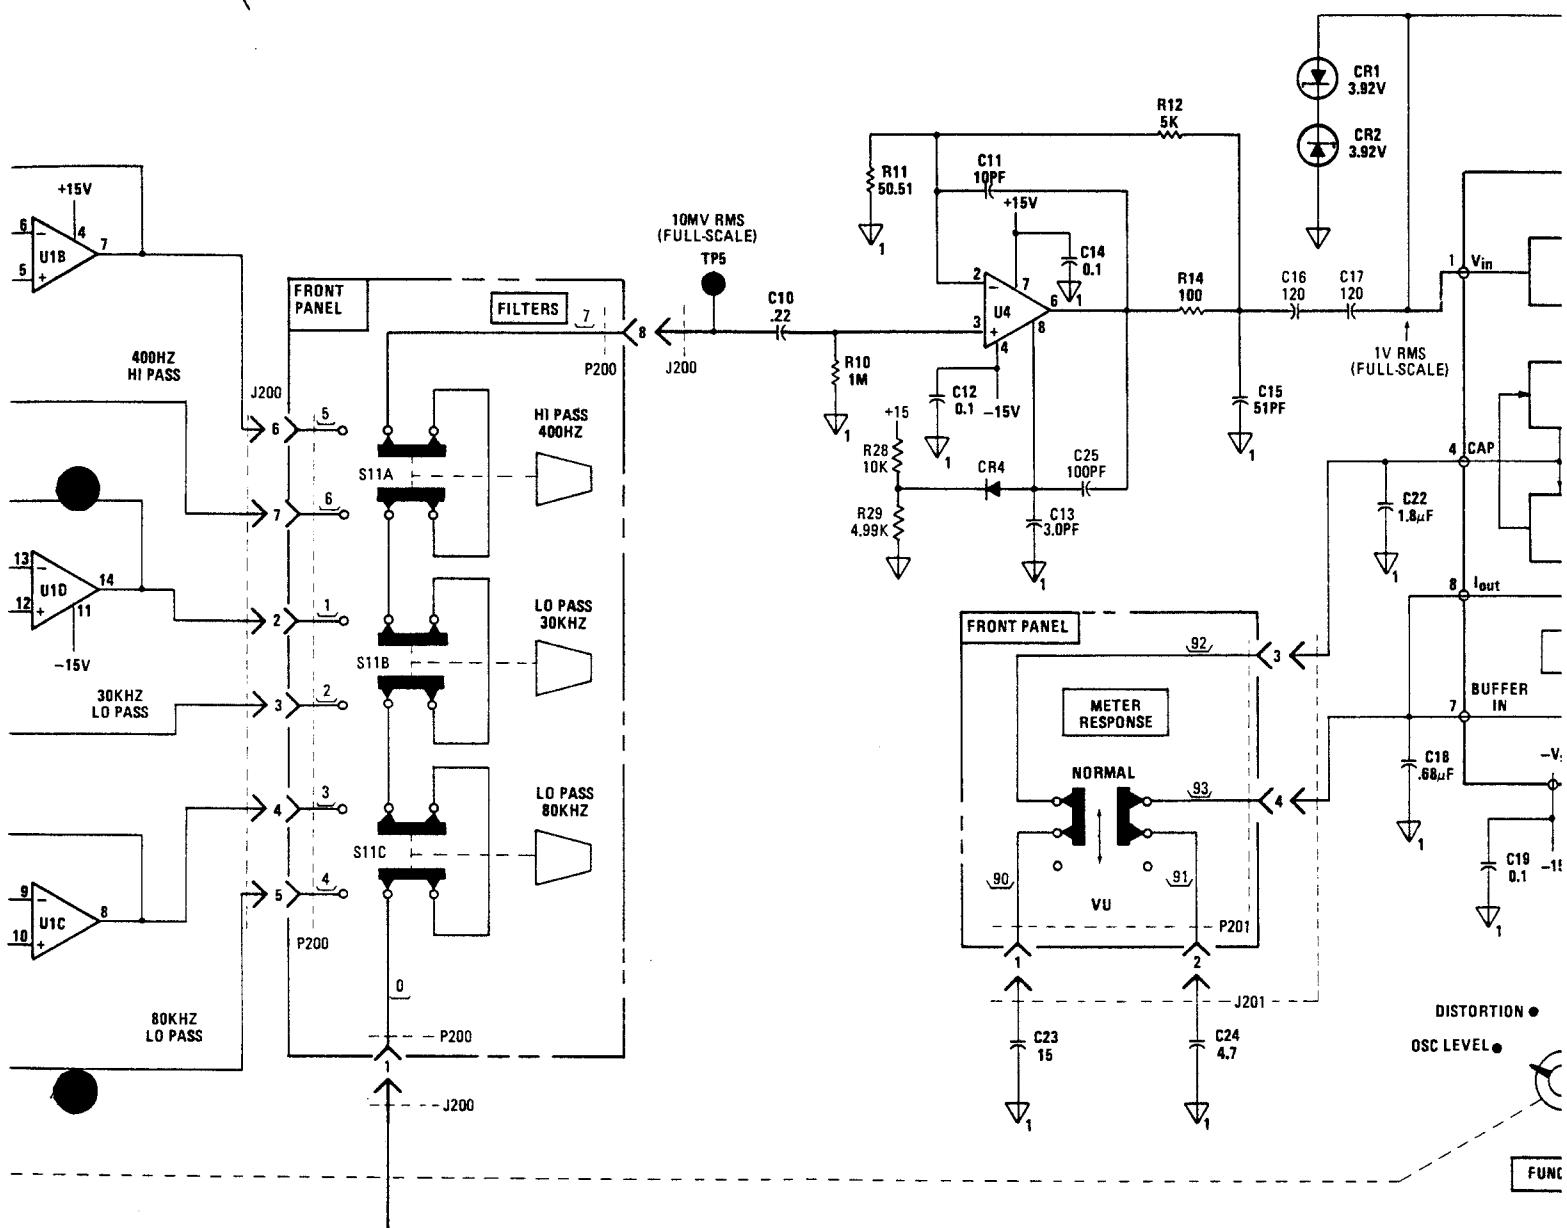


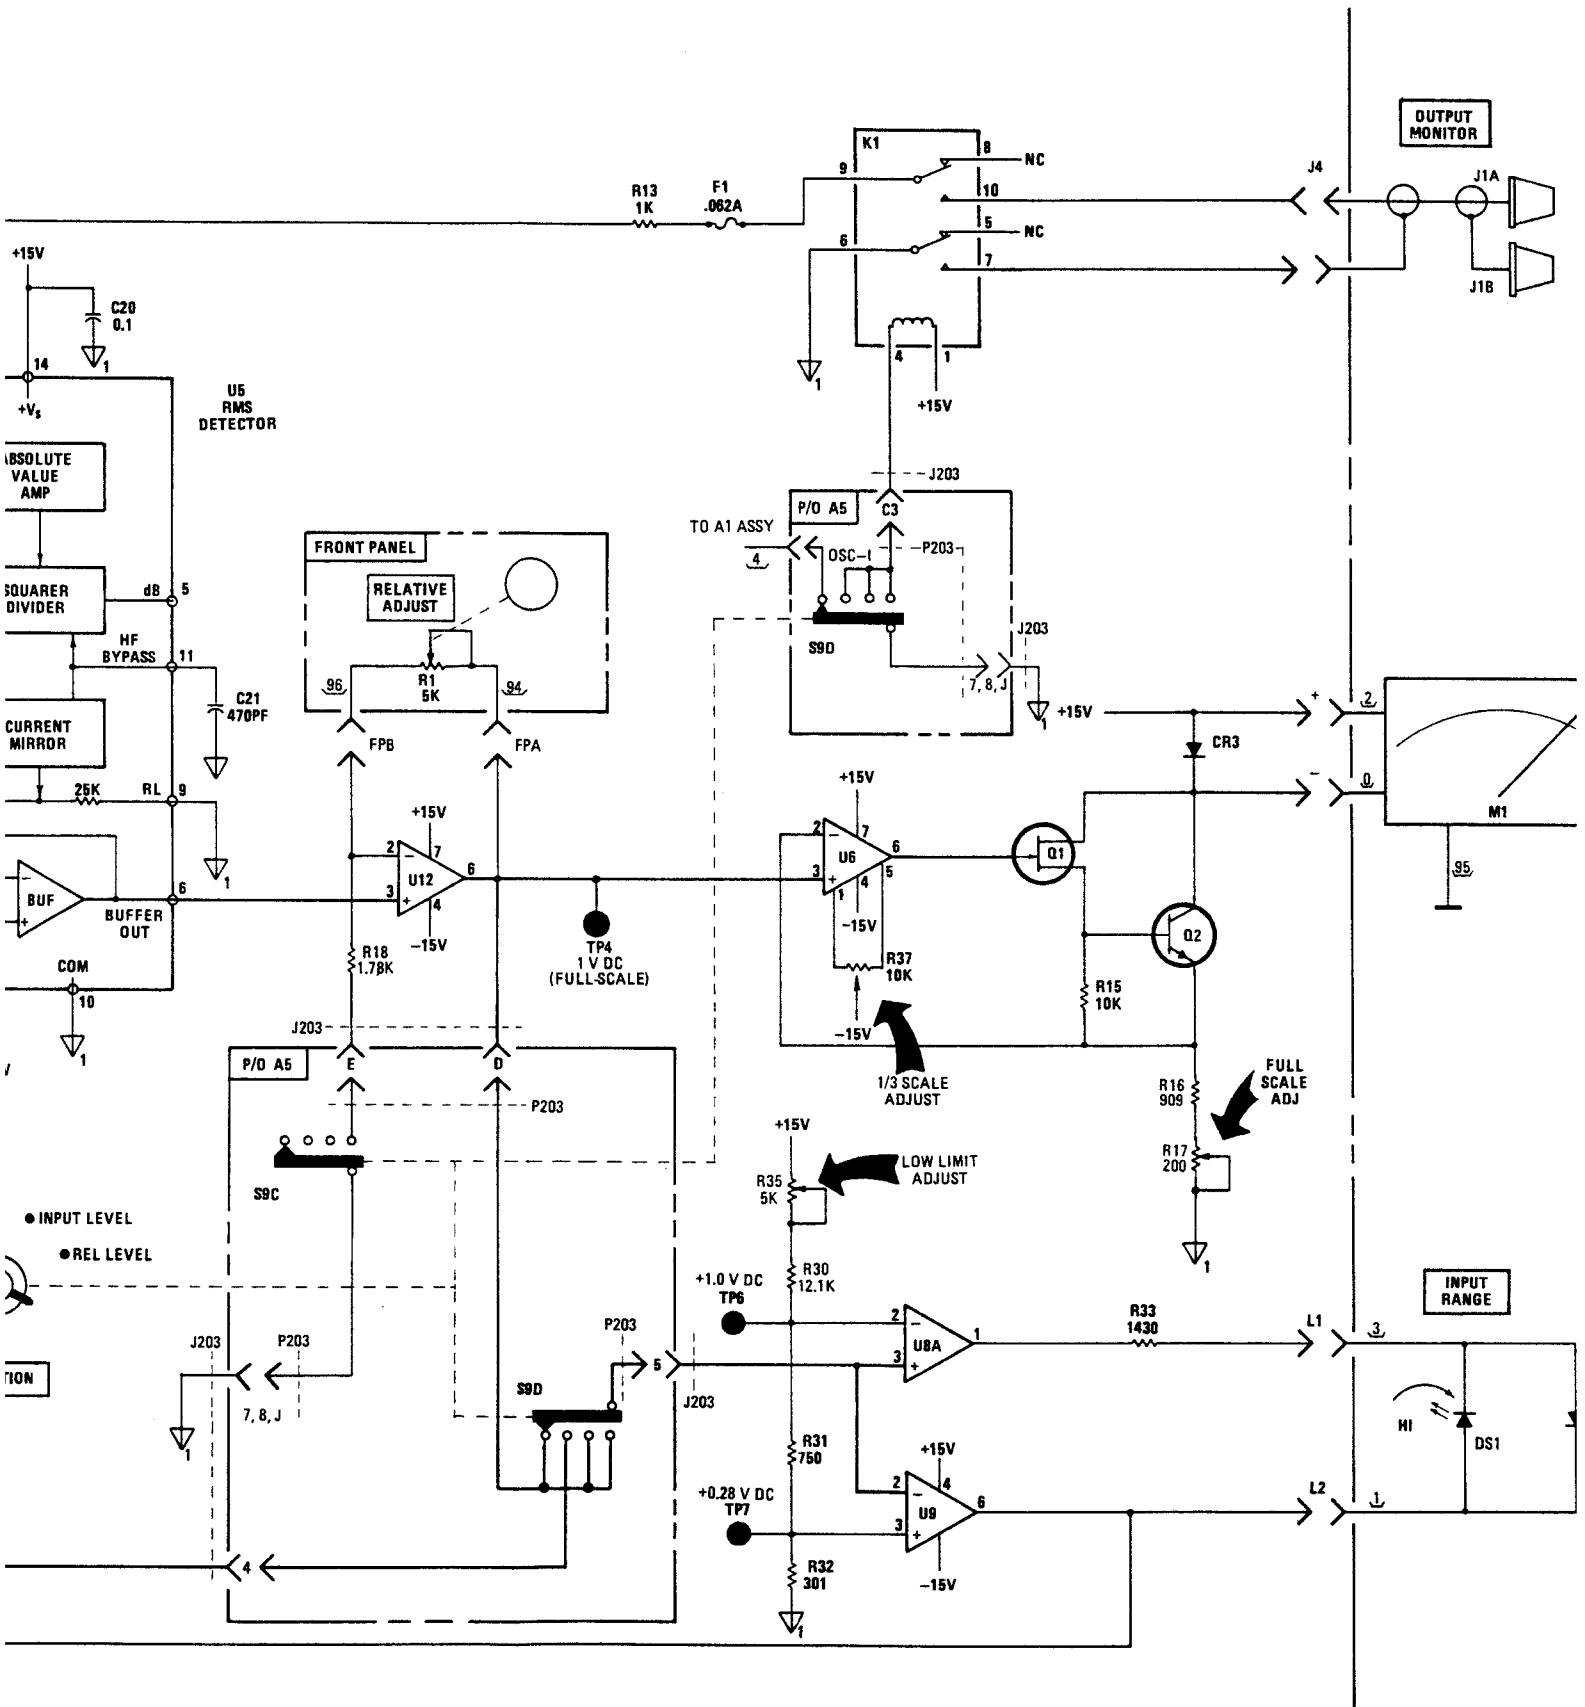


Figure 8-16. Auto Set-Level and Meter Circ
8-19/1

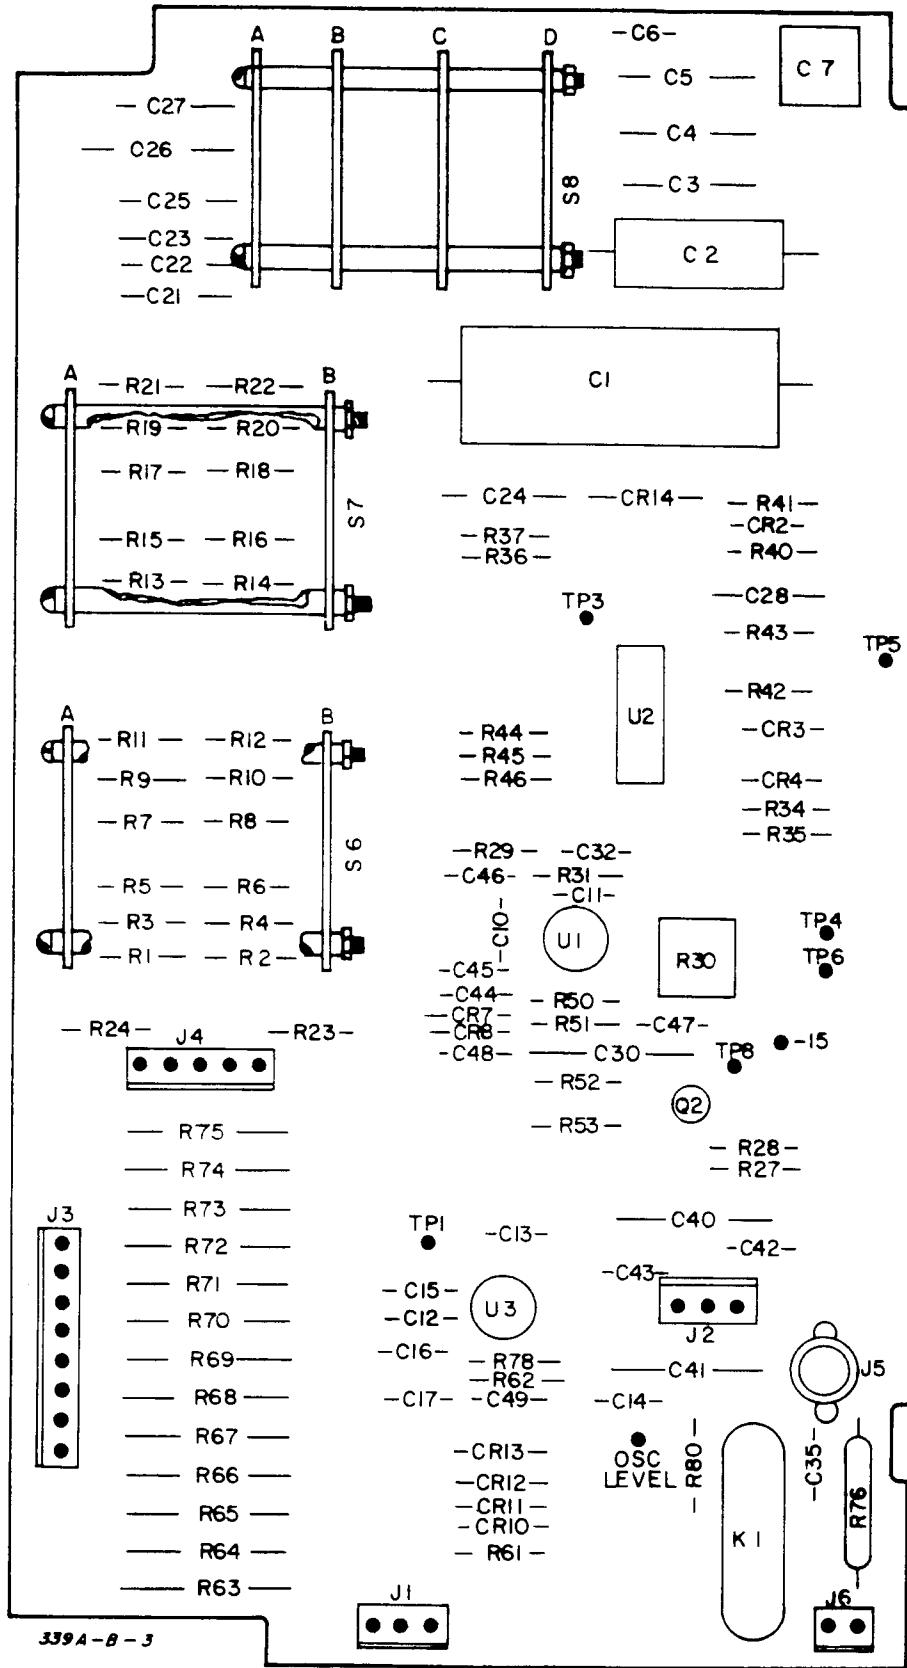





3394-B-3


A1
00339-66501
Rev. D


A 1

OSCILLATOR ASSEMBLY
00339-66501

FREQUENCY

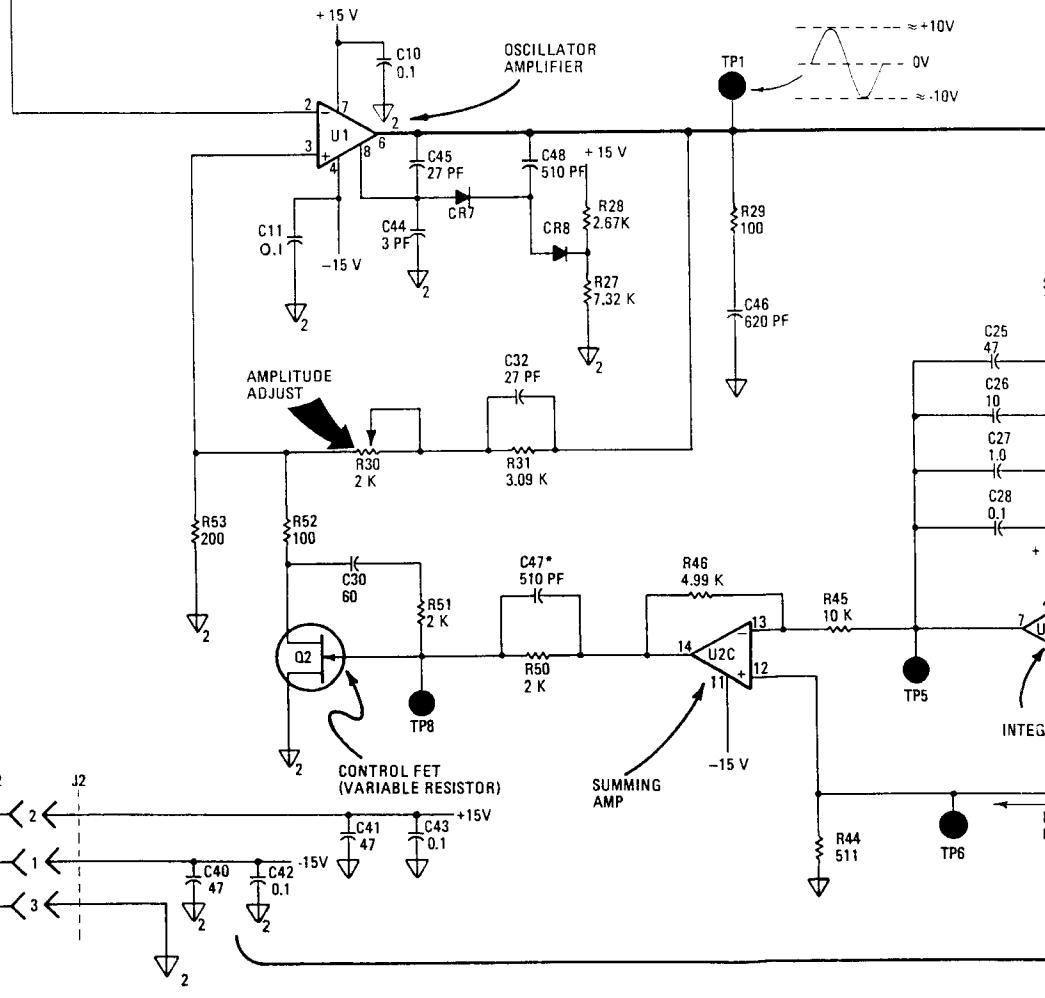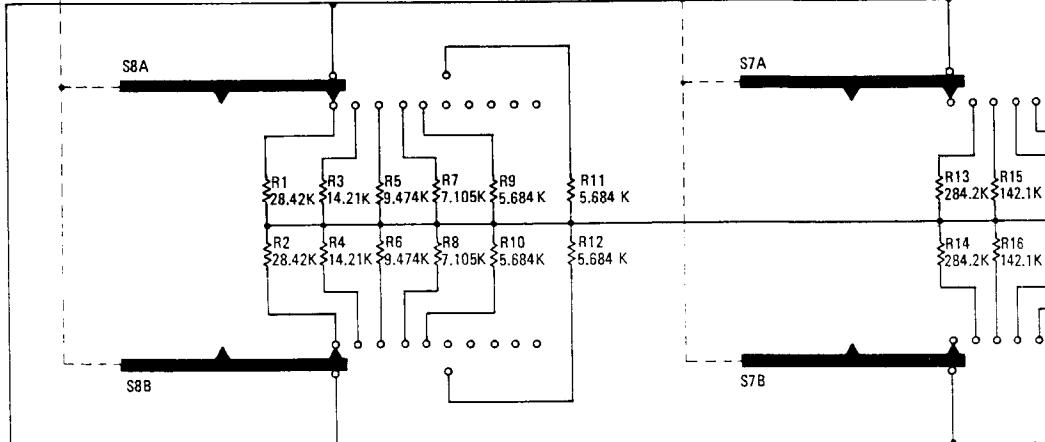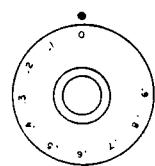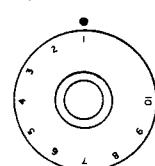

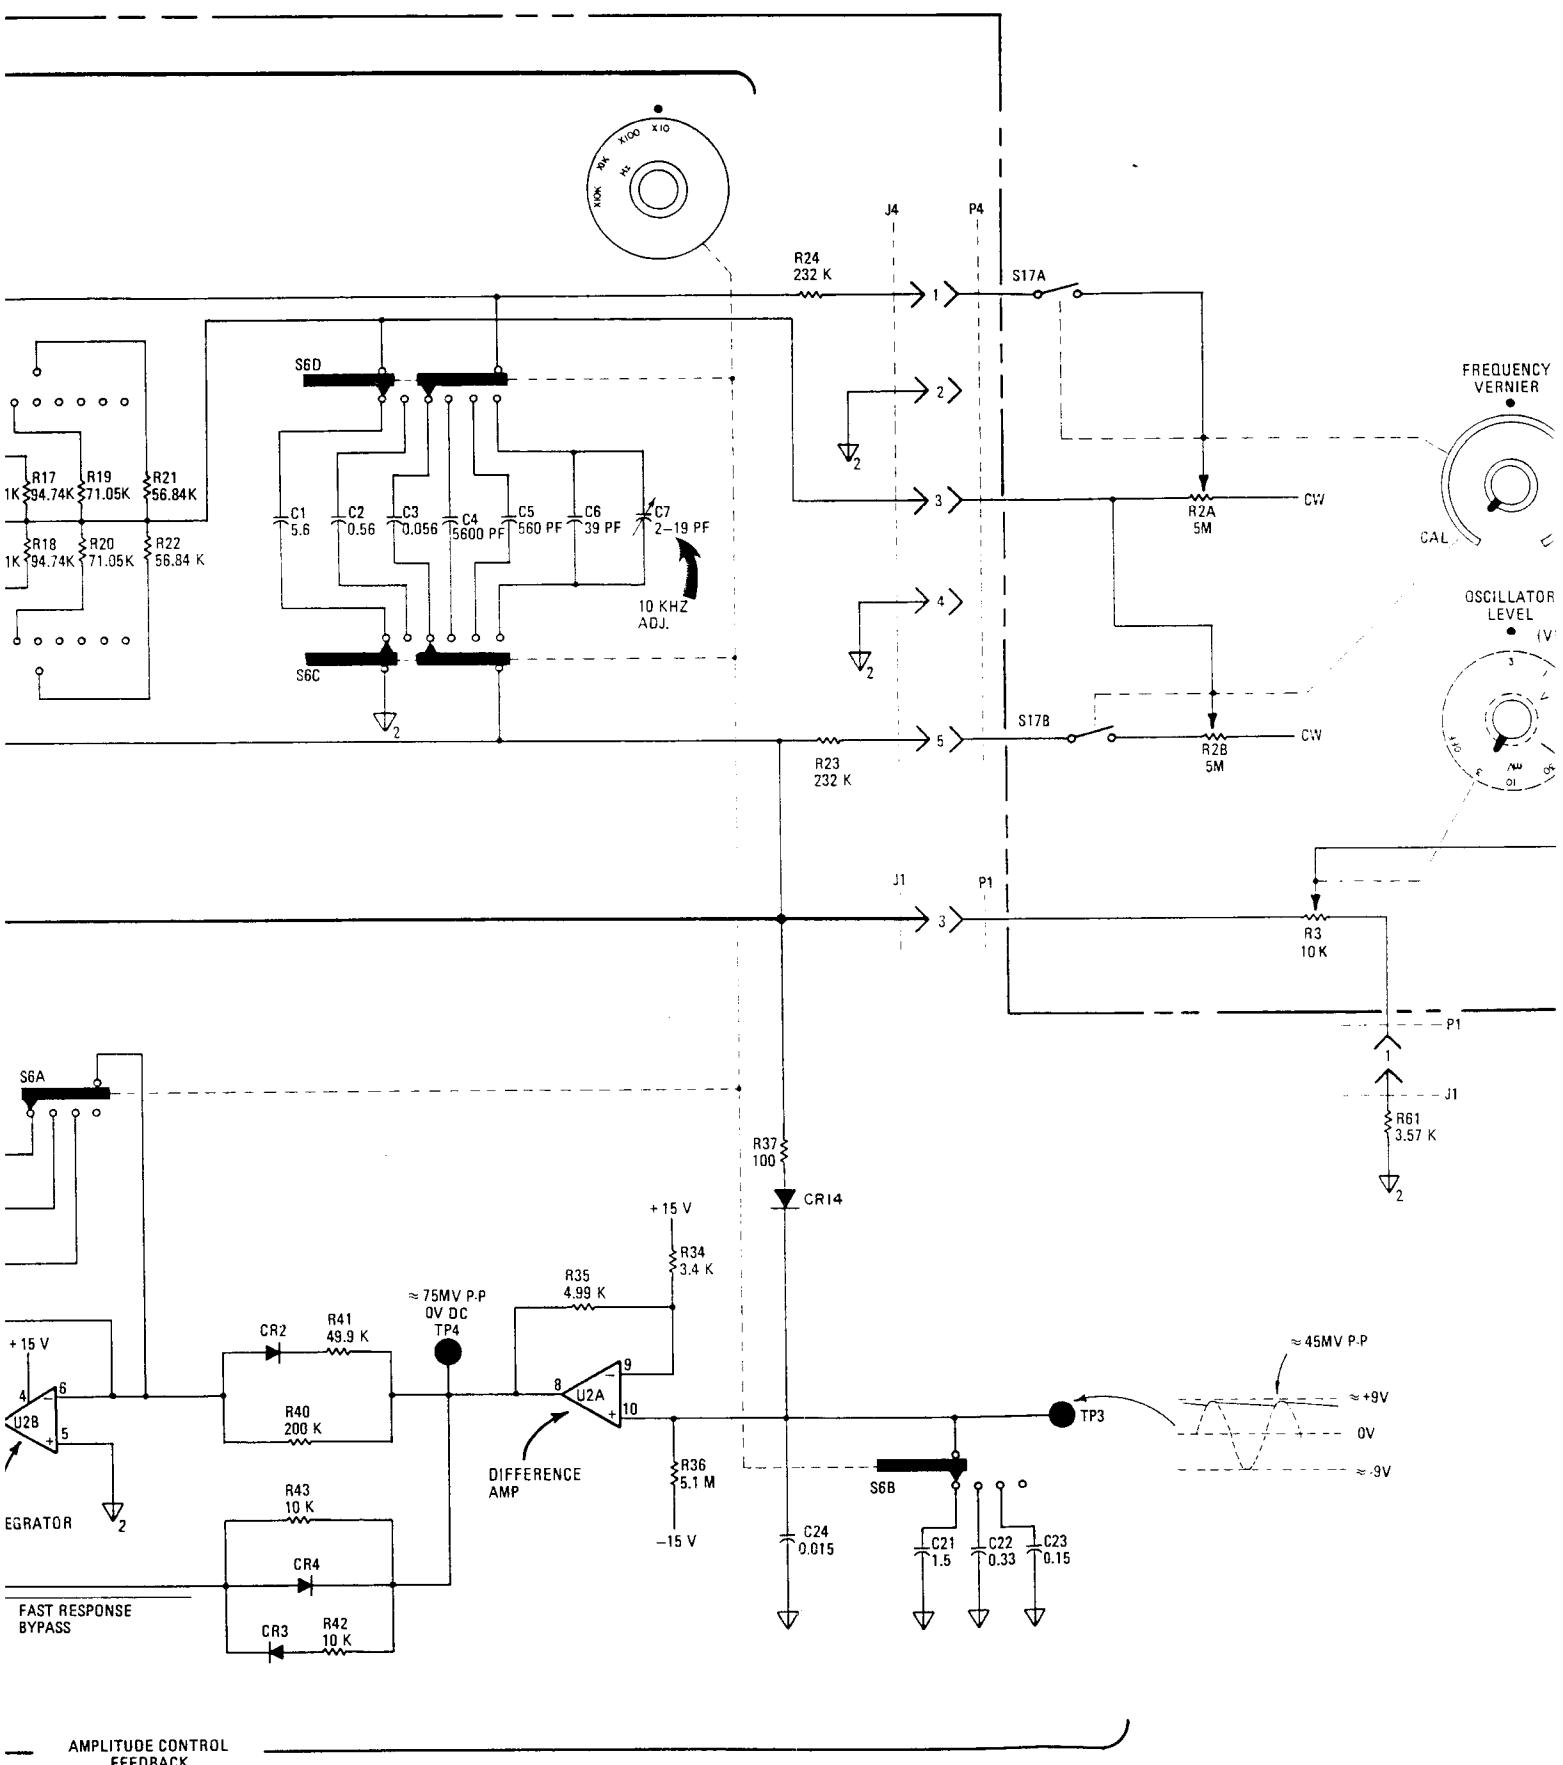

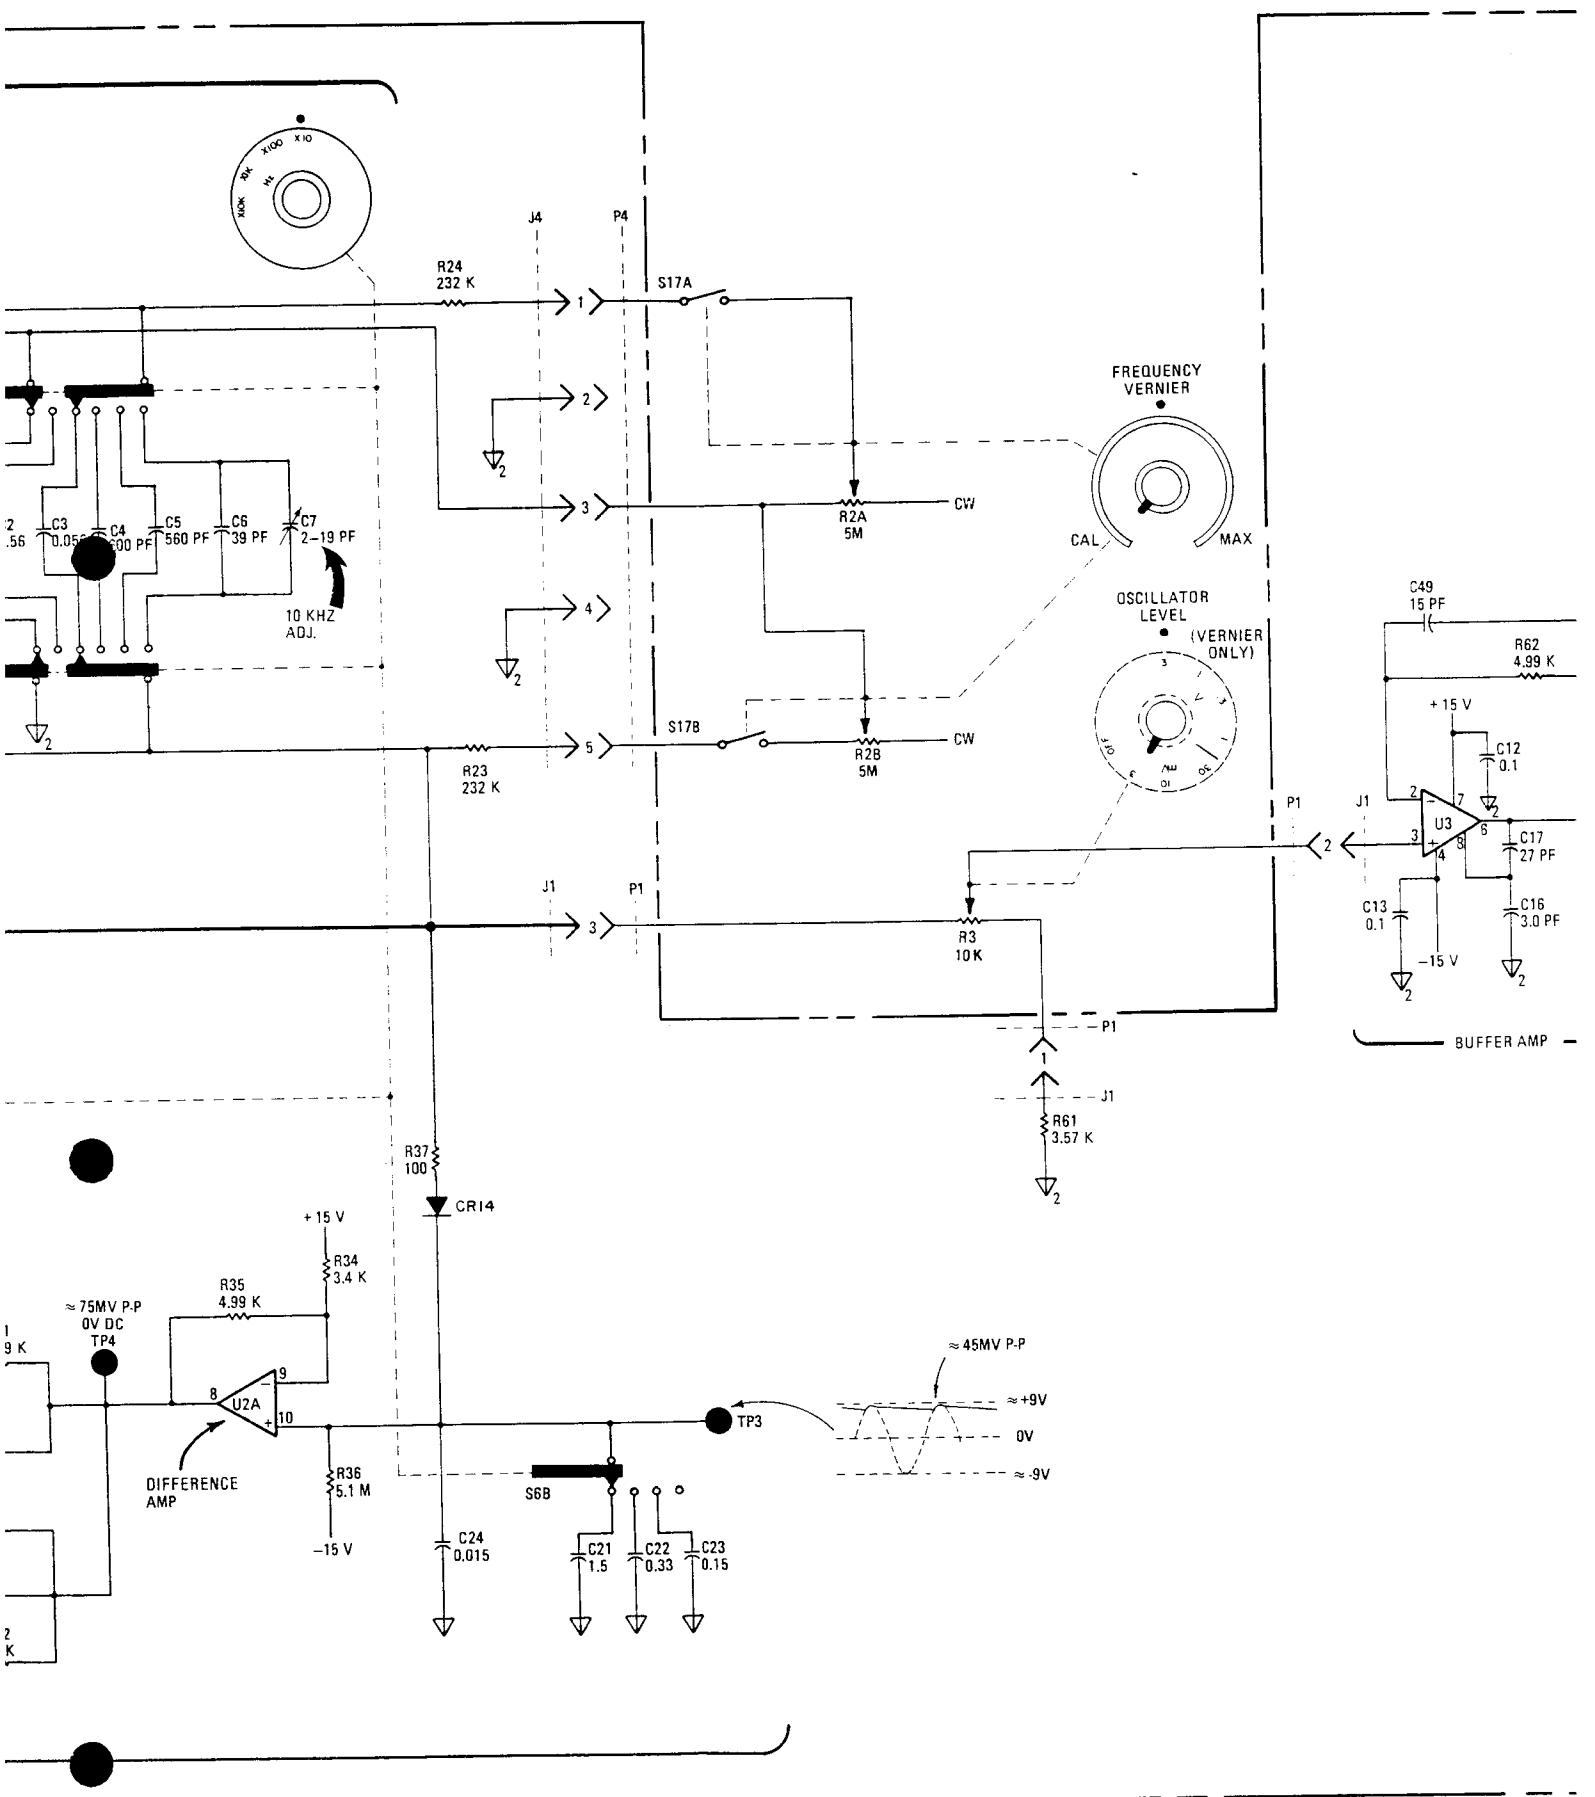


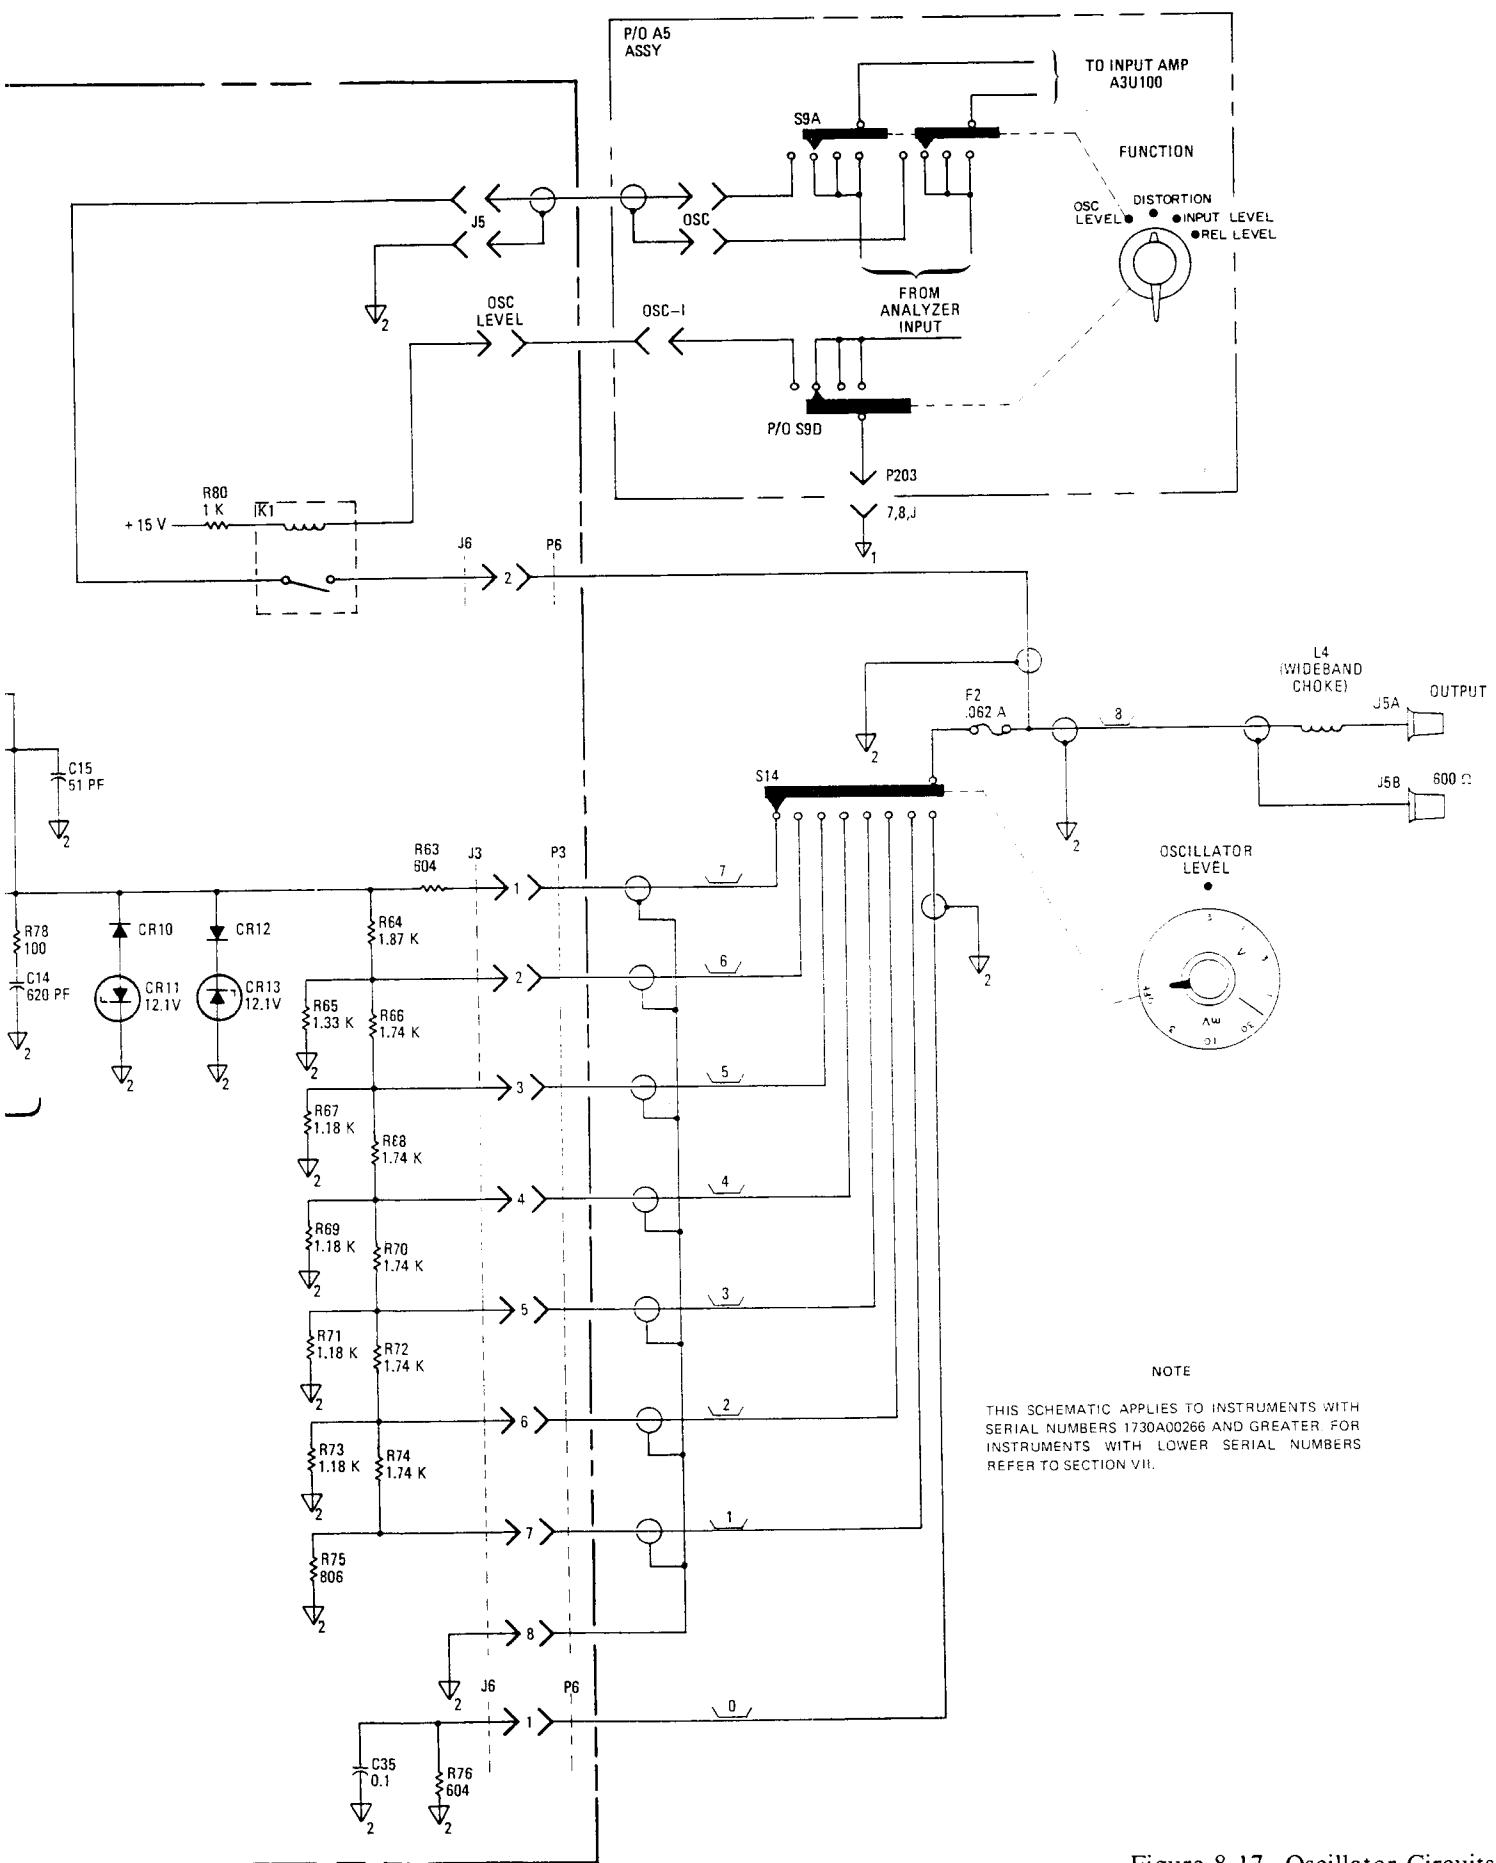




Figure 8-17. Oscillator Circuits.
8-21/8-22

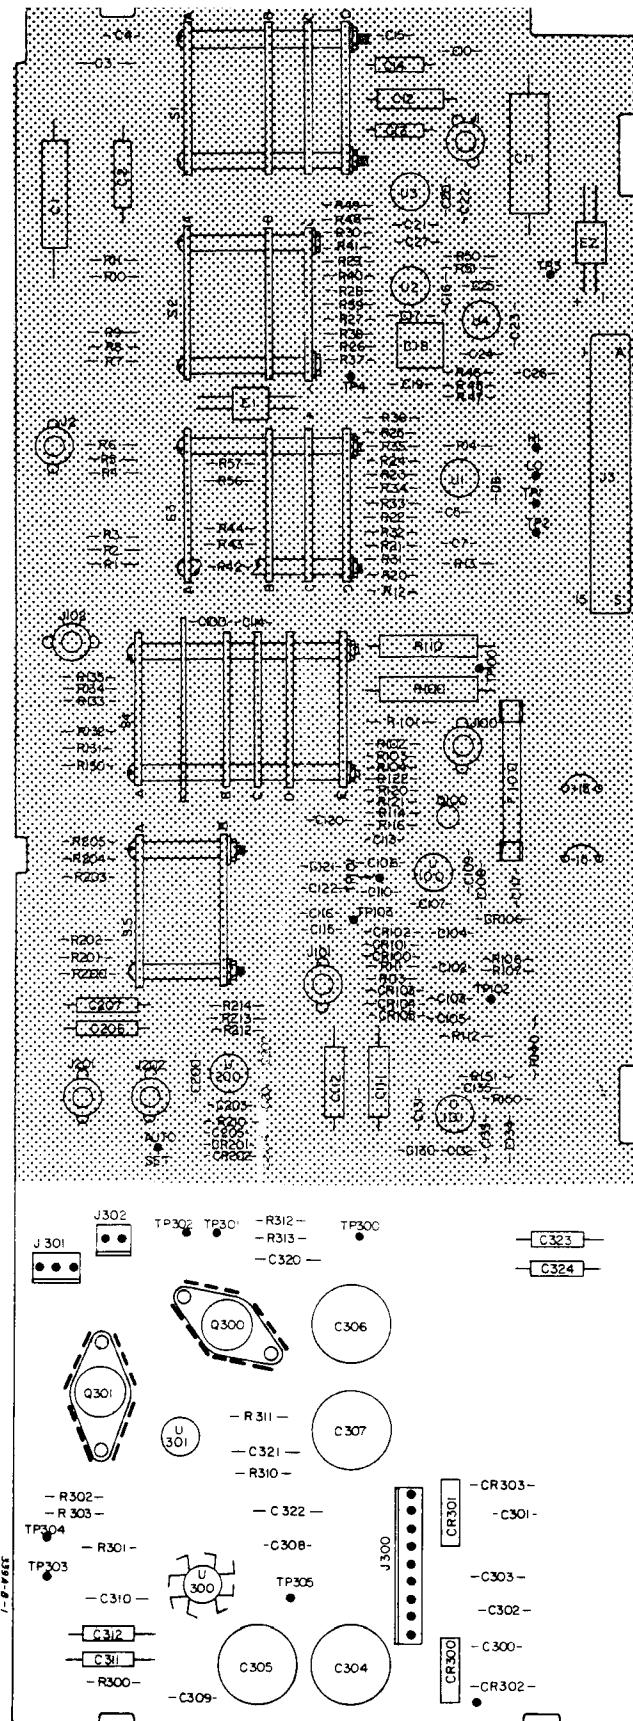

A3

00339-66503

Rev. B

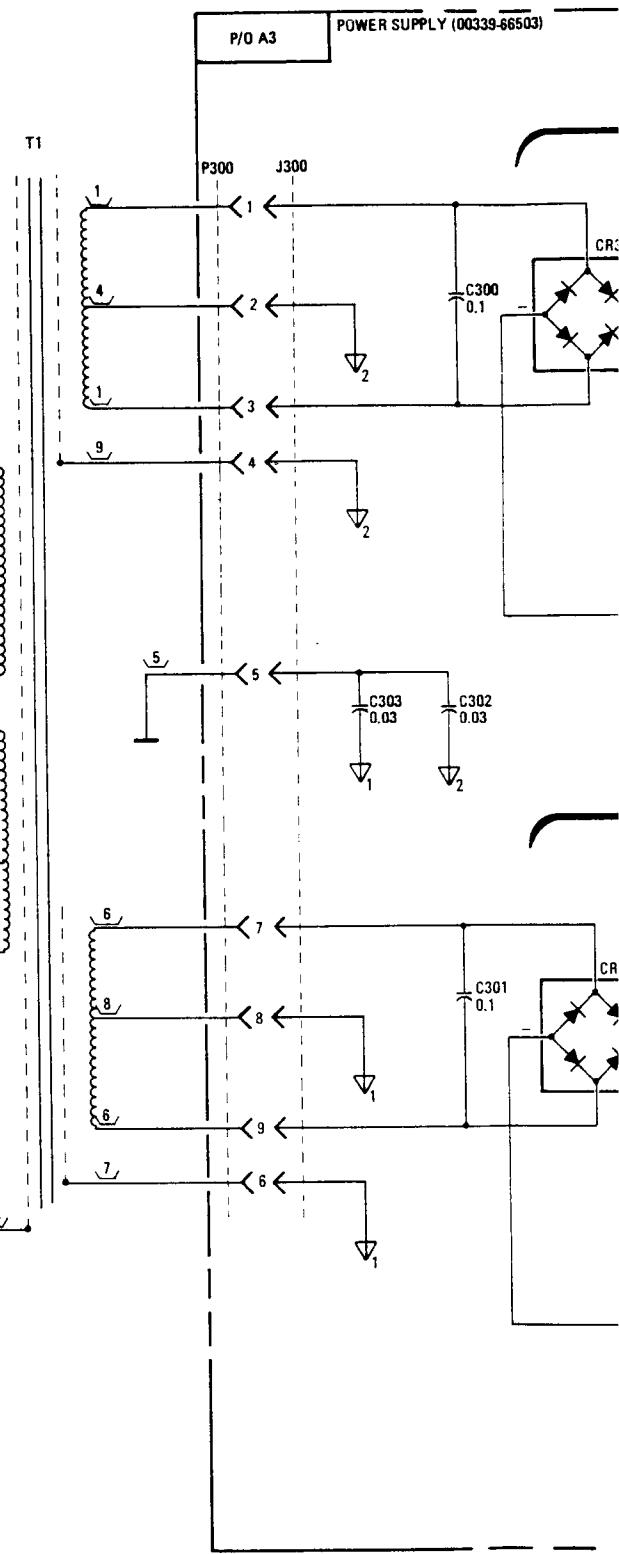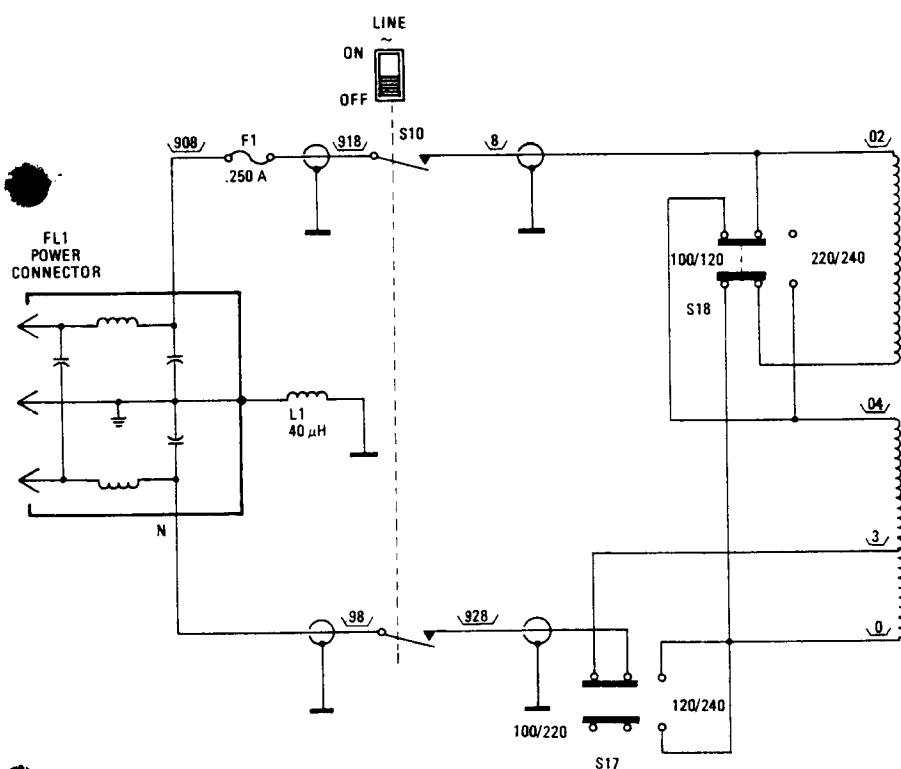

COPYRIGHT 1977 BY HEWLETT - PACKARD

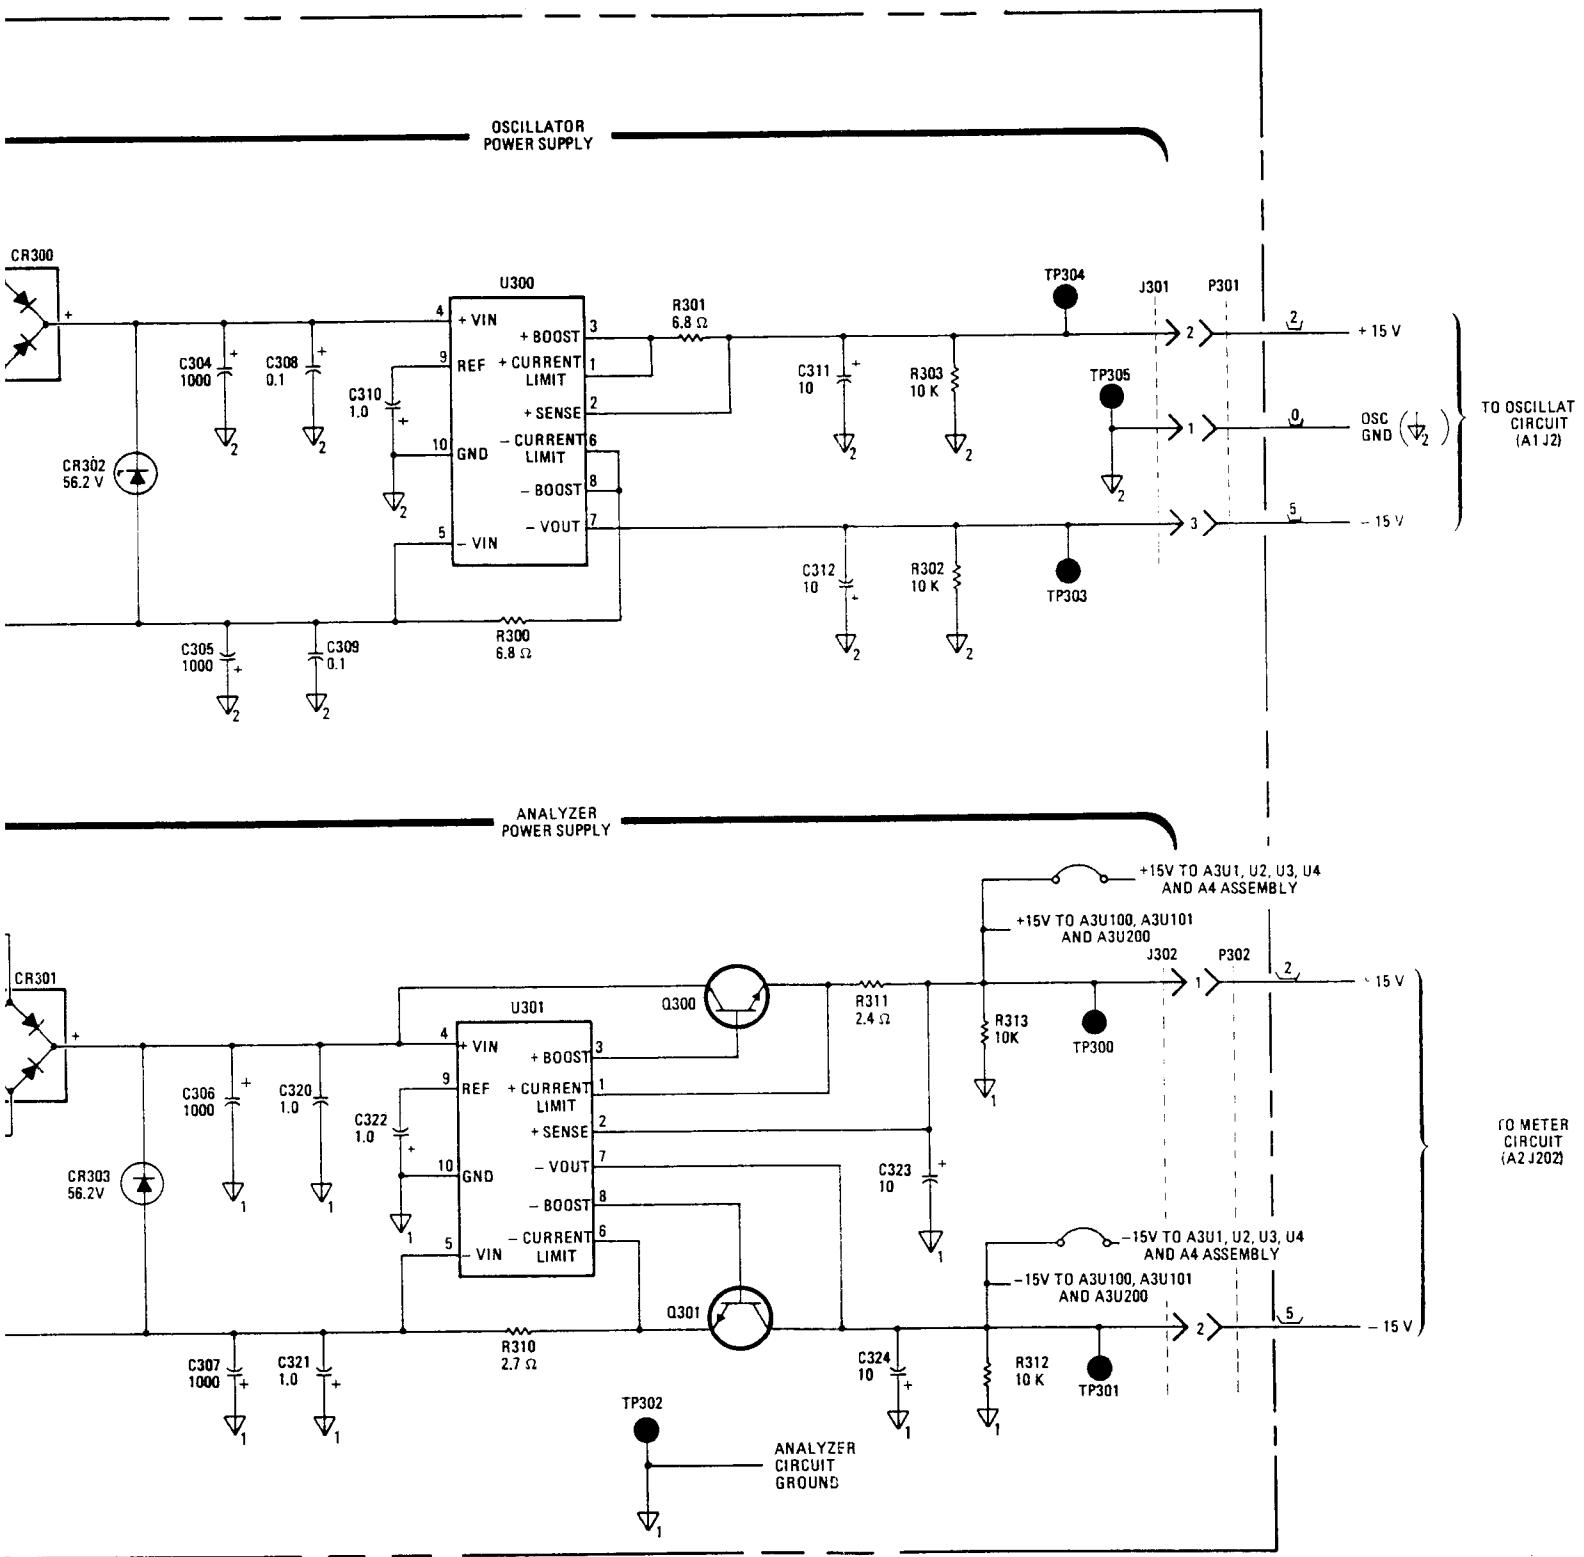


Figure 8-18. Power Suppli
8-23/8



MANUAL CHANGES

-hp- MODEL 339A

DISTORTION MEASUREMENT SET

Manual Part Number 00339-90001

■ New or Revised Item

ERRATA.

Page 4-11, Figure 4-12. Change the part number of the SHIELD (item 7) from 1251-1073 to 1251-0173.

Page 4-11, Paragraph 4-25a. The INPUT RANGE should be 0.1V, not 1V.

Page 4-12, Paragraph 4-26b. The sentence should read, "Connect the equipment as shown in Figure 4-13 without the 100 k Ω series resistor."

8-11/8-12, Figure 8-12. Change the value of capacitor C1 from .01 to .01 mfd.

CHANGE NO. 1 (applies to instruments with serial numbers 1730A00266 and greater).

Page 6-9, Table 6-3. Delete parts A4L3 and A4L4 -hp, part number 9170-0894.

Page 6-10, Table 6-3. Add the following parts:

A4R67 0757-0407 Resistor 200 Ω 1% .125 W
A4R68 0757-0407 Resistor 200 Ω 1% .125 W

Page 8-17, Figure 8-15. Delete parts L3 and L4 from the schematic. Add resistors R67 and R68 as shown in Figure 1.

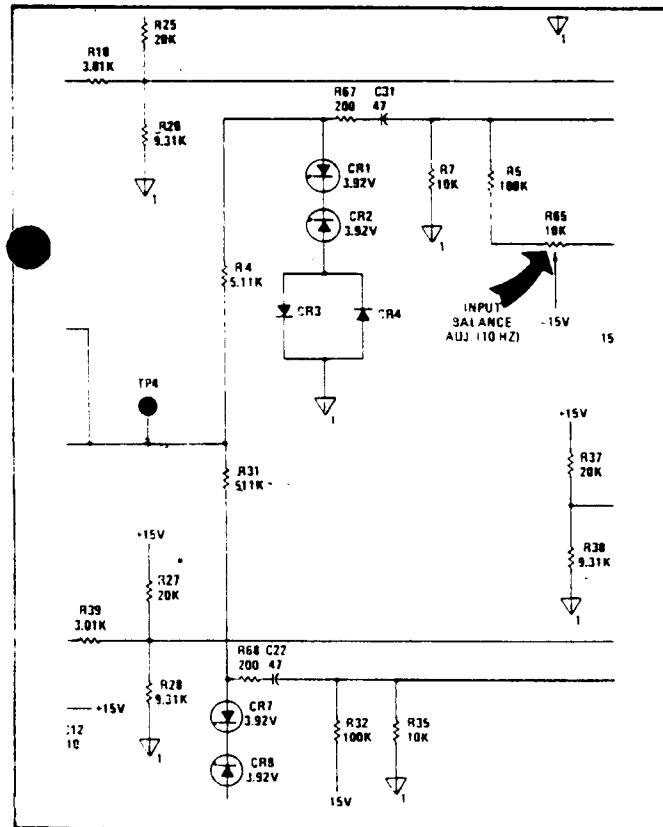


Figure 1.

Resistor R67 and R68 have replaced L3 and L4 for the prevention of high frequency oscillation.

CHANGE NO. 2 (applies to instruments with serial numbers 1730A00409 and greater).

Page 6-5, Table 6-3. Change A2R22 from 2100-0568 Resistor Trimmer 100 Ω 10% to 2100-3212 Resistor Trimmer 200 Ω 10%.

Page 6-6, Table 6-3. Add the following part:

A2R43 0757-0400 Resistor 90.9 Ω 1% .125 W TC=0+-100

Page 8-19/8-20, Figure 8-16. Change the value of resistor R22 from 100 Ω to 200 Ω on the schematic diagram. Add resistor R43 as shown in Figure 2.

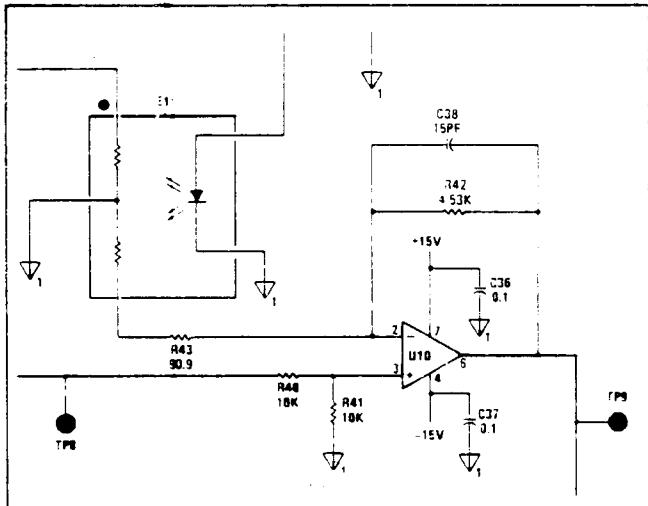


Figure 2.

Resistor R43 has been added and the value of R22 has been changed to compensate for possible tracking errors of the photo-resistors in photo-module E1.

NOTE

Not all replacement photo-modules will work properly in instruments which do not have this modification.

CHANGE NO. 3 (applies to all instruments).

Page 6-8, Table 6-3. Change R113 to *R113 (selected component). Add the following padding list for *R113:

0757-0442	Resistor 10 K	1% .125 W F TC = 0 ± 100
0757-0449	Resistor 20 K	1% .125 W F TC = 0 ± 100
0757-0453	Resistor 30.1 K	1% .125 W F TC = 0 ± 100
0698-3499	Resistor 40.2 K	1% .125 W F TC = 0 ± 100

Page 8-13/8-14, Figure 8-13. Change R113 to *R113 and change the nominal value from 10 k Ω to 30.1 k Ω on the schematic diagram.

This change has been made to permit compensation for differences in the dynamic characteristics of FET's used for Q100. The value of *R113 is selected to minimize distortion introduced by the input amplifier stage.

CHANGE NO. 4 (applies to all instruments).

Page 6-10, Table 6-3. Change A4R23 from 0698-3445 Resistor 348 Ω 1% to 0698-4450 Resistor 324 Ω 1%. Change A4R55 from 0698-4453 Resistor 402 Ω 1% to 0698-3445 Resistor 348 Ω 1%.

Page 8-17, Figure 8-15. Change the value of R23 from 348 Ω to 324 Ω and the value of R55 from 402 Ω to 348 Ω on the schematic diagram.

These changes have been made to insure that the proper current is available to drive photo-modules A3E1 and A3E2.

CHANGE NO. 5 (applies to instruments with serial numbers 1730A00451 and greater).

Page 6-7, Table 6-3. Change capacitor A3C302 from 000-2628 (.03 mfd.) to 0150-0052 (.05 mfd.).

Page 6-8, Table 6-3. Add the following resistor:

A3R314 0683-1035 Resistor 10 k Ω 5% 1/4 W

Page 8-23/8-24. Change the Power Supply schematic diagram as shown in Figure 3.

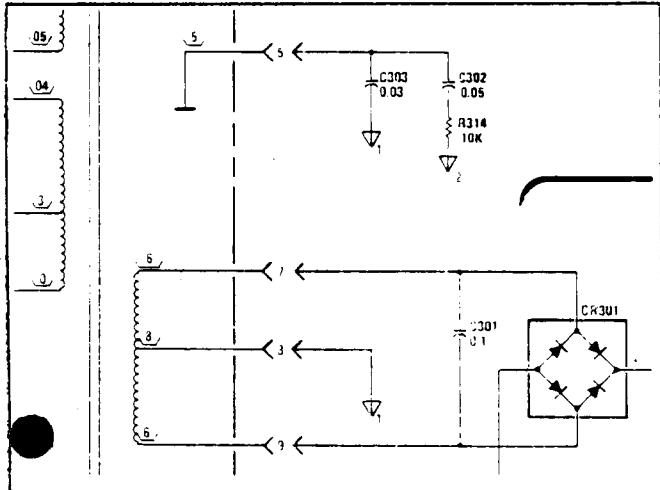


Figure 3.

CHANGE NO. 6 (applies to all instruments).

Page 6-10, Table 6-3. Change the part number and value of A4R59 from 0757-0407, 200 Ω to 0757-0410, 301 Ω . Change the part number and value of reference designator A4R60 from 0757-0407, 200 Ω to 0757-0401, 100 Ω .

Page 8-17, Figure 8-15. Change the schematic value of R59 from 200 Ω to 301 Ω and the value of R60 from 200 Ω to 100 Ω . Change the voltage level at the junction of R59 and R60 from +0.7 to +0.5 volts.

This change establishes a new reference for A4U6C to insure that the "HI" frequency indicator is extinguished when the proper range is selected.

NOTE

If it is necessary to change photo-module A3E1 be certain that A4R59 and A4R60 are the new values listed in this change.

CHANGE NO. 7. (applies to all instruments.)

Page 1-2, Table 1-1. Changed Fundamental Rejection specification for frequency range 50KHz to 110 KHz from >86 dB to >83 dB

Page 4-10, Table 4-8. Change table as shown.

Table 4-8. Fundamental Rejection and Induced Distortion Test

Test Frequency	Fundamental Rejection Specification	Induced Distortion Specification
10 Hz		
100 Hz		
1kHz		
10kHz	>-100 dB	>-95 dB
20 kHz		
30kHz		>-90 dB
50kHz	>-90 dB	>-85 dB
110kHz	>-83 dB	>-70 dB

Page 4-16. Change "Fundamental Rejection and Induced Distortion Test" form as shown.

Fundamental Rejection and Induced Distortion Test:

Test Frequency	339A Fundamental Rejection	Test Limit	339 Induced Distortion	Test Limit
10Hz	_____	_____	_____	_____
100Hz	_____		_____	_____
1kHz	_____	-100 dB	_____	-95 dB
10kHz	_____		_____	
20kHz	_____		_____	
30kHz	_____		_____	-90 dB
50kHz	_____	-90 dB	_____	-85 dB
110 kHz	_____	-83 dB	_____	-70 dB

CHANGE NO. 8 (applies to all instruments).

Page 6-14, Table 6-3. Change miscellaneous part MP12 part number to 00339-04111. Change miscellaneous part MP13 part number to 00339-04102. Add part number 5041-3155, quantity 10, description "SHAFT EXTENDER"

CHANGE NO. 9 (applies to all instruments).

Page 6-9, Table 6-3. Change the part number of A4C25 from 0180-2338 to 0180-2927. The new part is the same value but with a leakage specification of 0.6 μ A maximum after 2 minutes @ 9 VDC.

CHANGE NO. 10 (applies to all instruments).

Page 8-3, Table 8-3. Add the following list of part numbers and values to A1C47*:

0160-0356	CAPACITOR-FXD 18pF
0160-2306	CAPACITOR-FXD 27pF
0160-0204	CAPACITOR-FXD 47pF
0160-0376	CAPACITOR-FXD 68pF
0140-0193	CAPACITOR-FXD 82pF
0140-0194	CAPACITOR-FXD 110pF
0140-0198	CAPACITOR-FXD 200pF

Note that the value most often installed by the factory will be 200pF. The other values are possible alternatives. Selection of this value will optimize the high frequency (> 100kHz) distortion.

Page 8-21/8-22, Figure 8-17. Change the value listed on the schematic for C47* from 510pF to 200pF.

CHANGE NO. 11 (effective on serial numbers 1730A01182 to 1730A01958).

8-9, Table 8-3. Add A4C32* and the following list of part numbers and values:

0160-2248	CAPACITOR-FXD 4.3pF
0160-2249	CAPACITOR-FXD 4.7pF
0160-2250	CAPACITOR-FXD 5.1pF
0160-2251	CAPACITOR-FXD 5.6pF
0160-2252	CAPACITOR-FXD 6.2pF

Note that the value most often installed by the factory will be 5.1pF. The other values are possible alternatives.

Page 8-17, Figure 8-15. Add capacitor C32* in parallel with R2. The value of C32* should be listed as 5.1pF.

This addition will provide phase shift at 110 kHz which will improve the fundamental rejection at that frequency.

(applies to all instruments)

(effective on serial number 1730A01958 and above)

The installed value for C32* is 6.2pF. Since the above list already includes this value a schematic change is all that is necessary.

CHANGE NO. 12 (applies to all instruments).

(effective on serial number 1730A00596 and above).

Page 8-5, Table 8-3. Change the part number of A2C23 from 0180-1746 to 0180-2944. The new part is the same value but has a leakage specification of 0.05uA maximum @ 14 VDC.

C23 is used to slow the response time of the rms detector U5, which consequently slows the meter response in the NORMAL mode. In the VU mode C23 is switched out of the circuit. If the dc leakage through C23 exceeds .05uA a dc voltage offset occurs at pin 4 of U5 causing an erroneous meter reading.

Page 8-7, Table 8-3. Change the part number and value of A3C324 from 0180-0374, 10uF to 0180-0374, 15uF.

Page 8-23/8-24, Figure 8-18. Change the schematic value of C324 from 10uF to 15uF.

Raising the value of this capacitor will lower the ac impedance of the -15V power supply to the A2 board. This will improve the operation of the 80 kHz filter.

CHANGE NO. 13 (applies to all instruments) (effective on Serial Number 1730A00776 and above).

8-3, Table 8-3. Change the part number and value of A1C21 from 0180-1745, 1.5uF to 0180-0197, 2.2uF.

Page 8-21/8-22, Figure 8-17. Change the schematic value of C21 from 1.0uF to 2.2uF.

This change reduces the 10Hz ripple in the amplitude control circuits. A large ripple voltage at TP4 can cause CR4 to turn on which causes harmonic distortion.

Page 8-5, Table 8-3. Delete all information on A2C21.

Page 8-19/8-20, Figure 8-16. Delete C21 from the schematic.

This part has been deleted because the newer rms detectors (A2U5) do not require its use.

(effective on serial numbers 1730A00776 to 2025A02646)

Page 8-4, Table 8-3. Change the part number and value of A2C13 from 0160-2244, 3pF to 0160-2236, 1pF.

Page 8-19/8-20, Figure 8-16. Change the schematic value of C13 from 3pF to 1pF.

This change has come about to increase the bandwidth of A2U4. The old rms detector, A2U5, had a peak in the response at 110kHz which compensated for the reduced bandwidth of A2U4. The new detectors (marked AD536AJ) don't have this peak in their frequency response.

(applies to all instruments)
(effective on serial numbers 2025A02646 and above)

Page 8-4, Table 8-3. Delete all information on reference designators A2C11 and A2C13.

Page 8-19/8-20, Figure 8-16. Delete schematic symbols, values, and designators for C11 and C13.

(effective on serial numbers 1730A00776 to 2025A02226)

Page 8-6, Table 8-3. Change the part number and value for A3C114 from 0160-0363, 620pF to 0160-2209, 360pF.

Page 8-13/8-14, Figure 8-13. Change the schematic value of C114 from 620pF to 360pF.

(applies to all instruments)
(effective on serial number 2025A02226 and above)

Page 8-6, Table 8-3. Change the part number and value of reference designator A3C114 from 0160-2209, 360 pF to 0160-0341, 640pF.

Page 8-13/8-14, Figure 8-13. Change the schematic value of C114 from 360pF to 640pF.

CHANGE NO. 14 (applies to all instruments)
(effective on serial number 1730A00844 and above).

Page 8-10, Table 8-3. Change the part number and value for A4R48 and A4R52 from 0698-4435, 2.49kΩ to 0698-3515, 5.9kΩ.

Page 8-17, Figure 8-15. Change the schematic values of R48 and R52 from 2.49kΩ to 5.9kΩ.

This change is being done to decrease the lock-in time of the notch. Low level 120Hz line signals could beat with the fundamental when the 339 is tuned to 100Hz causing "out of specification" distortion readings at 100Hz.

CHANGE NO. 15 (applies to all instruments)
(effective on serial number 1730A00916 and above).

Page 6-6, Table 6-3. Change the part number and value of A3C132* from 0160-2249, 4.7pF to the following list:

0160-2251	CAPACITOR-FXD 5.6pF
0160-2253	CAPACITOR-FXD 6.8pF
0160-2254	CAPACITOR-FXD 7.5pF
0160-2255	CAPACITOR-FXD 8.2pF
0160-2256	CAPACITOR-FXD 9.1pF
0160-2257	CAPACITOR-FXD 10pF
0160-2259	CAPACITOR-FXD 12pF
0160-2261	CAPACITOR-FXD 15pF

Note that the value most often installed by the factory is 10pF. This change is to prevent U101 from oscillating.

Page 8-13/8-14, Figure 8-13. Change the schematic value of C132* from 4.7pF to 10pF.

The two gates of Q100 should be connected to pin 3 of U100 instead of pin 2 as shown. On the schematic break the line between the gates common point and the feedback loop of U100 and draw a new line straight down to TP101 and pin 3 of U100.

Source-follower Q100 keeps the voltage across the input protection diodes constant. Prior to this change the bootstrap voltage came from the feedback network of U100 (pin 2) rather than the input signal, causing distortion at higher frequencies due to the delay in the feedback signal.

CHANGE NO. 16 (effective on serial numbers 1730A00916 to 1730A02436).

Page 6-8, Table 6-3. Add A3R60, part number 2100-3210, value 10kΩ.

Page 8-15/8-16, Figure 8-14. Add R60, a 10k variable resistor, in series with A3E1 photoresistor.

(applies to all instruments)
(effective on serial number 1730A02436 and above)

Page 6-8, Table 6-3. Delete all information on A3R60.

Page 8-15/8-16, Figure 8-14. Remove R60 and replace with a wire jumper.

This was installed to insure that phase control (which runs the error lights) would not pull down to as low a bridge resistance as the amplitude control and the LO frequency lamp always lights to signal when the frequency is too low. It was later removed because it was seldom used.

CHANGE NO. 17 (applies to all instruments) (effective on serial numbers 1730A00850 to 1730A00858 and 1730A00986 and above).

Page 6-6, Table 6-3. Add reference designator A3C28, part number 0160-2264, value 20pF.

Page 6-8, Table 6-3. Change the part number and value for the following reference designators:

A3R42 from 0698-3161 38.3kΩ	to 0757-0454 33.2kΩ
A3R43 from 0757-0451 24.3kΩ	to 0698-3158 23.7kΩ
A3R48 from 0757-0446 15kΩ	to 0757-0452 27.4kΩ
A3R49 from 0698-3152 3.48kΩ	to 0757-0439 6.81kΩ

Page 8-15/8-16, Figure 8-14. Change the schematic values of the resistors above as shown. Add C28, value 20pF in parallel with R49.

The addition of C28 and the change in value of R49 is to eliminate a 5MHz oscillation in A3U3. The other resistor changes allow the

photocells A3E1 and A3E2 to pull the notch in through a wider range of frequencies. Prior to this change, photocells which met specifications but were at the limits would not work.

CHANGE NO. 18 (applies to all instruments)
(effective on serial number 1730A01486 and above)

Page 6-12, Table 6-3. Change the part number of reference designator F2 from 2110-0384 to 2110-0612.

The old fuse caused 3rd order harmonic distortion at low frequencies due to its thermal properties.

CHANGE NO. 19 (effective on serial numbers 1730A01756 to 2025A03427)

Page 6-6, Table 6-3. Change the part number and value of A3C100 from 0160-2251, 5.6pF to 0140-0209, 5pF.

Page 8-13/8-14, Figure 8-13. Change the value of C100 from 5.6pF to 5pF.

This change eliminates the possibility of a short from 10V to ground.

(applies to all instruments)
(effective on serial number 2025A03427 and above)

Page 6-6, Table 6-3. Change the part number and value of A3C100 from 0140-0209, 5pF to 0160-2244, 3pF.

Page 8-13/8-14, Figure 8-13. Change the value of C100 from 5pF to 3pF.

CHANGE NO. 20 (applies to all instruments)
(effective on serial number 2025A02226 and above)

Page 6-6, Table 6-3. Change the part number and value of the following reference designators as shown below:

A3C115 from 0160-2263 18pF to 0140-0190 39pF
A3C116 from 0140-0195 130pF to 0160-0134 220pF

Page 8-13/8-14, Figure 8-13. Change the value of C115 from 18pF to 39pF and of C116 from 130pF to 220pF.

Page 6-5, Table 6-3. Add A2C50 and A2C51 whose part numbers are 0160-4571 and values are .1uF.

Page 6-6, Table 6-3. Add reference designators A2R50 and A2R51 whose part numbers are 0757-0401 and values are 100Ω.

Page 8-19/8-20, Figure 8-16. Add R50, R51, C50, and C51 to the schematic as shown in Figure 4.

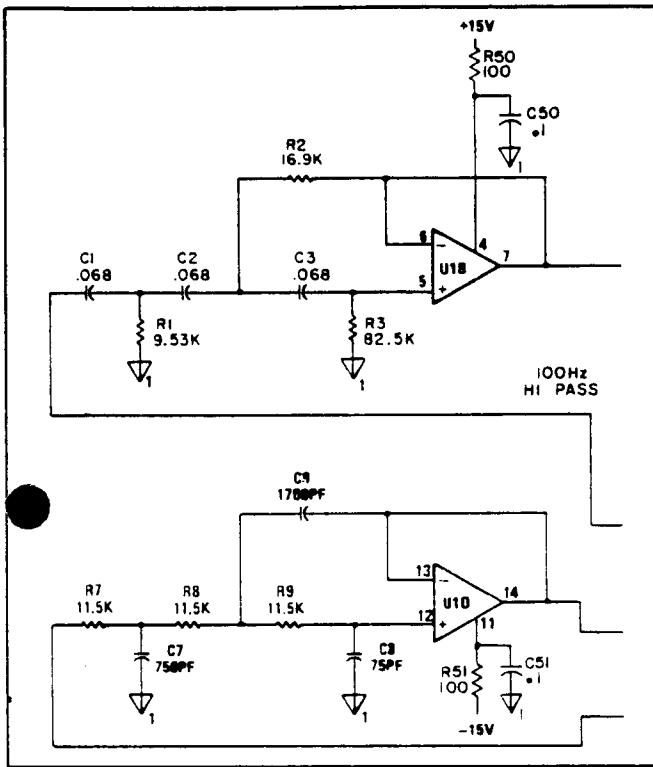


Figure 4

This change is to decouple power supplies on A2U1 to reduce the affect of internal oscillation on the 80kHz filter response. The values of C114, C115 and C116 are changed to compensate for the stray capacitance in the new 00339-26513 printed circuit board. (See change no. 13 for information on C114).

(effective on serial number 2025A02226 to 2025A02436)

Page 8-9, Table 8-3. Change the part number of A3U200 from 1826-0109 to 1826-0413.

(effective from serial number 2025A02226 to 2025A02786)

Page 8-7, Table 8-3. Change the part number and value of A3C205 from 0160-2264, 20pF to 0160-2200, 43pF.

Page 8-15/8-16, Figure 8-14. Change the value of C205 from 20pF to 43pF.

(effective on serial number 2025A02436 to 2025A02786)

Page 8-9, Table 8-3. Change the part number for A3U200 from 1826-0413 to 1826-0081.

(applies to all instruments)

(effective on serial number 2025A02786 and above)

Page 8-9, Table 8-3. Change the part number for A3U200 from 1826-0081 to 1826-0413.

Page 8-7, Table 8-3. Change the part number and value of A3C205 from 0160-2200, 43pF to 0160-2198, 20pF.

Page 8-15/8-16, Figure 8-14. Change the value of C205 from 43pF to 20pF.

These changes reduce noise in the Analyzer Mode due to the LM-318 Op Amp. Meter readings at 1kHz with a clean source are typically -94dB. With the HA 2605 the meter typically reads -96dB.

CHANGE NO. 21 (applies to all instruments)
(effective on serial number 2022A02156 and above).

Page 8-14, Table 8-3. Change the part numbers for the following miscellaneous parts:

MP9 from 00339-00603 to 00339-00613
MP10 from 00339-00601 to 00339-00611
MP11 from 00339-00602 to 00339-00612
MP14 from 00339-00604 to 00339-00614
MP15 from 00339-00605 to 00339-00615

(effective on SM 1730A02156 and above)

Page 8-13, Table 8-3. Add part number 00339-23201, Qty 5. Coupler, Shaft.

CHANGE NO. 22 (applies to all instruments)
(effective on serial number 2025A02296 and above).

Page 8-4, Table 8-3. Change the part number of A1U2 from 1826-0315 to 1826-0557.

Page 8-6, Table 8-3. Change the part number of A2U8 from 1826-0315 to 1826-0557.

Page 8-7, Table 8-3. Delete all information on A3J2.

Page 8-10, Table 8-3. Change the part number of A4U3, A4U5, and A4U6 from 1826-0315 to 1826-0557.

(effective on serial numbers 1730A02156 to 2025A03716)

Page 8-8, Table 8-3. Change the part number for A2U1 from 1826-0315 to 1826-0557.

The change of IC part numbers is to a ceramic part to prevent field failures due to phosphorus contamination.

(applies to all instruments)
(effective on Serial Number 2025A03716 and above)

Page 8-8, Table 8-3. Change the part number of A2U1 from 1826-0557 to 1826-0323.

CHANGE NO. 23 (applies to all instruments)
(effective on serial number 2025A02366 and above).

Page 8-11, Table 8-3. Add part number 00339-00616, "SHIELD, PCB".

CHANGE NO. 24 (applies to all instruments)
(effective on serial number 1730A02436 and above).

Page 8-7, Table 8-3. Change the part number and value for A3F100 from 2110-0011, .062A to 2110-0236, .1A.

Page 8-13/8-14, Figure 8-13. Change the value of F100 from .062A to .1A.

CHANGE NO. 25 (effective on serial numbers 2025A02436 to 2025A02786).

Page 8-7, Table 8-3. Delete all information on A3C202, A3C203, A3C204, A3CR200, and A3CR201.

Page 8-15/8-16, Figure 8-14. Delete schematic symbols, values, and designators for C202, C203, C204, CR200, and CR201.

(applies to all instruments)
(effective on serial number 2025A02786 and above)

Page 8-7, Table 8-3. Add the following reference designators, part numbers, and values:

A3C204 0160-2201 51pF
A3CR200 1901-0040 Diode
A3CR201 1901-0040 Diode

Page 8-15/8-16, Figure 8-14. Replace C204, CR200 and CR201 where they were in the schematic originally.

The end result is to delete C202 and C203.

CHANGE NO. 26 (applies to all instruments).

Page 8-13, Table 8-3. Change the description of part number 00339-04004 from "KNOB, TENS" to "KNOB, UNITS". Change the description of part number 00339-04005 from "KNOB, UNITS" to "KNOB, TENS".

CHANGE NO. 27 (applies to all instruments)
(effective on serial number 1730A02716 and above).

Page 8-12, Table 8-3. Just above the listing of W4 add part number 00339-61915, "SWITCH ASSY." and move the reference designator W4 up to the new listing. Just above the listing of W5 add part number 00339-61916, "SWITCH ASSY." and move the reference designator W5 up to the new listing.

Page 8-13, Table 8-3. Just above the listing of W10 add part number 00339-61917, "SWITCH ASSY." and move the reference designator W10 up to the new listing.

CHANGE NO. 28 (effective on serial numbers 2025A02646 to 2025A03716).

Page 8-4, Table 8-3. Change the part number and value of the reference designators below as listed:

A2C4 from 0160-0341 640pF to 0160-2940 470pF
A2C5 from 0160-2201 51pF to 0140-0192 68pF

Page 8-19/8-20, Figure 8-16. Change the value of C4 from 640pF to 470pF and that of C5 from 51pF to 68pF.

(applies to all instruments)
(effective on serial number 2025A03716 and above)

Page 8-4, Table 8-3. Change the part number and value of the reference designators below as listed:

A2C4 0160-2940 470pF to 0140-0234 500pF
A2C5 0140-0192 68pF to 0160-3083 62pF

Page 8-19/8-20, Figure 8-16. Change the value of C4 from 470pF to 500pF and that of C5 from 68pF to 62pF.

This change improves, 1)gain above 100kHz, and 2)80kHz filter response. Changing A2R6 is part of this update. See change no. 29.

(applies to all instruments)
(effective on serial number 2025A02646 and above)

Page 8-4, Table 8-3. Change the part number and value of A2C15 from 0160-2201 51pF to 0160-2204 100pF.

Page 8-19/8-20, Figure 8-16. Change the value of C15 from 51pF to 100pF.

Page 8-13, Table 8-3. Change the part numbers and descriptions of the following items:

from 2110-0465 to 2110-0564 FUSEHOLDER
from 2110-0467 to 2110-0565 CAP, FUSEHOLDER
from 2110-0470 to 2110-0569 NUT, FUSEHOLDER

CHANGE NO. 29 (applies to all instruments)
(effective on serial number 2025A03716 and above).

Page 8-13, Table 8-3. Change the part number of W7 from 00339-61607 to 00339-61612 and that of W7S10 from 3101-1656 to 3101-2216. The description for W7S10 should read "SWITCH POWER". Below that listing delete all information on part number 5040-5932 and add 8120-0593, "CABLE SHIELD".

Page 8-14, Table 8-3. Change the part number of MP1 from 00339-00201 to 00339-00211 and that of MP2 from 00339-00202 to 00339-00212.

Page 8-5, Table 8-3. Change the part number and value for A2R6 from 0698-4445, 5.76kΩ to 0698-3382, 5.49kΩ.

Page 8-19/8-20, Figure 8-16. Change the value of R6 from 5.76kΩ to 5.49kΩ.

This is part of the change to improve, 1)gain above 100kHz, and 2) 80kHz filter response. See change no. 28.

CHANGE NO. 30 (applies to all instruments)
(effective on serial number 2025A03786 and above).

Page 8-11, Table 8-3. Change the part number 3100-3423 to 3100-1663.

When PN 3100-3423 went from hill-and-valley to a unidex indexer it was necessary to change part numbers. The new and old PNs are completely interchangeable.

CHANGE NO. 31 (applies to all instruments)
(effective on serial number 2025A02716 and above).

Page 8-6, Table 8-3. Change the part number and value of A3C110 from 0140-0192, 68pF to 0140-0190, 39pF

Page 8-9, Table 8-3. Add cable assy 00339-61613 at the end of the listings for the A3 board.

Page 8-13/8-14, Figure 8-13. Change the value of C110 from 68pF to 39pF.

These changes improve range-to-range accuracy.

Page 8-14, Table 8-3. Add part number 5041-3124, PUSH ROD.

CHANGE NO. 32 (applies to all instruments).

Page 8-7, Table 8-3. Change the part number of A3Q100 from 1855-0360 to 1855-0458.

This change is being made because PN 1855-0360 is being discontinued by the vendor.

Page 6-6, Table 6-3. Add "SOCKET, 14 PIN IC", part number 1200-0638 to the replaceable parts list at the end of the listings for the A2 board.

Page 6-5, Table 6-3. Add "HOLD DOWN SPRING", part number 1460-1581 to the replaceable parts list after the listing of A2K1.

Prior to this change this part could only be ordered as part of the relay.

CHANGE NO. 33 (applies to all instruments)
(effective on serial number 2025A03571 and above).

Page 6-10, Table 6-3. Change the part number of A4U2 and A4U4 from 1820-0427 to 1826-0934.

A separate PN for Signetics part was established because PN 1820-0427 will no longer give the fundamental rejection required by the 339A.

CHANGE NO. 34 (applies to all instruments).

6-6, Table 6-3. Change the part number of A3C16 and A3C17 from 0160-3622 to 0150-0084. The value does not change.

Change the part number and value of A2R35 from 2100-0567, 2kΩ to 2100-3252, 5kΩ.

CHANGE NO. 35 (applies to all instruments).

Page 6-3, Table 6-3. Change the part number of A1 from 00339-66501 to 00339-66511.

Page 6-4, Table 6-3. Change the part numbers of the components listed below:

A1S6 from 00339-61902 to 00339-61906
A1S7 from 00339-61903 to 00339-61907
A1S8 from 00339-61904 to 00339-61908
A2 from 00339-66502 to 00339-66512

Add to the description of part number 3100-3421 (under A1S6) "MULTIPLIER". Change the description of A1S7 from "UNITS" to "TENTHS". Add to the description of part number 3100-3422 (under A1S7) "TENTHS". Change the description of A1S8 from "TENTHS" to "UNITS".

6-6, Table 6-3. Change the part number of A3 from 00339-66503 to 00339-66513.

Page 6-9, Table 6-3. Change the part numbers of the components listed below:

A3S1 from 00339-61905 to 00339-61901
A3S2 from 00339-61906 to 00339-61902
A3S3 from 00339-61907 to 00339-61903
A3S4 from 00339-61908 to 00339-61904
A3S5 from 00339-61909 to 00339-61905

Page 6-11, Table 6-3. Change the part number for A5S9 from 00339-61901 to 00339-61909.

Page 6-13, Table 6-3. Delete the part number 0370-2990 KNOB, RND W/BAR.

Page 6-14, Table 6-3. Change the part number of MP16 from 00339-00606 to 00339-00616. Add the part number 5041-0531, KEY CAP.

CHANGE NO. 36 (applies to all instruments)
(effective on serial number 1730A01956 and above).

Page 6-9, Table 6-3. Change the part number and value of A4R2 from 0757-0472, 200kΩ to 0698-4211, 158kΩ.

At the bottom of the page, change the note to read "with serial numbers 1730A00196 to 1730A00266."

Page 8-17, Figure 8-15. Change the value of R2 (feedback on U1) from 200k to 158k.

Page 6-10, Table 6-3. Change the following part numbers and values:

A4R21 from 0698-4486 24.9k to 0698-3243 178k
A4R22 from 0698-4486 24.9k to 0698-3243 178k
A4R49 from 0757-0447 16.2k to 0698-3228 49.9k
A4R51 from 0757-0447 16.2k to 0698-3228 49.9k
A4R53 from 0757-0280 1.0k to 0757-0273 3.01k

Page 8-17, Figure 8-15. Change the values on the schematic as listed above.

These changes were made to reduce internally generated 2nd harmonic distortion. These changes slow down the 339A response as shown below:

Frequency	Pull-in Time	
	Before Change	After Change
10Hz	10 sec.	12 sec.
1Hz	4 sec.	9 sec.
100kHz	3 sec.	6 sec.

CHANGE NO. 37 (applies to all instruments)
(effective on serial number 2025A03556 and above).

Page 6-13, Table 6-3. Change the following part numbers as listed:

Old	New	
00339-04001	00339-04007	KNOB, DISTORTION RANGE
00339-04002	00339-04008	KNOB, INPUT RANGE
00339-04003	00339-04009	KNOB, OSC LEVEL
00339-04004	00339-04010	KNOB, UNITS
00339-04005	00339-04011	KNOB, TENTHS
00339-04006	00339-04013	KNOB, MULTIPLIER
0370-1099	0370-3054	KNOB, POINTER
0370-2994	0370-3055	KNOB, POINTER

CHANGE NO. 38 (applies to all instruments).

In Section V, Adjustments, make the following changes:

Page 5-2. Add paragraph 5-14d to read, "Set the frequency multiplier control to each range and verify that the voltage level at A1TP8 remains negative."

Paragraph 5-17. Under Equipment Required, Low Distortion Oscillator, (-hp- Model 339A) should read "(-hp- Model 239A)."

Page 5-3, Paragraph 5-17b. On the listing INPUT RANGE...3V, the "3V" should have listed beside it, "(+10dBV)".

Paragraph 5-17c should read, "Set the controls of the 239A signal source to obtain a 1kHz (1.0 x 1k) signal. Adjust the output level for a full scale meter indication of 0 dBV on the instrument under test."

Add a paragraph between 5-17g and 5-17h that reads, "Set the 239A level controls for a -10dB indication on the 3571A."

Page 5-4. Paragraph 5-17k should read, "Adjust the output of the 239A for a full scale meter indication on the unit under test."

Paragraph 5-17a should read, "Set the frequency of the 239A to 10Hz (1.0 x 10). Adjust the output level for a full scale meter indication on the instrument under test."

Paragraph 5-17a should have added to the end of it, "This reading must be >-95dB."

Paragraph 5-18. Under Equipment Required, Low Distortion Oscillator, (-hp-Model 339A) should read "(-hp- Model 239A)".

Paragraph 5-18c should read, "Adjust the 239A signal source to provide a 10kHz, 1V signal."

Page 5-7/5-8, Figure 5-3. Switch the part designators and adjustment descriptions on A2R37 and A2R17 shown in the lower left corner of the drawing.

CHANGE NO. 39

(effective on serial numbers 2025A04006 thru 2025A04160)

Page 6-7, Table 6-3. Change the part number of A3Q100 from 1855-0458 to 1855-0269.

This change was made because the vendor discontinued the part.

CHANGE NO. 40 (applies to all instruments)

(effective on serial numbers 2025A04161 and above)

Page 6-7, Table 6-3. Change the part number of A3Q100 from 1855-0269 to 1855-0230.

This change was made because the input circuit has better distortion performance with a depletion mode MOSFET. This part should be used in all instruments.

Page 6-5, Table 6-3. Change the part number and value of A2R16 from 0757-0422, 909 ohms to 0757-0420, 750 ohms. Change the part number and value of A2R17 from 2100-3212, 200 ohms to 2100-0554, 500 ohms.

Page 8-19/8-20, Figure 8-16. Change the schematic value of R16 from 909 to 750 and that of R17 from 200 to 500.

This change was made to give control over a larger percentage of full scale deflection of the meter. This allows meters to be used from the full range of the meter specification.

CHANGE NO. 41 (applies to all instruments)

Page 6-5, Table 6-3. Under A2K1, change HOLD DOWN SPRING 1460-1581 to RELAY HIDDNSP 1460-1612.

Page 1-3, Table 1-1. In the OSCILLATOR section under *Distortion*, change the table of specifications to read as below:

10 Hz to 20 kHz	< -93 dB (0.0022%)THD
20 kHz to 30 kHz	< -85 dB (0.0056%)THD
30 kHz to 50 kHz	< -80 dB (0.01%)THD
50 kHz to 80 kHz	< -70 dB (0.032%)THD
80 kHz to 110 kHz	< -65 dB (0.056%)THD

Page 4-8, Table 4-5. Change the table to read as below.

339A Frequency	THD Specification
10 Hz	< -93 dB
100 Hz	< -93 dB
1 kHz	< -93 dB
10 kHz	< -93 dB
20 kHz	< -93 dB
30 kHz	< -85 dB
50 kHz	< -80 dB
80 kHz	< -70 dB
109 kHz	< -65 dB

Note: The change to this table reflects the specification change and a change in relative symbols which was an error in the original manuscript (-94 dB is less than, not >, -93 dB).

Page 4-10, Table 4-6. Change all "greater than" signs to "<". (See note above.)

Page 4-15, Performance Test Record, Oscillator Total Harmonic Distortion Test: Change the table to read as below:

339A Output Frequency	Calculated THD	Test Limit
10 Hz		-93 dB
100 Hz		-93 dB
1 kHz		-93 dB
10 kHz		-93 dB
20 kHz		-93 dB
30 kHz		-85 dB
50 kHz		-80 dB
80 kHz		-70 dB
109 kHz		-65 dB

hp MANUAL CHANGES

-hp- MODEL 339A OPTION 001

DISTORTION MEASUREMENT SET

Manual Part No. 00339-90001

■ New or Revised Item

How To Use This Change Sheet.

This change sheet, unlike most, is designed to be a supplement to your 339A Operating and Service Manual rather than a list of corrections or changes. Included is a description of Option 001 for the 339A along with specifications, performance test, replaceable parts, theory of operation, and schematics which apply to instruments with Option 001 installed.

Unless noted inside this supplement, specifications, performance test, and other data published in your Operating and Service Manual for the standard -hp- 339A will apply to Option 001 instruments.

Description.

An -hp- 339A with Option 001 installed is a standard 339A Distortion Measurement Set with two additional voltmeter input ranges. These ranges are .3mV and .1mV full scale. Measurements capabilities are from .1mV rms full scale to .3mV rms full scale in a frequency range of 10Hz to 80kHz, and from .001V rms full scale to 300V rms full scale in a frequency range of 10Hz to 110kHz.

When switched to the .3mV range, the voltmeter attenuator is set to 0dB. When switched to the .1 mV range, the voltmeter attenuator remains at 0dB and 10dB of gain is added to the input amplifier. This gives the required input for full scale deflection on the front panel voltmeter.

These changes in voltmeter range have been accomplished by adding two additional positions on S4 of the Analyzer/Power Supply printed circuit assembly.

Specifications.

Table 1-1a is a supplement to Table 1-1 in the standard Instrument Operating and Service Manual.

Recommended Test Equipment.

Equipment listed in Table 1-3 of the 339A Operating and Service Manual is also used on Option 001 instruments. In addition, to allow Full-Scale Accuracy and Frequency Response testing, the equipment listed in Table 1-3a is needed for Option 001 instruments.

Table 1-1a. Specifications.

Voltage Range:			
standard:	1mV rms full scale to 300V rms full scale (-60dB to +50dB full scale, meter calibrated in dBV and dBm into 500 ohm).		
option 001:	.1mV rms full scale to 300 V rms full scale (-80dB to +50dB full scale, meter calibrated in dBV and dBm into 600 ohm).		
Accuracy (% of range setting):			
standard:	20Hz to 20kHz	$\pm 2\%$	@ INPUT RANGE .001V to 300V
	10Hz to 110kHz	$\pm 4\%$	
option 001:	20Hz to 20kHz	$\pm 2\%$	@ INPUT RANGE .001V to 300V
	10Hz to 110kHz	$\pm 4\%$	
	20Hz to 20kHz	$\pm 2\%$	@ INPUT RANGE .1mV and .3mV
	10Hz to 30kHz	$\pm 4\%$	
	30kHz to 80kHz	+ 10%, - 30%	
Internal Noise Floor:			
option 001:	Filter Setting	Noise Level	
	30kHz	6uV	
	80kHz	8uV	

Table 1-3a. Recommended Test Equipment.

Instrument	Critical Specification	Recommended Model	Use
Resistors	100k ohm 1% metal film 100 ohm 1% metal film	-hp- Part No. 0757-0465 -hp- Part No. 0757-0401	P P
P = performance test			

Operation.

The ac voltmeter section of the Model 339A Option 001 measures the true rms value of input voltages from .1mV full scale to 300V full scale in fourteen ranges. Frequency range of the meter section is 10Hz to 80kHz for the .1mV and .3mV input ranges, and 10Hz to 110kHz for the .001V to 300V input ranges.

Performance Test.

All the performance test given in the standard 339A Operating and Service Manual are valid for use on instruments with Option 001. The following test is added to allow verification of Full-Scale Accuracy and Frequency Response of instruments with Option 001 installed.

Full-Scale Accuracy and Frequency Response Test (Option 001).**Equipment Required:**

ac calibrator (-hp- Model 745A)
100k ohm resistor (-hp- Part No. 0757-0465)
100 ohm resistor (-hp- Part No. 0757-0401)

a. Set the 339A controls as follows:

FUNCTION	INPUT LEVEL
FILTERS	OFF (out)
METER RESPONSE	VU
INPUT RANGE1mV
INPUT/GND SELECT	DIS. AN/ (center position)

b. Set-up the test equipment as shown in Figure 4-1a.

c. Set the AC Calibrator controls for an output of .1V @ 10Hz.

d. The 339A .1mV 10Hz meter indication should be within the Test Limits listed in Table 4-1A.

e. Using the AC Calibrator, verify the 339A Voltmeter accuracy for each .1mV Test Frequency in Table 4-1a.

f. Set the 339A controls as follows:

INPUT RANGE3mV
-----------------------	------

g. Set the AC Calibrator controls for an output of .3mV @ 10Hz.

h. The 339A .3mV 10Hz meter indication should be within the Test Limits listed in Table 4-1A.

i. Using the AC Calibrator, verify the 339A Voltmeter accuracy for each .3mV Test Frequency in Table 4-1a.

Table 4-1a. Full-Scale Accuracy and Frequency Response Test Limits for Option 001.

Input Range & Input Level	FREQUENCY							
	10Hz	20Hz	100Hz	1kHz	10kHz	20kHz	30kHz	80kHz
	($\pm 4\%$)	TEST LIMITS				($\pm 4\%$)	($\pm 10\%, -30\%$)	
.0001V	.000096-.000104	.000098-.000102				.000096-.000194	.000070-.00011	
.0003V	.000288-.000312	.000294-.000306				.000288-.000312	.00021-.00033	

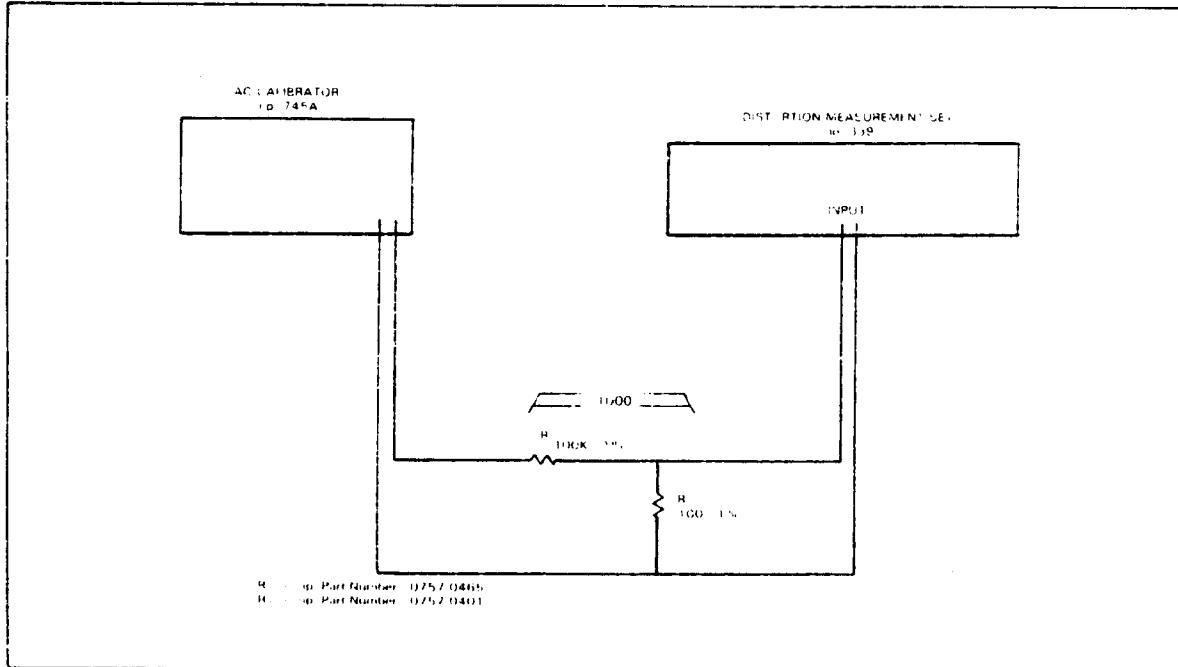


Figure 4-1a. Full-Scale Accuracy and Frequency Response Test Equipment Set-up For Option 001.

VOLTMETER PERFORMANCE (Option 001).

Full-Scale Accuracy and Frequency Response Test:				
339A Input Level	339A Input Range	339A 20Hz Reading	30kHz Reading	Test Limits ($\pm 4\%$)
.0001	.0001			.000096-.000104
.0003	.0003			.000288-.000312

Input Level	339A Input Range	339A 20Hz Reading	339A 100Hz Reading	339A 1kHz Reading	339A 10kHz Reading	339A 20kHz Reading	Test Limits ($\pm 2\%$)
.0001	.0001						.000098-.000102
.0003	.0003						.000294-.000306

Input Level	339A Input Range	339A 80kHz Reading	Test Limits ($+10\%$, -30%)
.0001	.0001		.000070-.00011
.0003	.0003		.00021-.00033

Replaceable Parts:

The -hp- 339A Distortion Measurement Set with option 001 installed uses an A53 Analyzer/Power Supply assembly instead of an A3 Analyzer/Power Supply. The boards are electrically the same with the following exceptions:

1. S4 has been changed to accommodate the two additional voltmeter input ranges. R127, 50.51Ω, R126, 10kΩ and C126, 100pF are included as part of the switch assembly.
2. C323, C324, and R314 have changed values.

Table 6-3a. Replaceable Parts

Reference Designator	-hp- Part No.	Qty	Description
A53	00339-66553	1	Analyzer/Power Supply Assy.
S4	00339-61914 3100-1657	1	Switch Assy. Rotary
R126	0757-0442	1	Switch, Rotary
C126	0160-4801	1	Resistor-fxd 10k .01 1/8
R127	0699-0053	1	Capacitor-fxd 100pF 100V
	00339-04014 1500-0580 3130-0552	1	Resistor-fxd 50.51Ω .25
	00339-04014 1500-0580 3130-0552	2	Knob Assy. INPUT RANGE
	0180-0339 0180-0339	2	Coupler, Flex
C323	0180-0339	1	Detent
C324	0180-0339	2	Capacitor-fxd 50uF 16V
R314	0683-1025	1	Capacitor-fxd 50uF 16V
	0683-1025	1	Resistor-fxd 1k .05 1/4

Theory of Operation

The Input Amplifier operation for instruments with option 001 is the same as that of standard instruments except that two simple modifications have been added to allow for the two additional input ranges.

First, a fourteen position switch replaces the twelve position switch of the standard instrument. This allows the output attenuation to go to 0dB when either .1mV or .3mV input ranges of the voltmeter are selected.

Second, R127 (a 50.51Ω resistor) is included as part of the fourteen position switch to add 10dB of gain to the input amplifier when the .1mV input range of the voltmeter is selected.

Other A53 board changes:

The value of R314 decreased to 1k Ω to reduce 120Hz pulses picked up on the .1mV scale (due to imbalance in power supply bypassing).

The values of C323 and C324 are increased to improve bypassing and stability in the 25kHz to 50kHz region.

C126 and R126 provide input compensation needed to prevent oscillation on the 0.1mV range with a high impedance source. They cancel the negative input impedance effects of U100.



Figure 8-2A is a simplified block diagram of the input amplifier of Option 001 instruments. The schematic is a revised version of Figure 8-13 found in the standard instrument Operating and Service Manual. It shows the electrical modifications performed to generate an -hp- 339A Option 001 instrument.

Other board changes:

Because a different (shaft) coupler is used on the INPUT RANGE assembly, C40 on the oscillator board needs to be repositioned as per figure below. When ordering a replacement oscillator assembly for the 339A option 001, use part number 00339-66551. This part will come with C40 in the proper place.

00339-66511

00339-66551

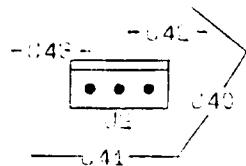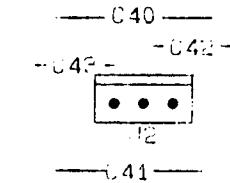


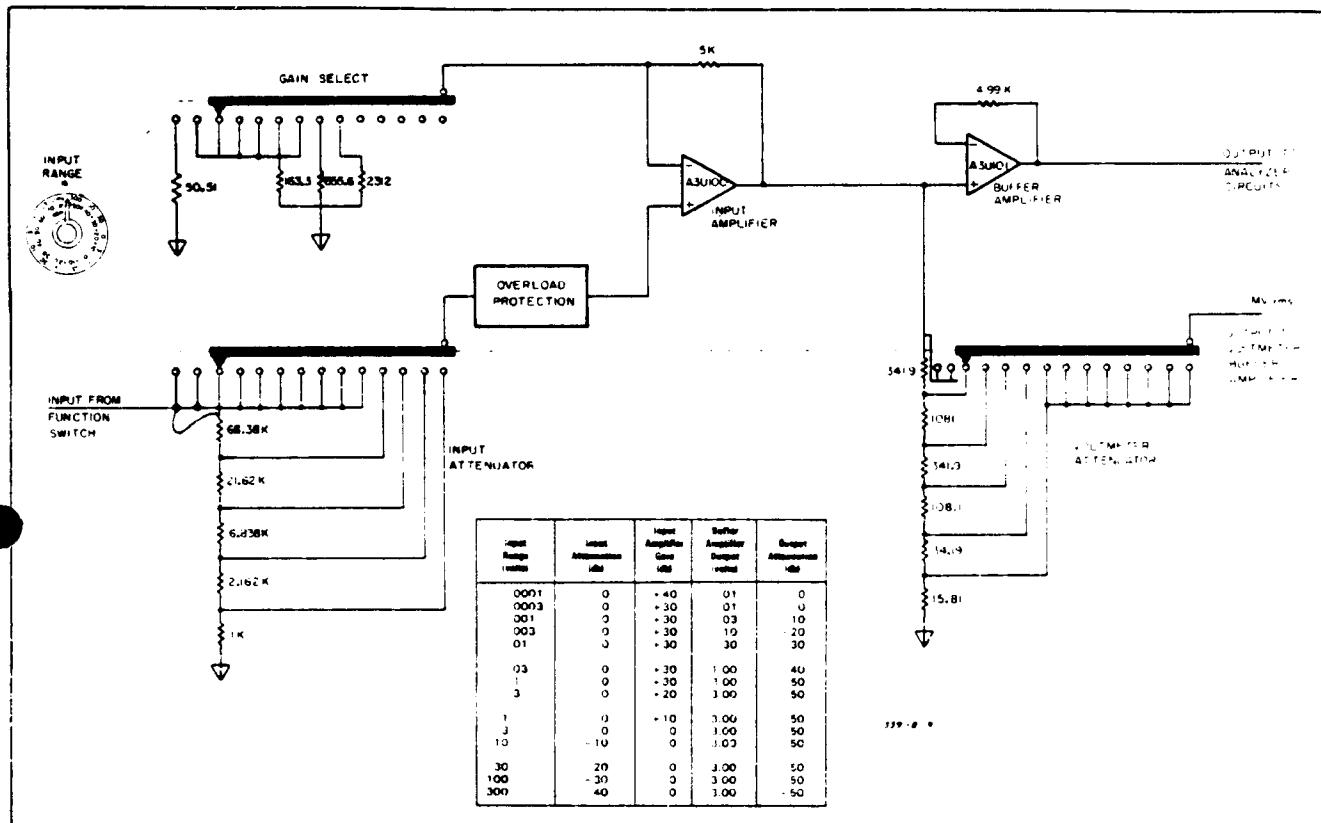


Figure 8-2a. Simplified Input Amplifier Schematic For Option 001 Instruments.



p/o Figure 8-13. Input Attenuator and Input Amplifier Option 001 Instruments.

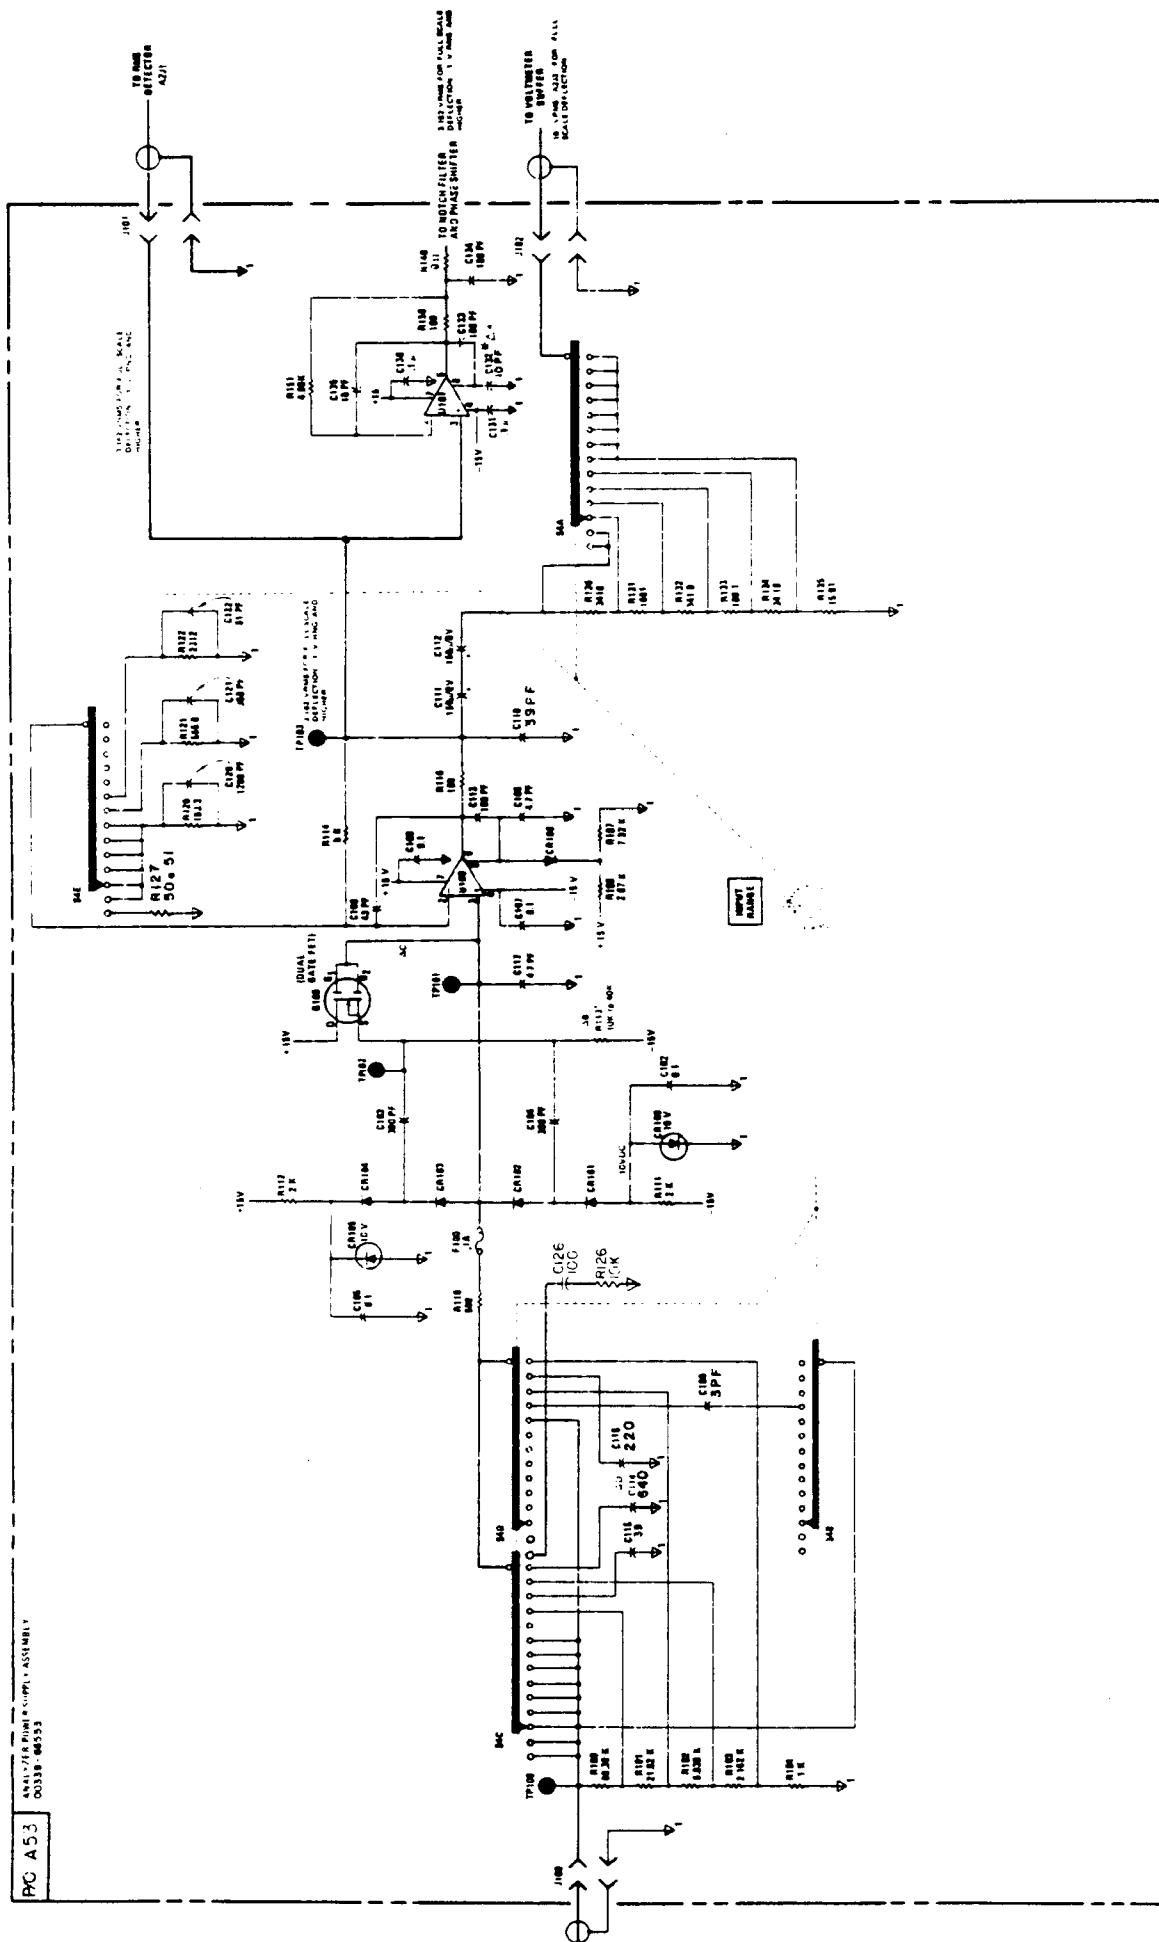

This manual is provided FREE OF CHARGE from the "BoatAnchor Manual Archive" as a service to the Boatanchor community.

It was uploaded by someone who wanted to help you repair and maintain your equipment.

If you paid anyone other than BAMA for this manual, you paid someone who is making a profit from the free labor of others without asking their permission.

You may pass on copies of this manual to anyone who needs it. But do it without charge.

Thousands of files are available without charge from BAMA. Visit us at <http://bama.sbc.edu>