



NORTEL

Nortel Communication Server 1000

Features and Services Fundamentals — Book 6 of 6 (S to Z)

Release: 7.0

Document Revision: 04.01

www.nortel.com

NN43001-106

Nortel Communication Server 1000
Release: 7.0
Publication: NN43001-106
Document release date: 4 June 2010

Copyright © 1994-2010 Nortel Networks. All Rights Reserved.

While the information in this document is believed to be accurate and reliable, except as otherwise expressly agreed to in writing NORTEL PROVIDES THIS DOCUMENT "AS IS" WITHOUT WARRANTY OR CONDITION OF ANY KIND, EITHER EXPRESS OR IMPLIED. The information and/or products described in this document are subject to change without notice.

Nortel, Nortel Networks, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

All other trademarks are the property of their respective owners.

Contents

New in this release	25
Features	25
Other	25
Revision History	25
How to get help	29
Getting help from the Nortel web site	29
Getting help over the telephone from a Nortel Solutions Center	29
Getting help from a specialist by using an Express Routing Code	29
Getting help through a Nortel distributor or reseller	30
Features and Software options	31
Scheduled Access Restrictions	73
Contents	73
Feature description	73
Operating parameters	74
Feature interactions	75
Access Restrictions	75
Automatic Redial	75
Attendant Clearing during Night Service	75
Authorization Code Security Enhancement	75
Basic Alternate Route Selection	75
Call Detail Recording	75
Charge Account, Forced	76
Class of Service	76
Controlled Class of Service	76
Coordinated Dialing Plan	76
Direct Inward System Access	76
Electronic Lock Network Wide/Electronic Lock on Private Lines	76
Multi-Tenant Service	76
Network Alternate Route Selection	77
Network Class of Service	77
New Flexible Code Restriction	77
Office Data Administration System	77

Position Busy with Call on Hold	77
Speed Call, Network Speed Call	77
Trunk Group Access Restriction	77
Feature packaging	77
Feature implementation	78
Task summary list	78
Feature operation	84
Modification of SAR Restrictions	84
Scheduled Electronic Lock	87
Contents	87
Feature description	87
Scheduled Electronic Lock Example	88
Operating parameters	88
Feature interactions	89
Automatic Call Distribution	89
Direct Inward System Access	89
Electronic Lock Network Wide / Electronic Lock on Private Lines	89
Message Intercept	89
Multi Tenant Service	89
Scheduled Access Restrictions	89
Feature packaging	89
Feature implementation	89
Task summary list	89
Feature operation	93
Secrecy Enhancement	95
Contents	95
Feature description	95
Operating parameters	95
Feature interactions	96
AC15 Recall: Timed Reminder Recall	96
Attendant Break-In with Secrecy	96
Attendant Recall	96
Semi-Automatic Camp-On	96
Secrecy	96
Slow Answer Recall Enhancement	96
Source Included when Attendant Dials	96
Feature packaging	96
Feature implementation	96
Feature operation	97
Secretarial Filtering	99
Contents	99
Feature description	99

Operating parameters	99
Feature interactions	100
Call Forward/Hunt Override Via Flexible Feature Code	100
Network Intercom	100
Phantom Terminal Numbers (TNs)	100
Feature packaging	100
Feature implementation	100
Feature operation	100

Seizure Acknowledgment	101
-------------------------------	------------

Contents	101
Feature description	101
Operating parameters	101
Feature interactions	101
Feature packaging	102
Feature implementation	102
Feature operation	102

Selectable Conferee Display and Disconnect	103
---	------------

Contents	103
Feature description	103
Conference Count Display	104
Selectable Conferee Disconnect	109
Operating parameters	111
Conference Count Display	112
Selectable Conferee Disconnect	112
Feature interactions	113
Attendant	113
Attendant Barge-In	114
Attendant Break-In	114
Attendant Administration	114
Automatic Call Distribution	115
Agent Observe	115
ACD Agent Features	115
Alternate Call Answer	115
Agent and Supervisor Communication	115
Emergency Key	116
ACD Display Enhancement	116
ACD In-Calls Key	116
Application Module Base	116
Automatic Hold	116
Basic Rate Interface	116
Bridging	116
Conference	117
Conference Control	117

Digitone Receiver	117
Display Key	117
DNIS Across Call Modifications	117
End-to-End Signaling	117
Group Call	118
Hold	118
Meridian Link	118
No Hold Conference	118
Nortel Integrated Conference Bridge	118
Override	118
Priority Override	118
Privacy	119
Privacy Override	119
Tone and Digit Switch	119
Feature packaging	119
Feature implementation	119
Task summary list	119
Feature operation	121
Viewing the list of active conferees	121
Disconnecting one conferee	122
Disconnecting more than one conferee	122
Disconnecting the same conferee	122
Verifying that a conferee has been disconnected	123
Canceling the Selectable Conferee Disconnect operation	123
Disconnecting from an active conference	123

Selectable Directory Number Size	125
---	------------

Contents	125
Feature description	125
Operating parameters	125
Feature interactions	125
Feature packaging	126
Feature implementation	126
Feature operation	126

Semi-Automatic Camp-On	127
-------------------------------	------------

Contents	127
Feature description	127
Operating parameters	128
Feature interactions	128
Attendant Blocking of Directory Number	128
Attendant Break-In	129
Call Forward/Hunt Override Via Flexible Feature Code	129
Incoming calls during recall	129
Periodic Camp-On Tone	129

Secrecy and Enhanced Secrecy	129
Source Included when Attendant Dials	129
Feature packaging	129
Feature implementation	129
Task summary list	129
Feature operation	130
Recall timing on Camp-On calls	131
Series Call	133
Contents	133
Feature description	133
Operating parameters	134
Feature interactions	134
Attendant Position Busy	134
Call Detail Recording	134
Night Service	134
Timed Reminder Recall	134
Feature packaging	134
Feature implementation	134
Task summary list	134
Feature operation	135
Set-Based Administration Enhancements	137
Short Buzz for Digital Telephones	139
Contents	139
Feature description	139
Operating parameters	139
Feature interactions	139
Directory Number Delayed Ringing	139
Group Call	139
Feature packaging	140
Feature implementation	140
Feature operation	140
Single Appearance Directory Number	141
Contents	141
Feature description	141
Operating parameters	141
Feature interactions	141
Directory Number Expansion	141
Feature packaging	141
Feature implementation	142
Task summary list	142
Feature operation	143

Single-digit Access to Hotel Services	145
Contents	145
Feature description	145
Operating parameters	145
Feature interactions	145
Feature packaging	146
Feature implementation	146
Task summary list	146
Feature operation	147
Slow Answer Recall Enhancement	149
Contents	149
Feature description	149
Call Waiting Recalls and Camp-on Recalls	150
Operating parameters	151
Feature interactions	151
Attendant Recall with Splitting, Multi-Party Operations , Secrecy Enhancement	151
Call Waiting Recall, Camp-on Waiting Recall	151
Intercept Computer Dial from Directory	151
Feature packaging	151
Feature implementation	151
Feature operation	152
Slow Answer Recall Enhancement	152
Call Waiting Recall	152
Camp-on Recall	152
Slow Answer Recall for Transferred External Trunks	153
Contents	153
Feature description	153
Operating parameters	154
Feature interactions	154
AC15 Recall: Transfer from Norstar	154
Attendant Recall	154
Call Forward No Answer	154
ICP Network Screen Activation, Flexible DN, Meridian Mail Interactions	154
Multi-Party Operations	154
Network Attendant Service Anti-tromboning	154
Feature packaging	154
Feature implementation	155
Task summary list	155
Feature operation	155
Software Licenses	157
Contents	157

Feature description	157
Service License	158
System License	158
Preset License	159
Phantom TNs and Virtual TNs	159
License parameters	162
Licenses and TN configurations	163
Service Level License default settings and increment values	169
System Level License default settings and increment values	170
Maximum License limits	173
System monitoring	174
System administration	176
Operating parameters	177
Feature interactions	177
Feature packaging	177
Feature implementation	179
Feature operation	179

Source Included when Attendant Dials	181
---	------------

Contents	181
Feature description	181
Operating parameters	182
Feature interactions	182
Attendant Blocking of Directory Number	182
Attendant Break-In	182
Attendant Supervisory Console	182
Automatic Call Distribution	182
Camp-On, Semi-automatic Camp-On	182
Intercept treatment	182
Meridian Mail	183
Recorded Announcement, Music	183
Secrecy Enhancement	183
Feature packaging	183
Feature implementation	183
Feature operation	183

Special Dial Tones after Dialed Numbers	185
--	------------

Contents	185
Feature description	185
Operating parameters	186
Feature interactions	186
Digital Private Network Signaling System (DPNSS1)/Digital Access Signaling System (DASS2) Uniform Dialing Plan (UDP) Interworking	186
Digital Trunk Interface (DTI) - Commonwealth of Independent States (CIS)	186

EuroISDN Master Mode	186
Special dial tone after access codes	186
Feature packaging	186
Feature implementation	187
Task summary list	187
Feature operation	187
Special Signaling Protocols	189
Contents	189
Feature description	189
Operating parameters	189
Feature interactions	190
Feature packaging	190
Feature implementation	190
Feature operation	190
Special Trunk Support	191
Contents	191
Feature description	191
Operating parameters	191
Feature interactions	191
Feature packaging	192
Feature implementation	192
Task summary list	192
Feature operation	194
Speed Call Delimiter	195
Contents	195
Feature description	195
Operating parameters	195
Feature interactions	196
Autodial, Speed Call	196
Group Call List	196
Outpulsing Asterisk and Octothorpe	196
Feature packaging	196
Feature implementation	197
Feature operation	197
Speed Call Delimiter Operation	197
System Speed Call Delimiter Operation	198
Speed Call Directory Number Access	201
Contents	201
Feature description	201
Operating parameters	202
Feature interactions	202
Direct Inward Dialing (DID) and TIE trunk access	202

Speed Call, System Speed Call	202
Feature packaging	202
Feature implementation	202
Feature operation	203
Pilot DN	203
Speed Call on Private Lines	205
Contents	205
Feature description	205
Operating parameters	205
Feature interactions	205
Automatic Redial, Private Line, Speed Call features	205
Basic/Network Alternate Route Selection (BARS/NARS)	206
Feature packaging	206
Feature implementation	206
Feature operation	206
Speed Call	207
Contents	207
Feature description	207
Operating parameters	208
Feature interactions	208
AC15 Recall: Transfer from Meridian 1	208
Autodial Tandem Transfer	208
Automatic Redial	208
Call Forward/Hunt Override Via Flexible Feature Code	209
Call Park	209
Call Party Name Display	209
Calling Party Privacy	209
Charge Account and Calling Party Number	209
Charge Account, Forced	209
Enhanced Flexible Feature Codes - Outgoing Call Barring	209
China Number 1 Signaling Enhancements	210
Direct Private Network Access	210
Last Number Redial	210
Pretranslation	210
Scheduled Access Restrictions	210
Speed Call Delimiter	210
Speed Call Directory Number Access	210
Station Specific Authorization Code	210
Three Wire Analog Trunk - Commonwealth of Independent States (CIS)	211
User Selectable Call Redirection	211
Feature packaging	211
Feature implementation	211
Task summary list	211

Feature operation	214
Speed Call, System	217
Contents	217
Feature description	217
Operating parameters	218
Feature interactions	218
Attendant Administration	218
Authorization Code Security Enhancement	218
Automatic Redial	218
Basic/Network Alternate Route Selection (BARS/NARS)	218
Calling Party Privacy	219
Capacity Expansion	219
China - Flexible Feature Codes - Outgoing Call Barring	219
Flexible Feature Code	219
Hot Line	219
Last Number Redial	219
Off-Hook Alarm Security	220
Pretranslation	220
Feature packaging	220
Feature implementation	220
Task summary list	220
Feature operation	224
Speed Call or Autodial with Authorization Codes	227
Contents	227
Feature description	227
Operating parameters	227
Feature interactions	228
Feature packaging	228
Feature implementation	228
Feature operation	228
Station Activity Records	229
Contents	229
Feature description	229
Operating parameters	229
Feature interactions	229
Call Redirection	229
Call Transfer	230
Conference	230
Internal Call Detail Recording	230
Feature packaging	230
Feature implementation	230
Task summary list	230

Feature operation	232
Station Category Indication	233
Contents	233
Feature description	233
Operating parameters	233
Feature interactions	234
Centralized Attendant Service	234
Controlled Class of Service	234
Phantom Terminal Numbers (TNs)	234
Feature packaging	234
Feature implementation	234
Task summary list	234
Feature operation	235
Station Specific Authorization Code	237
Contents	237
Feature description	237
Operating parameters	238
Feature interactions	238
Attendant Administration	238
Authorization Code Security Enhancement	238
Autodial, Speed Call	238
Feature packaging	238
Feature implementation	238
Task summary list	238
Feature operation	241
Station-to-Station Calling	243
Contents	243
Feature description	243
Operating parameters	243
Feature interactions	243
Manual Line Service	243
Private Lines	243
Feature packaging	243
Feature implementation	244
Feature operation	244
Stored Number Redial	245
Contents	245
Feature description	245
Operating parameters	245
Feature interactions	246
Authorization Code Security Enhancement, Charge Account, Forced Charge Account	246

Automatic Redial	246
Calling Party Privacy	246
End-to-End Signaling	247
Group Hunt	247
Intercept Computer Dial from Directory - Post-dial Operation	247
Multi-Party Operations	247
Feature packaging	247
Feature implementation	247
Task summary list	247
Feature operation	249
Attendant consoles, Meridian 1 proprietary telephones	249
Analog (500/2500-type) telephones	249

Supervised Analog Lines	251
--------------------------------	------------

Contents	251
Feature description	251
Battery Reversal Supervision	251
Hook Flash Disconnect Supervision	252
Operating parameters	252
Feature interactions	253
Call Transfer	253
Conference	253
Multi-Party Operations	254
Feature packaging	254
Feature implementation	254
Task summary list	254
Feature operation	255

Telelink Mobility Switch 1	257
-----------------------------------	------------

Contents	257
Feature description	257
Operating parameters	259
Feature interactions	261
Feature packaging	264
Feature implementation	265
Task summary list	265
Feature operation	268

Telephones	269
-------------------	------------

Teletype Terminal Access Control in Multi-customer Environment	271
Contents	271
Feature description	271
Operating parameters	272
Feature interactions	272

Intercept Computer	272
Feature packaging	272
Feature implementation	272
Feature operation	273
Telset Call Timer Enhancement	275
Contents	275
Feature description	275
Operating parameters	276
Feature interactions	276
Feature packaging	276
Feature implementation	276
Feature operation	276
Three-Wire Analog Trunk - Commonwealth of Independent States	277
Contents	277
Feature description	277
Operating parameters	278
Feature interactions	279
Authorization Code	279
Autodial	279
Dial Tone Detection	279
DPNSS1 Gateway	280
Incoming Digit Conversion Enhancement, Incoming DID Digit Conversion	280
Last Number Redial	280
Multiple Appearance Directory Number	280
Q931 Gateway/BRI Gateway	281
QSIG Gateway	281
R2MFC Calling Number Identification	282
Speed Call	282
Virtual Network Services	282
Feature packaging	282
Feature implementation	283
Task summary list	283
Feature operation	295
Time and Date	297
Contents	297
Feature description	297
Operating parameters	297
Feature interactions	298
Hold	298
In-Band Automatic Number Identification	298
Network Time Synchronization	298

Feature packaging	298
Feature implementation	298
Feature operation	299
Tone to Last Party	301
Contents	301
Feature description	301
Operating parameters	302
Feature interactions	302
Multi-Party Operations	302
Operator Call Back China 1	302
Feature packaging	302
Feature implementation	302
Feature operation	302
Tones and Cadences	303
Contents	303
Feature description	303
Basic Tones and Cadences	303
Flexible Tones and Cadences	304
Operating parameters	306
Feature interactions	307
Audible Reminder of Held Call	307
Call Forward Reminder Tone	307
Call Park Recall and Group Call Ring	307
Conference Warning Tone Enhancement	307
Ringing Based on Incoming Route	307
10-Phase Cadence	307
Feature packaging	308
Feature implementation	308
Feature operation	308
Tones, Flexible Incoming	309
Contents	309
Feature description	309
Operating parameters	310
Feature interactions	310
Automatic Call Distribution	310
Dial Intercom Groups	310
Feature packaging	310
Feature implementation	310
Task summary list	310
Feature operation	311
Total Redirection Count	313
Contents	313

Feature description	313
Operating parameters	313
Feature interactions	314
Call Forward No Answer and Transfer	314
Group Hunt	315
Hunt, Call Forward Busy, Call Forward All, Calls Call Forward No Answer, Second-level Call Forward No Answer	315
Intercept treatment	315
Feature packaging	315
Feature implementation	315
Feature operation	316

Trunk Barring	317
----------------------	------------

Contents	317
Feature description	317
Operating parameters	318
Feature interactions	318
Access Restrictions	318
Attendant Break-In	318
Attendant-Extended Calls	318
Call Forward	318
Call Transfer	318
Conference Calls	319
Direct Trunk Access	319
Enhanced Night Service	319
Intercept Treatment	319
ISDN Semi Permanent for Australia	319
Network Alternate Route Selection (NARS)/Basic Alternate Route Selection (BARS)	319
Toll Operator Break-In	320
Trunk to Trunk Connection	320
Virtual Network Services	320
Feature packaging	320
Feature implementation	320
Task summary list	320
Feature operation	324

Trunk Failure Monitor Enhancement	325
--	------------

Contents	325
Feature description	325
Operating parameters	325
Feature interactions	326
Feature packaging	326
Feature implementation	326
Feature operation	326

Trunk Failure Monitor	327
Contents	327
Feature description	327
Operating parameters	327
Feature interactions	328
Extended DID/DOD Software Support - Europe	328
Extended Flexible Central Office Trunk Software Support	328
Feature packaging	328
Feature implementation	328
Feature operation	328
Trunk to Trunk Connection	329
Contents	329
Feature description	329
Transfer on Ringing of External Trunk over Network	329
Transfer of External Trunks	329
Conference of External Trunks	330
Outgoing Trunk to Trunk Charging	331
Operating parameters	331
Feature interactions	332
Busy Tone Detection for Japan	332
Call Transfer	332
Centralized Answering Position	332
Conference	332
Multi-Party Operations - Ringing No Answer	332
Message Registration	332
Night Service	333
Night Service Enhancement	333
Trunk BarringTrunk Group Access Restriction	333
Feature packaging	333
Feature implementation	333
Task summary list	333
Feature operation	334
Trunk Traffic Reporting Enhancement	335
Contents	335
Feature description	335
Traffic Period Option	335
Trunk Seizure Option	336
Operating parameters	336
Feature interactions	336
Automatic Call Distribution	336
Music Trunks	336
Recorded Announcement Trunks	336

Traffic Monitor	336
Feature packaging	337
Feature implementation	337
Feature operation	337
Trunk Verification from a Station	339
Contents	339
Feature description	339
Operating parameters	340
Feature interactions	340
Feature packaging	340
Feature implementation	341
Feature operation	341
Uninterrupted Line Connections	343
Contents	343
Feature description	343
Operating parameters	343
Feature interactions	343
Attendant Barge-In, Attendant Busy Verify, Override	343
Camp-On	343
Feature packaging	344
Feature implementation	344
Task summary list	344
Feature operation	345
United Kingdom Analog Hardware Support	347
Contents	347
Feature description	347
UK Analog Trunk Enhancements	347
Operating parameters	349
Feature interactions	349
Feature packaging	349
Feature implementation	349
Task summary list	349
Feature operation	351
User Selectable Call Redirection	353
Contents	353
Feature description	353
User assignment of redirection DNs	353
Ringing Cycle Options (RCOs) for CFNA	354
Operating parameters	354
Feature interactions	355
Automatic Call Distribution	355
Attendant Administration	355

Autodial	355
Call Forward All Calls	355
Call Forward by Call Type	355
Call Forward No AnswerFlexible Call Forward No Answer	356
Call Forward No Answer, Second Level	356
Call Redirection by Time of Day	356
Dial Access to Features and Services	356
Directory Number Delayed Ringing	356
Distinctive/New Distinctive Ringing	356
DPNSS1 Diversion	356
Enhanced Hot LineFlexible Hot Line	356
Hunting	357
Message Center (MC) and Message Waiting	357
Multiple Appearance Redirection Prime (MARP)	357
Pretranslation	357
Short Hunting	357
Speed Call	357
Feature packaging	357
Feature implementation	358
Task summary list	358
Feature operation	360
360	

Variable Flash Timing and Ground Button 363

Contents	363
Feature description	363
Variable Flash Timing	363
Ground Button	364
Operating parameters	364
Feature interactions	364
Message Waiting	364
Feature packaging	364
Feature implementation	364
Feature operation	365
Variable Flash Timing	365
Ground Button	365

Variable Guard Timing 367

Contents	367
Feature description	367
Operating parameters	367
Feature interactions	367
Feature packaging	367
Feature implementation	368
Feature operation	368

Virtual Office for M3900	369
Feature description	369
Virtual Office login/logout for Multiple Line Appearance	371
Contents	371
Feature description	371
Operating parameters	371
Virtual Office login to an IP Phone with multiple line appearance	371
Virtual Office logout from an IP Phone with Multiple Line Appearance	372
Virtual Office login from an IP Phone with Multiple Line Appearance	372
Feature interactions	372
Feature packaging	372
Feature implementation	372
Feature operation	373
Virtual Office administrator logout	375
Contents	375
Feature description	375
Operating parameters	375
Feature interactions	376
Feature packaging	376
Feature implementation	376
Task summary list	376
Feature operation	378
Virtual Office logout during midnight routines	379
Contents	379
Feature description	379
Operating parameters	379
Feature interactions	379
Feature packaging	379
Feature implementation	380
Feature operation	381
Virtual Office logout on IDLE condition	383
Contents	383
Feature description	383
Operating parameters	383
Feature interactions	383
Feature packaging	384
Feature implementation	384
Feature operation	384
Virtual Office-only IP Phones	385
Contents	385
Feature description	385

Operating parameters	385
Feature interactions	385
Feature packaging	386
Feature implementation	386
Feature operation	387
Voice Call	389
Contents	389
Feature description	389
Handsfree Voice Call	389
Operating parameters	390
Feature interactions	390
Auto Answer Back	390
Automatic Line Selection	390
Call Party Name Display	390
Display of Calling Party Denied	390
Flexible Feature Code Boss Secretarial Filtering	390
Flexible Voice/Data Terminal Number	390
Hot Line	390
Manual Signaling	391
Multiple Appearance DNs	391
On Hold on Loudspeaker	391
Feature packaging	391
Feature implementation	391
Task summary list	391
Feature operation	392
Voice Call	392
Handsfree Voice Call	393
VTRK Failover Upon Network Failure	395
Contents	395
Feature description	395
Administration and maintenance	397
Element Manager configuration	397
VTRK Network Health Monitor configuration for an IP Telephony node	397
VTRK Network Health Monitor Configuration CLI commands	400
New SNMP alarms	400
X08 to X11 Gateway	403
Contents	403
Feature description	403
Operating parameters	406
Feature interactions	407
Calling Number Identification (CNI)	407
Network Ring Again	408

Feature packaging 408
Feature implementation 409
 Task summary list 409
Feature operation 409

New in this release

The following sections detail what is new in this document for CS 1000 Release 7.0.

Features

The following features have been added to this document for Communication Server 1000 Release 7.0.

- “Virtual Office administrator logout ” (page 375)
- “Virtual Office login/logout for Multiple Line Appearance ” (page 371)
- “Virtual Office logout during midnight routines” (page 379)
- “Virtual Office logout on IDLE condition” (page 383)
- “Virtual Office-only IP Phones” (page 385)

Other

Revision History

June 2010	Standard 04.01. This document is up-issued to support Communication Server 1000 Release 7.0.
June 2009	Standard 03.03. This document is up-issued to support Communication Server 1000 Release 6.0.
September 2008	Standard 02.06. This document is up-issued to add reference for information on M3900 for CS Release 5.5.
May 2008	Standard 02.05. This document is up-issued to support Communication Server Release 5.5.

December 2007	Standard 02.04. This document is up-issued to support Communication Server Release 5.5.
July 2007	Standard 01.04. This document is up-issued to revise the 500 Telephone Features and Bandwidth Management Support for Network Wide Virtual Office chapters in Book 1 and Conference Warning Tone Enhancement chapter in Book 2).
June 2007	Standard 01.03. This document is up-issued to revise the Software Licenses chapter in Book 6.
June 2007	Standard 01.02. This document is up-issued to revise the Network Music feature implementation in Book 5.
May 2007	Standard 01.01. This document is up-issued to support Communication Server 1000 Release 5.0. This document is renamed Features and Services Fundamentals (NN43001-106) and contains information previously contained in the following legacy documents, now retired: <ul style="list-style-type: none">• Features and Services: Book 1 of 3 (A to C) (553-3001-306B1)• Features and Services: Book 2 of 3 (D to M) (553-3001-306B2)• Features and Services: Book 3 of 3 (N to Z) (553-3001-306B3) This document also includes the following updates: <ul style="list-style-type: none">• Corrections to Trunk Route Optimization - Before Answer on page 534 (Book 5) and to Trunk Route Optimization - Before Answer on page 540 (Book 5).• Updated the description of EXTT prompt in LD 15 on page 338 (Book 6).
July 2006	Standard 17.00. This document is up-issued to reflect the following changes: <ul style="list-style-type: none">• Addition of M3900 Full Icon Support feature on pages 797 to 800 (Book 2).• Addition of M3900 Set-to-Set Messaging feature on pages 801 to 806 (Book 2).• Addition of M3900 series digital telephone feature reference on pages 341, 342 of the Personal Directory chapter (Book 3).

April 2006	Standard 16.00. This document is up-issued to reflect the following changes in content:
	<ul style="list-style-type: none"> • Addition of keycode commands for CP PIV on pages 595 to 610 (Book 2). • Addition of IPMG on CS1000E to the following: operating parameters on page 364 (Book 3); and LD 97 on page 379 (Book 3). • Additions to the following: Call Redirection by Day on page 848 (Book1); the CRDAY prompt on page 852 (Book 1); and Call Redirection by Time of Day on page 858 (Book 1). • Addition of Flexible Feature Codes to list on pages 371 to 376 of Flexible Feature Codes chapter (Book 2). • Correction to Message Intercept for Set Status Lockout on pages 982-983 (Book 2). • Correction to SECA001 alarm message on page 402 (Book 1).
January 2006	Standard 15.00. This document is up-issued to reflect the following changes in content:
	<ul style="list-style-type: none"> • Addition of Converged Office feature on page 1247 (Book 1); changes to interactions with Call Forward All Calls on pages 647, 648, 721, 725 (Book 1), and 521 (Book 2). • Addition of IP Phones to supported sets referenced in Selectable Conferee Display and Disconnect on pages 667 to 700 (Book 3).
August 2005	Standard 14.00. This document is up-issued to support Communication Server 1000 Release 4.5.
September 2004	Standard 13.00. This document is up-issued for Communication Server 1000 Release 4.0.
October 2003	Standard 12.00. This document is issued for Succession 3.0.
November 2002	Standard 11.00. This document is up-issued to support Meridian 1 Release 25.40 and Succession Communication Server for Enterprise (CSE) 1000, Release 2.0. This is book 3 of a 3 book set.
January 2002	Standard 10.00. Up-issued to include content for Meridian 1 Release 25.40 and Succession Communication Server for Enterprise 1000, Release 1.1.
April 2000	Standard 9.00. This is a global document and is up-issued for Release 25.0x. Document changes include removal of: redundant content; references to equipment types except Options 11C, 51C, 61C, and 81C; and references to previous software releases.
June 1999	Issue 8.00 released as Standard for Generic Release 24.2x.

October 1997 Issue 7.00. This is the Release 23.0x standard version of this document. Certain application-specific features have been removed from this document and have been placed in their appropriate Nortel Networks technical publications (NTPs). Automatic Call Distribution features can be found in *Automatic Call Distribution Feature description* 553-2671-110; Call Detail Recording features can be found in *Call Detail Recording Description and formats* 553-2631-100; Primary Rate Interface features can be found in *International ISDN PRI Feature description and administration* 553-2901-301; R2MFC and MFC features can be found in *Multifrequency Compelled Signaling* 553-2861-100; and DPNSS1 features can be found in *DPNSS1 Features and Services* 553-3921-300.

August 1996 Issue 6.00. This is the Release 22.0x standard version of this document. The features Automatic Number Identification, Automatic Trunk Maintenance, Multi Tenant Service, Radio Paging and X08/11 Gateway have been incorporated into this document. Accordingly, the following Nortel Networks technical publications have been retired to reflect this change: 553-2611-200, 553-2751-104, 553-2831-100, 553-2721-111 and 553-2941-100.

December 1995 Issue 5.00. This is the Release 21.1x standard version of this document.

July 1995 Issue 4.00. This is the Release 21 standard version of this document.

October 1994 Issue 2.0. This is the Release 20.1x soak version of the document.

July 1994 Issue 1.0. This is the Release 20.0x standard version of this document.

How to get help

This chapter explains how to get help for Nortel products and services.

Getting help from the Nortel web site

The best way to get technical support for Nortel products is from the Nortel Technical Support web site: www.nortel.com/support

This site provides quick access to software, documentation, bulletins, and tools to address issues with Nortel products. From this site, you can:

- download software, documentation, and product bulletins
- search the Technical Support Web site and the Nortel Knowledge Base for answers to technical issues
- sign up for automatic notification of new software and documentation for Nortel equipment
- open and manage technical support cases

Getting help over the telephone from a Nortel Solutions Center

If you do not find the information you require on the Nortel Technical Support web site, and you have a Nortel support contract, you can also get help over the telephone from a Nortel Solutions Center.

In North America, call 1-800-4NORTEL (1-800-466-7835).

Outside North America, go to the following web site to obtain the telephone number for your region: www.nortel.com/callus

Getting help from a specialist by using an Express Routing Code

To access some Nortel Technical Solutions Centers, you can use an Express Routing Code (ERC) to quickly route your call to a specialist in your Nortel product or service. To locate the ERC for your product or service, go to: www.nortel.com/erc

Getting help through a Nortel distributor or reseller

If you purchased a service contract for your Nortel product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller.

Features and Software options

Package Name	Number	Mnemonic	Release
1.5 Mbit Digital Trunk Interface	75	PBXI	5
<ul style="list-style-type: none"> • Hong Kong Digital Trunk Interface • Reference Clock Switching (See also packages 129, 131, and 154) 			
16-Button Digitone/Multifrequency Telephone	144	ABCD	14
<ul style="list-style-type: none"> • 16-Button Digitone/Multifrequency Operation 			
2 Mbit Digital Trunk Interface	129	DTI2	10
<ul style="list-style-type: none"> • DID Recall features on DTI2 for Italy – DID Offering • DID Recall features on DTI2 for Italy – DID Recall • Italian Central Office Special Services (see also packages 131, and 157) • Italian Periodic Pulse Metering • Pulsed E&M DTI2 Signaling • Reference Clock Switching (see also packages 75, 131, and 154) • R2MFC 1.5 Mbps DTI • 2 Mbps Digital Trunk Interface • 2 Mbps Digital Trunk Interface Enhancements: <ul style="list-style-type: none"> — Alarm Handling on DID Channels — Alarm Handling on Incoming COT/DID Calls — Call Clearance — Clock Synchronization 			

32 Features and Software options

Package Name	Number	Mnemonic	Release
— DID Call Offering			
— Disable Out-of-Service Alarm State			
— Fault Signal			
— Incoming Seizure			
— Outpulsing Delay			
— Release Control			
— Signal Recognition			
— Trunk Entering Alarm Status/Trunk Pack Exiting Alarm Status			
— 64 Kbps Alarm Indication Signal (AIS) Handling			
2.0 Mb/s Primary Rate Interface	154	PRI2	14
• Reference Clock Switching (see also packages 75, 129, and 131)			
2500 Set Features	18	SS25	1
• Call Hold, Permanent			
• 2500 Set Features			
500 Set Dial Access to Features	73	SS5	4
• 500 Set Features			
• 500/2500 Line Disconnect			
AC15 Recall	236	ACRL	20
• AC15 Recall: Timed Reminder Recall			
• AC15 Recall: Transfer from Norstar			
• AC15 Recall: Transfer from Meridian 1			
• Access Restrictions			
ACD/CDN Expansion	388	ACDE	25.40
• ACD/CDN Expansion			
Administration Set	256	ADMINSET	21
• Set-based Administration Enhancements			

Package Name	Number	Mnemonic	Release
Advanced ISDN Network Services	148	NTWK	13
<ul style="list-style-type: none"> • Advice of Charge – Charging Information and End of Call for NUMERIS Connectivity (see also package 101) • Advice of Charge Real-time Supplementary Services for NUMERIS and SWISSNET (see also package 101) • Alternative Conference PAD Levels • Alternative Loss Plan • Alternative Loss Plan for China 			
Analog Calling Line Identification	349	ACLI	25
<ul style="list-style-type: none"> • CLID on Analog Trunks for Hong Kong (A-CLID) 			
Aries Digital Sets	170	ARIE	14
<ul style="list-style-type: none"> • Meridian Communications Adapter • Meridian Modular Telephones 			
Attendant Administration	54	AA	1
<ul style="list-style-type: none"> • Attendant Administration 			
Attendant Alternative Answering	174	AAA	15
<ul style="list-style-type: none"> • Attendant Alternative Answering • Attendant Barge-In 			
Attendant Announcement	384	AANN	25.40
<ul style="list-style-type: none"> • Attendant Announcement 			
Attendant Break-In/Trunk Offer	127	BKI	1
<ul style="list-style-type: none"> • Attendant Break-In • Break-In busy Indication and Prevention • Break-In to Inquiry Calls • Break-In to Lockout Set Denied • Break-In with Secrecy • China Number 1 Signaling – Toll Operator Break-In (see also Package 131) • Network Individual Do Not Disturb (see also packages 9, and 159) 			

34 Features and Software options

Package Name	Number	Mnemonic	Release
<ul style="list-style-type: none">• Attendant Busy Verify• Attendant Call Selection• Attendant Calls Waiting Indication• Attendant Consoles• Attendant Delay on Hold• Attendant Display of Speed Dial or Autodial			
Attendant Forward No Answer	134	AFNA	14
<ul style="list-style-type: none">• Attendant Forward No Answer• Attendant Forward No Answer Expansion• Attendant Incoming Call Indicators• Attendant Interpositional Transfer• Attendant Lockout	56	AOP	1
Attendant Overflow Position			
<ul style="list-style-type: none">• Attendant Overflow Position• Attendant Position Busy• Attendant Recall• Attendant Recall with Splitting	253	ARFW	20
Attendant Remote Call Forward			
<ul style="list-style-type: none">• Call Forward, Remote (Network and Attendant Wide)• Attendant Secrecy• Attendant Splitting• Attendant Trunk Group Busy Indication• Audible Reminder of Held Calls	258	ATX	20
Autodial Tandem Transfer			
<ul style="list-style-type: none">• Autodial Tandem Transfer			
Automated Modem Pooling	78	AMP	5

Package Name	Number	Mnemonic	Release
Automatic Answerback	47	AAB	1
<ul style="list-style-type: none"> Automatic Answerback Automatic Call Distribution Answer Time in Night Service Automatic Call Distribution Call Delays (see also package 40) Automatic Call Distribution Call Priority (see also package 40) Automatic Call Distribution Call Waiting Thresholds (see also packages 40 and 41) Automatic Call Distribution Calls on Hold (see also package 40) Automatic Call Distribution Dynamic Queue Threshold (see also package 40) 			
Automatic Call Distribution Enhanced Overflow	178	EOVF	15
<ul style="list-style-type: none"> Automatic Call Distribution Enhanced Overflow 			
Automatic Call Distribution Load Management	43	LMAN	1
<ul style="list-style-type: none"> Automatic Call Distribution Load Management Reports 			
Automatic Call Distribution Night Call Forward without Disconnect Supervision	289	ADSP	23
<ul style="list-style-type: none"> Call Processor Input/Output) 			
Automatic Call Distribution Package C	42	ACDC	1
<ul style="list-style-type: none"> Automatic Call Distribution Report Control (see also package 50) 500/2500 Line Disconnect 			
Automatic Call Distribution Package D, Auxiliary Link Processor	51	LNK	2
<ul style="list-style-type: none"> ACD Package D Auxiliary Processor Link 			

Package Name	Number	Mnemonic	Release
Automatic Call Distribution Package D, Auxiliary Security	114	AUXS	12
• ACD-D Auxiliary Security			
Automatic Call Distribution Package D	50	ACDD	2
• Automatic Call Distribution Report Control (see also package 42)			
• Automatic Call Distribution Threshold Visual Indication (see also packages 40 and 41)			
Automatic Call Distribution, Account Code	155	ACNT	13
• Automatic Call Distribution Activity Code			
Automatic Call Distribution, Package A	45	ACDA	1
• Automatic Call Distribution			
Automatic Call Distribution, Package B	41	ACDB	1
• Automatic Call Distribution Call Waiting Thresholds (see also packages 40, and 131)			
• Automatic Call Distribution Least Call Queuing			
• Automatic Call Distribution Threshold Visual Indication (see also packages 40, and 131)			
Automatic Call Distribution, Priority Agent	116	PAGT	12
• Automatic Call Distribution Priority Agent			
Automatic Call Distribution, Timed Overflow Queuing	111	TOF	10
• ACD Timed Overflow			
• Automatic Gain Control Inhibit			
• Automatic Guard Detection			
• Automatic Hold			
Automatic ID of Outward Dialing	3	AIOD	1
Automatic Installation (Option 11 only)	200	AINS	16
• Automatic Installation			

Package Name	Number	Mnemonic	Release
Automatic Line Selection	72	LSEL	4
• Automatic Line Selection			
Automatic Number Identification Route Selection	13	ANIR	1
• Automatic Number Identification Route Selection			
Automatic Number Identification	12	ANI	1
• Automatic Number Identification			
• Automatic Number Identification on DTI			
• Automatic Preselection of Prime Directory Number			
Automatic Redial	304	ARDL	22
• Automatic Redial			
• Automatic Timed Reminders			
Automatic Wake-Up	102	AWU	10
• Automatic Wake Up			
Auxiliary Processor Link	109	APL	10
• Auxiliary Processor Link			
• Auxiliary Signaling			
• B34 Dynamic Loss Switching (see also packages 164 and 203)			
Background Terminal	99	BGD	10
• Background Terminal Facility			
Basic Alternate Route Selection	57	BARS	1
• Network Alternate Route Selection/Basic Alternate Route Selection Enhancement – Local Termination (see also package 58)			
Basic Authorization Code	25	BAUT	1
• Basic Authorization Code			

38 Features and Software options

Package Name	Number	Mnemonic	Release
Basic Automatic Call Distribution	40	BACD	1
<ul style="list-style-type: none">Automatic Call Distribution Alternate Call AnswerAutomatic Call Distribution Call Delays (see also package 131)Automatic Call Distribution Call Priority (see also package 131)Automatic Call Distribution Call Waiting Thresholds (see also packages 41, and 131)Automatic Call Distribution Calls on Hold (see also package 131)Automatic Call Distribution Dynamic Queue Threshold (see also package 131)Automatic Call Distribution EnhancementsAutomatic Call Distribution in Night ServiceAutomatic Call Distribution Threshold Visual Indication (see also packages 41, and 131)INIT Automatic Call Distribution (ACD) Queue Call Restore			
Basic Call Processing	0	BASIC	1
Basic Queuing	28	BQUE	1
<ul style="list-style-type: none">Basic Queuing			
Basic Rate Interface	216	BRI	18
<ul style="list-style-type: none">Integrated Services Digital Network Basic Rate Interface (see also packages 216, and 235)			
Basic Routing	14	BRTE	1
<ul style="list-style-type: none">Basic Routing			
Boss Secretary Filtering (FFC activation)	198	FTCSF	15
<ul style="list-style-type: none">Flexible Feature Code Boss Secretarial Filtering			

Package Name	Number	Mnemonic	Release
BRI line application	235	BRIL	18
<ul style="list-style-type: none"> • Integrated Services Digital Network Basic Rate Interface (see also packages 216, and 233) • ISDN Basic Rate Interface Connected Line Presentation/Restriction • Bridging • Busy Lamp Field Array 			
Business Network Express	367	BNE	25
<ul style="list-style-type: none"> • Business Network Express/EuroISDN Call Diversion • Business Network Express/EuroISDN Explicit Call Transfer • Business Network Express/Name and Private Number Display 			
Busy Tone Detection	294	BTD	21
<ul style="list-style-type: none"> • China Phase II – Busy Tone Detection • Busy Tone Detection for Asia Pacific and CALA • Call Capacity Report 			
Call Center Transfer Connect	393	UUI	3.0
<ul style="list-style-type: none"> • Call Center Transfer Connect 			
Call Detail Recording Enhancement	259	CDRX	20
<ul style="list-style-type: none"> • Call Detail Recording Enhancement 			
Call Detail Recording Expansion (7 digit)	151	CDRE	13
<ul style="list-style-type: none"> • Call Detail Recording Expansion 			
Call Detail Recording on Teletype Terminal	5	CTY	1
<ul style="list-style-type: none"> • CDR on TTY 			
Call Detail Recording Queue Record	83	CDRQ	3
<ul style="list-style-type: none"> • ACD CDR Queue Record 			
Call Detail Recording, Data Link	6	CLNK	1

Package Name	Number	Mnemonic	Release
Call Detail Recording	4	CDR	1
<ul style="list-style-type: none"> • Call Detail Recording • Call Detail Recording Enhancement • Call Detail Recording on Redirected Incoming Calls • Call Detail Recording with Optional Digit Suppression • Call Detail Recording 100 Hour Call • NPI and TON in CDR Tickets • Call Forward and Busy Status • Call Forward Busy • Call Forward by Call Type • Call Forward External Deny • Call Forward No Answer, Second Level • Call Forward No Answer/Flexible Call Forward No Answer • Call Forward Save on SYSLOAD • Call Forward Save on SYSLOAD • Call Forward to Trunk Restriction • Call Forward, Break-In & Hunt Internal/External Network Wide • Call Forward, Internal Calls 			
Call ID (for AML applications)	247	CALL ID	19
<ul style="list-style-type: none"> • Call Identification 			
Call Page Networkwide	307	PAGENET	22
<ul style="list-style-type: none"> • Call Page Network Wide 			
Call Park Networkwide	306	CPRKNET	22
<ul style="list-style-type: none"> • Call Park Network Wide 			
Call Park	33	CPRK	2
<ul style="list-style-type: none"> • Call Park • Recall after Parking • Call Pickup 			

Package Name	Number	Mnemonic	Release
Call Processor Input/Output (Option 81)	298	CPIO	21
• Call Processor Input/Output) • Call Redirection by Time of Day • Call Transfer			
Call Waiting Notification (Meridian 911)	225	CWNT	19
• Call Waiting Notification (Meridian 911) • Call Waiting/Internal Call Waiting			
Call-by-Call Service	117	CBC	13
• Call-by-Call Service			
Called Party Control on Internal Calls	310	CPCI	22
• China Phase III - Called Party Control on Internal Calls • Called Party Disconnect Control			
Calling line Identification in Call Detail Recording	118	CCDR	13
• Calling Line Identification in Call Detail Recording			
Calling Party Name Display	95	CPND	10
• Call Party Name Display • DNIS Name Display (see also packages 98, and 113) • Calling Party Name Display Denied			
Calling Party Privacy	301	CPP	21
• Calling Party Privacy • Camp-On • Camp-On • Camp-on to Multiple Appearance Directory Number • Capacity Expansion • Card LED Status			

Package Name	Number	Mnemonic	Release
Centralized Attendant Services (Main)	26	CASM	1
• Centralized Attendant Services - Main			
Centralized Attendant Services (Remote)	27	CASR	1
• Centralized Attendant Services – Remote			
• Centralized Multiple Line Emulation			
Charge Account for CDR	23	CHG	1
• Charge Account and Calling Party Number			
Charge Account/Authorization Code	24	CAB	1
• Charge Account/Authorization Code Base			
• Charge Display at End of Call (see also package 101)			
China Attendant Monitor Package	285	CHINA	21
• China – Attendant Monitor			
• China Number 1 Signaling – Toll Operator Break-In (see also Package 127)			
• China Number 1 Signaling Enhancements			
• China Number 1 Signaling Trunk Enhancements (see also packages 49, 113, and 128)			
China Toll Package	292	CHTL	21
• China Phase II – Toll Call Loss Plan			
CLASS Calling Name Delivery	333	CNAME	23
• CLASS			
CLASS Calling Number Delivery	332	CNUMB	23
• CLASS			
Collect Call Blocking	290	CCB	21
• Collect Call Blocking			
Command Status Link	77	CSL	8
• Command Status Link			

Package Name	Number	Mnemonic	Release
Commonwealth of Independent States Multifrequency Shuttle Signaling	326	CISMFS	23
• CIS Multifrequency Shuttle Signaling			
Commonwealth of Independent States Trunks	221	CIST	21
• Commonwealth of Independent States Digital Trunk Interface			
• Three-Wire Analog Trunk – CIS			
• Commonwealth of Independent States Automatic Number Identification (ANI) Digits Manipulation and Gateways Enhancements			24
• Commonwealth of Independent States Automatic Number Identification (ANI) Reception			24
• Commonwealth of Independent States Toll Dial Tone Detection			24
• Conference			
• Conference Warning Tone Enhancement for Italy			
Console Operations	169	COOP	14
• Console Operations			
Console Presentation Group	172	CPGS	15
• Console Presentation Group Level Services			
Controlled Class Of Service	81	CCOS	7
• Controlled Class of Service			
Coordinated Dialing Plan	59	CDP	1
• Coordinated Dialing Plan			
Core Network Module	299	CORENET	21
• Core Network Module			
• CP3			
Corporate Directory	381	CDIR	25
• Corporate Directory			
CSL with Alpha Signalling	85	CSLA	8

Package Name	Number	Mnemonic	Release
Customer Controlled Routing	215	CCR	17
<ul style="list-style-type: none"> • Customer Controlled Routing • MFC Interworking with AML Based Applications (see also packages 128, and 214) • Dataport Hunting 			
CP Pentium® Backplane for Intel® Machine	368	CPP_CNI	25
Deluxe Hold	71	DHLD	4
<ul style="list-style-type: none"> • Call Hold, Deluxe • Call Hold, Individual Hold Enhancement 			
Departmental Listed Directory Number	76	DLDN	5
Dial Intercom	21	DI	1
<ul style="list-style-type: none"> • Dial Intercom • Distinctive Ringing for Dial Intercom • Dial Pulse/Dual-tone Multifrequency Conversion 			
Dial Tone Detector	138	DTD	10
<ul style="list-style-type: none"> • Dial Tone Detection • Flexible Dial Tone Detection 			
Dialed Number Identification System	98	DNIS	10
<ul style="list-style-type: none"> • Dialed Number Identification Services • Dialed Number Identification Services Length Flexibility • Dialed Number Identification Services Name Display (see also packages 95, and 131) • 7 Digit DNIS for MAX • N Digit DNIS 			
Digit Display	19	DDSP	1
<ul style="list-style-type: none"> • Digit Display 			
Digit Key Signaling	180	DKS	1

Package Name	Number	Mnemonic	Release
Digital Access Signaling System 2	124	DASS2	16
<ul style="list-style-type: none"> • Analog Private Network Signaling System (APNSS) (see also packages 190, 122, and 123) • DASS2/DPNSS1 – Integrated Digital Access (see also packages 122, and 123) 			
Digital Private Network Signaling Network Services (DPNSS1)	231	DNWK	16
<ul style="list-style-type: none"> • Attendant Call Offer • Attendant Timed Reminder Recall and Attendant Third Party Service • Call Back when Free and Next Used • D-channel Handler Interface Expansion • Extension Three-Party Service • Loop Avoidance • Redirection • Route Optimization • Step Back on Congestion • Diversion • Night Service • Route Optimization/MCDN Trunk Anti-Tromboning Interworking 			
Digital Private Network Signaling System 1 Message Waiting Indication	325	DMWI	23
<ul style="list-style-type: none"> • DPNSS1 Message Waiting Indication 			
Digital Private Network Signaling System 1	123	DPNSS	16
<ul style="list-style-type: none"> • Analog Private Network Signaling System (APNSS) (see also packages 190, 122, and 124) • DASS2/DPNSS1 – Integrated Digital Access (see also packages 122, and 124) • Digital Trunk Interface Enhancements 			

Package Name	Number	Mnemonic	Release
<ul style="list-style-type: none"> • Digitone Receiver Enhancements: – Digitone Receiver Time-out Enhancement • Digitone Receiver Enhancements: – Quad Density Digitone Receiver Card 			
Direct Inward Dialing to TIE (Japan only)	176	DTOT	16
<ul style="list-style-type: none"> • Direct Inward Dialing to TIE • Direct Inward Dialing to TIE Connection 			
Direct Inward System Access	22	DISA	1
<ul style="list-style-type: none"> • Call Park on Unsupervised Trunks • Direct Inward System Access • Direct Inward System Access on Unsupervised Trunks 			
Direct Private Network Access	250	DPNA	21
<ul style="list-style-type: none"> • Direct Private Network Access 			
Directed Call Pickup	115	DCP	12
<ul style="list-style-type: none"> • Call Pickup, Directed • Directory Number Delayed Ringing 			
Directory Number Expansion (7 Digit)	150	DNXP	13
<ul style="list-style-type: none"> • Directory Number Expansion • Directory Number <ul style="list-style-type: none"> — Flexible Attendant Directory Number — Listed Directory Numbers — Single Appearance Directory Number — Multiple Appearance Directory Number — Prime Directory Number • Diskette Overflow Warning • Display of Calling Party Denied 			
Distinctive Ringing	74	DRNG	4/9
<ul style="list-style-type: none"> • Distinctive/New Distinctive Ringing 			
Do Not Disturb, Group	16	DNDG	1
<ul style="list-style-type: none"> • Do Not Disturb Group 			

Package Name	Number	Mnemonic	Release
Do Not Disturb, Individual	9	DNDI	1
<ul style="list-style-type: none"> • Do Not Disturb • Network Individual Do Not Disturb (see also packages 127, and 159) • Electronic Brandlining 			
Emergency Services Access Calling Number Mapping	331	ESA_CLMP	23
<ul style="list-style-type: none"> • Emergency Services Access (See also packages 329 and 330) 			
Emergency Services Access Supplementary	330	ESA_SUPP	23
<ul style="list-style-type: none"> • Emergency Services Access (See also packages 329 and 331) 			
Emergency Services Access	329	ESA	23
<ul style="list-style-type: none"> • Emergency Services Access (See also packages 330 and 331) • End of Selection • End of Selection Busy • End-of-Dialing on Direct Inward/Outward Dialing Incoming Call Indicator Enhancement 			
End-To-End Signaling	10	EES	1
<ul style="list-style-type: none"> • Attendant End-to-End Signaling • End-to-End Signaling 			
Enhanced ACD Routing	214	EAR	17
<ul style="list-style-type: none"> • Enhanced Automatic Call Distribution Routing • MFC Interworking with AML Based Applications (see also packages 128, and 215) 			
Enhanced Call Trace	215	ECT	18
<ul style="list-style-type: none"> • Customer Controlled Routing • MFC Interworking with AML Based Applications (see also packages 128, and 214) 			
Enhanced Controlled Class of Service	173	ECCS	15

Package Name	Number	Mnemonic	Release
Enhanced DPNSS Services	288	DPNSS_ES	21
• DPNSS1 Executive Intrusion			
Enhanced DPNSS1 Gateway	284	DPNSS189I	20
• Enhanced DPNSS1 Gateway			
Enhanced Hot Line	70	HOT	4/10
• Hot Line			
• Network Intercom			
• Enhanced input/output buffering			
• Enhanced Maintenance (Patching)			
Enhanced Music	119	EMUS	12
• Music, Enhanced			
Enhanced Night Service	133	ENS	20
• Enhanced Night Service			
• Enhanced package printout			
• Equal Access Compliance			
Euro ISDN Trunk - Network Side	309	MASTER	22
• EuroISDN Trunk - Network Side			
Euro ISDN	261	EURO	20
• ISDN – Advice of Charge for EuroISDN			
• ISDN BRI and PRI Trunk Access for Europe (EuroISDN)			
• EUROISDN Continuation			
Euro Supplementary Service	323	ETSI_SS	22
• EuroISDN Call Completion Supplementary Service			
Executive Distinctive Ringing	185	EDRG	16
• Executive Distinctive Ringing			
Fast Tone and Digit Switch	87	FTDS	7
• Fast Tone Digit Switch			

Package Name	Number	Mnemonic	Release
FCC Compliance for DID Answer Supervision	223	FCC68	17
Feature Group D	158	FGD	17
<ul style="list-style-type: none"> • Federal Communications Commission Compliance for DID Answer Supervision 			
Fiber Network	365	FIBN	25
Flexible Call Back Queuing	61	FCBQ	1
<ul style="list-style-type: none"> • Flexible Call Back Queuing 			
Flexible Direct Inward Dialing	362	FDID	24
<ul style="list-style-type: none"> • Flexible Direct Inward Dialing 			
Flexible Feature Codes	139	FFC	15
<ul style="list-style-type: none"> • Call Forward/Hunt Override Via Flexible Feature Code • China Number 1 Signaling – Flexible Feature Codes • Dial Access to Group Calls (see also package 48). • Direct Inward Dialing Call Forward No Answer Timer • Electronic Lock Network Wide/Electronic Lock on Private Lines • Flexible Feature Codes • Automatic Wake FFC Delimiter • Call Forward Destination Deactivation 			

50 Features and Software options

Package Name	Number	Mnemonic	Release
Flexible Numbering Plan	160	FNP	14
• Alternative Routing for DID/DOD			
• Flexible Numbering Plan			
• Special Dial Tones after Dialed Numbers			
• Flexible Numbering Plan Enhancement			
• Flexible Orbiting Prevention Timer			
Flexible Tones and Cadences	125	FTC	16
• Flexible Tone and Digit Switch Control			
• Reverse Dial on Routes and Telephones			
• Tones and Cadences			
Forced Charge Account	52	FCA	1
• Charge Account, Forced			
French Type Approval	197	FRTA	15
• Camp-on to a Set in Ringback or Dialing			
• Forward No Answer Call Waiting Direct Inward Dialing			
• Group Hunt Queuing (see also package 120)			
• Group Hunt Queuing Limitation Enhancement (see also package 120)			
• Loopback on Central Office Trunks			
Geographic Redundancy Primary system	404	GRPRIM	4.0
Geographic Redundancy Secondary system	405	GRSEC	4.0
Group Call	48	GRP	1
• Dial Access to Group Calls (see also package 139).			
• Group Call			
• Group Hunt Queuing Limitation (see also package 120)			

Package Name	Number	Mnemonic	Release
Group Hunt/DN Access to SCL	120	PLDN	15
<ul style="list-style-type: none"> • Group Hunt Queuing (see also package 197) • Group Hunt Queuing Limitation (see also package 131) • Group Hunt Queuing Limitation Enhancement (see also package 197) • Group Hunt • Speed Call Directory Number Access • Handset Volume Reset • Handsfree Download (Meridian Digital Telephones) • Held Call Clearing 			
H323 Virtual Trunk	399	H323_VTRK	3.0
<ul style="list-style-type: none"> • IP Peer Networking Phase 2 • Branch Office 			
HiMail Fax Server	195	FAXS	18
History File	55	HIST	1
<ul style="list-style-type: none"> • History File 			
Hold in Queue for IVR	218	IVR	18
Hospitality Management	166	HOSP	16
Hospitality Screen Enhancement	208	HSE	17
<ul style="list-style-type: none"> • Hospitality Enhancements: Display Enhancements • Hunting By Call Type • Hunting <ul style="list-style-type: none"> — Circular Hunting — Linear Hunting — Secretarial Hunting — Short Hunting — Data Port Hunting — Trunk Hunting • Incoming Call Indicator Enhancement 			

Package Name	Number	Mnemonic	Release
Incoming DID Digit Conversion	113	IDC	12
<ul style="list-style-type: none"> • China Number 1 Signaling Trunk Enhancements (see also packages 49, 128, and 131) • DNIS Name Display (see also packages 95, and 98) • Incoming DID Digit Conversion • Incoming Trunk Programmable Calling Line Identification • Incremental Software Management • Input/Output Access and System Limits 			
Integrated Digital Access	122	IDA	16
<ul style="list-style-type: none"> • Analog Private Network Signaling System (APNSS) (see also packages 190, 123, and 124) • DASS2/DPNSS1 – Integrated Digital Access (see also packages 123 and 124) • DPNSS1 Satellite • DASS2/DPNSS INIT Call Cutoff 			
Integrated Message System UST and UMG are part of IMS Package.	35	IMS	2
<ul style="list-style-type: none"> • Integrated Messaging System Link 			
Integrated Services Digital Network Application Module Link for Third Party Vendors	153	IAP3P	13
<ul style="list-style-type: none"> • Application Module Link • Network Application Protocol Link Enhancement 			
Integrated Services Digital Network BRI Trunk Access	233	BRIT	18
<ul style="list-style-type: none"> • Integrated Services Digital Network Basic Rate Interface (see also packages 216, and 235) 			

Package Name	Number	Mnemonic	Release
Integrated Services Digital Network Supplementary Features	161	ISDN INTLSUP	14
<ul style="list-style-type: none"> • Call Connection Restriction (see also packages 146 and 147) • Direct Inward Dialing to Network Calling • Incoming Digit Conversion Enhancement • Network Time Synchronization • X08 to X11 Gateway 			
Integrated Services Digital Network Signaling Link	147	ISL	13
<ul style="list-style-type: none"> • Call Connection Restriction (see also packages 146 and 161) 			
Integrated Services Digital Network	145	ISDN	13
<ul style="list-style-type: none"> • Backup D-Channel to DMS-100/250 and AT&T 4ESS • Call Pickup Network Wide • D-Channel Error Reporting and Monitoring • Integrated Services Digital Network (ISDN) Primary Rate Interface • Network Name Display (Meridian 1 to DMS-100/250) • Total Redirection Count • T309 Time • Integrated Voice and Data 			
Intercept Computer Interface	143	ICP	10
<ul style="list-style-type: none"> • Intercept Computer Dial from Directory • Intercept Computer Enhancements • Intercept Computer Flexible DN Length • Intercept Computer Interface • Intercept Computer Meridian Mail Interactions 			

54 Features and Software options

Package Name	Number	Mnemonic	Release
<ul style="list-style-type: none"> • Intercept Computer Network Screen Activation, Flexible DN, Meridian Mail Interactions • Intercept Treatment Enhancements 			
Intercept Treatment	11	INTR	1
<ul style="list-style-type: none"> • Intercept Treatment 			
Inter-Exchange Carrier	149	IEC	13
<ul style="list-style-type: none"> • Inter Exchange Carrier 			
Internal CDR	108	ICDR	10
<ul style="list-style-type: none"> • Internal Call Detail Recording 			
International 1.5/2.0 Mb/s Gateway	167	GPRI	18
<ul style="list-style-type: none"> • Radio Paging • International Meridian 1 			
International nB+D	255	INBD	20
<ul style="list-style-type: none"> • ISDN PRI D70 Trunk Access for Japan (nB+D) 			
International Primary Rate Access (CO)	146	PRA	13
<ul style="list-style-type: none"> • Call Connection Restriction (see also packages 147 and 161) • Integrated Services Digital Network Primary Rate Access • Integrated Services Digital Network Primary Rate Access Central Office Connectivity to Japan D70 			
International Primary Rate Access	202	IPRA	15
<ul style="list-style-type: none"> • Integrated Services Access/Call by Call Service Selection Enhancements • Integrated Services Digital Network Primary Rate Access to 1TR6 Connectivity • Integrated Services Digital Network Primary Rate Access to NUMERIS Connectivity 			

Package Name	Number	Mnemonic	Release
<ul style="list-style-type: none"> • Integrated Services Digital Network Primary Rate Access to SwissNet 2 Connectivity • Integrated Services Digital Network Primary Rate Access to SYS-12 Connectivity 			
International Supplementary Features	131	SUPP	9
<ul style="list-style-type: none"> • IODU/C 			
IP Expansion	295	IPEX	25.40
<ul style="list-style-type: none"> • IP Expansion 			
IP Media Gateway	403	IPMG	4.0
ISDN Semi-Permanent Connection	313	ISPC	22
<ul style="list-style-type: none"> • ISDN Semi-Permanent Connections for Australia • Italian Central Office Special Services (see also packages 129, and 157) 			
Japan Central Office Trunks	97	JPN	9
<ul style="list-style-type: none"> • Japan Central Office Trunk 			
Japan Digital Multiplex Interface	136	JDMI	14
<ul style="list-style-type: none"> • Japan Digital Multiplex Interface 			
Japan Telecommunication Technology Committee	335	JTTC	23
<ul style="list-style-type: none"> • Japan TTC Common Channel Signaling 			
Japan Tone and Digit Switch	171	JTDS	14
<ul style="list-style-type: none"> • Japan Tone and Digit Switch 			
Last Number Redial	90	LNR	8
<ul style="list-style-type: none"> • Last Number Redial 			
Latin American Spanish	279	MLMS_SPL	20
<ul style="list-style-type: none"> • Latin American Spanish 			

56 Features and Software options

Package Name	Number	Mnemonic	Release
Limited Access to Overlays	164	LAPW	16
<ul style="list-style-type: none">• B34 Dynamic Loss Switching (see also packages 131 and 203)• Faster I/O• Limited Access to Overlays• Limited Access to Overlays Password Enhancement• Teletype Terminal Access Control in Multi-Customer Environment (see also package 131)			
Line Load Control	105	LLC	10
<ul style="list-style-type: none">• Line Load Control• Line Lockout			
Local Steering Code Modifications	137	LSCM	10
<ul style="list-style-type: none">• Local Steering Code Modifications• Lockout, DID Second Degree Busy and MFE Signaling Treatments• LOGIVOX Telephone• Loop Start Answer Supervision XUT• Loop Start Supervisory Trunks• Loop Start Supervisory Trunks (Incoming Calls)			
Location Code Expansion	400	LOCX	4.0
M2000 Digital Sets	88	DSET	7
<ul style="list-style-type: none">• Distinctive Ringing for Digital Telephones• M2317 Telephones• Flexible Voice/Data Terminal Number			
M2250 Attendant Console	140	DCON	15
<ul style="list-style-type: none">• Digital Attendant Console			
M2317 Digital Sets	91	DLT2	9
<ul style="list-style-type: none">• M2317 Digital Sets			

Package Name	Number	Mnemonic	Release
M3000 Digital Sets	89	TSET	7
• M3000 Telephones			
M3900 Full Icon Support	397	ICON_PACKAGE	3.0
• M3900 Full Icon Support			
M3900 Phase III Virtual Office Enhancement	387	VIR_OFF_ENH	25.40
• Virtual Office Enhancement			
M3900 Ring Again	396	M3900_RGA_PROG	3.0
M911 Enhancement Display	249	M911_ENH	25
• 10/20 Digit ANI on 911 Calls			
Maid Identification	210	MAID	17
• Maid Identification			
• Make Set Busy and Voice Call Override			
Make Set Busy	17	MSB	1
• Make Set Busy			
• Make Set Busy Improvement			
• Malicious Call Trace on Direct Inward Dialing			
Malicious Call Trace	107	MCT	10
• Enhanced Malicious Call Trace			
• Malicious Call Trace			
• Malicious Call Trace DN/TN Print			
• Malicious Call Trace Idle			
• Manual Line Service			
• Manual Service Recall to Attendant			
• Manual Signaling (Buzz)			
• Manual Trunk Service			
MAT 5.0	296	MAT	22
• Meridian 1 Attendant Console Enhancements (see also package 76)			

58 Features and Software options

Package Name	Number	Mnemonic	Release
Meridian 1 Companion Option	240	MCMO	19
• Nortel Networks Integrated DECT			
MCDN End to End Transparency	348	MEET	24
Meridian 1 Enhanced Conference, TDS and MFS	204	XCT0	15
• Meridian 1 Enhanced Conference, TDS and MFS			
Meridian 1 Fault Management	243	ALRM_FILTER	19
• Alarm Management			
• Meridian 1 Initialization Prevention and Recovery			
Meridian 1 Microcellular Option	303	MMO	22
Meridian 1 Mobility Multi-Site Networking	314	MMSN	22
Meridian 1 Packet Handler	248	MPH	19
• Meridian 1 Packet Handler			
Meridian 1 Superloop Administration (LD 97)	205	XCT1	15
• Extended DID/DOD Software Support – Europe			
• Extended Flexible Central Office Trunk Software Support			
• Extended Tone Detector and Global Parameters Download (see also package 203)			
• Generic XFCOT Software Support			
Meridian 1 XPE	203	XPE	15
• B34 Codec Static Loss Plan Downloading			
• B34 Dynamic Loss Switching (see also packages 131, and 164)			
• Extended Multifrequency Compelled Sender/Receiver			

Package Name	Number	Mnemonic	Release
<ul style="list-style-type: none"> • Extended Tone Detector and Global Parameters Download (see also package 205) • Intelligent Peripheral Equipment Software Support Enhancements 			
Meridian 911	224	M911	19
<ul style="list-style-type: none"> • Meridian 911 Enhancements – Call Abandon • Meridian 911 Enhancements – MADN Display Coordination 			
Meridian Hospitality Voice Service	179	HVS	16
<ul style="list-style-type: none"> • Meridian Hospitality Voice Services 			
Meridian Link Modular Server	209	MLM	16
<ul style="list-style-type: none"> • Meridian Link Enhancements 			
Meridian SL-1 ST Package	96	SLST	9
<ul style="list-style-type: none"> • Meridian SL-1 ST Package 			
Message Intercept	163	MINT	15
<ul style="list-style-type: none"> • Message Intercept 			
Message Waiting Center	46	MWC	1
<ul style="list-style-type: none"> • Message Waiting Lamp Maintenance • Message Waiting Unconditional • Meridian Mail Trunk Access Restriction 			
Message Waiting Indication Interworking with DMS	219	MWI	19
<ul style="list-style-type: none"> • Message Waiting Indication (MWI) Interworking 			
Mini CDR	31	MCDR	1
Mobile Extensions	412	MOBX	5.50
Mobility Server	302	MOSR	22
<ul style="list-style-type: none"> • Modular Telephone Relocation 			

60 Features and Software options

Package Name	Number	Mnemonic	Release
Multifrequency Compelled Signaling	128	MFC	9
<ul style="list-style-type: none">• China Number 1 Signaling Trunk Enhancements (see also packages 49, 113, and 131)• China Number 1 Signaling – Active Feature Dial Tone (see also package 126)• China Number 1 Signaling – Audible Alarm (see also package 126)• China Number 1 Signaling – Vacant Number Announcement (see also package 126)• India Phase 2• R2 Multifrequency Compelled Signaling (MFC) DID/DTMF DOD• R2 Multifrequency Compelled Signaling (MFC) Selective Route To Attendant• MFC Interworking with AML Based Applications (see also packages 214 and 215)• R2Multifrequency Compelled Signaling Timer Control• Semi-Compelled MFC and Calling Name Identification Charges			
Multifrequency Signaling for Socotel	135	MFE	10
<ul style="list-style-type: none">• Multifrequency Signaling for Socotel			
Multi-Language I/O Package	211	MLIO	16
<ul style="list-style-type: none">• Multi-language TTY Input/Output			
Multi-Language Wake Up	206	MLWU	16
<ul style="list-style-type: none">• Multi-language Wake Up• Multi-Party Operation Enhancements			
Multi-Party Operations	141	MPO	20
<ul style="list-style-type: none">• Attendant Clearing during Night Service• Multi-Party Operations• Multiple Appearance DN Redirection Prime• Multiple Console Operation			

Package Name	Number	Mnemonic	Release
Multiple Queue Assignment	297	MQA	21
• Multiple Queue Assignment			
Multiple-Customer Operation	2	CUST	1
• Multiple Customer Operation			
Multiple-Tenant Service	86	TENS	7
• Multi-Tenant Service			
Multi-purpose Serial Data Link Serial Data Interface	227	MSDL SDI	19
• Multi-purpose Serial Data Link Serial Data Interface			
Multi-purpose Serial Data Link Single Terminal Access	228	MSDL STA	19
• Single Terminal Access			
Multi-purpose Serial Data Link	222	MSDL	18
• Multi-purpose Serial Data Link			
Multi-Site Mobility Networking	370	MSMN	25
Multi-User Login	242	MULTI_USER	19
• Multi-User Login			
Music Broadcast	328	MUSBRD	23
• Music Broadcast			
Music	44	MUS	1
• Music			
N/W Communications Management Center	30	CMAC	1

Package Name	Number	Mnemonic	Release
Network Alternate Route Selection	58	NARS	1
<ul style="list-style-type: none"> • Equi-distribution Network Attendant Service Routing (see also package 159) • Network Alternate Route Selection/Basic Alternate Route Selection Enhancement – Local Termination (see also package 57) • Network Anti-tromboning • Virtual Network Services/Virtual Directory Number Expansion (see also package 183) 			
Network Attendant Service	159	NAS	20
<ul style="list-style-type: none"> • Equi-distribution Network Attendant Service Routing (see also package 58) • Network Individual Do Not Disturb (See also packages 9 and 127). 			
Network Authorization Code	63	NAUT	1
<ul style="list-style-type: none"> • Network Authorization Code 			
Network Automatic Call Distribution	207	NACD	15
<ul style="list-style-type: none"> • Network Automatic Call Distribution 			
Network Call Back Queuing	38	MCBQ	2
<ul style="list-style-type: none"> • Network Call Back Queuing 			
Network Call Transfer	67	NXFR	3
Network Class Of Service	32	NCOS	1
<ul style="list-style-type: none"> • Network Class of Service 			
Network Message Services	175	NMS	16
Network Priority Queuing	60	PQUE	1
<ul style="list-style-type: none"> • Network Priority Queuing 			
Network Signaling	37	NSIG	2
<ul style="list-style-type: none"> • Network Signaling 			
Network Speed Call	39	NSC	2
<ul style="list-style-type: none"> • Network Speed Call 			

Package Name	Number	Mnemonic	Release
Network Traffic Measurements	29	NTRF	1
• Network Traffic Measurement			
New Flexible Code Restriction	49	NFCR	2
• China Number 1 Signaling Trunk Enhancements (see also packages 113, 128, and 131)			
• New Flexible Code Restriction			
New Format CDR	234	FCDR	18
• Call Detail Recording Time to Answer			
• CDR on Busy Tone			
Next Generation Connectivity	324	NGEN	22
NI-2 Call By Call Service Selection	334	NI-2 CBC	23
• Night Restriction Classes of Service			
• Night Service			
• Night Service Enhancements – All Calls Remain Queued for Night Service			
• Night Service Enhancements – Recall to Night DN			
• Night Service Enhancements – Requeuing of Attendant Present Calls			
• Night Service Enhancements – Requeuing of Attendant Present Calls			
NI-2 Name Display Service	385	NDS	25.40
• NI-2 Name Display Supplementary Service			
Nortel Symposium Call Center	311	NGCC	22
North America National ISDN Class II Equipment	291	NI2	21
• North American Numbering Plan			
• Off-Hook Alarm Security			
Observe Agent Security	394	OAS	3.0
• Observe Agent Security			

Package Name	Number	Mnemonic	Release
Off-Hook Queuing	62	OHQ	1
• Network Drop Back Busy and Off-hook Queuing (see also package 192)			
Office Data Administration System	20	ODAS	1
• Office Data Administration System			
• Off-Premise Extension			
On Hold On Loudspeaker	196	OHOL	20
• On-Hook Dialing			
Open Alarms	315	OPEN ALARM	22
Operator Call Back (China #1)	126	OPCB	14
• Busy Verify on Calling Party Control Calls			
• China Number 1 Signaling – Active Feature Dial Tone (see also package 128)			
• China Number 1 Signaling – Audible Alarm (see also package 128)			
• China Number 1 Signaling – Called Party Control			
• China Number 1 Signaling – Calling Number Identification on Outgoing Multifrequency Compelled Signaling			
• China Number 1 Signaling – Calling Party Control			
• China Number 1 Signaling – Flexible Timers			
• China Number 1 Signaling – KE Multifrequency Compelled Tandem Signaling			
• China Number 1 Signaling – Malicious Call Trace Enhancement			
• China Number 1 Signaling – Off-hook Tone			
• China Number 1 Signaling – Toll Call Identification			
• China Number 1 Signaling – Toll Operator Call Back			

Package Name	Number	Mnemonic	Release
<ul style="list-style-type: none"> China Number 1 Signaling – Toll Operator Call Back Enhancement China Number 1 Signaling – Vacant Number Announcement (see also Package 128) 			
Optional Features	1	OPTF	1
<ul style="list-style-type: none"> Autodial Call Forward All Calls Ring Again Speed Call Speed Call on Private Lines (see also package 0) Speed Call/Autodial with Authorization Codes (see also package 34) Speed Call Delimiter (see also package 34) 			
Optional Outpulsing Delay	79	OOD	5
<ul style="list-style-type: none"> Optional Outpulsing Delay 			
Originator Routing Control	192	ORC_RVQ	18
<ul style="list-style-type: none"> Network Drop Back Busy and Off-hook Queuing (see also package 62) Remote Virtual Queuing Out-of-Service Unit 			
Outpulsing, asterisk (*) and octothorpe (#)	104	OPAO	
<ul style="list-style-type: none"> Outpulsing of Asterisk (*) and Octothorpe (#) 			
Overlap Signaling (M1 to M1 and M1 to 1TR6 CO)	184	OVLP	15
<ul style="list-style-type: none"> Overlap Signaling Overlay 45 Limited Repeats Overlay Cache Memory Override Paging Partial Dial Timing PBX (500/2500) Telephones Periodic Camp-on Tone 			

Package Name	Number	Mnemonic	Release
<ul style="list-style-type: none"> • Periodic Clearing • Periodic Clearing Enhancement • Periodic Clearing on RAN, Meridian Mail, ACD, and Music 			
Personal Call Assistant	398	PCA	3.0
<ul style="list-style-type: none"> • Personal Call Assistant 			
Phantom TN	254	PHTN	20
<ul style="list-style-type: none"> • Phantom TNs • Position Busy with Call on Hold 			
PPM/Message Registration	101	MR	10
<ul style="list-style-type: none"> • Advice of Charge Real-time Supplementary Services for NUMERIS and SWISSNET (see also package 131) • Advice of Charge – Charging Information and End of Call for NUMERIS Connectivity (see also package 131) • Message Registration • Periodic Pulse Metering • Predictive Dialing 			
Pretranslation	92	PXLT	8
<ul style="list-style-type: none"> • Pretranslation • Preventing Reciprocal Call Forward 			
Priority Network Override	389	PONW	25.40
<ul style="list-style-type: none"> • Network Breakin and Force Disconnect 			
Priority Override/Forced Camp-On	186	POVR	20
<ul style="list-style-type: none"> • Forced Camp-on and Priority Override • Privacy • Privacy Override • Privacy Release • Private Line Service 			
Proactive Voice Quality Management	401	PVQM	4.0

Package Name	Number	Mnemonic	Release
Property Management System Interface	103	PMSI	10
• Property Management System Interface			
• Public Switched Data Service			
Pulsed E&M (Indonesia, French Colise)	232	PEMD	18
• Pulsed E&M DTI2 Signaling			
Q Reference Signaling Point Interface	263	QSIG	20
• Integrated Services Digital Network QSIG			
Basic Call			
QSIG Generic Functional protocol	305	QSIG GF	22
• ISDN QSIG Generic Functional Transport			
QSIG Supplementary Service	316	QSIG-SS	22
• ISDN QSIG Call Completion			
• ISDN QSIG Call Diversion Notification			
• ISDN QSIG Path Replacement			
Radio Paging	187	RPA	15
• Radio Paging			
• Radio Paging Product Improvements			
• Recall to Same Attendant			
• Recall with Priority during Night Service			
• Recall With Priority during Night Service			
• Recall With Priority during Night Service			
Network Wide			
Recorded Announcement Broadcast	327	RANBRD	23
• Recorded Announcement Broadcast			
Recorded Announcement	7	RAN	1
• Recorded Announcement			

Package Name	Number	Mnemonic	Release
Recorded Overflow Announcement	36	ROA	2
<ul style="list-style-type: none"> • Recorded Overflow Announcement • Recorded Telephone Dictation • Recovery of Misoperation on the Attendant Console • Recovery on Misoperation of Attendant Console • Reference Clock Switching • Reference Clock Switching (see also packages 75, 129, and 154) 			
Remote IPE	286	REMOTE_IPE	
<ul style="list-style-type: none"> • Remote Intelligent Peripheral Equipment 			
Remote Virtual Queuing	192	RVQ	18
<ul style="list-style-type: none"> • Network Drop Back Busy and Off-hook Queuing (see also package 62) • Remote Virtual Queuing 			
Resident Debug	82	RSDB	9
<ul style="list-style-type: none"> • Restricted Call Transfer • Ring and Hold Lamp Status • Ringback Tone from Meridian 1 Enhancement 			
Ringing Change Key	193	RCK	15
<ul style="list-style-type: none"> • Ringing Change Key 			
Room Status	100	RMS	10
<ul style="list-style-type: none"> • Room Status 			
Scheduled Access Restrictions	162	SAR	20
<ul style="list-style-type: none"> • Scheduled Access Restrictions • Secrecy Enhancement • Secretarial Filtering • Seizure Acknowledgment • Selectable Conferee Display and Disconnect • Selectable Directory Number Size 			

Package Name	Number	Mnemonic	Release
Semi-Automatic Camp-On	181	SACP	15
• Attendant Blocking of Directory Number			
• Attendant Idle Extension Notification			
• Semi-Automatic Camp-On			
• Serial Port Expansion			
Series Call	191	SECL	15
• Series Call			
Set Relocation	53	SR	1
• Automatic Set Relocation			
• Short Buzz for Digital Telephones			
• Short Memory Test			
• Single Digit Access to Hotel Services			
Set-to-Set Messaging	380	STS	25
• Set-to-Set Messaging			
Single Term Access	228	STA	19
• Single Term Access			
• Slow Answer Recall Enhancement			
• Slow Answer Recall for Transferred External Trunks			
• Source Included when Attendant Dials			
SIP Gateway and Converged Desktop	406	SIP	4.0
Soft Switch	402	SOFTSWITCH	4.0
Spanish KD3 DID/DOD interface	252	KD3	20
• KD3 Direct Inward Dialing/Direct Outward Dialing for Spain			
• Special Signaling Protocols			
• Special Trunk Support			
• Speed Call Directory Number Access			
• Speed Call on Private Lines (see also package 1)			
• Speed-Up Data Dump			

70 Features and Software options

Package Name	Number	Mnemonic	Release
Standalone Meridian Mail	262	SAMM	20
• Meridian Mail, Standalone			
Station Activity Records	251	SCDR	20
• Station Activity Records			
Station Camp-On	121	SCMP	20
• Station Camp-On			
Station Category Indication	80	SCI	7
• Station Category Indication			
Station Loop Preemption	106	SLP	10
Station Specific Authorization Codes	229	SSAU	19
• Station Specific Authorization Code			
• Station-to-Station Calling			
Stored Number Redial	64	SNR	3
• Stored Number Redial			
Supervisory Attendant Console	93	SUPV	8
• Supervisory Attendant Console			
Supervisory Console Tones	189	SVCT	20
• System Capacity Enhancements			
System Errors and Events Lookup	245	SYS_MSG_LKUP	19
• System Message Lookup			
System Speed Call	34	SSC	2
• Speed Call/Autodial with Authorization Codes (see also package 1)			
• Speed Call, System			
• Speed Call Delimiter (see also package 34)			
• Telephones (PBX)			
• Teletype Terminal Access Control in Multi-Customer Environment (see also package 164)			
• Telset Call Timer Enhancement			

Package Name	Number	Mnemonic	Release
Time and Date	8	TAD	1
• Time and Date			
Tone Detector Special Common Carrier	66	SCC	7
Tone Detector	65	TDET	7
• Tone Detector			
• Tone to Last Party			
• Tones, Flexible Incoming			
Traffic Monitoring	168	TMON	
Trunk Anti-Tromboning	293	TAT	21
• Trunk Anti-Tromboning			
Trunk Barring	132	TBAR	20
• Trunk Barring			
Trunk Failure Monitor	182	TFM	15
• Trunk Failure Monitor			
• Trunk Failure Monitor Enhancement			
Trunk Hook Flash (Centrex)	157	THF	14
• Centrex Switchhook Flash			
• Italian Central Office Special Services (see also packages 129, and 131)			
• Trunk to Trunk Connections			
• Trunk Traffic Reporting Enhancement			
Trunk Verification from Station	110	TVS	9.32
• Trunk Verification from a Station			
• Uninterrupted Line Connection			
United Kingdom	190	UK	16
• Analog Private Network Signaling System (APNSS) (see also packages 122 123, and 124)			
• UK Analog Hardware Support			

72 Features and Software options

Package Name	Number	Mnemonic	Release
Universal ISDN Gateways	283	UIGW	20
<ul style="list-style-type: none"> • Universal ISDN Gateway • Variable Flash Timing and Ground Button • Variable Guard Timing 			
VIP Auto Wake Up	212	VAWU	17
<ul style="list-style-type: none"> • Hospitality Enhancements: V.I.P. Auto Wake Up 			
Virtual Network Services	183	VNS	16
<ul style="list-style-type: none"> • Virtual Network Services • Virtual Network Services/Virtual Directory Number Expansion (see also package 58) • Voice Call 			
Virtual Office	382	VIRTUAL_OFFICE	25
<ul style="list-style-type: none"> • Branch Office • Emergency Services For Virtual Office • Internet Telephone Virtual Office • Virtual Office 			
Virtual Office Enhancement	387	VOE	3.0
<ul style="list-style-type: none"> • Branch Office • Emergency Services For Virtual Office • Internet Telephone Virtual Office 			
Voice Mailbox Administration	246	VMBA	19
<ul style="list-style-type: none"> • Meridian Mail Voice Mailbox Administration 			
X08 to X11 Gateway	188	L1MF	15
<ul style="list-style-type: none"> • X08 to X11 Gateway 			
Zone Call Admission Control	407	ZCAC	4.5
<ul style="list-style-type: none"> • Adaptive Network Bandwidth Management 			

Scheduled Access Restrictions

Contents

This section contains information on the following topics:

- “Feature description” (page 73)
- “Operating parameters” (page 74)
- “Feature interactions” (page 75)
- “Feature packaging” (page 77)
- “Feature implementation” (page 78)
- “Feature operation” (page 84)

Feature description

The Scheduled Access Restrictions (SAR) feature allows a customer to define Trunk Group Access Restrictions (TGAR), Class of Service (COS) restrictions, and Network Class of Service (NCOS) restrictions for different hours and days (typically off-hours and off-days). These TGAR, COS, and NCOS restrictions comprise SAR groups. Each customer may define up to 1000 SAR groups, and one of these groups can be assigned to each customer station or route. Up to eight time periods can be defined for each SAR group, and different restrictions may be applied to each time period.

SAR can be overridden on a single call basis for a station or route by using an authorization code or forced charge account. By using the SAR Disable (SADS), SAR Enable (SAEN), SAR Lock (SALK), or SAR Unlock (SAUN) Flexible Feature Codes (FFC), these restrictions can be changed on a more permanent basis.

SADS returns the telephone/route to its normal restriction state. SAEN cancels SADS, returning the telephone to its SAR state. SALK will occur automatically at a predefined period of time or when the Lock command

is dialed by the user. Lock restrictions remain in effect until an SAUN or SADS command is entered. The SALK command can be used on a customer basis or SAR group basis, depending on the authcode used.

Typically, the Flexible Feature Codes can be used to do the following:

- extend off-hour restrictions for weekends or holidays (SALK)
- return to the schedule of access restrictions (SAUN)
- extend normal restrictions into the off-hour period for after hour services (SADS)
- cancel this after hour service (SAEN)
- cause off-hour restrictions to start immediately (SALK followed by SAEN)
- disallow any calls on an attendant console (SALK on SAR group containing the attendant(s))

Customer attendants that are included in SAR groups are placed in Position Busy when an off-hour or off-day period goes into effect. The restricted attendant can only release existing calls or dial the SAR Flexible Feature Codes. New calls cannot be made. Incoming calls will be directed to any other attendants that are not included in SAR groups and that are not in Position Busy.

If the system is placed in Night Service by an attendant, or the system is automatically placed in Night Service because all attendants are in the Position Busy state, incoming calls are routed to the Night DN. Going into Night Service will automatically place attendants who belong to a SAR group into a SAR Locked and Enabled state. These attendants can only release existing calls or dial the SAR Flexible Feature Codes; they cannot make new calls when restricted by SAR.

Operating parameters

The definition of authorization codes for SAR decreases the number of authorization codes available for non-SAR use.

SAR does not apply to Direct Inward System Access (DISA) DNs. DISA can be used to manually modify the SAR schedule using an FFC authorization code.

Telephones and trunks assigned to SAR groups have their Class of Service (COS), Trunk Group Access Restriction (TGAR) and Network Class of Service (NCOS) defined by the SAR schedule of their SAR group.

During the periods that a SAR or SAR lock is in effect, the Controlled Class of Service (CCOS) for the station or trunk is overridden.

If a Facility Restriction Level (FRL) is changed in order to be associated with a different NFCR tree, the NCOS using that FRL is affected. Also, different FRLs, and therefore different New Flexible Code Restriction (NFCR) trees, are used at different times according to the NCOS assigned to the SAR group.

Feature interactions

Access Restrictions

The Trunk Access Restriction Group (TARG) defined for each route is not altered by Scheduled Access Restrictions. Access to the route is denied to any telephone or trunk assigned a Trunk Group Access Restriction code that is part of the TARG.

Automatic Redial

The Scheduled Access Restrictions (SAR) on Automatic Redial (ARDL) redialed calls are set when the call is initiated. If restrictions are changed later, the prior restrictions still apply.

Attendant Clearing during Night Service

Attendant Clearing during Night Service should be equipped with Scheduled Access Restrictions (SAR) due to the fact that, when Night Service is in effect, the only operations that may be performed from attendant consoles which are members of a SAR group are:

- release any existing calls, or
- dial one of the following SAR FFCs:
 - Scheduled Access Disable (SADS)
 - Scheduled Access Enable (SAEN)
 - Scheduled Access Lock (SALK)
 - Scheduled Access Unlock (SAUN)

Authorization Code Security Enhancement

Authorization Codes can be used to override SAR restrictions. In addition, Authorization Codes are defined for the specific use of SAR FFCs.

Basic Alternate Route Selection

If SAR is equipped when Basic Alternate Route Selection (BARS) is configured, a NCOS value between 0 and 99 must be defined for each time period.

Call Detail Recording

If configured, Call Detail Recording (CDR) A-type records are printed for SAR Flexible Feature Codes functions.

Charge Account, Forced

Forced Charge Account (FCA) can be used to override Scheduled Access Restrictions (SAR) on a per-call basis, provided the current Class of Service (COS) of the telephone or trunk is CUN, TLD, or CTD. The current COS is the COS in force according to the SAR schedule. If an Authorization Code that sets the COS to CUN, TLD, or CTD is dialed before the FCA, the call is allowed. FCA sets the COS to UNR and the Network COS (NCOS) to the NCOS defined in LD 15, provided that FCA is enabled on both a customer and telephone/trunk basis.

Class of Service

Telephones defined in LD 10 and 11, and trunks defined in LD 14 which are assigned a SARG number, have their Class of Service defined by the SAR schedule of their SAR group.

Controlled Class of Service

During normal hours, Controlled Class of Service (CCOS) restrictions override normal telephone restrictions. During off-hour periods or times when a Scheduled Access Restrictions (SAR) Lock is in effect, however, Scheduled Access Restrictions apply. When the Lock or off-hour period ends, CCOS restrictions continue to apply until they are removed or SAR becomes effective again. Whether a CCOS controller or electronic lock is used to activate CCOS, there is no indication to the user when Scheduled Access Restrictions are in effect, overriding CCOS restrictions. A telephone defined in LD 10 or 11 or a trunk defined in LD 14, which is assigned a SAR group number, has its Class of Service defined by the SAR schedule of its SAR group.

Coordinated Dialing Plan

If SAR is equipped when Coordinated Dialing Plan (CDP) is configured, a NCOS value between 0 and 99 must be defined for each time period.

Direct Inward System Access

Direct Inward System Access (DISA) numbers are not assigned to SAR groups and therefore are not affected by SAR schedules.

DISA can be used to manually modify the SAR schedule, provided that the correct FFC and Authorization Code are dialed.

Electronic Lock Network Wide/Electronic Lock on Private Lines

The SAR feature overrides Electronic Lock.

Multi-Tenant Service

If a SAR is assigned to a tenant, any telephone belonging to the tenant will follow this SAR schedule unless the telephone belongs to a SAR group. The telephone's Scheduled Access Restrictions override any SAR assigned to the tenant.

Network Alternate Route Selection

If SAR is equipped when Network Alternate Route Selection (NARS) is configured, a NCOS value between 0 and 99 must be defined for each time period.

Network Class of Service

When a Network Class of Service (NCOS) is changed, it may be necessary to alter the NCOS values defined for each SAR group in LD 88. The NCOS value, which defines the facility restriction level and hence the NFCR trees, is used as defined by the SAR schedule. Also, different FRLs, and hence different NFCR trees, are used at different times according to the NCOS assigned to the SARG.

New Flexible Code Restriction

If a Facility Restriction Level (FRL) is changed to be associated with a different NFCR tree, any NCOS which uses that FRL is affected. In turn, the NCOS assigned to a SAR group may also be affected.

Office Data Administration System

Office Data Administration System (ODAS) can be used to indicate that telephones have been assigned to a SAR group. ODAS must be equipped in order to print members of a SAR group in LD 81.

Position Busy with Call on Hold

If an attendant in a SAR group has a call on hold, the attendant is not placed in Position Busy when the group enters an off-hour period.

Speed Call, Network Speed Call

The System Speed Call and Network Speed Call features ignore the COS and TGAR access restrictions in a SAR schedule, using the COS and NCOS defined in the speed call list.

Trunk Group Access Restriction

SAR does not alter the Trunk Group Access Restriction defined per route.

Feature packaging

Scheduled Access Restrictions requires the following packages:

- Scheduled Access Restrictions (SAR) package 162
- Call Detail Recording (CDR) package 4 for CDR functionality
- Network Authorization Code (NAUT) package 63
- Multi-Tenant Service (TENS) package 86 for Multi-Tenant functionality
- Flexible Feature Codes (FFC) package 139 and Basic Authorization Codes (BAUT) package 25 for the manual modification of schedules

- Network Class of Service (NCOS) package 32 to make NCOS restrictions effective
- Charge Account for CDR (CHG) package 23, Charge Account/Authorization Code (CAB) package 24, and Forced Charge Account (FCA) package 52 for additional billing information

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 1 "LD 88" \(page 79\)](#)
Configure Scheduled Access Restrictions data block.
2. [Table 2 "LD 88" \(page 80\)](#)
Print the status of the tenant SAR group
3. [Table 3 "LD 88" \(page 80\)](#)
Configure the Authcode data block not to automatically generate Authcodes.
4. [Table 4 "LD 88" \(page 81\)](#)
Define SAR entries in the Authcode entries data block.
5. [Table 5 "LD 10 " \(page 82\)](#)
Assign individual analog (500/2500-type) telephones to the selected SAR group in response to the SGRP prompt.
6. [Table 6 "LD 11" \(page 82\)](#)
Assign individual proprietary telephones to the selected SAR group in response to the SGRP prompt.
7. [Table 6 "LD 11" \(page 82\)](#)
Assign individual attendant consoles to the selected SAR group in response to the SGRP prompt.
8. [Table 7 "LD 12" \(page 82\)](#)
Assign individual trunk route to the selected SAR group in response to the SGRP prompt.
9. [Table 8 "LD 16" \(page 83\)](#)
Define Flexible Feature Codes for the SAR disable, SAR enable, SAR lock, and SAR unlock functions.
10. [Table 9 "LD 57" \(page 83\)](#)

Assign a SARG for each tenant by responding to the TEN prompt with the tenant number and the SGRP prompt with the number of the SAR group to be assigned to the tenant.

11. [Table 10 "LD 93" \(page 84\)](#)

Reset current time of day to activate the feature and SAR schedule.

**Table 1
LD 88**

Prompt	Response	Description
REQ	NEW CHG	Create or change existing data block.
TYPE	SAR	Scheduled Access Restrictions.
CUST	xx	Customer number, as defined in LD 15
SPWD	xxxx	Secure data password (same password as defined for DISA on a per customer basis in LD 15).
SGRP	0-999	Prompt will not appear to a user with an LAO password. SAR group number.
SCDR	(NO) YES	(Do not) activate CDR for the SAR FFC commands.
OFFP	1-8	Off-hour period number. Off-hour periods may overlap; the period that starts first has priority until that off-hour period is over.
- STAR hh mm	<CR> hh mm	Go to ICR prompt. Start time. The current start time (hours and minutes) is printed individually after the prompt. Respond with the new start time.
- STOP hh mm	X hh mm	Remove value and return to OFFP prompt. Stop time. The current stop time (hours and minutes) is printed individually after the prompt. Respond with the new stop time.
- DAYS	X d ... d	Remove value and return to OFFP prompt. Respond with a new set of days to be used. Maximum of seven entries in the range of 1-7. Day 1 = Sunday, Day 2 = Monday, etc.

Table 1
LD 88 (cont'd.)

Prompt	Response	Description
- COS	(UNR) CTD CUN FR1 FR2 FRE SRE TLD	Off-hour period Class of Service. Unrestricted Conditionally Toll-Denied Conditionally Unrestricted Fully Restricted Class1 Fully Restricted Class 2 Fully Restricted Semi-restricted Toll Denied
- TGAR	(0)-15	Trunk Group Access Restriction.
- NCOS	0-99	Network Class of Service.
- ICR	(NO) YES	Incoming Calls are Restricted.
LOCK	(1)-8	The LOCK prompt is used to indicate which off-hour period is to be used as the LOCK period. The default is Period 1.

Table 2
LD 88

Prompt	Response	Description
REQ	PRT	Print.
TYPE	SAR	Scheduled Access Restrictions.
CUST	xx	Customer number, as defined in LD 15
SPWD	xxxx	Secure data password.
TEN	1-511	Tenant number.
SGRP	0-999	Prompted only if no tenant number is entered.

If the system is in an off-hour or locked period when a print command is issued, an asterisk appears following the restrictions being used. If lock is in effect, an additional asterisk appears following the lock prompt.

Table 3
LD 88

Prompt	Response	Description
REQ	NEW	New.
TYPE	AUB	Authcode data block.
CUST	xx	Customer number, as defined in LD 15
SPWD	xxxx	Secure data password (same password as defined for DISA on a per customer basis in LD 15).
ALEN	1-14	Number of digits in authcodes.

Table 3
LD 88 (cont'd.)

Prompt	Response	Description
ACDR	YES NO	Activate CDR for authcodes (there is no default response).
RANR	0-511 0-127	RAN route number for "Authcode Last" prompt (NAUT) Range for Large System and CS 1000E system. Range for Small System and Media Gateway 1000B.
CLAS	(0)-115	Classcode value assigned to authcode.
AUTO	NO	Do not automatically generate Authcodes.
		Prompted when NAUT package 63 is equipped and REQ = NEW. The Authcode length must be a minimum of four digits.

Table 4
LD 88

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	AUT	Authcode entries data block.
CUST	xx	Customer number, as defined in LD 15
SPWD	xxxx	Secure data password (same password as defined for DISA on a per customer basis in LD 15).
CODE	xxx..x	Authcode (1-14 digits).
SARC	YES NO	Allow or disallow Authcode to be used as the SAR authorization code.
- SERV	(END) ENA (LKD) LKA (DSD) DSA (UND) UNA	SAR service functions for SARC (the SERV prompt appears if SARC = YES) Enable (Denied) Allowed. Lock (Denied) Allowed. Disable (Denied) Allowed. Unlock (Denied) Allowed Up to four entries can be made at once.
- SRGP	0-999 ALL	Number of SAR group to be defined or changed. Change all SAR groups.
CLAS	(0)-115	Class code value assigned to authcode. Cycle continues with CODE.
		When type = AUT, enter X to configure the authcode as an exempt code. When this data is printed, the month the authcode was deactivated is output. The default is 0 when adding authcode entries.
	X	Exempt authcode.

Table 5
LD 10

Prompt	Response	Description
REQ:	New CHG	Add, or Change.
TYPE:	500	Analog (500/2500-type) telephone.
TN		Terminal number
	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
...		
SGRP	(0)-999	Scheduled Access Restriction group number. Must have group defined in LD 88.

Table 6
LD 11

Prompt	Response	Description
REQ:	NEW CHG	Add, or change.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
TN		Terminal number
	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
...		
SGRP	(0)-999	Scheduled Access Restriction group number. Must have group defined in LD 88.

Table 7
LD 12

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	2250	Attendant console type.
TN		Terminal number
	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.

Table 7
LD 12 (cont'd.)

Prompt	Response	Description
...		
SGRP	(0)-999	Scheduled Access Restriction group number. Must have group defined in LD 88.

Attendant consoles do not follow the SAR restrictions defined by the SGRP, but they can be locked by using SAR FFCs

Table 8
LD 16

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	RDB	Route Data Block.
CUST	xx	Customer number, as defined in LD 15
...		
SGRP	(0)-999	Scheduled Access Restriction group number. Must have group defined in LD 88.

Table 9
LD 57

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	FFC	Flexible Feature Codes data block.
CUST	xx	Customer number, as defined in LD 15
...		
CODE	aaaa	Specific Flexible Feature Code Type. To change a specific Flexible Feature Code, enter the associated mnemonic then carriage return <CR>. The mnemonic will then be prompted and the Flexible Feature Code can be entered. The Flexible Feature Code may be up to four digits or up to seven digits if DNXP package 150 is equipped.
- SADS	xxxx	SAR Disable code.
- SAEN	xxxx	SAR Enable code.
- SALK	xxxx	SAR Lock code.
- SAUN	xxxx	SAR Unlock code.

Table 10
LD 93

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	TGEN	Tenant SAR data block.
CUST	xx	Customer number, as defined in LD 15
...		
TEN	1-511	Tenant number.
...		
SGRP	(0)-999	Scheduled Access Restriction group number. Must have group defined in LD 88.

Feature operation

Modification of SAR Restrictions

SAR restrictions can be modified on a per call basis by using an Authorization Code, if the Basic Authorization Code (BAUT) package 25 is equipped.

Also, if the Authorization Code and Flexible Feature Codes packages are equipped, the off-hour periods can be shortened or extended by using the four SAR FFCs.

The Authorization Code feature can be used to allow a user to override a Scheduled Access Restriction on a single-call basis by dialing an Authorization Code (Authcode). Each Authcode is assigned a Class of Service, Trunk Group Access Restriction, and a Network Class of Service. The restrictions associated with the dialed Authcode apply to the call being made. Thus, by using an Authcode, any facility to which access is allowed depending on the restrictions associated with an Authcode, can be accessed by dialing the telephone, even though the telephone may normally be denied access.

Single-Call Modification

The Scheduled Access Restrictions feature does not modify using Authcodes to allow calls to be made on restricted sets. Dial either SPRE + 6 or the AUTH FFC plus the Authcode associated with the desired restrictions. Once dial tone is returned, indicating a valid code, the call may be dialed as normal.

Off-Hour Period Modification

The SADS, SAEN, SALK, and SAUN FFCs defined in LD 57 can be used to modify off-hour period restrictions, by simply dialing the FFC plus an appropriate Authcode. The Authcode determines if the requested function is allowed and whether the action is to take place on a SAR group or a

customer basis. An FFC plus and Authcode for a specific SARG is only accepted from a station within that group, or from a station within a tenant which uses that SAR group.

Entering a Flexible Feature Code plus an Authcode results in the following:

- SALK + Authcode = extend off-hour restrictions for weekends or holidays
- SAUN + Authcode = return to the schedule of access restrictions
- SADS + Authcode = extend normal restrictions into the off-hour period for after hour services
- SAEN + Authcode = cancel this after hour service
- SALK followed by SAEN + Authcode = cause off-hour restrictions to start immediately, and
- SALK on SAR group containing the attendant(s) + Authcode = disallow any calls on an attendant console.

Scheduled Electronic Lock

Contents

This section contains information on the following topics:

- “Feature description” (page 87)
- “Operating parameters” (page 88)
- “Feature interactions” (page 89)
- “Feature packaging” (page 89)
- “Feature implementation” (page 89)
- “Feature operation” (page 93)

Feature description

Scheduled Electronic Lock (SELK) enhances the Electronic Lock feature.

The Scheduled Electronic Lock feature automatically locks telephone sets at predetermined times. These times are defined in the Scheduled Access Restrictions (SAR) database (LD 88). SAR group numbers are also defined in LD 88. A maximum of eight scheduled lock times can be assigned to each group.

Each telephone that requires Scheduled Electronic Lock functionality must be assigned to a SAR group in LD 10 or 11, and must have the Scheduled Electronic Lock Allowed (SLKA) Class of Service assigned.

In order to override the Scheduled Electronic Lock feature, the user must use the existing Electronic Lock feature. The user enters the Electronic Lock Deactivated (ELKD) Flexible Feature Code (FFC). The telephone remains unlocked until the user dials the Electronic Lock Activated (ELKA) FFC. If the user does not dial the ELKA FFC, the system automatically

locks the telephone at the next scheduled lock time. For the telephone to be unlocked again, the user must dial the ELKD FFC to unlock the telephone. The telephone does not automatically unlock.

A special dial tone, defined in LD 56, notifies the user that the telephone is in a locked state.

Scheduled Electronic Lock Example

The Scheduled Electronic Lock is scheduled for 18:00, 24:00, 02:00. At 22:00, an employee who is working overtime needs to use their telephone. That person enters the ELKD FFC on the telephone to unlock it. At 24:00, the telephone automatically locks, if it has not already been locked by the user. To use the telephone again, the employee must unlock it. At 02:00, the next scheduled lock time, the telephone locks once more. The Scheduled Electronic Lock feature remains in effect until the employee unlocks the telephone by dialing the ELKD FFC.

Operating parameters

The Scheduled Electronic Lock feature supports analog (500/2500-type) and digital telephones on Remote Office.

The Scheduled Electronic Lock feature does not support ACD sets, trunks or PC Attendant.

If a telephone does not support the SAR and Electronic Lock features (for example, ACD sets), then it will not support the Scheduled Electronic Lock feature.

If the Class of Service (CLS) is configured to Scheduled Electronic Lock Deactivated (SKLD) in LDs 10 and 11, the existing Electronic Lock and SAR feature functionality apply.

When the Scheduled Electronic Lock feature is active, it does not take the Controlled Class of Service (CCOS) restriction from LD 15. Configuration is done in LD 88.

When a telephone is unlocked, CCOS restrictions (if active) override normal telephone restrictions. When the Scheduled Electronic Lock feature is active, the Scheduled Access Restrictions override the CCOS restrictions.

If the system is busy the Scheduled Electronic Lock feature could be slightly delayed. In this case, it is possible that a user could still dial an external number after the beginning of a scheduled lock time.

Feature interactions

Automatic Call Distribution

The Scheduled Electronic Lock feature does not support Automatic Call Distribution (ACD) sets, as CCOS does not support ACD sets.

Direct Inward System Access

Direct Inward System Access (DISA) numbers are not assigned to Scheduled Access Restrictions groups, so they are not affected by the SELK feature.

Electronic Lock Network Wide / Electronic Lock on Private Lines

The SELK feature supports Electronic Lock Network Wide / Electronic Lock on Private Lines. However, a scheduled lock is not supported over a network. Scheduled Electronic Lock must be configured and administered locally. Like SELK, these features obtain their restrictions from Scheduled Access Restrictions.

Message Intercept

When SELK locks a telephone, Message Intercept (MINT) provides a different dial tone or announcement while the telephone is locked.

Multi Tenant Service

If Scheduled Access Restrictions are applied to a tenant, the telephones in that tenant group follow the Scheduled Access Restrictions (unless the telephone belongs to a different SAR group).

Scheduled Access Restrictions

The Scheduled Access Restrictions (SAR) Permanent Disable, Active Lock, and Lock Disable FFCs have precedence over SELK.

Feature packaging

Scheduled Electronic Lock requires the following packages:

- Controlled Class of Service (CCOS) package 81
- Flexible Feature Code (FFC) package 139
- Scheduled Access Restrictions (SAR) package 162
- Message Intercept (MINT) package 163, if the Message Intercept function is required

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 11 "LD 88" \(page 90\)](#)

Configure the Scheduled Access Restrictions data block.

2. [Table 12 "LD 10" \(page 91\)](#)
Configure the Scheduled Electronic Lock feature on an analog (500/2500-type) telephone.
3. [Table 13 "LD 11" \(page 92\)](#)
Configure the Scheduled Electronic Lock feature on a digital telephone on Remote Office.
4. [Table 14 "LD 57" \(page 92\)](#)
Define Flexible Feature Codes for Scheduled Electronic Lock.

Table 11
LD 88

Prompt	Response	Description
REQ	NEW CHG	Create data block. Change existing data block.
TYPE	SAR	Scheduled Access Restrictions.
CUST	xx	Customer number, as defined in LD 15
SPWD	xxxx	Secure data password (same password as defined for DISA on a per customer basis in LD 15).
		This prompt does not appear to a user with an LAO password.
SGRP	0-999	Scheduled Access Restrictions group number.
OFFP	1-8	Off-hour period number. Off-hour periods can overlap; the period that starts first has priority until that off-hour period is finished. All the prompts shown up to the ICR prompt repeat until you enter <CR>.
	<CR>	Go to the ICR prompt.
- STAR hh mm	hh mm	Start time. The current start time (hours and minutes) is printed individually after the prompt. Respond with the new start time.
- STOP hh mm	hh mm	Stop time. The current stop time (hours and minutes) is printed individually after the prompt. Respond with the new stop time.
- DAYS	d ... d	Respond with a new set of days to be used. Maximum of seven entries in the range of 1-7. Day 1 = Sunday, Day 2 = Monday, etc.

Table 11
LD 88 (cont'd.)

Prompt	Response	Description
- COS	(UNR) CTD CUN FR1 FR2 FRE SRE TLD	Off-hour period Class of Service. Unrestricted Conditionally Toll-Denied Conditionally Unrestricted Fully Restricted Class1 Fully Restricted Class 2 Fully Restricted Semi-restricted Toll Denied
- TGAR	0-(1)-15	Trunk Group Access Restriction.
- NCOS	0-99	Network Class of Service.
ICR	(NO) YES	Incoming Calls are Restricted.
LOCK	(1)-8	Indicates off-hour period to be used as the LOCK period. Default is Period 1.

Table 12
LD 10

Prompt	Response	Description
REQ:	NEW	Add new data.
TYPE:	500	Analog (500/2500-type) telephone.
TN	l s c u c u	Terminal number Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit. Format for Small System and Media Gateway 1000B where c = card and u = unit.
DES	x...x	ODAS Station Designator.
CUST	xx	Customer number, as defined in LD 15
...		
SCPW	xxxx	Station Control Password. SCPL must be configured in LD 15.
SGRP	(0)-999	Scheduled Access Restriction group number. Must have group defined in LD 88.
...		
CLS	CCSA SLKA	Controlled Class of Service Allowed. CCSD = Controlled Class of Service Denied (default). Scheduled Electronic Lock Allowed. SLKD = Scheduled Electronic Lock Denied (default).

Table 13
LD 11

Prompt	Response	Description
REQ:	NEW	Add new data.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
TN	l s c u	Terminal number
	c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
DES	x...x	ODAS Station Designator.
CUST	xx	Customer number, as defined in LD 15
...		
SCPW	xxxx	Station Control Password.
		SCPL must be configured in LD 15.
SGRP	(0)-999	Scheduled Access Restriction group number. Must have group defined in LD 88.
...		
CLS	CCSA	Controlled Class of Service Allowed. CCSD = Controlled Class of Service Denied (default).
	SLKA	Scheduled Electronic Lock Allowed. SLKD = Scheduled Electronic Lock Denied (default).

Table 14
LD 57

Prompt	Response	Description
REQ	NEW CHG	Add new data. Change existing data.
TYPE	FFC	Flexible Feature Code.
CUST	xx	Customer number, as defined in LD 15
FFCT	(NO) YES	Provide FFC confirmation tone.
CODE	ELKA	New/change Electronic Lock Activate FFC.
ELKA	xxxx	Enter the new or changed Electronic Lock Activate FFC.
CODE	ELKD	New/change Electronic Lock Deactivate FFC.
ELKD	xxxx	Enter the new or changed Electronic Lock Deactivate FFC. ELKD must be different than ELKA.

Feature operation

During the period that a telephone is locked, the user must enter the ELKD FFC to unlock the telephone. The telephone remains unlocked until either the user dials the ELKA FFC to manually lock the telephone or the next scheduled lock occurs.

Secrecy Enhancement

Contents

This section contains information on the following topics:

- “Feature description” (page 95)
- “Operating parameters” (page 95)
- “Feature interactions” (page 96)
- “Feature packaging” (page 96)
- “Feature operation” (page 97)

Feature description

This feature allows a warning tone to be applied to a three-way connection involving the source, destination and attendant if Warning Tone Allowed (WTA) Class of Service is available on both the source and destination sides. If the warning tone is denied on either the source or destination, these parties are automatically split. This applies to all calls handled by the attendant instead of only incoming network calls and attendant recalls with the original secrecy feature. The warning tone is always applied to a three-way connection.

There will be no connection established through the console with more than two parties, excluding the attendant, unless all parties have WTA Class of Service.

This feature also prevents any intelligible crosstalk on an attendant-held call or if the source (SRC) or destination (DEST) party is excluded.

Operating parameters

A connection is not established through the console if one of the parties, excluding the attendant, has warning tone denied Class of Service.

Feature interactions

AC15 Recall: Timed Reminder Recall

When the attendant answers an AC15 recall, the destination party is excluded from the connection. The attendant is connected to the source party and the excluded destination lamp is lit to show the exclusion of the destination party.

Attendant Break-In with Secrecy

The source and destination parties cannot be joined together on the attendants conference bridge if BKIS is active. This is consistent with the existing Break-In feature.

Attendant Recall

When the attendant answers a recall, the attendant is automatically connected to the destination party and the source party is excluded.

Semi-Automatic Camp-On

Secrecy and Enhanced Secrecy apply to Semi-automatic Camp-On recalls, with splitting taking place when the attendant answers the recall.

Secrecy

All functionalities of the Secrecy feature apply to the Secrecy Enhancement feature.

Slow Answer Recall Enhancement

The Call Waiting Recall and Camp-on Waiting Recall enhancements take precedence over Attendant Recall Splitting (ATS), Secrecy (SYA), Enhanced Secrecy (EHS), and Multiple Party Operations.

Source Included when Attendant Dials

Source Included when Attendant Dials takes precedence over Secrecy and Enhanced Secrecy.

Feature packaging

This feature is included in base system software.

Feature implementation

Table 15

LD 15 - Select secrecy enhancement for customer:

Prompt	Response	Description
REQ:	CHG	Change
TYPE:	FTR	Features and options Data Block

Table 15**LD 15 - Select secrecy enhancement for customer: (cont'd.)**

Prompt	Response	Description
...		
OPT	(SYD) SYA EHS	Secrecy allowed Enhanced Secrecy allowed Secrecy denied

Feature operation

No specific operating procedures are required to use this feature.

Secretarial Filtering

Contents

This section contains information on the following topics:

- “Feature description” (page 99)
- “Operating parameters” (page 99)
- “Feature interactions” (page 100)
- “Feature packaging” (page 100)
- “Feature implementation” (page 100)
- “Feature operation” (page 100)

Feature description


Secretarial Filtering is an application of Call Forward All Calls. It allows you to forward all calls to a second telephone. The user at the second telephone answers the forwarded calls and can choose to transfer the call back to you.

In the following example, a manager having a secondary Directory Number (DN) of 2644 forwards all calls arriving at that DN to a secretary's secondary DN 2744. Any call placed to DN 2644 is forwarded to the secretary at DN 2744. The secretary answers the call, decides that the manager should take the call, and transfers it back to DN 2643 (the prime DN). In this example, the manager receives only the calls originated or transferred by the secretary.

Operating parameters

Only the Directory Number (DN) designated as the Call Forward number can originate or transfer calls to the originally dialed DN.

Figure 1
Secretarial Filtering example

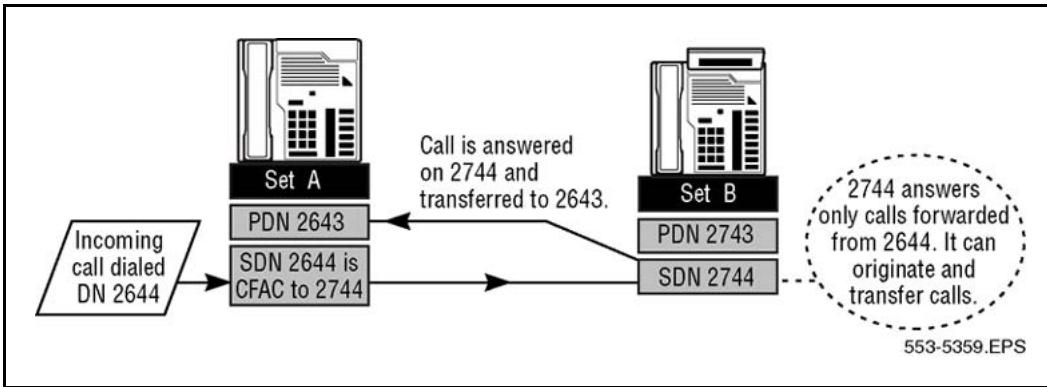

All Single Appearance DNs on the forwarded telephone are forwarded to the target DN.

A Multiple Appearance DN on the forwarded telephone is forwarded only if it is a Prime DN. A Multiple Appearance DN that is not the Prime DN rings at all appearances, including the forwarded telephone.

Feature interactions

Call Forward/Hunt Override Via Flexible Feature Code

The Secretarial Filtering feature is overridden by the Call Forward/Hunt Override Via FFC feature, but there are no changes to the feature itself.

Network Intercom

In a Secretarial filtering scenario, the secretary BFS lamp will also reflect that the boss telephone is busy if the boss is on a Hot Type I call.

Phantom Terminal Numbers (TNs)

If a Phantom TN is call forwarded to an existing telephone, and that telephone is used to call a DN on the Phantom TN, the call receives DCFW treatment.

Feature packaging

Secretarial Filtering is included in base system software. It is provided with Call Forward All Calls.

Feature implementation

This feature is enabled when Call Forward All Calls is enabled.

Feature operation

See the feature operation in the Call Forward All Calls module in this document.

Seizure Acknowledgment

Contents

This section contains information on the following topics:

- “Feature description” (page 101)
- “Operating parameters” (page 101)
- “Feature interactions” (page 101)
- “Feature packaging” (page 102)
- “Feature implementation” (page 102)
- “Feature operation” (page 102)

Feature description

Outgoing Ear and Mouth (E&M) Direct Inward Dialing (DID) or Direct Outward Dialing (DOD) trunks with an immediate start arrangement may require a seizure acknowledgment signal be received after a trunk seizure. This signal is an off-hook message. If the signal is not received within one second of the seizure, the trunk is software busied for three seconds, then dropped. The outgoing call then attempts to seize the next trunk in the sequence to complete the call. If the signal is received, the call is processed normally.

Operating parameters

The Public Exchange/Central Office must be equipped to handle the special signaling requirements associated with the Seizure Acknowledgment feature described above.

The Seizure Acknowledgment feature is not available on 1.5 Mbps digital trunks or Japanese Digital Multiplex Interface (DMI) trunks.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

International Supplementary Features (SUPP) package 131.

Feature implementation

Table 16

LD 16 - Set Seizure Acknowledgement for a trunk route.

Prompt	Response	Description
REQ	aaaa	Request (aaaa = CHG, END, LCHG, NEW, OR OUT)
TYPE	RDB	Type of data block = RDB (Route data block)
CUST	xx	Customer number, as defined in LD 15
...		
ACKW	(NO) YES	Seizure acknowledgment signal (is not) is expected after seizure of this DID/DOD trunk.

Feature operation

No specific operating procedures are required to use this feature.

Selectable Conferee Display and Disconnect

Contents

This section contains information on the following topics:

- “Feature description” (page 103)
- “Operating parameters” (page 111)
- “Feature interactions” (page 113)
- “Feature packaging” (page 119)
- “Feature implementation” (page 119)
- “Feature operation” (page 121)

Feature description

The Selectable Conferee Display and Disconnect (SCDD) feature expands existing Conference Display functionality and provides Meridian Modular (Aries) telephone users and IP Phone users with the capability to selectively drop any party that has been added to a conference. This feature provides both Meridian Modular telephones and IP Phones involved in a conference with the following two enhancements:

- Conference Count Display
- Selectable Conferee Disconnect

ATTENTION

The Selectable Conferee Display and Disconnect feature only applies to Meridian Modular telephones or IP Phones equipped with a display screen and involved in a conference with at least three conferees.

Conference Count Display

When on a conference call with Conference Count Display activated, Meridian Modular telephones and IP Phones show the following information on their display screens:

- the elapsed time
- the total number of parties currently active on the call (includes all conferees in the conference, regardless of the type of phone used: Meridian Modular, IP Phone, or other)

Whenever a conferee is added to or disconnects from the conference, the Conference Count Display updates to reflect the change.

To activate the Conference Count Display, configure the Class of Service to Conferee Display Count Allowed (CDCA). The display screen then shows only the elapsed time, not the number of conferees in attendance.

The Conference Count Display divides into three fields. You must configure at least one of these fields for Conference Count Display to work. You can configure the fields from the Customer Data Block. The fields are as follows:

- The Total Conferees Count display field (CNFFIELD) shows the total number of parties involved in a conference (total internal conferees plus total external conferees). The default mnemonic for this field on the display screen is CONF.
- The Total Internal Conferees Count display field (INTFIELD) shows the total number of conferees internal to the system. This includes analog (500/2500-type) telephones, Meridian 1 proprietary telephones, IP Phones, attendant consoles, and service trunks (such as Paging, Music, and Recorded Announcement) within the system. The default mnemonic for this field on the display screen is I.
- The Total External Conferees Count display field (EXTFIELD) shows the total number of conferees external to the system. This includes trunks connected to the system that can be configured on internal or external routes. The default mnemonic for this field on the display screen is E.

You can modify the mnemonics for each of the above fields to accommodate different languages or to save output time. To make modifications, you must define the CNF_NAME, INT_NAME and EXT_NAME prompts in the Customer Data Block. You can use a mnemonic of one to four characters in length for each of the three fields.


ATTENTION

Nortel recommends that you take the real time impact into consideration when modifying the mnemonics for the three display fields. Since the displays on both Meridian Modular telephones and IP Phones receive each character individually (including spaces), configuring the maximum number of characters in the field headings (four characters each) increases the refresh time for each telephone involved in the conference. Taking real time impact into consideration is especially important in conferences involving a large number of parties.

[Figure 2 "Meridian Modular telephone display with all three display fields enabled in LD 15" \(page 105\)](#) offers an example of a Meridian Modular telephone in a conference with five parties: three internal conferees and two external conferees. With the Class of Service configured to Conference Display Count Allowed (CDCA), the conference count information shows up on the left part of the sample display. The conference count information breaks down as follows:

- enabling CNFIELD in the Customer Data Block shows as **CONF 5** in the sample display, where the total number of conferees in attendance equals **5**.
- enabling INTFILED in the Customer Data Block shows as **I 3** in the sample display, where the total number of internal conferees in attendance equals **3**.
- enabling EXTFIELD in the Customer Data Block shows as **E 2** in the sample display, where the total number of external conferees in attendance equals **2**.


Figure 2
Meridian Modular telephone display with all three display fields enabled in LD 15

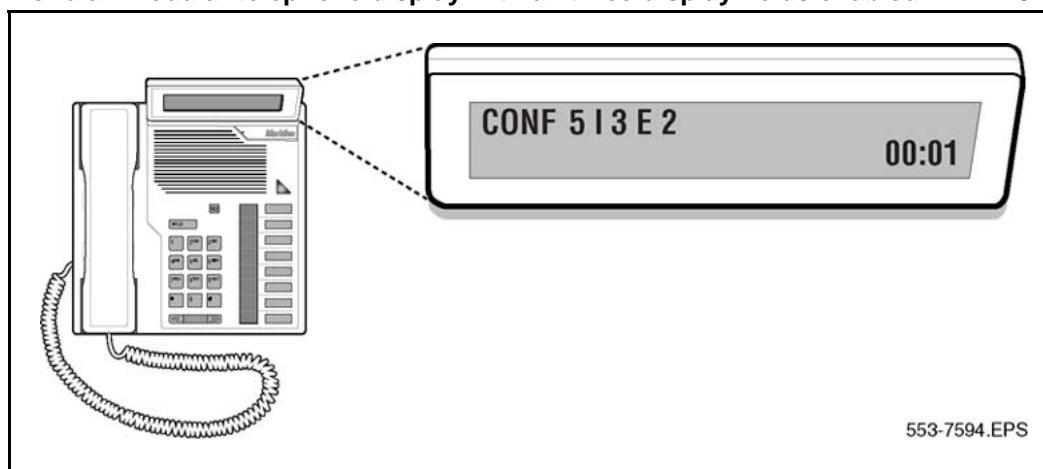

From the Customer Data Block, you can combine the three Conference Count Display fields to configure up to eight possible Conference Count Display formats. [Figure 3 "Possible display formats of the active](#)

"Conference Count Display" (page 106) offers an example of a conference hosting a total of six conferees: four internal parties and two external parties.

Figure 3
Possible display formats of the active Conference Count Display

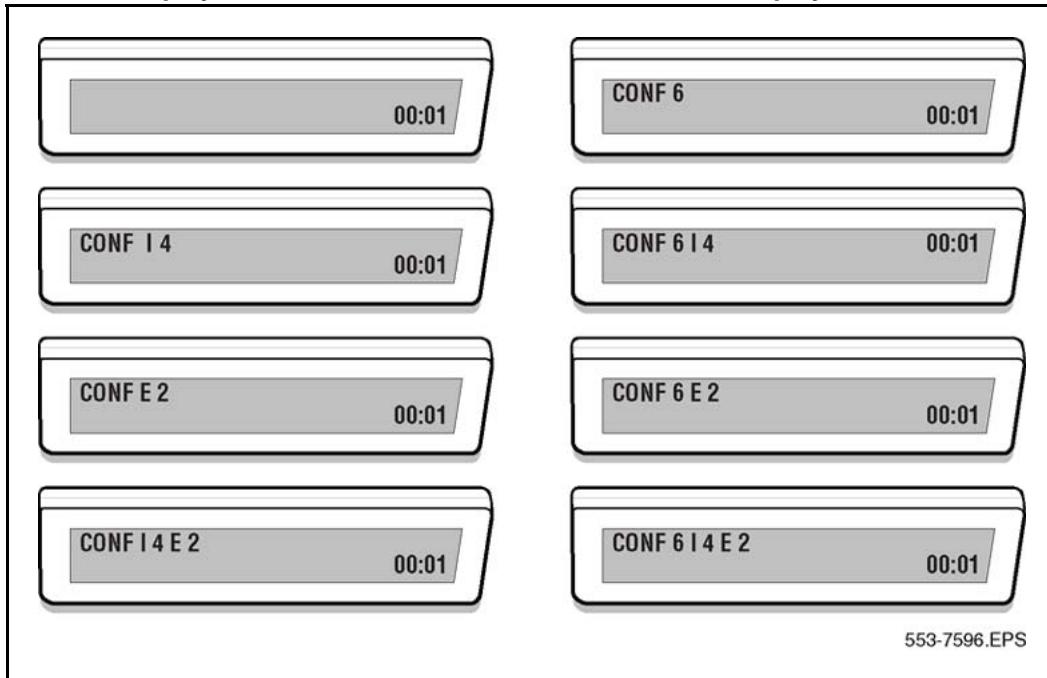

The eight possible formats from the preceding graphic are organized as follows:

- The left column shows display formats with CNFIELD disabled (no total number appears next to **CONF**).
- The right column shows display formats with CNFIELD enabled (the total number **6** appears next to **CONF**).
- The first row shows display formats with both INTFIELD and EXTFIELD disabled.
- The second row shows display formats with INTFIELD enabled (the total number appears as **I 4**) and EXTFIELD disabled.
- The third row shows display formats with INTFIELD disabled and EXTFIELD enabled (the total number appears as **E 2**).
- The fourth row shows display formats with both INTFIELD and EXTFIELD enabled (totals appear as **I 4** and **E 2**).


ATTENTION

To display the Total Conferees Count display field name (CNF_NAME), you must configure at least one of the CNFFIELD, INTFIELD, or EXTFIELD prompts to YES in the Customer Data Block.

Each display field on the screen of either a Meridian Modular telephone or an IP Phone shows a maximum conferee count of six. If the total number of conferees exceeds six, then the Conference Count Display field shows as **6+**. [Figure 4 "Meridian Modular telephone display in a conference with more than six conferees" \(page 107\)](#) shows a Meridian Modular telephone display in a conference consisting of more than six internal parties (**I 6+**) and more than six external parties (**E 6+**). Therefore, the Total Conferees Count also exceeds six (**CONF 6+**).

Figure 4


Meridian Modular telephone display in a conference with more than six conferees

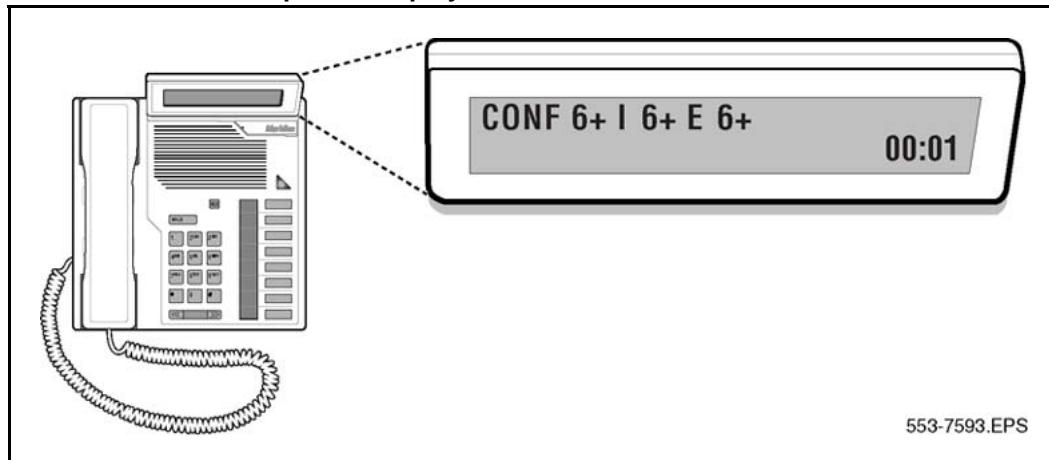

[Figure 5 "Example of a Conference Scenario involving both internal and external parties" \(page 108\)](#) demonstrates an active conference with five internal telephones and three external trunks. The display screens of the Meridian Modular telephones show the Conference Count Display information.

Figure 5

Example of a Conference Scenario involving both internal and external parties

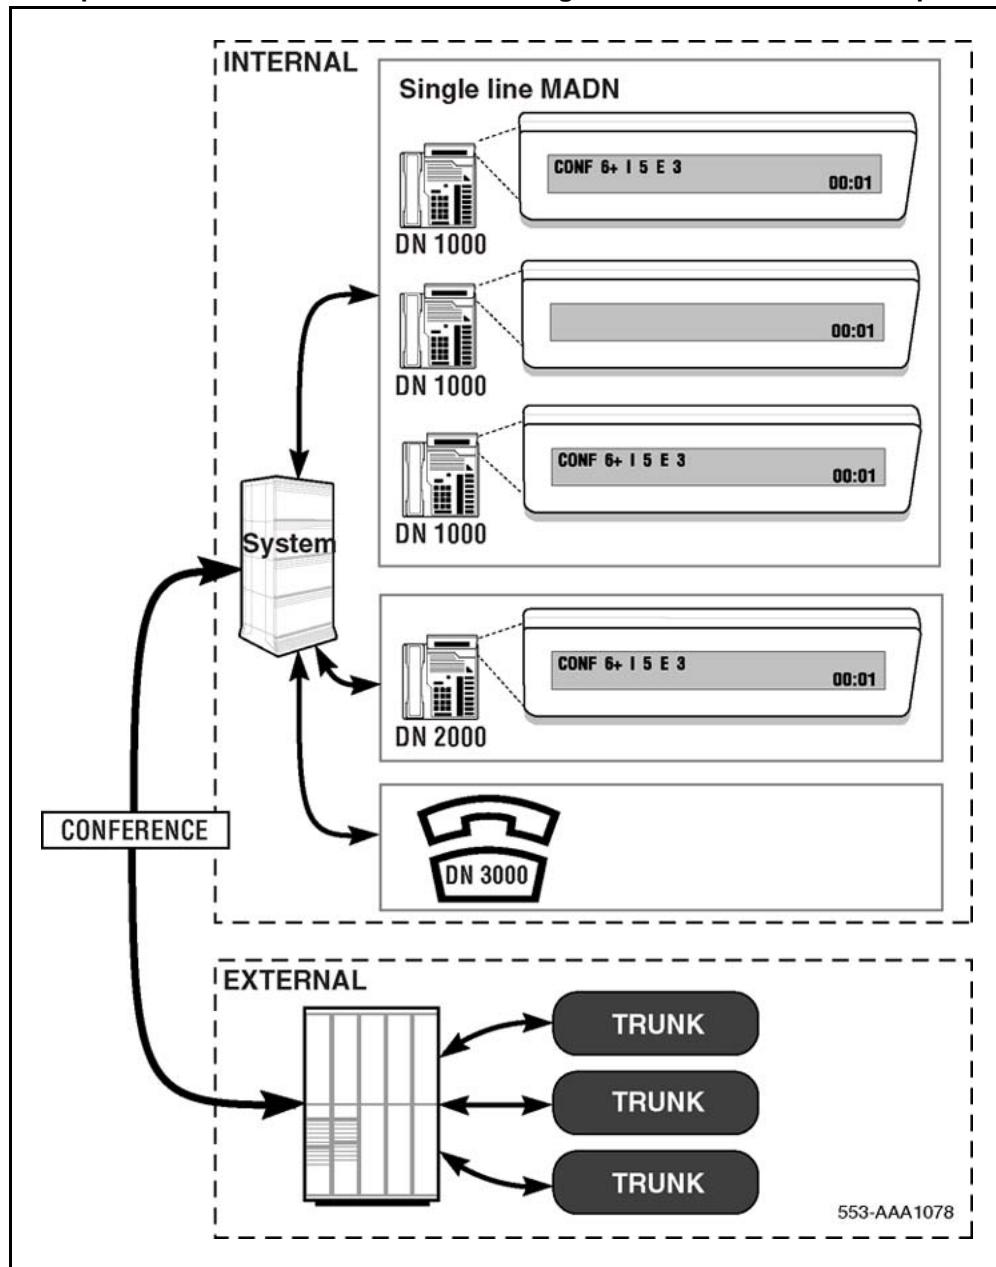

In the preceding example:

- Three Meridian Modular telephones show as DN1000, a single line Multiple Appearance Directory Number (MADN).
- Of the three telephones on DN1000, two entered the conference through Privacy Override.
- One of the telephones on DN1000 has its Class of Service configured to CDCC in LD 11 (its display shows only elapsed time), while all

other Meridian Modular telephones in the scenario have their Class of Service configured to CDCA allowed.

- The active conference also includes DN2000 (a Meridian Modular telephone) and DN 3000 (an analog 500/2500 type telephone).
- All three display fields are enabled in LD 15.

Selectable Conferee Disconnect

With Selectable Conferee Disconnect, a Meridian Modular telephone or IP Phone user scrolls through a list of active conferees, using a Conferee Selectable Display (CSD) key. You can configure the CSD key at the telephone level.

To activate Selectable Conferee Disconnect, press the CSD key during an active conference. The screen of the CSD key user can display every conferee involved in the conference (except CSD key users themselves).

With the CSD key in use, the display format of each conferee follows the existing simple two-party call display. The display shows the name and extension number of the conferee. If the conferee is on a trunk, the display shows the trunk group access code and the trunk member number.

As the key user, after you activate the CSD key you can then selectively disconnect any displayed conferee from the conference by pressing the active call key (the key on which the conference is established). The CSD key user can also cancel the Selectable Conferee Disconnect operation by pressing the Release key.

When you first press the CSD key, the last conferee to join the active conference displays first. Press the CSD key again, and the telephone displays another conferee from the list (in no particular order). Each time you press the key, the display scrolls forward through the list of all conferees. If you scroll past the party that you want to disconnect, keep pressing the CSD key until the list cycles through to the party you are looking for.

When you activate the CSD key, the CSD key lamp lights up. If, however, the displayed conferee cannot be disconnected (as in the case of an attendant console), then the Key lamp flashes. The display screen remains unchanged and continues to show the same conferee on the display.

The following figures show the display screen of telephone A, a Meridian Modular telephone, as it displays and disconnects a selected conferee:


- [Figure 6 "Display before CSD key activation" \(page 110\)](#)
- [Figure 7 "Display with CSD key activated and a conferee selected" \(page 110\)](#)
- [Figure 6 "Display before CSD key activation" \(page 110\)](#)
- [Figure 8 "Display after disconnecting conferee" \(page 111\)](#)

In these examples, telephone A operates under the following parameters:

- Class of Service set to CDCA in LD 11
- CSD key configured in LD 11
- CNFFIELD key configured in LD 15 (the telephone displays only the Total Conferees Count)


[Figure 6 "Display before CSD key activation" \(page 110\)](#) shows a total of six conferees involved in an active conference.

Figure 6
Display before CSD key activation

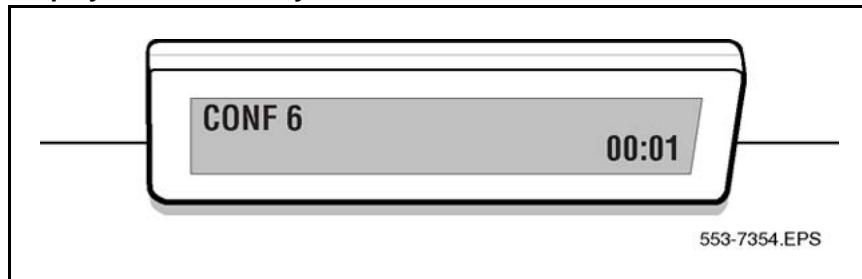


In [Figure 7 "Display with CSD key activated and a conferee selected" \(page 110\)](#), telephone A presses the CSD key and scrolls to conferee, Terry Smith.

Figure 7
Display with CSD key activated and a conferee selected

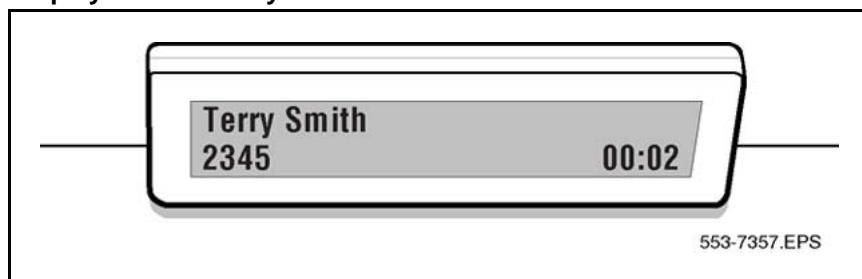

In Figure 8 "Display after disconnecting conferee" (page 111), telephone A presses the active call key to disconnect Terry Smith. Telephone A's display screen is updated to show the new total conferee count status after the conferee is disconnected from the active conference. The Conference Count Displays of the other Meridian Modular telephones or IP Phones involved in the conference are also updated. After the disconnection of Terry Smith, a total of five conferees remain active in the established conference.

Figure 8
Display after disconnecting conferee

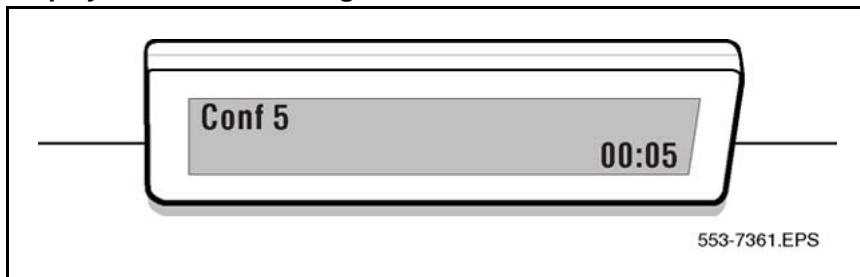

Operating parameters

The Selectable Conferee Display and Disconnect feature only applies to Meridian Modular telephones or IP Phones equipped with a display screen and involved in an active conference with at least three conferees in attendance.

Meridian Modular telephones include M2008, M2016, M2616, M2216ACD1, and M2216ACD2 telephones. IP Phones include the Nortel IP Audio Conference Phone 2033, Nortel IP Phone 2001, IP Phone 2002, IP Phone 2004, IP Phone 2007, Nortel IP Softphone 2050, Nortel Mobile Voice Client 2050 for Personal Digital Assistants (PDAs), Nortel WLAN Handset 2210, and WLAN Handset 2211.

When conferees disconnect from an active conference, leaving only two parties left, the conference usually converts to a simple two-party call. Situations where the two parties remain in conference mode include:

- one or both parties are attendant consoles
- both conferees are on mixed telephones using the same DN.

The Selectable Conferee Display and Disconnect feature does not apply to two-party conferences.

Simple call display for the last two remaining parties in a conference is as per existing operation.

The methods used to add a conferee to a conference do not affect Selectable Conferee Display and Disconnect. These methods include: 3-party and 6-party Conference, Override, Attendant Barge-In, Attendant Break-In, and Bridging.

The two Selectable Conferee Display and Disconnect sub-features, Conference Count Display and Selectable Conferee Disconnect, have independent functions and operations.

Conference Count Display

To activate Conferee Count Display in LD 11, configure the Class of Service to Conferee Display Count Allowed (CDCA). You must enable at least one of the three Conference Count Display field options in the Customer Data Block.

To configure the Class of Service to Conferee Display Count Allowed (CDCA) in LD 11, you must first configure either the Automatic Digit Display (ADD) or the Delay Display (DDS).

To configure a display screen to show the elapsed time only (existing functionality):

- Set all three Conference Count Display field options to NO in LD 15.
- Set the Class of Service to Conferee Display Count Denied (CDCD) in LD 11.

Selectable Conferee Disconnect

To activate Selectable Conferee Disconnect, you must define a Conferee Selectable Display (CSD) key in LD 11. Before defining the CSD key, however, you must configure the Class of Service in LD 11 to either Automatic Digit Display (ADD) or Delay Display (DDS).

You can configure only one CSD key per Meridian Modular telephone or IP Phone.

The CSD user's telephone displays each conferee (internal and external) according to existing simple two-party call display. Defining the CSD key does not change any of the features that supply or display conferee data. These features include: Call Party Name Display, Calling Party Privacy, Dialed Number Identification Service, Digit Display, Display of Calling Party Denied, and ISDN Calling Line Identification.

For conferees on a trunk, the display may not show the specific terminating telephone. For conferences with several trunks in attendance, Nortel recommends that you keep a record of each party that joins the conference and on which trunk.

When a conferee uses the CSD key, the displays (if there are any) on the other conferee telephones do not change. Only the CSD key user can view the list of conferees.

After you press the CSD key, you can only use the following keys: the active call key, the Release (RLS) key, and the CSD key. All other input is ignored.

If the CSD key user goes on-hook with the CSD key activated, then the key user is disconnected from the call, not the displayed conferee.

The Selectable Conferee Disconnect feature does not support the use of confirmation tones to indicate when a conferee is disconnected from the active conference.

If the system initializes or sysloads during an active conference, the conference is torn down as per existing functionality. If the CSD key is active when the system initializes or sysloads, then the key operation is canceled.

Usually, the active conferee list displays the last party to join the conference first. However, if the last party to join uses the CSD key, then the active conferee list displays in no particular order. This happens for two reasons: 1) only the last party to join is displayed with any priority; and 2) CSD key users are never displayed. Once the last party becomes a CSD key user, all priority disappears from the list, which then shows in no particular order. Likewise, if the last party is disconnected from the conference, the list then shows in no particular order.

You can use the CSD key to disconnect a conferee from the conference at any time.

Pressing a key or feature key replaces the active conference display is replaced. The Conference Count Display does not restore until a conferee either joins or leaves the conference, thereby updating the conferee count. If the conferee is placed on hold and then restored, the Conference Count Display appears once again.

Feature interactions

Attendant

With the CSD key activated, the active conference can display the attendant console as a conferee. You cannot use the CSD key to disconnect an attendant console from the conference. Only the attendant console can release itself from a conference call.

Any attempt to disconnect the attendant console using the CSD key causes the CSD key lamp to flash. To stop the lamp from flashing, press the Release key (cancelling the CSD key operation) or press the CSD key again (scrolling to the next conferee).

Attendant Barge-In

When an attendant barges into a conference, the action separates all conferees into either the destination (DEST) side or the Source (SRC) side. Conferees connected through the trunk that is being verified move to the DEST side (not including the attendant). All other conferees, including the attendant, move to the SRC side. However, all parties can communicate with each other.

Once the conference is established on either the SRC or the DEST side, you can use the CSD key. However, you cannot disconnect an attendant.

Attendant Break-In

To extend an incoming call to a busy destination DN, the attendant must first break into the active call. To break into an active call, the attendant presses the Break-In key. The attendant then asks the destination DN to disconnect from the active call. After the destination DN disconnects, the attendant can extend the incoming call to the destination DN.

If the attendant breaks into a simple two-party call, the call changes from a two-party call to a three-party conference (including the attendant). Once established on the conference, the Conference Count Display no longer shows on conferee telephones. Instead, both conferee telephones show the attendant information only.

When breaking into a conference call, the attendant effectively joins the conference. The Conference Count Display no longer shows on any conferee telephone. Instead, conferee telephones display attendant information only. After the destination DN disconnects from the conference (at the request of the attendant), the attendant can then extend the incoming call to the destination DN. If the remaining attendees continue the conference, then the Conference Count Display reappears on those attendee telephones.

The CSD key can be used during an established conference. However, the incoming call does not show as a conferee. The attendant does show as a conferee, but you cannot use the CSD key to disconnect an attendant.

Attendant Administration

You can modify Attendant Administration (AA) in LD 71 to print the CSD key. However, you cannot use AA to configure a CSD key.

Automatic Call Distribution

An Automatic Call Distribution (ACD) agent or supervisor can activate Conference and No Hold Conference. If your ACD telephone is a Meridian Modular telephone or IP Phone equipped with a display and a CSD key, then you can use the Selectable Conferee Display and Disconnect feature.

Agent Observe

Selectable Conferee Display and Disconnect does not change the functionality of the ACD Agent Observe feature. While in the observe mode:

- The conference does not include the ACD supervisor.
- The active conference count does not include the ACD supervisor.
- The ACD supervisor's telephone does not show the Conference Count Display.
- With the CSD key activated, the ACD supervisor does not show in the active conferees list.

ACD Agent Features

Nortel recommends that you do not assign the CSD key to an agent's telephone, because the CSD key can be used to disconnect a supervisor.

Alternate Call Answer

With ACAA set to YES in LD 23, an agent can place an active Individual DN (IDN) call on hold. With the IDN call on hold, the agent can then press the In-Calls key to return to the idle agent queue and take the next call. To establish a conference with the agent, the IDN call, and the ACD call, the agent must activate Call Join.

With Alternate Call Answer, after you establish an active conference with the ACD agent, an IDN call, and the ACD call, you can then apply the Selectable Conferee Display and Disconnect feature.

Agent and Supervisor Communication

To include the supervisor on a simple call with an ACD caller, the ACD agent presses the ACD supervisor (ASP) key. To answer, the supervisor presses the Agent (AGT) key. To finish the operation, the agent waits until the supervisor answers, then presses the ASP key.

When in a conference call with an ACD caller, the ACD agent cannot use the ASP key to add a supervisor to the conference.

With Agent and Supervisor Communication, after you establish an active conference established, you can then apply the Selectable Conferee Display and Disconnect feature.

Emergency Key

The ACD agent can use the Emergency Key (EMR) feature to conference an ACD supervisor and, optionally, activate a recording device for customer-defined emergencies or sensitive situations.

With the EMR key activated, the recording trunk is not considered a member of the conference. With the CSD key activated:

- The active conferee list does not include the recording trunk.
- The total number of conferees on the Conference Count Display does not include the recording trunk.

ACD Display Enhancement

With ACD Display Enhancement, you cannot press the Not Ready (NRD) key while using the Conference key. If you press the NRD key while in an active conference call, the conference call disconnects, the NRD lamp illuminates, and the 'NOT READY' screen appears.

You cannot use the NRD key while the CSD key remains activated.

ACD In-Calls Key

If you establish a conference on the ACD In-Calls key, you can then use the In-Calls key to drop a desired conferee. As the CSD key user scrolls through the active conferees list, the Position Identification (POS ID) of each ACD telephone involved in the conference is displayed.

Application Module Base

The Selectable Conferee Display and Disconnect feature uses existing messaging to disconnect a conferee. It uses the same messaging as when a conferee either goes on-hook or presses the Release (RLS) key to disconnect themselves from the conference.

Automatic Hold

The Selectable Conferee Display and Disconnect feature does not change the functionality of the Automatic Hold feature. After you establish a conference on the active DN key, you can then apply the Selectable Conferee Display and Disconnect feature.

Basic Rate Interface

BRI telephones do not support the Selectable Conferee Display and Disconnect feature. However, with the CSD key activated, conferees using BRI telephones do show their information in the conference.

Bridging

The Selectable Conferee Display and Disconnect feature does not change the functionality of the Bridging feature.

With the Bridging feature, the same DN can appear on up to eight single-line telephones. Any appearance of the Multiple Appearance Directory Number (MADN) can enter a call by going off-hook. When you use Bridging to establish a three-party conference, the conference includes only two active DNs. Conferee telephones display only the information for the other DN on the call, not the Conference Count Display information. However, since there are three conferees on the call, you can use the CSD key. Once the conference expands to include more than two active DNs, Conference Count Display then shows the conferee count on connected telephones.

Conference

The Selectable Conferee Display and Disconnect feature does not change the functionality of the Conference feature, except for the new active conference display. Conference calls can include calls on the following key types: Single Call Arrangement DN (SCN, SCR), Multiple Call Arrangement DN (MCN, MCR), ACD In-Calls (ACD DN), Private Line Ringing and Non-ringing (PLN, PLR), Hotline (HOT), Call Waiting (CWT), Voice Call (VCC) and Dial Intercom (DIG).

Conference Control

The Selectable Conferee Display and Disconnect feature does not change the functionality of the Conference Control feature.

Digitone Receiver

The Selectable Conferee Display and Disconnect feature does not treat the Digitone Receiver (DTR) as a conferee when it appears on the conference loop, since it appears only temporarily to provide the tone service.

Display Key

While in a conference call, you can use the Display (DSP) key to obtain information. However, the Display key is blocked when the CSD key is active.

DNIS Across Call Modifications

When a CSD key user scrolls through the list of conferees during a DNIS call, DNIS information is displayed.

End-to-End Signaling

With the CSD key activate, the Selectable Conferee Display and Disconnect feature does not block End-to-End Signaling (EES) or dialing digits.

Group Call

The Selectable Conferee Display and Disconnect feature only applies to the originator of a Group Call involving three or more active parties. The active conference display does not show until a redisplay of the Group Call originator's screen is needed.

Hold

With the Selectable Conferee Display and Disconnect feature, when display-equipped Meridian Modular telephones or IP Phones involved in a conference show the Conference Count Display. If a Meridian Modular telephone or IP Phone places the conference on hold (by pressing the Hold key), then the active DN key lamp flashes, and the display clears for the duration of the Hold operation. The Conference Count Display is restored upon completion of the Hold operation. To take the call off hold, press the active DN key.

Meridian Link

The Selectable Conferee Display and Disconnect feature uses existing messages sent over the Meridian Link to provide the Conference Count Display and the Selectable Conferee Disconnect functionality.

No Hold Conference

The Selectable Conferee Display and Disconnect feature does not change the No Hold Conference (NHC) functionality. The Selectable Conferee Display and Disconnect feature applies to conferences created by No Hold Conference.

Nortel Integrated Conference Bridge

The Selectable Conferee Display and Disconnect feature does not change the functionality of Nortel Integrated Conference Bridge.

Override

The Selectable Conferee Display and Disconnect feature does not affect the operation of the Override (OVR) feature. The Conference Count Display does not show for an Override conference, because the Override display shows instead. The CSD key, however, can be used to disconnect conferees in an Override conference.

Priority Override

The Selectable Conferee Display and Disconnect feature does not affect the operation of the Priority Override (POVR) feature. The Conference Count Display does not show for a POVR conference, because the Priority Override display shows instead. The CSD key can, however, be used to disconnect conferees involved in a POVR conference.

Privacy

The Selectable Conferee Display and Disconnect feature does not affect the operation of the Privacy feature. With Privacy enabled, only one appearance of a single line MADN can participate in a conference call. The conference counts include this MADN appearance.

Privacy Override

The Selectable Conferee Display and Disconnect feature does not change the operation of the Privacy Override (POA) feature.

A Meridian 1 proprietary telephone or IP Phone with a Class of Service configured to Privacy Override Allowed (POA) can bridge into an established call on a single line MADN. When you create a conference with three parties through Privacy Override, the conference call includes only two active DNs. In this case, conferee telephones display only the information for the other DN on the call, not the Conference Count Display information. However, since there are three conferees on the call, you *can* use the CSD key. Once the conference expands to include more than two active DNs, the Conference Count Display then shows the conferee count on connected telephones. The Conference Count Display totals include conferees added to the conference through POA. You can apply the CSD key on established conferences.

Tone and Digit Switch

The Selectable Conferee Display and Disconnect feature does not treat the Tone and Digit Switch (TDS) as a conferee when it appears on the conference loop, because it appears only temporarily to provide tone service.

Feature packaging

This feature is included in base system software.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

- [Table 17 "LD 15" \(page 120\)](#)
Configure the Conference Count Display Format for the customer.
- [Table 18 "LD 11 " \(page 120\)](#)
Set the Conferee Display Count Allowed (CDCA) Class of Service for Meridian Modular telephones and IP Phones.
- [Table 19 "LD 11" \(page 121\)](#)
Configure a Conferee Selectable Disconnect (CSD) key for Meridian Modular telephones and IP Phones.

Table 17**LD 15**

Prompt	Response	Description
REQ:	CHG	Change existing data.
TYPE:	FTR	Features and options.
CUST		Customer number
	0-99	Range for Large System and CS 1000E system.
	0-31	Range for Small System and Media Gateway 1000B.
...		
CONF_DSP	YES	Change Conference Count Display configurations. NO = Do not change Conference Count Display configurations (default). To prompt for further conference display options, CONF_DSP must be YES.
- CNFFIELD	(NO) YES	Total Conferees Count display field (disabled) enabled.
- CNF_NAME	(CONF) aaaa	Total Conferees Count display field name. Enter 1-4 alphanumeric characters to replace the existing name. The Total Conferees Count display field name is displayed when any of the CNFFIELD, INTFIELD, or EXTFIELD prompts are YES.
- INTFIELD	(NO) YES	Total Internal Conferees Count display field (disabled) enabled.
--INT_NAME	(I) aaaa	Total Internal Conferees Count display field name. Enter 1 to 4 alphanumeric characters to replace the existing name.
- EXTFIELD	(NO) YES	Total External Conferees Count display field (disabled) enabled.
--EXT_NAME	(E) aaaa	Total External Conferees Count display field name. Enter 1 to 4 alphanumeric characters to replace existing name.

Table 18**LD 11**

Prompt	Response	Description
REQ:	NEW	Add new data.
	CHG	Change existing data.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
TN		Terminal number
	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
...		

Table 18
LD 11 (cont'd.)

Prompt	Response	Description
CLS	ADD DDS (CDCA)	Automatic Digit Display. Delay Display. With CLS = DDS, the display is activated after the call is answered. CLS must be either ADD or DDS prior to setting CLS = CDCA or CDCD. Conferee Display Count Allowed (default) CDCD = Conferee Display Count Denied. CDCD option telephones a blank display screen during a conference call.

Table 19
LD 11

Prompt	Response	Description
REQ:	NEW CHG	Add new data. Change existing data.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
TN	l s c u c u	Terminal number Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit. Format for Small System and Media Gateway 1000B where c = card and u = unit.
...		
CLS	ADD DDS	Automatic Digit Display. Delay Display. With CLS = DDS, the display is activated after the call is answered. CLS must be either ADD or DDS prior to configuring a CSD key.
KEY	xx CSD	Conferee Selectable Display key. To remove the CSD key, set the KEY prompt to xx NUL, thereby disabling Selectable Conferee Disconnect.

Feature operation

Viewing the list of active conferees

To view the list of active conferees, press the Conferee Selectable Display (CSD) key. To view the next conferee in the list, press the CSD key again. The CSD key lamp illuminates. The displays on the other Meridian Modular telephones or IP Phones involved in the conference do not change.

To cancel the Selectable Conferee Disconnect operation, press the Release key. This prevents the disconnection of any of the conferees. The CSD key lamp remains unlit. If enabled, the Conference Count Display returns. The original conference call remains active throughout this operation.

Disconnecting one conferee

To disconnect a conferee using the CSD key:

- Press the CSD key repeatedly until the conferee that you want to disconnect appears on the screen. The CSD key lamp illuminates. The displays on other Meridian Modular telephones or IP Phones do not change.
- Press the active call key (the key on which you established the active conference). The CSD key lamp remains unlit. If enabled, the Conference Count Display then shows the revised total count of conferees. The original conference call remains active throughout this operation.

Disconnecting more than one conferee

To disconnect more than one conferee, follow the steps for disconnecting a single conferee. Each conferee must be disconnected separately.

ATTENTION

When two CSD key users want to drop different conferees (but not each other), each CSD key user can initiate the Selectable Conferee Disconnect operation and disconnect the selected conferee. If enabled, the Conference Count Displays on Meridian Modular telephones or IP Phones are updated after each successful Selectable Conferee Disconnect operation.

Disconnecting the same conferee

Two Meridian Modular telephones or IP Phones (telephone A and telephone B), both equipped with a CSD key, want to disconnect the same conferee. The telephone that presses the active call key first succeeds in disconnecting the conferee. If telephone A presses the active call key first, its Conference Count Display updates with the revised total count of conferees. The Conference Count Display of all other Meridian Modular telephones or IP Phones, with the exception of telephone B, are also updated. Telephone B's Conference Count Display does not update until the user presses either the active call key or (to end the operation) the Release key.

Verifying that a conferee has been disconnected

To verify that a conferee has been disconnected:

- Use the CSD key to view the list of conferees. Note whether or not the disconnected conferee appears in the list.
- Check the CSD key lamp. An unlit lamp indicates that the Conferee Selectable Disconnect operation is complete.
- Check that the display screen shows the revised total count of conferees on the Conference Count Display.
- If the disconnected conferee leaves only two remaining parties in the conference, the conferee switches to a simple call situation, and the displays update accordingly.

Canceling the Selectable Conferee Disconnect operation

To cancel Selectable Conferee Disconnect at any time during the operation, press the Release key. This prevents any conferee from being disconnected. The CSD lamp remains unlit and the Conference Count Display (if enabled) returns. The original conference call remains active throughout this operation.

Disconnecting from an active conference

To disconnect yourself from an active conference, press the Release key, or go on-hook. As long as a supervised conference situation remains, the original conference call remains active.

Selectable Directory Number Size

Contents

This section contains information on the following topics:

- “Feature description” (page 125)
- “Operating parameters” (page 125)
- “Feature interactions” (page 125)
- “Feature packaging” (page 126)
- “Feature implementation” (page 126)
- “Feature operation” (page 126)

Feature description

The Selectable Directory Number Size feature allows a user to define the number of digits that must be received on a Direct Inward Dialing (DID) route before the end of dialing (EOD) is reached. If the required number of digits is not received when the EOD timer expires, a TRK137 message is sent to print and the trunk is locked out.

The DN size can be specified from one to seven digits, or as zero which will not consider the number of digits dialed in the sequence.

Operating parameters

The Public Exchange/Central Office must be equipped to handle the special signaling requirements associated with the Seizure Acknowledgment feature described above.

The Seizure Acknowledgment feature is not available on 1.5 Mbps digital trunks or Japanese Digital Multiplex Interface (DMI) trunks.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

This feature requires International Supplementary Features (SUPP) package 131.

Feature implementation

Table 20

LD 16 - Set limits for the Selectable Directory Number Size feature.

Prompt	Response	Description
REQ	aaaa	Request (aaaa= CHG, END, LCHG, NEW, or OUT
TYPE	RDB	Type of data block = RDB (Route data block)
CUST	xx	Customer number, as defined in LD 15
...		
DNSZ	(0)-7	Number of digits expected on DID routed; 0 indicates no fixed number.

Feature operation

No specific operating procedures are required to use this feature.

Semi-Automatic Camp-On

Contents

This section contains information on the following topics:

- “Feature description” (page 127)
- “Operating parameters” (page 128)
- “Feature interactions” (page 128)
- “Feature packaging” (page 129)
- “Feature implementation” (page 129)
- “Feature operation” (page 130)

Feature description

This feature allows a Camp-On call to recall to the attendant instead of ringing the called party when the called party becomes available. The called party can originate calls but cannot receive any other calls. Other incoming calls to this DN will receive a busy indication. If the called party originates another call when the attendant attempts to present the Camp-On call, the attendant receives busy tone and can initiate Camp On again or release the call.

When an attendant extends a call to a desired party that is busy, the attendant can activate Semi-automatic Camp-On by pressing the Semi-automatic Camp-On (SACP) key. This causes the call to be camped-on to the desired party, and recalled to the attendant when the desired party becomes idle, rather than rung through to the desired party.

Recall to Same Attendant must be allowed, otherwise the recall is routed to the first available attendant. The attendant display shows the calling-party DN and the party to which the call is camped-on. If the attendant, or all attendants in a multiple-console environment, are busy then the recall is placed in the attendant queue.

Meanwhile, incoming calls to the desired party receive busy treatment. The desired party, however, is still able to make calls. After receiving the recall, the attendant can ring the desired party by pressing the SACP key. The attendant may release the call while it is ringing, or hold the call until it is answered. If the desired party has made another call while the attendant tries to present the recall, the attendant may Camp-On the recall to the desired party by pressing the SACP key.

Operating parameters

The same operating parameters apply as for Camp-On.

Semi-automatic Camp-On is mutually exclusive with the Call Waiting feature. Thus, attendant consoles configured with Semi-automatic Camp-On will not work if Call Waiting has been defined.

Semi-automatic Camp-On can be configured for individual or all Camp-On occurrences.

Semi-automatic Camp-On is not available with Network Attendant Service. If the attendant tries to apply Semi-automatic Camp-On to a station at a remote node, the SACP lamp flashes to indicate that Semi-automatic Camp-On is not allowed. The attendant has to press the SACP key again to deactivate the feature, and be allowed to activate it under normal operation.

Semi-automatic Camp-On is not supported during Night Service or Enhanced Night Service. Calls that were camped-on by Semi-automatic Camp-On during normal hours ring through to the desired party, when idle, and do not recall to the attendant.

Feature interactions

Attendant Blocking of Directory Number

The Attendant Blocking of DN feature uses the SACP key to activate a blocking attempt, but the Attendant Blocking of DN feature is only valid on the source side of the attendant console. The Semi-automatic Camp-on feature is only valid on the destination side of the attendant console.

To have the Attendant Blocking of DN feature available and not the Semi-automatic Camp-on feature, a new response to the SACP prompt has been introduced in LD 15. Prompt SACP = NO means the Semi-automatic Camp-on feature is not available even if the SACP package is equipped and an SACP key exists on the attendant console. To have the Semi-automatic Camp-on feature available the SACP prompt must be answered with SNGL or ALL which have the same meanings as before.

Attendant Break-In

The attendant can Break-In to an established call and apply Semi-automatic Camp-On to the desired party. The attendant may press the SACP key before or after the Break-In.

Call Forward/Hunt Override Via Flexible Feature Code

Semi-Automatic Camp-On can be used even if the Call Forward/Hunt Override Via FFC feature is activated. When encountering a busy telephone, it is possible to activate SACP, if it is applicable.

Incoming calls during recall

During Semi-automatic Camp-On, when the desired party becomes idle and the camp-on is recalled to the attendant, the desired party appears busy to incoming calls. The DN of the desired party is displayed as busy on the Busy Lamp/Enhanced Busy Lamp display.

Periodic Camp-On Tone

Periodic Camp-On Tone stops when the camped-on call is recalled to the attendant.

Secrecy and Enhanced Secrecy

Secrecy and Enhanced Secrecy apply to Semi-automatic Camp-On recalls, with splitting taking place when the attendant answers the recall.

Source Included when Attendant Dials

The source remains included while the attendant dials the destination.

Feature packaging

This feature requires Semi-automatic Camp-On (SACP) package 181.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 21 "LD 15 " \(page 129\)](#)

Configure Semi-automatic Camp-On for the customer.

2. [Table 22 "LD 12" \(page 130\)](#)

Configure an SACP key on the attendant console.

Table 21
LD 15

Prompt	Response	Description
REQ:	NEW CHG	New, or change.
TYPE:	ATT_DATA	Attendant console options.

Table 21
LD 15 (cont'd.)

Prompt	Response	Description
...		
RTSA	RSAA	Recall To Same Attendant Allowed.
SACP		Semi-automatic Camp-On. Semi-automatic Camp-On not allowed.
	(NO) SNGL ALL	Enable Semi-automatic Camp-On on a per-call basis. Enable Semi-automatic Camp-On for all occurrences.
		SACP keys must be defined on all attendant consoles which are to make use of the feature.

Table 22
LD 12

Prompt	Response	Description
REQ	CHG	Change
TYPE	2250	Attendant console type
TN	l s c u	Terminal number
	c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit. Format for Small System and Media Gateway 1000B where c = card and u = unit.
...		
KEY	xx SACP	Key Number, Semi-automatic Camp-On

Feature operation

When an attendant extends a call to a desired party who is busy, the attendant can activate Semi-automatic Camp-On as follows:

- Press the SACP on the attendant console.
The call is camped on the desired party.
- The display on the attendant console shows the calling party's DN, and the party to which the call is camped on (the desired party).
- The desired party becomes idle.
The call is recalled to the attendant.
- To ring the desired party after receiving the recall, press the SACP on the attendant console again.

Recall timing on Camp-On calls

When any station extends an external call, recall timing will be initiated if the call is camped on to a busy station.

The recall timing will start from the moment that the extending station releases the call. The value of the recall timer is configured by the prompt RTIM in the Customer Data Block (LD 15).

At the recall, the camped on call will be routed to the attendant. If the attendant is in Night Service, Night treatment is given; if NAS routing is active, the call will be routed according to the NAS configuration.

Standalone case

When the recall to the attendant occurs, the Camp-On is canceled. If the attendant is busy during the recall, the recall will be queued.

Network case

When the recall occurs and the attendant has answered the recall, the call will still be camped on to the desired party. If during the recall the attendant is busy, the recall will be queued.

Series Call

Contents

This section contains information on the following topics:

- “Feature description” (page 133)
- “Operating parameters” (page 134)
- “Feature interactions” (page 134)
- “Feature packaging” (page 134)
- “Feature implementation” (page 134)
- “Feature operation” (page 135)

Feature description

The Series Call feature causes a source call (either an attendant-answered incoming call, or an attendant-originated trunk call), that has been extended to an internal destination party, to be recalled to the attendant when the destination party hangs up. The attendant can then extend the source call to another destination party. This feature enables a caller to talk to more than one party without having to disconnect and call again (Recall to Same Attendant must be allowed, otherwise the recall is routed to the first available attendant). This process can be repeated for as many destinations as requested by the caller.

A Series Call is canceled if one of the following occurs:

- the attendant presses the Series Call (SECL) key while the associated lamp is lit
- the attendant extends the source to a trunk while the SECL lamp is lit
- the attendant enters Night Service after extending the call and prior to receiving the recall

- the destination is call forwarded to a trunk, or
- the source disconnects.

Operating parameters

This feature only applies when the destination party is internal. If the attendant dials a DN that is not internal, the SECL key will flash to indicate that the feature cannot be invoked.

The source can only be extended to an internal party.

Feature interactions

Attendant Position Busy

If the attendant activates Position Busy while a Series Call is active, the recall occurs to the next available attendant.

Call Detail Recording

With Call Detail Recording, a start record is generated when a source Periodic Pulse Metering call is answered and marked as a Series Call by the attendant, and an end record is generated when the attendant releases the call. No intermediate records are generated.

Night Service

If the attendant extends a Series Call and goes into Night Service before it recalls to the attendant, the call recalls to the night DN and Series Call treatment is canceled.

Timed Reminder Recall

With Timed Reminder Recall, if the attendant extends a Series Call during Camp-on, Call Waiting, or ringing, the SECL lamp goes dark.

Feature packaging

This feature requires Series Call (SECL) package 191.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 23 "LD 12 " \(page 135\)](#)
Configure Series Call for each attendant console.
2. [Table 24 "LD 15" \(page 135\)](#)
Configure Recall to Same Attendant for the customer.

Table 23
LD 12

Prompt	Response	Description
REQ	CHG	Change
TYPE	2250	Attendant console type
TN	I s c u	Terminal number
	c u	Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit.
...		Format for Small System and Media Gateway 1000B where c = card and u = unit.
KEY	xx SECP	Key Number, Series Call

Table 24
LD 15

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	ATT_DATA	Attendant console options.
CUST	0-99	Customer number
	0-31	Range for Large System and CS 1000E system.
...		Range for Small System and Media Gateway 1000B.
- RTSA	(RSAD) RSA	Recall (Denied) Allowed to Same Attendant.

Feature operation

The attendant designates the source call as a Series Call by pressing the Series Call (**SECL**) key. The **SECL** key may be pressed by the attendant while dialing, talking to the destination party, or while a call is ringing. The associated key lamp remains lit until the Series Call is canceled. If the attendant tries to extend a call to an external station, the **SECL** lamp flashes. The attendant has to press the **SECL** key to cancel the Series Call, and extend the call as a standard call extension.

Set-Based Administration Enhancements

Previously, Set-Based Administration was a feature available on Small Systems that simplified system installation and administration by enabling a telephone to be used to perform several administrative and maintenance procedures. With the Set-Based Administration Enhancements feature, Set-Based Administration is now available for all system types. In addition, enhancements are provided to the existing capabilities on Small Systems.

For more information about the Set-based Administration Enhancements feature, see *Set-Based Administration* (NN43001-603).

Short Buzz for Digital Telephones

Contents

This section contains information on the following topics:

- “Feature description” (page 139)
- “Operating parameters” (page 139)
- “Feature interactions” (page 139)
- “Feature packaging” (page 140)
- “Feature implementation” (page 140)
- “Feature operation” (page 140)

Feature description

When a call is presented to a digital telephone that is off-hook, a buzz tone is given. The duration of this secondary buzz is shortened from two seconds to an average of 0.8 seconds, with a minimum length of 0.5 seconds and a maximum length of one second.

Operating parameters

Short Buzz for digital sets does not change the buzz tone given to Automatic Call Distribution (ACD) telephones on the In-calls key.

Feature interactions

Directory Number Delayed Ringing

If a telephone is defined with Directory Number Delayed Ringing (DNDR) delay and there is an incoming call to another SCN/MCN DN key on the same telephone, buzzing (or short buzzing) is applied after the DNDR delay timer expires.

Group Call

The special three-second buzz for Group Call is not affected by this feature.

Feature packaging

This feature is included in base system software.

Feature implementation

There are no specific implementation procedures for this feature.

Feature operation

No specific operating procedures are required to use this feature.

Single Appearance Directory Number

Contents

This section contains information on the following topics:

- “Feature description” (page 141)
- “Operating parameters” (page 141)
- “Feature interactions” (page 141)
- “Feature packaging” (page 141)
- “Feature implementation” (page 142)
- “Feature operation” (page 143)

Feature description

A Single Appearance Directory Number (SADN) can be assigned to any type of telephone.

Operating parameters

A Single Appearance Directory Number (SADN) is a DN that appears only once within a customer group.

Feature interactions

Directory Number Expansion

The DN can have up to seven digits if the Directory Number Expansion package is equipped.

Feature packaging

This feature is included in base system software.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 25 "LD 10" \(page 142\)](#)

Assign a Directory Number.

2. [Table 26 "LD 11" \(page 142\)](#)

Assign Single Appearance Directory Number keys.

Table 25

LD 10

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	500	Analog (500/2500-type) telephone.
TN		Terminal number
	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
...		
DN	x...x	Directory Number. Up to four digits; up to seven digits with DNXP package 150.

Table 26

LD 11

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
TN		Terminal number
	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.

Table 26
LD 11 (cont'd.)

Prompt	Response	Description
KEY	xx SCN yyy...y xx SCR yyy...y	Add a single-call non-ringing DN key, where: xx = key number, and yyy...y = DN. Add a single-call ringing DN key, where: xx = key number, and yyy...y = DN.

Feature operation

No specific operating procedures are required to use this feature.

Single-digit Access to Hotel Services

Contents

This section contains information on the following topics:

- “Feature description” (page 145)
- “Operating parameters” (page 145)
- “Feature interactions” (page 145)
- “Feature packaging” (page 146)
- “Feature implementation” (page 146)
- “Feature operation” (page 147)

Feature description

In hospitality applications, it is desirable for room phones to have single-digit access to hotel services and a multiple-digit access to room phones.

The Single-digit Access to Hotel Services feature allows a customer to define a pause timer, called a second-digit timer, between the first and second dialed digits, and allows two speed-call entries to be defined for a station group. The first speed-call entry is used for normal pretranslation. The second speed-call list is used when the second digit timer times out (that is, when time out occurs after the first digit is dialed, with the first digit in the first speed-call list being translated).

Operating parameters

There are no operating parameters associated with this feature.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

This feature requires International Supplementary Features (SUPP) package 131.

Dependency:

- Pretranslation (PXLT) package 92

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 27 "LD 15" \(page 146\)](#)
Enable Single-digit Access to Hotel Services for each customer.
2. [Table 28 "LD 18" \(page 146\)](#)
Define the Translation tables required by this feature.

Table 27

LD 15

Prompt	Response	Description
REQ:	NEW CHG	Add, or change.
TYPE:	FTR	Features and Options.
...		
- OPT	(SDDE) SDAL	(Deny) allow Single Digit Access.

Table 28

LD 18

Prompt	Response	Description
REQ	CHG	Change
TYPE	PRE	Pretranslation calling group data block
CUST	xx	Customer number, as defined in LD 15
XLAT	xxx yyyy	Calling group number to translation Speed Call list number correlation. Format if International Supplementary Features (SUPP) package 131 is not equipped
		where
		<ul style="list-style-type: none"> • xxx = Pretranslation group number, 0-254 • xxx = Group 0 is used for trunks • xxx = Group 1 is used for attendant consoles.

Table 28
LD 18 (cont'd.)

Prompt	Response	Description
...		<ul style="list-style-type: none"> • xxx = Groups 2-254 can be used for other calling groups. • yyyy = List number to be used for Pretranslation, 0-8191. 8191 is used to remove the group from Pretranslation. <p>Pretranslation group number. Format if international Supplementary Features (SUPP) package 131 is equipped</p> <p>where</p> <ul style="list-style-type: none"> • xxx = Group 0 is used for trunks • xxx = Group 1 is used for attendant consoles. • xxx = Groups 2-254 can be used for other calling groups.
- SDA	0-8190	Single-digit Access Speed Call List number

Feature operation

In the example that follows, if a room guest dials the digit 7, the guest's call is immediately terminated at DN 4300, the front desk. If the guest had dialed the digit 2, then after the second digit timer times out, the guest's call is terminated at DN 4002, laundry. If the guest enters three more digits (xxx) before the second digit time-out, the appropriate room number (2xxx) is rung.

Speed Call CodeDN Designation

0	Operator (00)
1	Room Service (4001)
2	Laundry (4002)
3	Concierge (4100)
4	Restaurant (4101)
5	Health Club (4200)
6	Maid (4201)
7	Front Desk (4300)
8	Toll Calls (88)
9	Local Calls (99)

First Entry Speed Call List (for normal pretranslation)

First Dialed DigitAction

1	Pass as 1
2	Pass as 2
3	Pass as 3
4	4101
5	4200
6	4201
7	4300
8	88
9	99
0	Pass as 0

Second Entry Speed Call List (for pretranslation after time out)

First Dialed DigitAction

1	4000
2	4002
3	4100
4	N/A
5	N/A
6	N/A
7	N/A
8	N/A
9	N/A
0	0017

Slow Answer Recall Enhancement

Contents

This section contains information on the following topics:

- “Feature description” (page 149)
- “Operating parameters” (page 151)
- “Feature interactions” (page 151)
- “Feature packaging” (page 151)
- “Feature implementation” (page 151)
- “Feature operation” (page 152)

Feature description

This enhancement to the Slow Answer Recall feature changes how the recall is treated once presented to the attendant console. This enhancement applies to Integrated Services Digital Network (ISDN) and standalone environments.

If an incoming call extended by the attendant to a telephone is not answered after a preprogrammed time period, it is recalled to the attendant console. The call type may be indicated by an Incoming Call Indicator (ICI) key programmed to flash for recalls. The target telephone will continue to ring after the call is presented to the attendant. The target telephone can answer the call before the attendant does, in which case the call is cleared from the attendant console and the incoming call and target telephone will be connected.

If the attendant answers the recall before the target telephone, a speech connection is established between the calling party on the source (SRC) side of the console. The target telephone continues to ring while still being connected to the destination (DEST) side of the console. This feature only affects the operation after the attendant has answered the recall.

When a Slow Answer Recall occurs, the call is placed in the attendant queue and appears on the console. The target telephone will continue to ring while the recall is queued and presented on the console, but is unanswered. When the attendant answers the recall, by pressing the appropriate Loop key or the Recall ICI key, the target telephone will be disconnected as soon as the attendant console answers the Slow Answer Recall.

In a ISDN environment, the feature works in a similar way regardless of the location of the called party (on the same node as the attendant or on a remote node), and if Network Attendant Service (NAS) routing is involved in the call or not.

Call Waiting Recalls and Camp-on Recalls

This enhancement adds Call Waiting Recall and Camp-on Recall functionality to Slow Answer Recall. This enhancement applies within standalone and networking environments.

Call Waiting Recall

Within a standalone environment, if an incoming call extended by the attendant or a telephone (equipped with the Multi-Party Operations feature) to a busy station (equipped with Call Waiting) is not answered within a customer-defined period of time, it is recalled to the attendant. The recall is presented to the attendant or placed in the attendant queue.

Camp-on Recall

An incoming call is extended by the attendant or a telephone (equipped with the Station Camp-on feature) to a busy station that is not equipped with Call Waiting. The attendant or telephone Camp-on the call to the target telephone. If the call is not answered within a customer-defined period of time, it is recalled to the attendant. The call is presented to the attendant or placed in the attendant queue. Until the attendant answers the call, the call remains camped-on to the target telephone and can still be answered. If the attendant answers the recall by pressing the appropriate loop key or the Recall key, the target telephone is disconnected and can no longer answer the call. The target telephone must be redialed to extend the call.

Within a network environment, the Call Waiting Recall and Camp-on Waiting Recall enhancements must be configured at a node. Both the Call Waiting Recall and Camp-on Waiting Recall enhancements operate in the same way as in the stand-alone case. The location of the calling and called party and the attendant have no affect on the call processing.

Network Attendant Service (NAS) is not required, but it may be applied at a node. In this case, NAS takes precedence over the Call Waiting Recall and Camp-on Waiting Recall Enhancements, in that the target telephone is disconnected from the call due to time-out and not to the attendant pressing the loop key or Recall key.

Operating parameters

The same as for Slow Answer Recall.

Feature interactions

Attendant Recall with Splitting, Multi-Party Operations , Secrecy Enhancement

The Call Waiting Recall and Camp-on Waiting Recall enhancements take precedence over Attendant Recall Splitting (ATS), Secrecy (SYA), Enhanced Secrecy (EHS), and Multiple Party Operations.

Call Waiting Recall, Camp-on Waiting Recall

The Call Waiting Recall and Camp-on Waiting Recall enhancements are compatible with Station Camp-on (STCA).

A forced Camp-on override recall occurs to the attendant. If the Call Waiting Recall and Camp-on Waiting Recall enhancements are equipped, the destination is automatically disconnected when the attendant answers. If the Call Waiting Recall and Camp-on Waiting Recall enhancements are not equipped, and the attendant answers the recall at the same time that the destination answers, a conference is established between the attendant, source, and destination.

Intercept Computer Dial from Directory

If the attendant extends an SRC party to a DEST party on the local node, but slow answer recall occurs since the DEST does not answer, it is possible to dial a new DN from the ICP (the DEST is disconnected when the attendant answers).

Feature packaging

This feature requires International Supplementary Features (SUPP) package 131.

Feature implementation

Table 29

LD 15 - Enable Slow Answer Recall Enhancement for the customer.

Prompt	Response	Description
REQ:	NEW CHG	Add, or change.
TYPE:	FTR	Features and Options data block

Table 29**LD 15 - Enable Slow Answer Recall Enhancement for the customer. (cont'd.)**

Prompt	Response	Description
... - OPT	(SLD) SLA	Slow Answer Recall Enhancement (denied) allowed.

Feature operation

Slow Answer Recall Enhancement

When a Slow Answer Recall occurs the call is placed in the attendant queue and appears on the console. The target telephone will continue to ring while the recall is queued and presented on the console but unanswered. When the attendant answers the recall, by pressing the appropriate **Loop** key or the **Recall ICI** key, the target telephone will be disconnected as soon as the attendant console answers the Slow Answer Recall.

Call Waiting Recall

Until the attendant answers the call, it remains waiting on the target telephone, and can still be answered. If the attendant answers the recall by pressing the appropriate **Loop** key or the **Recall** key, the target telephone is disconnected and can no longer answer the call – the target telephone will have to be redialed to extend the call.

Camp-on Recall

Until the attendant answers the call, the call remains camped-on to the target telephone, and can still be answered. If the attendant answers the recall by pressing the appropriate Loop key or the Recall key, the target telephone is disconnected and can no longer answer the call; the target telephone will have to be redialed to extend the call.

Slow Answer Recall for Transferred External Trunks

Contents

This section contains information on the following topics:

- “Feature description” (page 153)
- “Operating parameters” (page 154)
- “Feature interactions” (page 154)
- “Feature packaging” (page 154)
- “Feature implementation” (page 155)
- “Feature operation” (page 155)

Feature description

This feature allows an external call to be transferred to a ringing telephone anywhere within an Integrated Services Digital Network (ISDN) network. The transferred call may be incoming or outgoing, supervised or unsupervised. If the call is not answered within a customer-defined period of time, it is routed to the local attendant as a slow answer recall.

Within a standalone environment, this capability is provided by the Multi-Party Operation feature.

An external call is a call originated by the Public Switched Telephone Network (PSTN). This includes calls originating on a Central Office (CO), Foreign Exchange (FEX), Direct Inward Dialing (DID), or Wide Area Telephone Service (WATS) trunk on a local or remote node, and calls from the PSTN to an ISDN node using Network Attendant Service (NAS) signaling protocol over an ISDN TIE trunk.

Operating parameters

This feature applies only to systems using Meridian Customer Defined Networking (MCDN) signaling over ISDN Signaling Link (ISL)/ISDN TIE links.

All network nodes must be configured with Network Attendant Service (NAS).

Feature interactions

AC15 Recall: Transfer from Norstar

In both standalone and Network Attendant Service (NAS) environments, when a call is transferred to a ringing telephone on the system by an AC15 trunk, the RTIM recall timer is not started.

Attendant Recall

Slow Answer Recall Modification (SLAM) has an interaction after the attendant answers the recall. If SLAM is configured, the target telephone is disconnected after the attendant answers the recall. If SLAM is not configured, the target telephone rings until the attendant releases it.

Call Forward No Answer

If the ringing station to which the call has been transferred has Call Forward No Answer active, the call will be transferred to the call forward DN after the specified number of ring cycles.

ICP Network Screen Activation, Flexible DN, Meridian Mail Interactions

When an Intercept Computer (ICP) position telephone transfers an external call across an ISDN network, the slow answer recall timer is set at the transferring node to prevent the terminating telephone to be rung indefinitely. When the slow answer recall timer times out, the transferred call is recalled to the attendant at the transferring node.

Multi-Party Operations

The Multiple Party Operation recall can only be applied in a standalone environment, and therefore does not interact with this feature.

Network Attendant Service Anti-tromboning

NAS Anti-tromboning is supported by this feature.

Feature packaging

- International Supplementary Features (SUPP) package 131
- Integrated Services Digital Network (ISDN) package 145, or
- ISDN Signaling Link (ISL) package 147
- Network Attendant Service (NAS) package 159.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 30 "LD 15 " \(page 155\)](#)

Enable Slow Answer Recall Enhancement for the customer.

2. [Table 31 "LD 15" \(page 155\)](#)

Configure Timers for Slow Answer Recall for Transferred External Trunks.

Table 30

LD 15

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	FTR	Features and Options data block
...		
- OPT	(SLD) SLA	Slow Answer Recall Enhancement (denied) allowed

Table 31

LD 15

Prompt	Response	Description
REQ:	NEW CHG	Add, or change.
TYPE:	TIM	Timers
...		
- RTIM	xxx yyy zzz	<p>Recall timers for Slow Answer, Camp-on and Call Waiting, where:</p> <p>xxx = 0-(30)-378 for Slow Answer yyy = 0-(30)-510 for Camp-on, and zzz = 0-(30)-510 for Call Waiting.</p> <p>These timers indicate in seconds the elapsed time before attendant recall. Slow Answer must be a multiple of six seconds.</p> <p>To change one timer, all three fields must be input.</p>

Feature operation

No specific operating procedures are required to use this feature.

Software Licenses

Contents

This section contains information on the following topics:

- “Feature description” (page 157)
- “Service License” (page 158)
- “System License” (page 158)
- “Preset License” (page 159)
- “Phantom TNs and Virtual TNs” (page 159)
- “License parameters” (page 162)
- “Licenses and TN configurations” (page 163)
- “Service Level License default settings and increment values” (page 169)
- “System Level License default settings and increment values” (page 170)
- “Maximum License limits” (page 173)
- “System monitoring” (page 174)
- “System administration” (page 176)
- “Operating parameters” (page 177)
- “Feature interactions” (page 177)
- “Feature packaging” (page 177)
- “Feature implementation” (page 179)
- “Feature operation” (page 179)

Feature description

Software Licenses provide flexibility and control over system configuration and implementation. Software ordering and pricing is based on the total count of used License parameters.

There are three categories of Licenses:

- Service License
- System License
- Preset License

Key codes control the increments provided for Service- and System-type Licenses when filling customer orders. The License increments are the same globally and are common to all system types. Some regions do not use certain License parameters. For example, North America does not use DECT Visitors Licenses. If this License parameter is introduced to North America, it will be in accordance with the Global Software Structure.

Service License

Service License parameters are chargeable. They are aligned with the two service packages, Enhanced and Premium Service Package.

The Customer/Distributor must first select the service package and then the number of Service License parameters for each type. All Service License parameters must be ordered and filled at the same service package. Combinations or mixtures of License parameters of different service packages are not allowed. For example, do not order Enhanced Package analog License parameters for a customer who is at Premium Service Package. This customer must be serviced with all License parameters at the Premium Package.

Service License parameters use the same Global code for all systems and regional service packages. They are assigned incremental defaults, minimum order quantity amounts, and incremental amounts.

Service License parameters allow a customer to operate at a specified software service package. For example, when License parameters are ordered for Premium Service package, the order management systems automatically provide the customer with the appropriate regional software feature package content.

When allowable limits are exceeded, any additional entry is blocked, and an error message is shown every time a subsequent entry is attempted.

System License

System License parameters are chargeable. They are applicable to the complete system and are not dependent on which service level the customer is using.

Note: The same order code is used for all system types and regions.

Preset License

Preset License parameters are preset at their maximum in the Nortel factory. These Licenses are non-chargeable. Setting these License parameters to the maximum allows customers to configure License parameters to meet their feature and configuration needs.

Note: TNs are not used to control user capacity, but are set to the maximum amount for all system types.

Phantom TNs and Virtual TNs

There are two categories of Loops. They are:

- Physical Loops
- Non-physical Loops

For more information about the configuration and capacities for Loops on the different system types, see *Communication Server 1000M and Meridian 1 Large System Planning and Engineering* (NN43021-220), and *Communication Server 1000E Planning and Engineering* (NN43041-220).

Physical Loops

Physical Loops are comprised of physical hardware (network cards and the line cards and trunk cards associated with them).

Non-physical Loops

Non-physical Loops exist in software with no physical hardware associated with them. There are two types of non-physical Loops:

- Phantom Loops
- Virtual Loops

Phantom Loops

Use Phantom Loops for the following:

- **Phantom TNs:** Phantom TNs are programmed as 500/2500 TNs (with no physical hardware). They have Default Call Forwarding DNs programmed to redirect calls to physical telephones. This forwarding can be changed by a user from a physical telephone using the Remote Call Forward feature.
- **Virtual Sets:** There are two types of Virtual Sets.
 - Proprietary analog and digital TNs (programmed as BCS, M2XXX, and M3XXX series TNs). The Telelink Mobility Switch

1 feature introduced this type of TN for use with the Personal Communications Service (PCS).

- M3900 (Single Site) Virtual Office Terminals. These are the virtual M3903 and M3904 TNs programmed for use by Virtual Office Workers with the M3900 (Single Site) Virtual Office feature. The Host TNs (physical telephones) that users log on are not considered to be Virtual Sets and they are not programmed on Phantom Loops.

Virtual Loops

Virtual TNs are programmed on Virtual Loops.

The following types of telephones and trunks are included in the count of Virtual TNs:

- Basic IP user
- Temporary IP users
- IP user
- PCA
- H.323 Access Ports
- ITG ISDN trunks
- SIP Access ports
- DECT users

Capacities

A superloop cannot have both Phantom and Virtual TNs configured.

Phantom Loops and Virtual Loops have different densities and are not interchangeable. The valid loop ranges are described in [Table 32 "LD 97 - Loop ranges and labeling for Phantom and Virtual loops" \(page 160\)](#).

Table 32
LD 97 - Loop ranges and labeling for Phantom and Virtual loops

Type of system	Phantom loop range	Virtual loop range
PBX 61C CS 1000M SG	N0-N156	V0-V156
PBX 81C CS 1000M MG with Fibre Network Fabric	N0-N252	V0-V252
CS 1000E	N0-N252	V0-V252

Table 32**LD 97 - Loop ranges and labeling for Phantom and Virtual loops (cont'd.)**

Type of system	Phantom loop range	Virtual loop range
PBX 11C	N96-N112	V96-V112
Note 1: Superloops are numbered in increments of 4. Note 2: Loops 96-112 on PBX 11C correlate to cards 61-99 for phantom/virtual TN mapping.		

The theoretical TN limit is 65,535 units, but the TN limit is restricted by the total TN Licenses limit of 32,767 Licenses.

Large systems Phantom cards on a Phantom Loop are limited to 16 units each. A Phantom superloop has a maximum of 512 TNs.

A virtual card programmed on a Virtual superloop can have a maximum of 32 TNs. A Virtual superloop has a maximum of 1024 TNs.

PBX 11C systems Use the following steps to calculate the capacity of Phantom or Virtual TNs on a Small System:

Step	Action
1	<p>Loops 96-112 serve cards 61-99 for Phantom/Virtual TN mapping (a total of 39 cards).</p> <p>Table 33 "How the Phantom or Virtual superloops map into cards" (page 161) shows how the Phantom or Virtual superloops map into cards to configure the phantom or virtual TNs. The order of the columns in Table 33 "How the Phantom or Virtual superloops map into cards" (page 161) is significant.</p> <p>For Virtual and Phantom TNs, the administrator must define the superloop first and then define the cards. For more information, see <i>Communication Server 1000M and Meridian 1 Large System Planning and Engineering</i> (NN43021-220) and <i>Communication Server 1000E Planning and Engineering</i> (NN43041-220).</p>

Table 33**How the Phantom or Virtual superloops map into cards**

SL	CS	SL	CS	SL	CS	SL	CS	SL	CS
96	61	100	65	104	69	108	73	112	77
96	62	100	66	104	70	108	74	112	78
96	63	100	67	104	71	108	75	112	79
96	64	100	68	104	72	108	76	112	80
96	81	100	85	104	89	108	93	112	97
96	82	100	86	104	90	108	94	112	98

Table 33**How the Phantom or Virtual superloops map into cards (cont'd.)**

SL	CS	SL	CS	SL	CS	SL	CS	SL	CS
96	83	100	87	104	91	108	95	112	99
96	84	100	88	104	92	108	96	112	n/a

Note: SL = superloop, CS = card slot

2 Line cards on Phantom Loops have a maximum of 16 ports (TNs). Line cards on Virtual Loops have a maximum of 32 ports (TNs).

3 If you program all the cards with Phantom TNs, you have a maximum of 624 Phantom TNs (39 cards x 16 ports). If you program all the cards with Virtual TNs, you have a maximum of 1248 Virtual TNs (39 cards x 32 ports)

Note: The last card slot associated with Superloop 112 is not used.

For PBX 11C, the virtual TN limit is 1248.

The total number of the following licenses combined must be less than or equal to 1248:

PCA + ITG ISDN trunks + DECT users+ Virtual sets.

--End--

License parameters

[Table 34 "License parameters" \(page 162\)](#) lists the License parameters that are available.

Table 34
License parameters

Service Licenses	System License parameters	Preset License parameters
Traditional Telephones	Personal Call Assistant (PCA)	TNs
DECT Users	ITG ISDN Trunks	ACDN
IP Users	H.323 Access Ports	AML
Basic IP Users	SIP Access Ports	BRAND
Temporary IP Users	AST	LTID
DECT Visitor Users	RAN CON	RAN RTE
ACD Agents	MUS CON	Attendant Consoles

Table 34
License parameters (cont'd.)

Service Licenses	System License parameters	Preset License parameters
	Survivability	BRI DSL MPH DSL DATA Ports Phantom Ports Traditional Trunks DCH TMDI D-Channels

Licenses and TN configurations

[Table 35 "License parameters dependencies on TN configuration" \(page 163\)](#) lists License dependencies related to TN configurations.

Table 35
License parameters dependencies on TN configuration

License mnemonic	How a TN is configured
	Service License parameters
Traditional Telephones	<p>This parameter counts analog (500/2500-type) telephones configured in LD 10, including:</p> <ul style="list-style-type: none"> analog ACD agents and AST Line-side T1/E1 devices, used for voice mail systems, voice response units, and trading turrets (LD 10, TYPE 500) Faxes and modems (LD 10, TYPE 500, CLS FAXA) Fax Server ports (LD 10, TYPE 500, FTR FAXS) Phantom TN configured as predictive dialer with CS 1000E only <p>Phantom ports, wireless and CLASS telephones are not counted (LD 10, TYPE 500, WRLS is NO, CLS CNUD and CNAD).</p> <p>This parameter counts CLASS compatible analog (500/2500-type) telephones (LD 10, TYPE 500, CLS CNAA or CNUA).</p>

Table 35
License parameters dependencies on TN configuration (cont'd.)

License mnemonic	How a TN is configured
	<p>This parameter counts digital telephones, including digital ACD agents and AST, and Predictive Dialer ports configured on IPMG TN.</p> <p>CallPilot ports, data and phantom ports, and Virtual telephones are not counted. CallPilot Mini ports are counted.</p>
DECT Users	This parameter counts DECT telephones (LD 10, TYPE 500, WRLS YES) supporting concentration. Visiting DECT telephones are not counted.
Temporary IP Users	This parameter counts any IP Phones type with the LD 11 prompts NUID/NHTN are configured.
Basic IP Users	<p>This parameter counts IP Phones type 2001 (LD 11, TYPE 2001P2, 1110 and 2033)</p> <p>Overflow : If insufficient "Temporary IP Users" Licenses are available for any IP Phone with "NUID/NHTN", then any unused "Basic IP users" or "IP Users" Licenses can also be used for the configuration of these IP Phones with an error message generated, recommending the purchase of additional Basic IP/IP user Licenses.</p>
IP Users	<p>This parameter counts IP Phones type 2002, 2210/2211/2212, 2004, 2007, 1120, 1140, 1150 and IP Softphone 2050 (LD 11, TYPE 2004P1, 2004P2, 2210, 2211, 2212, 2007, 1120, 1140, 1150, 2002P1, 2002P2, 2050PC, 2050MC, 6120, and 6140).</p> <p>Overflow: If insufficient "Basic IP users" Licenses are available for the IP Phone [2001/1110/2033], then any unused "IP users" Licenses can also be used for the configuration of the IP Phone [2001/1110/2033] with an error message generated, recommending the purchase of additional Basic IP users Licenses.</p>
DECT Visitor Users	This parameter counts Visiting DECT telephones supporting concentration feature (LD 10, TYPE DCS, VSIT YES).

Table 35
License parameters dependencies on TN configuration (cont'd.)

License mnemonic	How a TN is configured
ACD Agents	<p>This parameter counts analog ACD agents (LD 10, TYPE 500, CLS AGTA, FTR ACD), Wireless ACD agents (LD 10, TYPE DCS or 500, WRLS YES, CLS AGTA, FTR ACD), Digital ACD agents, Meridian Integrated ACD ports, Virtual Office host agents, and Internet ACD agents (LD 11, TYPE 2002P1/P2, 2004 P1/ P2, 2050PC, 1120, 1140, 1150 KEY 0 ACD).</p> <p>CallPilot ports are not counted as ACD Agents. CallPilot Mini ports are counted.</p>
Personal Call Assistants (PCA)	<p>This parameter counts Personal Call Assistant data blocks (LD 11, TYPE PCA, KEY 1 HOT P).</p>
ITG ISDN trunks	<p>This parameter counts ITG-i486 Card trunks, ITG-Pentium Card trunks, and ITG Media Card trunks.</p> <p>Voice gateways are not counted (LD 14, TYPE not VGW, XTRK ITG8, MC8, MC32 and not VGW, IPTN NO).</p>
H.323 Access Ports	<p>This parameter counts H.323 IP Trunks (LD 14, TYPE IPTI; RTMB: route number, unit number). The route is configured as H.323 route (LD 16 PCID: H.323).</p>
SIP Access Ports	<p>This parameter counts SIP IP Trunks (LD 14 TYPE: IPTI; RTMB: route number, unit number). The route is configured as SIP route (LD 16 PCID: SIP).</p>
AST	<p>This parameter counts Associated analog telephones (LD 10, TYPE 500, AST YES), Associated analog ACD agents (LD 10, TYPE 500, CLS AGTA, FTR ACD, AACD YES), Associated digital and internet telephones, and Associated trunks. The following trunks cannot be associated: MUS, ADM, R232, R422, MCU, MDM, AWR, PAG, DIC, RAN, RCD)</p> <p>CallPilot ports are not counted.</p>
RAN connections (RAN CON)	<p>This parameter counts Broadcasting RAN trunks (LD 14, TYPE RAN).</p>
Music connections (MUS CON)	<p>This parameter counts Broadcasting music connections. Non-broadcasting music trunks are not counted (LD 14, TYPE MUS).1 Music Broadcasting trunk = 64 Music Connections. USED counter value is the maximum number of simultaneously-used music connections since the last sysload.</p>

Table 35
License parameters dependencies on TN configuration (cont'd.)

License mnemonic	How a TN is configured
Survivability	This parameter counts Survivability License usage (the number of expansion cabinets/Media Gateways that can operate in survivable mode). This parameter is specific to Small Systems. (LD 117: SURV cab YES).
Preset License parameters	
TNs	The total number of TNs refers to Terminal Numbers (TNs) configured in LDs 10, 11, 12, 13, and 14. There is no differentiation between signaling, data, and voice channels.
ACD DNs (ACDN)	ACD DNs counts the number of ACD and CDN data blocks (LD 23, TYPE ACD or CDN).
AML	Application Module Links (LD 17, ADAN AML).
Brand	Brand index License specifies a string of alphanumeric characters displayed on an idle telephone.
LTID	Logical terminals configured on DSLs (LD 27, TYPE DSL).
RAN route	Recorded Announcement Routes (LD 16, TKTP RAN).
Attendant consoles	This parameter counts every attendant console and PC console configured in LD 12. An attendant console can use two or more TNs. However, the TNs occupied by an attendant console are not used for attendant console License counting criteria; each TN occupied by an attendant console is used for System TN License counting criteria. TNs used for power supply are not counted toward attendant consoles.
BRI DSL	This parameter counts every BRI line (LD 27, TYPE DSL, APPL BRIL).
MPH DSLs	This parameter counts every BRI MPH line (LD 27, TYPE DSL, APPL MPH).
Data ports	<p>This parameter counts every Data Port configured in LD 10 (data TNs), LD 11 (data TNs) or LD 14 (MCA, MCU). Data Ports are excluded from counting as Analog or Digital Telephones or Traditional Trunks.</p> <p>A data TN configured in LD 11 is a Data Port. A Meridian Communication Adapter (MCA) fits inside a Meridian Digital Telephone to provide access to data functions. An MCA is configured in LD 11 as an M2006, M2008, M2216 or M2616 or M3900 series with DTAO prompt set to either Meridian Programmable Data Adapter (MPDA) or MCA.</p> <p>A Meridian Communication Unit (MCU) replicates the functionality of the MCA and provides additional features. Both MCA and MCU are counted as Data Ports. A Data Access</p>

Table 35**License parameters dependencies on TN configuration (cont'd.)**

License mnemonic	How a TN is configured
	<p>Card (DAC) is a data interface card that allows the card to work with the RS-232 interface, the RS-422 interface, or both. Configuration of DAC is in LD 11, with R232 or R422 as the TYPE prompt. Both R232 and R422 data terminals are counted as Data Ports.</p> <p>A Data Port is not limited to units 16–31. If a TN has Flexible Voice/Data Allowed (FLXA) CLS, a DATA port is allowed on TN (unit 0–15).</p> <p>ATA terminals (LD 11, TYPE: any of M3xxx, CLS DTA and not MMA)</p> <p>Meridian Communication Adapters (LD 11, TYPE: any of M2xxx, CLS DTA and not MMA)</p> <p>Meridian Communication Units (LD 11, TYPE MCU) R232 DAC units (LD 14, TYPE R232)</p> <p>R422 DAC units (LD 14, TYPE R422).</p>
Phantom ports	Analog phantom telephones configured on Phantom loops (LD 10, TYPE 500). Digital phantom ports configured on Phantom loops (LD 11, TYPE: any of M2xxx and M3xxx).
Traditional Trunks	<p>This parameter counts each Traditional Trunk (analog, digital, ISDN, and ITG 1.0 Trunks) configured in LD 14.</p> <p>Analog trunks that use in-band signaling for establishing calls to COs or other switches are counted as Traditional Trunks.</p> <p>Trunks of this nature include, but are not limited to, the following:</p> <ul style="list-style-type: none"> • Automatic Identification of Outward Dial (AIOD) • Common Control Switching Arrangement (CCSA) • Automatic Number Identification (ANI) • Autovon (ATVN) • Central Automatic Message Accounting (CAMA) • Central Office (COT) • Common Control Switching arrangement (CSA)

Table 35
License parameters dependencies on TN configuration (cont'd.)

License mnemonic	How a TN is configured
	<ul style="list-style-type: none"> • Direct Inward Dial (DID) • Foreign Exchange (FEX) • Feature Group D (FGD) • Release Link Main (RLM) • Release Link Remote (RLR) • TIE • Wide Area Telephone Service (WAT) <p>Counting analog trunks does not depend on hardware type, density or country-specificity. DTI channels (1.5 and 2.0 Mb) and JDNI trunks count as Traditional Trunks. Line-Side T1/E1 are counted as Analog Telephones and are not counted as Traditional Trunks. ISDN trunks such as ISL, VNS, 1.5 and 2.0 Mb PRI (including IDA) and BRI count as Traditional Trunks.</p>
D-channels (DCH)	<p>Primary D-channels (LD 17, ADAN DCH)</p> <p>Backup primary D-channels (LD 17, ADAN BDCH)</p> <p>For CS 1000E (Rls 5.0 and later) also applicable to D-channels configured on the TMDI card. This parameter is specific to CS 1000E systems (LD 17, TYPE ADAN, CTYP TMDI).</p>
TMDI D-channels	D-channels configured on the TMDI card. This parameter is specific to PBX 11C system only.

Table 36
TN Set (IP) Type (Model)

Rls 5.0 and later	Rls 4 and Rls 4.5	Applicable IP License			Notes
		IP	Basic	Temp.	
2004P1, 2004P2	I2004	X		X	P1 : Phase 1 & P2 Phase II
2210, 2211, 2212, 6120, 6140	I2004	X		X	Nortel WLAN Handset
2007	I2004	X		X	
1140	I2004	X		X	
2050PC, 2050MC	I2050	X			I2050 with PCA_OPT flag set (PCA TN) are automatically converted to new TN type PCA

Table 36
TN Set (IP) Type (Model) (cont'd.)

2002P1, 2002P2	I2002	X		X	
1120	I2002	X		X	
2001P2	I2001		X	X	
1110	I2001		X	X	
2033	I2001		X	X	Polycom Conference
1150	IPACDI V		X		"IPACD" mnemonic is changed to "1150", but no new set type is added

Service Level License default settings and increment values

Table 37 "Service Level License default and increment values" (page 169) lists Service Level License default settings and increment values.

Table 37
Service Level License default and increment values

License mnemonic	New system default setting by system type	Order increment for new systems and expansions	License ordering guidelines
Traditional telephones	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS 1000M-SG/MG 0 - CS 1000E	1 - PBX 11C Cabinet/Chassis 1 - PBX 61C/81C 1 - CS 1000M-SG/ MG 1 - CS 1000E	See note 2 below. Provision 8 for CallPilot Mini.
DECT users (previously called Wireless user)	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS 1000M-SG/MG 0 - CS 1000E	1 - PBX 11C Cabinet/Chassis 1 - PBX 61C/81C 1 - CS 1000M-SG/ MG N/A- CS 1000E	Previously called Wireless user. Changed in RIs 4.0. See notes 1 and 2 below.
IP users	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS 1000M-SG/MG 0 - CS 1000E	N/A - PBX 11C Cabinet/Chassis N/A - PBX 61C/81C 1 - CS 1000M-SG/ MG 1 - CS 1000E	See note 2 below.
Temporary IP users	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS 1000M-SG/MG 0 - CS 1000E	N/A - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 1 - CS 1000M-SG/ MG 1 - CS 1000E	License for RIs 5.0 and later. Provides access for IP redundant set, up to the limit of the License. Initial order is 100 units.

Table 37
Service Level License default and increment values (cont'd.)

License mnemonic	New system default setting by system type	Order increment for new systems and expansions	License ordering guidelines
Basic IP users	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS 1000M-SG/MG 0 - CS 1000E	N/A - PBX 11C Cabinet/Chassis N/A - PBX 61C/81C 1 - CS 1000M-SG/ MG 1 - CS 1000E	See note 2 below.
DECT Visitor users	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS 1000M-SG/MG 0 - CS 1000E	1 - PBX 11C Cabinet/Chassis 1 - PBX 61C/81C 1 - CS 1000M-SG/ MG N/A - CS 1000E	This License is only used in the EMEA and Asia Pacific regions. See note 1 below.
ACD Agents	10 - PBX 11C Cabinet/Chassis 10 - PBX 61C/81C 10 - CS 1000M-SG/MG 10 - CS 1000E	1 - PBX 11C Cabinet/Chassis 1 - PBX 61C/81C 1 - CS 1000M-SG/ MG 1 - CS 1000E	10 ACD Agent users are provisioned for all new system types in all regions. Applicable for any service level ordered.

Note 1: For North America and CALA, use DECT User Licenses for upgrades, expansions and transfers of Companion-enabled systems only. The DECT User License is not supported on North American CS 1000E and Media Gateway 1000B systems. North American and CALA Companion DECT Licenses can be moved from an existing pre-RLs 3.0 system to the CVSD structure using OrderPro. DECT User Licenses are used in EMEA and Asia Pacific to support the DECT Wireless product on all products and the Media Gateway 1000B systems (Branch Office).

Note 2: CS 1000M SG = CS 1000M Single Group system and CS 1000M MG = CS 1000M Multi Group system

System Level License default settings and increment values

[Table 38 "System Level License default and increment values" \(page 171\)](#) lists System License default settings and increment values for new systems.

Table 38
System Level License default and increment values

License mnemonic	New system default setting by system type	Order increment for new systems and expansions	License ordering guidelines
Personal Call Assistant (PCA)	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS 1000M SG/MG 0 - CS 1000E	1 - PBX 11C Cabinet/Chassis 1 - PBX 61C/81C 1 - CS 1000M SG/MG 1 - CS 1000E	These increments apply to standalone Meridian 1, CS 1000M, CS 1000E systems.
ITG ISDN Trunks	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS 1000M SG/MG 0 - CS 1000E	8 - PBX 11C Cabinet/Chassis 8 - PBX 61C/81C N/A - CS 1000M SG/MG N/A - CS 1000E	ITG ISDN Trunk can be co-resident in a configuration with Virtual Trunk ports (H.323 Access Ports and SIP Access Ports) for the CS 1000M systems.
H.323 Access Ports	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS 1000M SG/MG 0 - CS 1000E	N/A - PBX 11C Cabinet/Chassis N/A - PBX 61C/81C 1 - CS 1000M SG/MG 1 - CS 1000E	
SIP Access Ports	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS 1000M-SG/MG 0 - CS 1000E	N/A - PBX 11C Cabinet/Chassis N/A - PBX 61C/81C 1 - CS 1000M SG/MG 1 - CS 1000E	
AST	1 - PBX 11C Cabinet/Chassis 1 - PBX 61C/81C 1 - CS 1000M -SG/MG 1 - CS 1000E	1 - PBX 11C Cabinet/Chassis 1 - PBX 61C/81C 1 - CS 1000M SG/MG 1 - CS 1000E	This License controls Nortel and third-party applications.
RAN CON	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS1000M -SG/MG 0 - CS 1000E	1 - PBX 11C Cabinet/Chassis 1 - PBX 61C/81C 1 - CS 1000M SG/MG 1 - CS 1000E	
MUS CON	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS 1000M-SG/MG 0 - CS 1000E	1 - PBX 11C Cabinet/Chassis 1 - PBX 61C/81C 1 - CS 1000M SG/MG 1 - CS 1000E	
Survivability	0 - PBX 11C Cabinet/Chassis 0 - PBX 61C/81C 0 - CS 1000M-SG/MG 0 - CS 1000E	1 - PBX 11C Cabinet/Chassis N/A - PBX 61C/81C N/A - CS 1000M SG/MG N/A - CS 1000E	

Factory preset License values

Table 39 "Factory preset License values" (page 172) lists factory preset License values.

Table 39
Factory preset License values

License mnemonic	Value setting by system type
TNs	2500 - PBX 11C Cabinet/Chassis 32760 - PBX 61C/81C 32760 - CS 1000 M - SG/MG 32760 - CS 1000E
AML	16 - PBX 11C Cabinet/Chassis 16 - PBX 61C/81C 16 - CS 1000 M - SG/MG 16 - CS 1000E
LTID	0 - PBX 11C Cabinet/Chassis 32760 - PBX 61C/81C 32760 - CS 1000 M - SG/MG 32760 - CS 1000E
ATTENDANT CONSOLES	2500 - PBX 11C Cabinet/Chassis 32760 - PBX 61C/81C 32760 - CS 1000 M - SG/MG 32760 - CS 1000E
MPH DSL	100 - PBX 11C Cabinet/Chassis 64 - PBX 61C/81C 64 - CS 1000 M - SG/MG 64 - CS 1000E
PHANTOM PORTS	2500 - PBX 11C Cabinet/Chassis 32760 - PBX 61C/81C 32760 - CS 1000 M - SG/MG 32760 - CS 1000E
DCH	80 - PBX 11C Cabinet/Chassis 254 - PBX 61C/81C 255 - CS 1000 M - SG/MG 255 - CS 1000E
ACDN	300 - PBX 11C Cabinet/Chassis 24000 - PBX 61C/81C 24000 - CS 1000 M - SG/MG 24000 - CS 1000E
BRAND	2 - PBX 11C Cabinet/Chassis 2 - PBX 61C/81C 2 - CS 1000 M - SG/MG 2 - CS 1000E

Table 39
Factory preset License values (cont'd.)

License mnemonic	Value setting by system type
RAN RTE	500 - PBX 11C Cabinet/Chassis 512 - PBX 61C/81C 512 - CS 1000 M - SG/MG 512 - CS 1000E
BRI DSL	150 - PBX 11C Cabinet/Chassis 10000 - PBX 61C/81C 10000 - CS 1000 M - SG/MG 10000 - CS 1000E
DATA PORTS	2500 - PBX 11C Cabinet/Chassis 32760 - PBX 61C/81C 32760 - CS 1000 M - SG/MG 32760 - CS 1000E
TRADITIONAL TRUNKS	2500 - PBX 11C Cabinet/Chassis 32760 - PBX 61C/81C 32760 - CS 1000 M - SG/MG 32760 - CS 1000E
TMDI D-CHANNEL	64 - PBX 11C Cabinet/Chassis N/A - PBX 61C/81C N/A - CS 1000 M - SG/MG N/A - CS 1000E

Maximum License limits

Table 40 "Maximum License limits" (page 173) lists maximum License limits.

Table 40
Maximum License limits

Licenses	PBX 11C	CS 1000E systems	PBX 61C/81C CS 1000M SG/MG
Service Licenses			
Traditional telephones	2 500	32 760	32 760
Temporary IP users	N/A	32 760	32 760
Basic IP users	N/A	32 760	32 760
IP users	N/A	32 760	32 760
DECT users	2 500	32 760	32 760
DECT Visitor users	2 500	10 000	10 000
ACD Agents	1 000	32 760	32 760
System Licenses			
ITG ISDN Trunks	2 500	32 760	32 760

Table 40
Maximum License limits (cont'd.)

Licenses	PBX 11C	CS 1000E systems	PBX 61C/81C CS 1000M SG/MG
H.323 Access ports	N/A	32 760	32 760
SIP Access ports	N/A	32 760	32 760
Personal Call Assistant (PCA)	1 248	32 760	32 760
AST	1 000	32 760	32 760
RAN_CON	1 000	32 760	32 760
MUS_CON	1 000	10 000	10 000
Survivability	4	N/A	N/A
Preset Licenses			
TNs	2 500	32 760	32 760
ACDN	300	24 000	24 000
AML	N/A	16	16
LTID	2 500	32 760	32 760
RAN_RTE	500	512	512
BRAND	2	2	2
Attendant Consoles	2 500	32 760	32 760
BRI_DSL	150	32 760	32 760
MPH_DSL	N/A	32 760	32 760
Data Ports	2 500	32 760	32 760
Phantom Ports	2 500	32 760	32 760
Traditional Trunks	2 500	32 760	32 760
DCH	N/A	255	255
TMDI_D-Channel	64	255	N/A

Note: The values presented in this table are individual License limits, not engineering limits or rules.

System monitoring

To assist in monitoring system growth, each time an overlay is used, a header appears in the affected overlay, reflecting the system status. The header indicates the total, available, and used quantities of the License parameters corresponding to the data blocks that are configured in the overlay. The counts are updated each time system activity adds or deletes one of the tracked items. When the limits are exceeded, an error message appears.

ACD parameters are preset for each system. The numbers in the header are not necessarily real limits and are subject to system configuration. Contact your Nortel representative for information regarding your system limits.

A header, reflecting License parameters, is present in the following overlays:

- LD 10: DECT (500/DCS) telephones, DECT visitors, ACD agents, AST, TNs, data ports and phantom ports.
- LD 11: Meridian 1 proprietary telephones, IP Phones, ACD agents, PCAs, AST, TNs and data ports.
- LD 12: Attendant Consoles and the number of TNs.
- LD 13: Digitone receivers and tone detectors
- LD 14: AST, ITG ISDN trunks, H.323 access ports, SIP access ports, RAN and MUS connections, TNs, data ports and traditional trunks.
- LD 16: RAN routes
- LD 17: D-channels (DCH and TMDI DCH) and Application Module Links (AMLs)
- LD 23: ACD-DNs
- LD 27: TNs, Digital Subscriber Loops (DSLs) and Logical Terminal Identifiers (LTIDs).
- LD 117: Survivability (Small Systems only).

Printing system License limits

When REQ is set to SLT in LD 22, system License limits are printed. You can update the value of License limits either through sysload or the Instant Software License feature. You can print the new License limits through LD 22 after the update is complete.

The LD 22 implementation for printing system limits is as follows:

Table 41
LD 22 - Print system limits

Prompt	Response	Description
REQ	SLT	Print System Limits: Incremental Software Management.

In the License limits printout, three parameters are printed for each License:

- The first parameter is the License limit.
- The USED parameter is the number of configured units.
- The LEFT parameter is the difference between the License limit and the USED value (LEFT = License limit - USED).

Figure 9
Example of a LD 22 printout (REQ=SLT).

TRADITIONAL TELEPHONES	800	LEFT 784	USED 16
DECT USERS	0	LEFT 0	USED 0
IP USERS	500	LEFT 0	USED 500
BASIC IP USERS	60	LEFT 0	USED 60
TEMPORARY IP USERS	100	LEFT 0	USED 100
DECT VISITOR USER	0	LEFT 0	USED 0
ACD AGENTS	300	LEFT 189	USED 111
PCs	20	LEFT 9	USED 11
ITG ISDN TRUNKS	0	LEFT 0	USED 0
H.323 ACCESS PORTS	30	LEFT 0	USED 30
AST	32	LEFT 0	USED 32
SIP CONVERGED DESKTOPS	0	LEFT 0	USED 0
SIP CTI TR87	0	LEFT 0	USED 0
SIP ACCESS PORTS	250	LEFT 0	USED 250
RAN CON	120	LEFT 0	USED 120
MUS CON	120	LEFT 0	USED 120
TNS	32767	LEFT 31444	USED 1323
ACDN	24000	LEFT 23998	USED 2
AML	16	LEFT 15	USED 1
IDLE_SET_DISPLAY NODE D CP-PM CS 4911/11			
LTID	32760	LEFT 32760	USED 0
RAN RTE	512	LEFT 510	USED 2
ATTENDANT CONSOLES	32767	LEFT 32766	USED 1
BRI DSL	10000	LEFT 10000	USED 0
MPH DSL	100	LEFT 100	USED 0
DATA PORTS	32767	LEFT 32767	USED 0
PHANTOM PORTS	32767	LEFT 32767	USED 0
TRADITIONAL TRUNKS	32767	LEFT 32691	USED 76
DCH	255	LEFT 252	USED 3

Note: For Music Broadcast connections (MUS CON), the USED parameter is the maximum License usage since the last sysload.

System administration

When the predefined License limits are reached, an error message indicates that further database additions are blocked.

A new keycode must be ordered to increase system limits. In order to minimize delays in system administration, it is critical that the configuration limits be monitored and that new disks are ordered before the current parameters are exceeded.

Software Upgrade

When performing a system upgrade, if any of the new License limits exceed present limits, then do not attempt to sysload. Excess information will be lost. Obtain new disks with expanded limits.



CAUTION

System information will be lost. Upon software upgrade, if SYS message 4327, 4328, 4329, or 4330 appears at SYSLOAD, then SYSLOAD previous system disks. Order License disks with sufficient system parameters configured.

DO NOT DATADUMP; system information will be lost. Call your technical support department for assistance.

Keycodes

A keycode is a machine-generated, digitally-signed list of customer capabilities and authorized software release. A security keycode scheme protects License parameters.

For a customer to expand License limits, they must order and install a new keycode. This installation is performed using the Keycode Management feature. Use LD 143 to run all Keycode Management commands.

There are conditions under which a customer must sysload. For more information, see the Instant License chapter in *Features and Services Fundamentals — Book 4 of 6 (I to M)* (NN43001-106).

Operating parameters

There are no operating parameters associated with this feature.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

Software Licenses requires the following packages:

- ACD-DNs and ACD Agent
 - Basic ACD (BACD) package 40
- Application Module Link (AML)
 - Digit Display (DDSP) package 19
 - ACD Package B (ACD-B) package 41
 - ACD Package A (ACD-A) package 45
 - Command Status Link package 77
 - ISDN Application Module Link for Third Party Vendors (IAP3P) package 153
- AST
 - Command Status Link (CSL) package 77
 - Application Module Link (AML) package 209

- Attendant Consoles
 - Attendant Consoles is included in base system software.
- CLASS Telephones
 - Calling Number Delivery (CNUMB) package 332 or
 - Calling Name Delivery (CNAME) package 333
- Data Ports
 - Package requirements for data ports vary depending on the type of data port configured. See *Software Input/Output Reference — Administration* (NN43001-611) and *Software Input/Output Reference — Maintenance* (NN43001-711) for information on specific data port package requirements.
- IP Phones
 - M2000 Digital Set (DSET) package 88
 - Aries Digital Set (ARIE) package 170
- ITG ISDN Trunks
 - Basic Alternate Route Selection (BARS) package 57 or Network Alternate Route Selection (NARS) package 58
 - Integrated Services Digital Network (ISDN) package 145
 - ISDN Signaling Link (ISL) package 147
 - Multi-purpose Serial Data Link (MSDL) package 222 (for Large Systems only)
- Phantom Ports
 - Phantom TN (PHTN) package 254
- Traditional Trunks
 - Package requirements for Traditional Trunks vary depending on the type of trunk configured. For more information about specific trunk package requirements, see *Software Input/Output Reference — Administration* (NN43001-611) and *Software Input/Output Reference — Maintenance* (NN43001-711).
- DECT
 - Meridian 1 Companion Option (MCMO) package 240
- Personal Call Assistant (PCA)
 - Personal Call Assistant (PCA) package 398
- H.323 Access Ports

- IP Peer Networking package 399
- SIP Access ports
- SIP Gateway and Converged Desktop package 406

Feature implementation

There are no specific implementation procedures for this feature.

Feature operation

No specific operating procedures are required to use this feature.

Source Included when Attendant Dials

Contents

This section contains information on the following topics:

- “Feature description” (page 181)
- “Operating parameters” (page 182)
- “Feature interactions” (page 182)
- “Feature packaging” (page 183)
- “Feature implementation” (page 183)
- “Feature operation” (page 183)

Feature description

This feature provides a new option in LD 15, which allows the customer to define whether or not the source is to be included in a call while the attendant is dialing the destination (SIAA = allow, SIAD = deny). If the destination answers while the attendant is still included in the call, intrusion tone is provided to all parties to indicate that a conference has been established. The intrusion tone is defined in LD 56, and is a prerequisite for the Source Included when Attendant Dials feature.

If SIAA has been defined, the source will be included in all situations, regardless of the state of the destination, except when the attendant is performing Break-In to a busy station.

The following table outlines the operation, if SIAA has been defined, according to the state of the destination party:

Destination	Source	
	Included	Excluded
Idle extension	x	

Destination	Source	
	Included	Excluded
First Degree Busy	x	
Second Degree Busy	x	
Camp-on	x	
Intercept forwarded	x	
Line lock-out	x	
Vacant	x	
Busy, Attendant Break-in		x
Meridian Mail	x	
Recorded Announcement	x	
Music	x	

Operating parameters

There are no operating parameters associated with this feature.

Feature interactions

Attendant Blocking of Directory Number

The Attendant Blocking of DN feature will follow the current Source Included when Attendant Dialing handling occurs.

Attendant Break-In

The operation of the Break-In feature is not affected, except that the source receives busy tone before the attendant presses the Break-In (BKI) key.

Attendant Supervisory Console

While the attendant dials the destination, the source receives intrusion tone.

Automatic Call Distribution

The source is included in a conference involving the attendant, the source, and Automatic Call Distribution (ACD). When the call is answered by the ACD agent, intrusion tone is provided to all parties in the conference.

Camp-On, Semi-automatic Camp-On

The source remains included while the attendant dials the destination.

Intercept treatment

If the attendant dials a destination which is intercepted, the source remains included in the call.

Meridian Mail

The source is included in a conference involving the attendant, the source, and Meridian Mail answering. When the call is answered by Meridian Mail, the attendant and source receive intrusion tone.

Recorded Announcement, Music

The source is included in a conference involving the attendant, the source, and Recorded Announcement or music treatment. Intrusion tone is not provided in this case.

Secrecy Enhancement

Source Included when Attendant Dials takes precedence over Secrecy and Enhanced Secrecy.

Feature packaging

This feature requires:

- International Supplementary Features (SUPP) package 131
- Flexible Tone and Cadences (FTC) package 125
- Trunk Barring (TBAR) package 132

Feature implementation

Table 42

LD 15 - Configure Source Included when Attendant Dials for a customer.

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	FTR	Features and Options
...		
- OPT	(SIAD) SIAA	(Deny) or allow Source Included when Attendant Dials.

Feature operation

No specific operating procedures are required to use this feature.

Special Dial Tones after Dialed Numbers

Contents

This section contains information on the following topics:

- “Feature description” (page 185)
- “Operating parameters” (page 186)
- “Feature interactions” (page 186)
- “Feature packaging” (page 186)
- “Feature implementation” (page 187)
- “Feature operation” (page 187)

Feature description

This feature allows special dial tones to be provided after certain telephone numbers are dialed. Both the telephone numbers and associated dial tones are customer-defined in LD 56. The system can handle a list of up to 20 telephone numbers with a maximum length of five digits. A tone can be associated with each number. Several different tones can be provided during a dialing sequence by defining a tone with any combination of digits in the dialed number.

For example, for the number 12345, a tone can be provided after the digit 1 is dialed, after the digits 123 are dialed, and after the whole (12345) number is dialed. This is done by defining a tone with the digit 1, a tone with the digits 123, and a tone with the digits 12345.

When a number is dialed, the system performs digit analysis. As soon as the dialing sequence is recognized as part of the customer-defined list, the system provides the associated tone, if one has been defined. The tone

is generated after all other treatment of digits is performed. As soon as another digit is dialed, the tone is removed. This digit analysis is done until the dialing sequence is completed.

Tones are provided to the following originating terminals:

- all types of sets (including data terminals) and attendants, and
- TIE trunks, except those with MFC/MFE signaling.

Operating parameters

The system performs digit analysis before any other treatment of digits, except digit insertion for incoming trunk calls.

In a network environment, digit recognition is reported to the distant node, which must be equipped to handle the processing.

Feature interactions

Digital Private Network Signaling System (DPNSS1)/Digital Access Signaling System (DASS2) Uniform Dialing Plan (UDP) Interworking

The Special Dial Tones after Dialed Numbers feature is supported in a DPNSS1 UDP network.

Digital Trunk Interface (DTI) - Commonwealth of Independent States (CIS)

Special Dial Tones can be used to provide dial tone after the system user has dialed the digit 9 (Local Exchange access code).

EuroISDN Master Mode

This feature is not supported for incoming calls on the ETSI network side, but it is supported for outgoing calls.

Special dial tone after access codes

Special dial tone after access codes takes precedence over the special dial tones after dialed number treatment. To define special dial tones after access codes, NO has to be entered in response to prompt DLTN in LD 86 (to inhibit dial tone to access codes). The access code digits and associated tones would then have to be defined in response to the DTAD prompt in LD 56.

Feature packaging

Flexible Numbering Plan (PNP) package 160; and to define SRC1-SRC8 special tones, the Flexible Tones and Cadences (FTC) package 125.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 43 "LD 86 " \(page 187\)](#)

Enable Special Dial Tones after Dialed Numbers.

2. [Table 44 "LD 15" \(page 187\)](#)

Configure Special Dial Tones after Dialed Numbers.

Table 43

LD 86

Prompt	Response	Comment
REQ	CHG	Change
CUST	xx	Customer number, as defined in LD 15
FEAT	ESN	ESN (Electronic switched network)
DLTN	(YES) NO	NARS/BARS Dial Tone after dialing AC1 or AC2 access codes.

Table 44

LD 15

Prompt	Response	Description
REQ:	CHG	Change
TYPE:	DTAD	Special Dial Tone after Dialed Number data block.
DDGT	x...x	Dialed digits (1-5 digits).
...		
- TONE	a...a	<p>Tone to be provided after the dialed digits</p> <p>Where a...a:</p> <p>(DIAL) = Dial Tone</p> <p>SPDT = Special Dial Tone</p> <p>SRC1-SRC8 = Source tones 1-8 (Valid if FTC package 125 is equipped)</p>

Feature operation

No specific operating procedures are required to use this feature.

Special Signaling Protocols

Contents

This section contains information on the following topics:

- “Feature description” (page 189)
- “Operating parameters” (page 189)
- “Feature interactions” (page 190)
- “Feature packaging” (page 190)
- “Feature implementation” (page 190)
- “Feature operation” (page 190)

Feature description

This feature allows the existing Swedish analog (500/2500-type) telephones to be connected through analog TIE trunks to the system. These TIE trunks use Swedish signaling protocols. The TIE trunks can be divided into the following types:

- automatic
- semi-automatic
- tone, or
- Automatic Telephony (ATL) (when the Swedish ATL trunk support feature is equipped).

Operating parameters

The Swedish TIE trunk types do not apply to digital TIE trunks.

The Swedish TIE trunk types cannot be mixed on a route.

The Swedish TIE trunks require trunk cards of type TPC71 or TPC237. The trunk cards must be placed on specific Televerket (TVT) loops.

A semi-automatic or tone TIE trunk should not be connected to another system trunk. An incoming Public Exchange/Central Office trunk can be connected to an outgoing automatic TIE trunk.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

This feature is included in base system software.

Feature implementation

Table 45

LD 16 - Configure Trunk route for Special Signaling Protocols.

Prompt	Response	Description
REQ	CHG	Change
TYPE	RDB	Route data block
CUST	xx	Customer number, as defined in LD 15
...		
TKTP	TIE SEMI TIE AUTO TIE TONE	Semi-automatic TIE trunk data block. Automatic TIE trunk data block. Tone TIE trunk data block.

Feature operation

No specific operating procedures are required to use this feature.

Special Trunk Support

Contents

This section contains information on the following topics:

- “Feature description” (page 191)
- “Operating parameters” (page 191)
- “Feature interactions” (page 191)
- “Feature packaging” (page 192)
- “Feature implementation” (page 192)
- “Feature operation” (page 194)

Feature description

This feature allows the interface of the system with the Swedish Automatic Telephony (ATL) military radio-link network.

Operating parameters

ATL trunks must never be used for tandem switching or for networks using Electronic Switched Network (ESN) proprietary signaling.

Echo suppression and loss adjustment cannot be effected through software change.

Modified TPC237 cards must be used for ATL trunks, and must be configured on loops specifically defined for Televerket (TVT) use. An SSO adapter is used between the ATL network trunk and the TPC237 card.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

International Supplementary Features (SUPP) package 131.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 46 "LD 14" \(page 192\)](#)

Configure Trunks for Special Trunk Support.

2. [Table 47 "LD 16" \(page 193\)](#)

Enable Trunk Routes for Special Trunk Support.

Table 46

LD 14

Prompt	Response	Comment
REQ	CHG	Change
...		
TYPE	TIE	TIE Trunk data block.
TN	I s c u	Terminal number
	c u	Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit.
		Format for Small System and Media Gateway 1000B c = card and u = unit.
...		
CUST	xx	Customer number, as defined in LD 15
...		
NCOS	(0)	Network Class of Service.
RTMB	0-511 1-4000	Route number and Member Number
	0-127 1-4000	Range for Large System and CS 1000E system.
		Range for Small System and Media Gateway 1000B.
...		
MNDN	9	Manual Directory Number.
TGAR	(0)	Trunk Group Access Restriction.
SIGL	EAM	Trunk signaling. E&M two-wire.
...		
STRI	WNK	Wink or Fast Flash.
STRO	WNK	Wink or Fast Flash
SUPN	YES	Answer and disconnect supervision required.

Table 47**LD 16**

Prompt	Response	Comment
REQ	CHG	Change
...		
TYPE	RDB	Route data block.
CUST	xx	Customer number, as defined in LD 15
...		
ROUT		Route number
	0-511	Range for Large System and CS 1000E system.
	0-127	Range for Small System and Media Gateway 1000B.
TKTP	TIE ATL	The ATL data block for Sweden.
...		
ICOG	IAO	Incoming and outgoing trunk.
...		
SRCH	RRB	Round Robin Hunting for outgoing trunk (start with the next lower trunk than the one seized).
...		
ACOD	xxxx	Access Code for the trunk route. The ACOD must not conflict with the numbering plan.
...		
CNTL	YES	Change controls or timers.
- TIMR	ODT 8064	End of dial tone for Digitone trunks in milliseconds.
- TIMR	EOD 8064	End of Dial, non-Digitone trunks in milliseconds.
- TIMR	DSI 20096	Disconnect Supervision in milliseconds.
- TIMR	ICF 896	Incoming Flash in milliseconds.
- TIMR	OGF 896	Outgoing Flash in milliseconds.
- TIMR	GTI 1152	Incoming Guard in milliseconds.
- TIMR	GTO 1152	Outgoing Guard in milliseconds.
- TIMR	OBA 120	Outgoing B-Answer. Time in seconds to wait for B-Answer on outgoing ATL trunks for Sweden.
- SST	4	Seizure Supervision Timer, in seconds.
NEDC	ETH	Either end control.
FEDC	ETH	Far End Disconnect Control. Either end.

Table 47
LD 16 (cont'd.)

Prompt	Response	Comment
...		
PANS	YES	Pseudo Answer can be sent on some types of trunks as soon as end of dialing is detected. SUPN in LD 14 should be YES, or PANS = YES has no meaning.

Feature operation

No specific operating procedures are required to use this feature.

Speed Call Delimiter

Contents

This section contains information on the following topics:

- “Feature description” (page 195)
- “Operating parameters” (page 195)
- “Feature interactions” (page 196)
- “Feature packaging” (page 196)
- “Feature implementation” (page 197)
- “Feature operation” (page 197)

Feature description

The Speed Call Delimiter feature meets the Chinese Ministry of Posts and Telecommunications requirements for the operation of Speed Call and System Speed Call. This feature operates similar to the Speed Call and System Speed Call with the exception of delimiters and confirmation tones.

The Speed Call Delimiter feature requires a Speed Call controller to enter an asterisk (*) between abbreviated numbers and telephone numbers when configuring speed call lists. An additional octothorpe (#) delimiter is required for Analog (2500-type) sets to indicate the end of dialing. If an octothorpe (#) is not entered, then the telephone number is not stored and the entry is not valid.

The octothorpe (#) delimiter has the flexibility of being programmed as mandatory or optional. The delimiter can be modified to something other than an octothorpe (#).

Operating parameters

An asterisk (*) delimiter is used when programming speed call lists only. An asterisk (*) can also be used as a three second delay.

No changes occur when a user wants to display a number stored against a list entry number. To display a stored entry the user presses the Display key and the Speed Call key and dials the list number. The list number cannot be abbreviated.

This feature does not apply to Analog 500-type telephones.

The use of confirmation tone or announcement implies the use of an (#) as end of dial speed call delimiter. This means that an (#) cannot be stored as part of the digit string.

An octothorpe (#) is required as a delimiter following an authorization code if an Electronic Switched Network access code and dialed number are part of the Speed Call or Autodial Key. If the (#) is not entered, then the user receives a fast busy tone. Therefore if MSCD = YES, then the end of dial delimiter must be programmed to something other than an octothorpe at the FFCS prompt in LD 15.

Feature interactions

Autodial, Speed Call

An octothorpe (#) is required as a delimiter following an authorization code if an Electronic Switched Network (ESN) and dialed number are stored as part of the speed call or autodial key. If an octothorpe (#) is not entered then the user receives a fast busy tone. If the MSCD = YES, then the end of dial delimiter must be programmed to something other than an octothorpe (#) in LD 15.

Group Call List

Speed Call Delimiter does not interact with Group Call List.

Outpulsing Asterisk and Octothorpe

If the Outpulsing Asterisk (*) and Octothorpe (#) (OPAO) package 104 is equipped and the configuration tone is programmed, then the value stored in the STRG prompt (LD 15) is entered rather than an octothorpe (#) to indicate the end of dial string. Following this, the numbers are stored.

Feature packaging

China Speed Call Delimiter requires Speed Call (OBTF) package 1 and System Speed Call (SSC) package 34.

Flexible Feature Codes (FFC) package 139 is required for Analog 2500-type telephones, if a telephone accesses speed call list or system speed call list or attendant console. This package is optional for proprietary sets or attendant consoles because these sets can access Speed Call List/System Speed Call List by using a key.

Feature implementation

To enable Speed Call and System Speed Call, the maximum number of speed call lists must be determined in LD 17. The speed call list memory size must also be configured in LD 18. For more information on these overlays and the assignment of these features to proprietary, analog (500/2500-type) telephones and attendant consoles refer to the sections entitled Speed Call and System Speed Call in this publication.

Table 48

LD 15 - Enable Speed Call Delimiter in Customer Data Block.

Prompt	Response	Description
REQ:	CHG	Change existing data block.
TYPE:	FTR	Features and options
...		
CUST		Customer number
	0-99	Range for Large System and CS 1000E system.
	0-31	Range for Small System and Media Gateway 1000B.
...		
- LEND	YES	List Entry Number Delimiter. If LEND=YES, then an asterisk (*) delimiter between the list entry number and telephone number must be entered. If LEND=NO, then existing Speed Call operation continues.
- MSCD	YES	Mandatory Speed Call Delimiter. Default = Octothorpe (#). An octothorpe (#) is required after entering telephone number to indicate the end of dial. If MSCD=NO, then the end of dial Speed Call Delimiter octothorpe (#) is optional.
<p>The China market requires an octothorpe (#) delimiter at the end of dialing. Other markets have the option of selecting a mandatory or optional delimiter by entering YES or NO at the MSCD prompt. The end of dial delimiter can be an octothorpe (default value) or it can be changed to another delimiter by modifying values at the Flexible Feature Code end-of-dialing indicator (FFCS). String to indicate end-of-dialing (STRG) and string length of end-of-dial indicator (STRL) prompts in LD 15.</p>		

Feature operation

Speed Call Delimiter Operation

Analog 2500-type telephone

- **To Program Speed Call List** — Go off-hook, dial and receive dial tone. Dial System Speed Call Controller (SCC) FFC code, the list entry number and telephone number (for example, *51*1*5556667777#). Get response. If accepted, then confirmation tone or announcement is configured and the end of dial speed call delimiter is entered.

Response is a tone or speech signal. Otherwise, silence is given. Go on-hook.

- **To use** — Go off-hook and receive dial tone. Dial Speed Call User (SCU) code and the list entry number.
- **To delete List Entry Number in Speed Call List** — Go off-hook and receive dial tone. Dial Speed Call Erase (SCE) FFC followed by list entry number (0 - 999) and (#) delimiter. Delete the specific list entry number.

Proprietary telephones and attendant console

- **To program Speed Call List** — Press Speed Call Controller Key and the indicator flashes. Dial list entry number (0 - 9999) followed by an asterisk (for example, 1*5556667777). Press Speed Call Controller Key again. If entry is accepted, the indicator goes off. If the entry is not accepted, then the indicator remains flashing. An asterisk is only used to indicate the end of dial of list entry number and is not stored as a digit string.
- **To use on proprietary telephones** — Lift the handset or press DN Key. Press System Speed Call Controller (SCC) or Speed Call User (SCU) Key. Dial the list entry number.
- **Use attendant console** — Press an idle loop key and then press Speed Call Controller (SCC) Key. Dial the list entry number.

System Speed Call Delimiter Operation Proprietary telephones

- **To Program System Speed Call List** — Press assigned System Speed Call Controller Key and indicator flashes. Dial list entry number (0 - 999) followed by an asterisk (*) and then the telephone number (for example, 1*0115556667777). Then press SSC/SSU Key again. If accepted, the indicator goes off. If not accepted, the indicator remains flashing.
- **To use** — Lift handset or press DN key. Press SSC/SSU Key. Dial the list entry number, or lift handset or press DN key. Dial SSU FFC code. Dial list entry number.

Attendant console

- **To program System Speed Call List** — Press SSC Key and indicator flashes. Dial list entry number (0 - 999), followed by an asterisk (*) and the telephone number. Press SSC Key again. If entry is accepted,

indicator goes off. If the entry is not accepted, the indicator continues to flash.

- **To use** — Press an idle loop Key. Dial SSU FFC code. Dial list entry number.

Speed Call Directory Number Access

Contents

This section contains information on the following topics:

- “Feature description” (page 201)
- “Operating parameters” (page 202)
- “Feature interactions” (page 202)
- “Feature packaging” (page 202)
- “Feature implementation” (page 202)
- “Feature operation” (page 203)

Feature description

The Speed Call Directory Number (DN) Access feature allows a Pilot DN to be used as an access code to either a Speed Call List (SCL) or a System Speed Call List (SSC).

Speed Call DN Access provides an alternative way to access either a Speed Call List or a System Speed Call List. Instead of dialing the Special Prefix (SPRE), a SCL or SSC access code, and a list entry number, or instead of depressing an idle DN key, a SCL or SSC key, and then dialing a list entry number, a user can alternatively dial a speed call access Pilot DN followed by the list entry number.

Since each speed call access Pilot DN is associated with a SCL or SSC list, users can access as many SCL or SSC lists as they need by dialing the appropriate Pilot DN.

A Pilot DN can be accessed from anywhere in a network, so that any network user can access all speed call lists defined for a network, from anywhere in the network. This allows a centralized Speed Call List to be set up for the entire network.

Operating parameters

The requirements for Speed Call and System Speed Call also apply to this feature.

Feature interactions

Direct Inward Dialing (DID) and TIE trunk access

An additional one to three digits will be accepted from these trunks to complete a Speed Call, provided these additional digits are allowed to be sent by the external system.

Speed Call, System Speed Call

Speed Call DN Access is an enhancement of the SCL and SSC features. Refer to SCL and SSC feature descriptions for interactions with other features.

Feature packaging

Speed Call Directory Number Access requires Group Hunt/DN Access to SCL (PLDN) package 120.

Dependencies:

- International Supplementary Features (SUPP) package 131
- Flexible Feature Codes (FFC) package 139
- System Speed Call (SSC) package 34
- Optional Features (OPTF) number 1

Feature implementation

Use [Table 49 "LD 57" \(page 202\)](#) to define, change, print, or remove data associated with FFC. A new PLDN prompt is introduced for Pilot DNs. The new LSNO prompt is used to associate the Pilot DN with a SCL or SSC list. The USE prompt is displayed only if the Pilot DN entered in response to the PLDN prompt has not already been defined.

Table 49
LD 57

Prompt	Response	Description
REQ	CHG NEW	Modify or create data block.
TYPE	FFC	Flexible Feature Codes data block.
CUST	xx	Customer number, as defined in LD 15
FFCT	<CR>	Flexible Feature Confirmation Tone.
CODE	PLDN	Code to be modified or created: Pilot DN.

Table 49
LD 57 (cont'd.)

Prompt	Response	Description
PLDN	xxxx <CR>	Pilot DN: enter Pilot DN to be modified or created; enter carriage return to proceed to next prompt.
USE	SCLC SCLU	USE: enter USE for Pilot DN. Speed Call List Controller. Speed Call List User.
LSNO	xxxx	List Number: enter Speed Call or System Speed Call list number. Speed Call list must exist in LD 18.
Prompt	Response	Description
REQ	OUT PRT	Remove or print a code or data block.
TYPE	FFC	Flexible Feature Codes data block.
CUST	xx	Customer number, as defined in LD 15
CODE	PLDN ALL	Code requested: Pilot DN. All FFC.
PLDN	xxxx <CR>	Pilot DN: enter Pilot DN to be removed enter carriage return to proceed next prompt

Feature operation

To access either a Speed Call List or a System Speed Call List using this feature, dial a speed call access Pilot DN followed by the list entry number.

Pilot DN

Pilot DNs are defined as PLDN Flexible Feature Codes (FFC) via service change LD 57.

Pilot DNs can be used in two ways:

1. If the USE prompt is set to GPHT, the Pilot DN is defined to activate Group Hunting.
2. If the USE prompt is set to SCLC (Speed Call List Controller) or SCLU (Speed Call List User), the Pilot DN is defined to access the Speed Call or System Speed Call lists that are associated with the Pilot DN.

When the response to the USE prompt is SCLC (controller), a station can modify an SCL or SSC list by dialing the speed call access Pilot DN associated with that list, followed by a one- to three-digit list entry number, the number to be entered in the list, and then going on-hook.

Overflow tone is returned if the information entered is not valid. Confirmation tone is returned if the Flexible Feature Confirmation Tone (FFCT) option is set and trailing '#' is dialed, as in existing Flexible Feature Codes (FFCs) operations.

When the response to the USE prompt is SCLU (user), to use any entry in a SCL or SSC list, a station user dials the speed call access Pilot DN associated with the list, followed by the one- to three-digit list entry number.

Speed Call on Private Lines

Contents

This section contains information on the following topics:

- “Feature description” (page 205)
- “Operating parameters” (page 205)
- “Feature interactions” (page 205)
- “Feature packaging” (page 206)
- “Feature implementation” (page 206)
- “Feature operation” (page 206)

Feature description

This feature allows Meridian 1 proprietary telephone users equipped with a Private Line (PVR or PVN) key and a Speed Call (SCL) key to first access a Private Line trunk (by pressing the PVR or PVN key) and then make a speed call (by pressing the SCL key).

Operating parameters

When a Private Line call is made, recognizable Route Access Codes are absorbed from the start of every entry in the Speed Call List (for example, if 7654 is stored as a Speed Call List entry, and 76 is a valid Route Access Code, 76 is absorbed and 54 is outpulsed).

Feature interactions

Automatic Redial, Private Line, Speed Call features

The Automatic Redial (ARDL) feature is activated on a number dialed using the Private Line (PVR/PVN) key and then making a speed call by pressing the Speed Call (SCL) key.

Basic/Network Alternate Route Selection (BARS/NARS)

The BARS and NARS access codes (AC1 and AC2) are not absorbed. If a user has a Speed Call list entry that includes either AC1 or AC2, this entry will not terminate correctly when used on a Private Line. The BARS or NARS access code (AC1 or AC2) will be outpulsed, causing the Public Network to either terminate the call at an unwanted location or reject the call.

Feature packaging

Speed Call on Private Lines is part of base system software and requires Optional Features (OPTF) package 1.

Feature implementation

There are no specific implementation procedures for this feature.

Feature operation

	ACTION	RESPONSE
1	User presses Private Line Ringing (PVR) or Private Line Nonringing (PVN) key.	Trunk is accessed and dial tone is returned.
2	User presses Speed Call key and enters list entry number.	The number stored against this entry is outpulsed.

Speed Call

Contents

This section contains information on the following topics:

- “Feature description” (page 207)
- “Operating parameters” (page 208)
- “Feature interactions” (page 208)
- “Feature packaging” (page 211)
- “Feature implementation” (page 211)
- “Feature operation” (page 214)

Feature description

Speed Call allows you to place calls by dialing a one-, two-, or three-digit code. You can use Speed Call for both internal and external calls. To use Speed Call, Meridian 1 proprietary telephones, and attendant consoles can have a Speed Call key/lamp pair.

Analog (500/2500-type) telephones can activate Speed Call by using Special Prefix (SPRE) or Flexible Feature Codes (FFC).

Analog (500/2500-type) telephones, Meridian 1 proprietary telephones, and attendant consoles can be designated as a Speed Call Controller (SCC) or a Speed Call User (SCU). SCCs can program the numbers to be stored (Speed Call codes) and can use the Speed Call list. SPUs cannot program Speed Call codes; they can only use the Speed Call lists.

Each stored number is assigned a Speed Call code from the Speed Call list. Each list can contain up to 1000 telephone numbers (entries). The maximum number of digits of the telephone number that can be stored in each entry is specified by the customer. Speed Call entries can be 4, 8, 12, 16, 20, 24, 28, or 31 digits long.

Operating parameters

You can define up to 8191 (0-8190) Speed Call lists per system, as long as sufficient memory is available. The maximum includes all combined Speed Call, System Speed Call (SSC), and Hot Line lists.

You can have as many Speed Call lists as you have available key/lamp pairs on any Meridian 1 proprietary telephone, or attendant console. Any number of users can be assigned to a list. Analog (500/2500-type) telephones can access only one Speed Call list. More than one Speed Call Controller can be assigned to each list, but this is not recommended.

A maximum of 31 digits for the telephone number is allowed per Speed Call list entry. An asterisk (*), which indicates a pause, and an octothorpe (#), which indicates end-of-dialing, can be programmed as part of the entry.

The asterisk (*) used to introduce a pause while outpulsing digits is supported on analog and DTI trunks, but not supported on ISDN trunks. On ISDN trunks, if the OPAO feature is enabled, the asterisk (*) is outpulsed as a called party digit.

Speed Call list entries can be defined in LD 18 or by Speed Call Controllers. Speed Call Controllers must know the digit length (one, two, or three) required for the Speed Call codes in each list.

Feature interactions

AC15 Recall: Transfer from Meridian 1

Speed Call and Network Speed Call are supported with the AC15 Recall: Transfer from Meridian 1 on the first transfer, provided that the digits are outpulsed on the trunk after the End-to-End Signaling Delay timer expires. If the far end is not ready, the call will fail because no dial tone is detected by the system.

Additional transfers are supported if the digits are outpulsed without any treatment. For example, the route access code will be outpulsed to the far end. No dial tone detector is assigned and no timer is started so the digits are outpulsed immediately without checking the state at the far end.

Autodial Tandem Transfer

The Speed Call key cannot be used after a Centrex Switchhook Flash or during an established call to send digits out to the far site. The Speed Call key can be used only during the dialing stage.

Automatic Redial

The Automatic Redial (ARDL) feature can be activated on a call using Speed Call (SCL) and System Speed Call (SSU/SSC) keys.

Call Forward/Hunt Override Via Flexible Feature Code

The Call Forward/Hunt Override FFC cannot be stored in a speed call list

Call Park

Speed Call can be programmed to parked calls or access parked calls.

Call Party Name Display

No name information displays during the programming of Speed Call numbers.

Calling Party Privacy

An outgoing trunk call initiated by dialing the Speed Call code will carry the Privacy Indicator if the Calling Party Privacy (CPP) code followed by the normal dialing sequence is stored in the Speed Call Entry represented by the Speed Call code. The CPP code will be counted against the maximum number of digits (currently 31) allowed per Speed Call list entry.

A user can also store the CPP code in the Speed Call Entry (or Speed Call key). An outgoing CPP call can then be initiated by dialing the Speed Call code (or pressing the Speed Call key), followed by manually dialing the digits.

However, existing Speed Call limitations do not allow a user to dial *67 (or anything else) before accessing a Speed Call list entry.

Charge Account and Calling Party Number

Charge account numbers, including the Charge Account access Special Prefix (SPRE) code, can be stored as Speed Call or Autodial numbers. All current limitations of these features apply, such as a maximum of 23 digits per entry, including the access code. An Autodial number or dialed digits can follow, but not precede, a Speed Call number. The digits generated by an Autodial key during feature operation are accepted as Charge Account digits.

Charge Account, Forced

Forced Charge Account numbers (including the Special Prefix [SPRE] code and the Charge Account access code) can be entered in Speed Call lists or stored as Autodial numbers. The digits can also be stored, provided that the account number, regardless of its length, is followed directly by an octothorpe (#).

Enhanced Flexible Feature Codes - Outgoing Call Barring

Digits dialed using Speed Call are checked against the active Outgoing Call Barring (OCB) level. This includes calls made using the Dial Access to Speed Call feature (that is, using Pilot DNs).

China Number 1 Signaling Enhancements

Delay Digit Outpulsing will be denied when dialing is done by way of Speed Call.

Direct Private Network Access

If a Speed Call entry is programmed with a valid Authcode for Authcode Last followed by an octothorpe (#), the existing Authcode Last operation will reject the Authcode as an invalid Authcode. If Authcode Last Retry is defined, the caller will be reprompted for the Authcode.

Last Number Redial

A number dialed using Speed Call will become the Last Number Redial number on all telephones, except the M2317.

Pretranslation

A Speed Call List number should be programmed to allow for Pretranslation. For example, if 9 pretranslates to 99 and you want to reach 99 nxx xxxx, you need to program the number in the Speed Call List as 9 nxx xxxx. When the Speed Call List is used, 9 nxx xxxx is pretranslated at call processing time to become 99 nxx xxxx.

If Pretranslation is enabled for a customer, then when a Speed Call List is assigned to a Pretranslation group within the customer, it cannot be accessed by a Meridian 1 proprietary telephone from within that customer group.

Scheduled Access Restrictions

The System Speed Call features ignore the Class of Service and TGAR access restrictions in a Scheduled Access Restriction schedule, using the Class of Service and NCOS defined in the speed call list.

Speed Call Delimiter

An octothorpe (#) is required as a delimiter following an authorization code if an Electronic Switched Network (ESN) and dialed number are stored as part of the speed call or autodial key. If an octothorpe (#) is not entered then the user receives a fast busy tone. If the MSCD = YES, then the end of dial delimiter must be programmed to something other than an octothorpe (#) in LD 15.

Speed Call Directory Number Access

Speed Call DN Access is an enhancement of the Speed Call List (SCL) and System Speed Call (SSC) List features. Refer to "["Speed Call, System" \(page 217\)](#) for interactions with other features.

Station Specific Authorization Code

Station Specific Authorization Code (SSAU) feature treats stored autodial numbers as if they were entered at the telephone.

Three Wire Analog Trunk - Commonwealth of Independent States (CIS)

Speed Call on an E3W trunk will fail for toll calls. E3W trunks do not wait for the ANI request from the Public Exchange, that is expected to appear after the toll access code is dialed. The Public Exchange will not accept the call due to the failure to receive ANI information.

User Selectable Call Redirection

Speed Call is not supported by User Selectable Call Redirection.

Feature packaging

Speed Call is part of Optional Features (OPTF) package 1, and has no feature package dependencies.

Feature implementation**Task summary list**

The following is a summary of the tasks in this section:

1. [Table 50 "LD 17" \(page 211\)](#)
Set maximum number of Speed Call lists.
2. [Table 51 "LD 18" \(page 212\)](#)
Determine if there are enough memory and disk records for new Speed Call Lists.
3. [Table 52 "LD 18" \(page 212\)](#)
Add a new Speed Call list.
4. [Table 53 "LD 10" \(page 213\)](#)
Assign a Speed Call to an Analog (500/2500-type) telephone.
5. [Table 54 "LD 11" \(page 213\)](#)
Assign a Speed Call list to proprietary telephone.
6. [Table 55 "LD 12" \(page 213\)](#)
Assign a Speed Call list to an attendant console.

Table 50
LD 17

Prompt	Response	Description
REQ	CHG	Change.
TYPE	PARM	System Parameters Datablock
...		
- MSCL	0 -8190	Maximum number of Speed Call lists.

Table 51**LD 18**

Prompt	Response	Description
REQ	COMP	Compute disk and memory.
TYPE	SCL	Speed Call lists.
NOLS	1-8191	Number of lists to be added.
DNSZ	4-(16)-31	Maximum length of DN allowed for Speed Call list.
SIZE	1-1000	Maximum number of entries in Speed Call list.

Compare the output with the MEM AVAIL and DISK AVAIL values output before the REQ prompt.

Table 52**LD 18**

Prompt	Response	Description
REQ	NEW CHG OUT	Add, change, or remove a Speed Call list.
TYPE	SCL	Speed Call data block.
LNSO	0-8190	Speed Call list number.
DNSZ	4-(16)-31	Maximum number of digits in a list entry (that is, 4, 8, 12, 16, 20, 24, 28, or 31).
SIZE	1-1000	Maximum number of entries in the Speed Call list.
WRT	(YES) NO	Data is correct and list may be updated.
STOR	xxx	xxx = list entry number (0-9, 00-99, or 000-999).
	yy...yy	yy = digits to be stored against the entry (must be equal to or less than DNSZ).
WRT	(YES) NO	Data is correct and list can be updated.

The prompt WRT follows prompts SIZE and STOR, asking you to confirm the correctness of the data just entered. If data is correct, enter YES or <CR>. A response of NO after the SIZE prompt causes all data entered to be ignored. A response of NO after the STOR prompt generates a warning message (SCH3213) indicating the data was not stored and must be reentered.

A response of **** aborts the program. Only the last STOR value is lost. All previous values to which WRT was YES are saved.

The following information is output with the WRT prompt, following SIZE:

ADDS: MEM: xxxxx DISK: yy.y

where xxxxx is the amount of protected memory and yy.y is the number of disk records required for the new Speed Call list. Check the MEM AVAIL and DISK REC AVAIL values output before the REQ prompt.

Table 53**LD 10**

Prompt	Response	Description
REQ:	CHG	Change
TYPE:	500	Telephone type
TN	l s c u	Terminal number Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
FTR	SCU yyyy	Speed Call User, list number (0-8190)
	SCC yyyy	Speed Call Controller, list number (0-8190)

Table 54**LD 11**

Prompt	Response	Description
REQ:	CHG	Change
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
TN	l s c u	Terminal number Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
KEY	xx SCU yyyy	System Speed Call User key
	xx SCC yyyy	Speed Call Controller key, where: xx = key number, and yyyy = Speed Call list number (0-8190)
		M2317 must use key 0-10 or key 21.

Table 55**LD 12**

Prompt	Response	Description
REQ	CHG	Change
TYPE	2250	Attendant console type

Table 55
LD 12 (cont'd.)

Prompt	Response	Description
TN	l s c u	Terminal number Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
KEY	xx SCC yyyy	Speed Call Controller, where: xx = key number, and yyyy = list number (0-8190)

Feature operation

To store Speed Call entries from a Meridian 1 proprietary telephone, or attendant console (Controller):

- Without lifting the handset, press **Speed Call**. The indicator flashes.
- Dial the Speed Call code (0-999), followed by the telephone number it represents.
- Press **Speed Call**. If the entry is accepted, the indicator goes off. If the entry is not accepted, the indicator continues flashing.

To make a Speed Call from a Meridian 1 proprietary telephone, or attendant console (User):

- Lift the handset and press **Speed Call** (telephone).
— Select an idle loop key and press **Speed Call** (attendant console).
- Dial the Speed Call code. The telephone number represented by the Speed Call code is dialed automatically.

To store Speed Call entries from an analog (500/2500-type) telephone (Controller):

- Lift the handset and press octothorpe (#) +2 (2500 telephone) or SPRE+75 (analog (500/2500-type) telephone).
- Dial the Speed Call code (0-999), followed by the telephone number it represents. If the entry is accepted, you hear silence. If the entry is not accepted, you hear a fast busy tone.
- Hang up.

Repeat steps 1 through 3 for each entry to be stored.

To make a Speed Call from an analog (500/2500-type) telephone (User):

- Lift the handset and dial #3 (2500 telephone), or SPRE 76 (analog (500/2500-type) telephone).
- Dial the Speed Call code (0-999). The telephone number represented by the Speed Call code is dialed automatically.

In addition to SPRE codes your system may be equipped with Flexible Feature Codes (FFCs).

Speed Call, System

Contents

This section contains information on the following topics:

- “Feature description” (page 217)
- “Operating parameters” (page 218)
- “Feature interactions” (page 218)
- “Feature packaging” (page 220)
- “Feature implementation” (page 220)
- “Feature operation” (page 224)

Feature description

System Speed Call extends the capabilities of Speed Call. In addition to abbreviated dialing, System Speed Call allows a user to temporarily override the telephone’s Class of Service, Trunk Group Access Restrictions (TGARs), and code restrictions.

Analog (500/2500-type) telephones, Meridian 1 proprietary telephones, and attendant consoles can activate System Speed Call by using SPRE or Flexible Feature Codes (FFC).

An analog (500/2500-type) telephone can be designated as a System Speed Call User only (not Controller) and can access one System Speed Call list. Meridian 1 proprietary telephones can be System Speed Call Users (SPRE codes or key access) or Controllers (key access only). Attendant consoles can be System Speed Call Users (dial access only) and System Speed Call Controllers (key access only).

Operating parameters

Up to 8191 (0-8190) Speed Call lists are allowed as long as sufficient memory is available. The new maximum includes all combined Speed Call, System Speed Call and Hot Line lists, 4096 (0-4095) of which can be System Speed Call lists.

System Speed Call lists can have up to 1000 entries and each entry can be up to 31 digits in length.

Restrictions applied to a telephone are ignored only for the origination of a call made through System Speed Call. Restrictions are applied if any call modification is attempted once the call is established.

System Speed Call lists can only be programmed in LD 18 or from telephones or attendant consoles equipped with a System Speed Call Controller key.

The technician can add or copy up to 100 System and regular Speed Call Lists at a time.

Feature interactions

Attendant Administration

System Speed Call lists can be assigned using Attendant Administration.

Authorization Code Security Enhancement

If the Basic Authorization Code (BAUT) or Network Authorization Code (NAUT) package is equipped, a Network Class of Service (NCOS) is assigned to the System Speed Call list. The NCOS of the System Speed Call list replaces the NCOS of the Authorization code or Forced Charge Account code if it increases the Facility Restriction Level (FRL) of the code.

Automatic Redial

The Automatic Redial (ARDL) feature can be activated on a call using System Speed Call (SSU/SSC).

Basic/Network Alternate Route Selection (BARS/NARS)

If the BARS or NARS package is equipped, an NCOS is assigned to the System Speed Call list. The NCOS associated with the System Speed Call list replaces the NCOS of the telephone if it increases the Facility Restriction Level (FRL) of the user.

Calling Party Privacy

An outgoing trunk call initiated by dialing the Speed Call code will carry the Privacy Indicator if the Calling Party Privacy (CPP) code followed by the normal dialing sequence is stored in the Speed Call Entry represented by the Speed Call code. The CPP code will be counted against the maximum number of digits (currently 31) allowed per Speed Call list entry.

A user can also store the CPP code in the Speed Call Entry (or Speed Call key). An outgoing CPP call can then be initiated by dialing the Speed Call code (or pressing the Speed Call key), followed by manually dialing the digits.

However, existing Speed Call limitations do not allow a user to dial *67 (or anything else) before accessing a Speed Call list entry.

Capacity Expansion

Any number from 0 to 4095 can be assigned to a System Speed Call list.

China - Flexible Feature Codes - Outgoing Call Barring

Digits dialed using System Speed Call are checked against the active OCB level.

Flexible Feature Code

With Flexible Feature Code (FFC), a confirmation tone is provided for Speed Call store after the end-of-dial (EOD) string is entered.

Hot Line

When the System Speed Call package is equipped, Hot Line lists have the characteristics and limitations of SSC lists. If the package is not equipped, Hot Line lists function like standard Speed Call lists.

Last Number Redial

A number dialed using a System Speed Call key becomes the Last Number Redial number on all telephones, except the M2317. A number dialed using SPRE-activated System Speed Call becomes the Last Number Redial number on all telephones. The original Class of Service and NCOS restrictions of the telephone apply when using Last Number Redial.

Off-Hook Alarm Security

Off-Hook Alarm Security (OHAS) treatment can apply to these features if the ASTM expires. The Alarm Security Timer may expire for the following reasons:

- A dial tone or interdigit timeout occurs while dialing the speed call access code.
- The Speed Call being accessed has an asterisk (*) causing a three-second delay. If the ASTM is three seconds or less, the OHAS intercept treatment may occur.

Pretranslation

Program a Speed Call List number to allow for Pretranslation. For example, if 9 pretranslates to 99 and you want to reach 99 nxx xxxx, you need to program the number in the Speed Call List as 9 nxx xxxx. When the Speed Call List is used, 9 nxx xxxx is pretranslated at call processing time to become 99 nxx xxxx.

Feature packaging

System Speed Call (SSC) package 34 has no feature package dependencies.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 56 "LD 17" \(page 221\)](#)
Set maximum number of Speed Call lists.
2. [Table 57 "LD 18" \(page 221\)](#)
Compute Speed Call list memory size and disk records.
3. [Table 58 "LD 18" \(page 222\)](#)
Add or change a System Speed Call list.
4. [Table 59 "LD 10" \(page 223\)](#)
Add or change System Speed Call for Analog (500/2500-type) telephones.
5. [Table 60 "LD 11" \(page 223\)](#)
Add or change System Speed Call list for Meridian 1 proprietary telephones.
6. [Table 61 "LD 12" \(page 223\)](#)
Add or change a System Speed Call list for attendant consoles.
7. [Table 62 "LD 20" \(page 224\)](#)

Print Speed Call data.

Table 56

LD 17

Prompt	Response	Description
REQ	CHG	Change.
TYPE	CFN	Configuration Record.
	PARM	System parameters
...		
- MSCL	0-8190	Maximum number of Speed Call lists.

Table 57

LD 18

Prompt	Response	Description
Use this prompt sequence to determine if there is enough memory and disk space for new Speed Call lists. Compare the output with the MEM AVAIL and DISK AVAIL values output before the REQ prompt.		
REQ	COMP	Compute disk and memory.
TYPE	SCL	Speed Call lists.
NOLS	1-8191	Number of lists to be added.
DNSZ	4-31	Maximum length of DN allowed for Speed Call list.
SIZE	1-1000	Maximum number of entries in Speed Call list.

Table 58
LD 18

Prompt	Response	Description
REQ	NEW CHG OUT NEW xx, CPY xx	Add, change, or remove a single speed call list; Add or copy xx lists.
TYPE	SSC SCL	System Speed Call. Speed Call List.
LSNO	0-8190 xxxx yyyy	Number of list to add, where: xxxx = number of list to be copied, and yyyy = number of list to receive copy.
NCOS	0-99	NCOS to be assigned to calls accessing the list.
DNSZ	4-(16)-31	Maximum number of digits in a list entry (that is, 4, 8, 12, 16, 20, 24, 28, or 31).
SIZE	1-1000	Maximum number of entries in the Speed Call list.
WRT	(YES) NO	Data is correct and list may be updated.
STOR	xxx yy...yy	xxx = list entry number (0-9, 0-99, or 0-999). yy = digits to be stored against the entry (must be equal to or less than DNSZ).
WRT	(YES) NO	Data is correct and list may be updated.

The prompt WRT follows prompts SIZE and STOR asking you to confirm the correctness of the data just entered. If data is correct, enter YES or <CR>. A response of NO after the SIZE prompt causes all data entered to be ignored. A response of NO after the STOR prompt generates a warning message (SCH3213) indicating the data was not stored and must be reentered.

A response of "**" aborts the program. Only the last STOR value is lost. All previous values to which WRT was YES are saved.**

The following information is output with the WRT prompt, following SIZE:

ADDS: MEM: xxxx DISK: yy.y

Where xxxx is the amount of protected memory and yy.y is the number of disk records required for the new Speed Call list. Check the MEM AVAIL and DISK REC AVAIL values output before the REQ prompt.

Table 59**LD 10**

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	500	Telephone type.
TN	I s c u	Terminal number
	c u	Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit.
FTR	SSU yyyy	Format for Small System and Media Gateway 1000B where c = card and u = unit.
		System Speed Call user, list number (0-4095).

Table 60**LD 11**

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
TN	I s c u	Terminal number
	c u	Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit.
SSU	yyyy	Format for Small System and Media Gateway 1000B where c = card and u = unit.
KEY	xx SSU yyyy	System Speed Call list number (0-4095) for dial access.
	xx SSC yyyy	System Speed Call user key.
		System Speed Call Controller key, where:
		xx = key number, and
		yyyy = System Speed Call list number (0-4095).
		The M2317 must use key 21.

Table 61**LD 12**

Prompt	Response	Description
REQ	CHG	Change.
TYPE	2250	Attendant console type.
TN	I s c u	Terminal number
		Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit.

Table 61
LD 12 (cont'd.)

Prompt	Response	Description
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
SSU	yyyy	System Speed Call list number (0-4095) for dial access.
KEY	xx SSC yyyy	System Speed Call Controller key, where: xx = key number, and yyyy = System Speed Call list number (0-4095).

Table 62
LD 20

Prompt	Response	Description
Respond to the TYPE prompt with SCL to print regular and System Speed Call lists and pretranslation. Respond to the TYPE prompt with SSL to print the System Speed Call data block.		
REQ	PRT	Print.
TYPE	SCL	Regular and system speed call lists.
LSNO	0-8190	List number for speed call or system speed call print for all lists.
RNGE	xxxx xxxx	Range of all speed call entries (0-1000) to be printed. Print all entries

Feature operation

To store System Speed Call entries from a Meridian 1 proprietary telephone, or attendant console (Controller):

Step	Action
1	Without lifting the handset, press Speed Call . The indicator flashes.
2	Dial the Speed Call code (0-999), followed by the telephone number it represents.
3	Press Speed Call . If the entry is accepted, the indicator goes off. If the entry is not accepted, the indicator remains flashing.
--End--	

To make a System Speed Call from a Meridian 1 proprietary telephone, or attendant console (User):

Step	Action
1	<p>Lift the handset and dial SPRE 73 or press the System Speed Call key (telephone).</p> <p>—OR—</p> <p>Select an idle loop key and dial SPRE 73 (attendant console).</p>
2	<p>Dial the Speed Call code.</p> <p>If the Speed Call number is accepted, the telephone number represented by the Speed Call code is dialed automatically. No confirmation tone is given unless Flexible Feature Code (FFC) is implemented.</p> <p>If the Speed Call number is not accepted, a fast busy signal indicates the number was rejected.</p>

--End--

To make a System Speed Call from an analog (500/2500-type) telephone (User):

Step	Action
1	Lift the handset and dial SPRE 73.
2	<p>Dial the Speed Call code (0-999). The telephone number represented by the Speed Call code is dialed automatically.</p> <p>In addition to SPRE codes your system can be equipped with Flexible Feature Codes.</p>

--End--

The routine to add a call list aborts under the following conditions:

- trying to add a call list whose number is already in use, or
- trying to add multiple call lists when there is insufficient memory.

Speed Call or Autodial with Authorization Codes

Contents

This section contains information on the following topics:

- “Feature description” (page 227)
- “Operating parameters” (page 227)
- “Feature interactions” (page 228)
- “Feature packaging” (page 228)
- “Feature implementation” (page 228)
- “Feature operation” (page 228)

Feature description

This feature is an enhancement to the existing Speed Call and Autodial features. It allows a Speed Call entry to contain an Authorization Code with an associated trunk route or Electronic Switched Network (ESN) access code and dialed number. The digits stored are recorded in Call Detail Recording (CDR), if equipped, for billing purposes.

The Speed Call entry can be one of the following:

- SPRE + 6 + Authorization Code
- SPRE + 6 + Authorization Code + #, or
- SPRE + 6 + Authorization Code + # + ESN access code and dialed number.

Operating parameters

Authorization Code Conditionally Last is not supported.

An octothorpe (#) is required as a delimiter after the Authorization Code if an ESN access code and dialed number are stored as part of the Speed Call or Autodial key. If the octothorpe is not entered, the user receives a fast busy tone. The octothorpe is not stored in the CDR record.

If the system initializes before the Authorization Code is recorded by CDR, the record may be lost.

An M2317 telephone can display up to 31 digits.

For Meridian 1 proprietary telephones, up to 31 digits per Speed Call entry are allowed.

On digit display sets, Authorization Codes cannot be blocked from being displayed.

There is no validation of the Authorization Code until the Speed Call key is activated.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

The following packages are required to implement this feature:

- Basic Authorization Code (BAUT) package 25, or Network Authorization Code (NAUT) package 63.
- Optional features (OPTF) package 1, System Speed Call (SSC) package 34, or Network Speed Call (NSC) package 39.

Feature implementation

An Authorization Code can be entered as part of a Speed Call list.

Feature operation

No specific operating procedures are required to use this feature.

Station Activity Records

Contents

This section contains information on the following topics:

- “Feature description” (page 229)
- “Operating parameters” (page 229)
- “Feature interactions” (page 229)
- “Feature packaging” (page 230)
- “Feature implementation” (page 230)
- “Feature operation” (page 232)

Feature description

When a telephone is configured with Class of Service Call Detail Monitoring Allowed (CDMA) for all incoming and outgoing calls, Station Activity Records are produced. The format of Station Activity Records is identical to other Call Detail Recording (CDR) records, but they have a new type of identifier (D). Existing CDR records are not affected by this new functionality.

Operating parameters

There are no operating parameters associated with this feature.

Feature interactions

Call Redirection

A Station Activity Record is only produced for a telephone designated as CDMA that is involved in a call with a trunk. A Station Activity Record is not generated for any telephone which does not answer the call, regardless of whether it has Class of Service CDMA or CDMD. Any other CDR records generated during call redirection are not affected.

Call Transfer

A Station Activity Record is generated when a telephone with Class of Service CDMA transfers a trunk call. CDR "X" record generation is not affected by this development. The telephone to which the call is transferred also produces a Station Activity Record if it has Class of Service CDMA and answers the call. When the second "D" record is produced (by the telephone to which the call is transferred), the digits field of the "D" record shows the digits dialed by the transferring telephone.

Conference

For a telephone with Class of Service CDMA involved in a call with a trunk, a Station Activity Record is produced only when that telephone conferences in the first party. Conferencing of all subsequent parties does not generate a "D" record. An additional "D" record is produced when the last conferee with Class of Service CDMA connected to the trunk goes on hook. This does not affect any other CDR record generation during a conference.

Internal Call Detail Recording

Internal Call Detail Recording records are produced according to the Class of Service ICDA/ICDD of a telephone. The Station Activity Record enhancement does not affect the ICDR record generation.

Feature packaging

Station Activity Records is package 251 (SCDR).

Dependencies:

- Call Detail Recording (CDR) package 4
- Call Detail Recording on Teletype Terminal (CTY) package 5

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 63 "LD 10" \(page 231\)](#)

Set Class of Service CDMA/CDMD for an analog (500/2500-type) telephone.

2. [Table 64 "LD 11" \(page 231\)](#)

Set Class of Service CDMA/CDMD for Meridian 1 proprietary telephones.

3. [Table 65 "LD 27" \(page 231\)](#)

Set Class of Service CDMA/CDMD for BRI sets.

4. [Table 66 "LD 17" \(page 231\)](#)

Define a CDR link for Call Detail Recording.

5. [Table 67 "LD 15" \(page 232\)](#)

CDR must be enabled for the customer.

Table 63

LD 10

Prompt	Response	Description
REQ:	NEW CHG	New, or change.
TYPE:	500	Analog (500/2500-type) telephone.
...		
CLS	(CDMD) CDMA	CDMA allows Station Activity Records to be generated for the telephone (when the trunk is involved in the call). CDMD denies record generation.

Table 64

LD 11

Prompt	Response	Description
REQ:	NEW CHG	New, or change.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
...		
CLS	(CDMD) CDMA	CDMA allows Station Activity Records to be generated for the telephone (when the trunk is involved in the call). CDMD denies record generation.

Table 65

LD 27

Prompt	Response	Description
REQ	NEW CHG PRT	New, change, or print.
TYPE	DSL	Digital Subscriber Loop.
...		
CLS	(CDMD) CDMA	CDMA allows Station Activity Records to be generated for the telephone (when the trunk is involved in the call). CDMD denies record generation.

Table 66

LD 17

Prompt	Response	Description
REQ	CHG	Change.
TYPE	ADAN	All input / output devices (includes D channels).
USER	CTY	TTY has CTY as the user (for CDR records).

Table 67**LD 15**

Prompt	Response	Description
REQ:	NEW CHG	New, or change.
TYPE:	CDR	Call Detail Recording
CUST		Customer number
	0-99	Range for Large System and CS 1000E system.
	0-31	Range for Small System and Media Gateway 1000B.
- CDR	YES	Call Detail Recording.
- PORT	0-15	The CDR port number for the customer.

Feature operation

No specific operating procedures are required to use this feature.

Station Category Indication

Contents

This section contains information on the following topics:

- “Feature description” (page 233)
- “Operating parameters” (page 233)
- “Feature interactions” (page 234)
- “Feature packaging” (page 234)
- “Feature implementation” (page 234)
- “Feature operation” (page 235)

Feature description

The Station Category Indication (SCI) feature allows an attendant to selectively answer internal attendant Directory Number (DN) calls on a priority basis. Stations are assigned a category, with priority indicated by an Incoming Call Indicator (ICI) lamp at each attendant console. Using the answering priority defined in LD 15, the attendant gives prompt attention to a call presented at a high-priority ICI lamp by selecting the associated ICI key.

Operating parameters

A maximum of seven station categories (1-7) can be assigned.

Calls from SCI 0 stations appear on the dial 0 ICI.

Calls from fully restricted stations appear on the dial 0 fully restricted ICI.

The Station Category Indication (SCI) feature should not be mixed with any other Incoming Call Indicator (ICI) assignment on the same ICI key/lamp pair.

Feature interactions

Centralized Attendant Service

When Centralized Attendant Service (CAS) is active, calls from a remote station to the attendant DN appear on the remote ICI key/lamp pair at the CAS main, regardless of the station SCI category.

Controlled Class of Service

The Controlled Class of Service (CCOS) feature has priority over SCI. A station's SCI category is suppressed when CCOS is active, and calls to the attendant DN carry the CCOS class defined in the database.

Phantom Terminal Numbers (TNs)

SCI cannot be enabled on a Phantom TN.

Feature packaging

Station Category Indication (SCI) package 80 has no feature package dependencies.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 68 "LD 15" \(page 234\)](#)
Add or change a Station Category Indication ICI key/lamp pair for attendant consoles.
2. [Table 69 "LD 10 " \(page 235\)](#)
- Change SCI for analog (500/2500-type) telephones.
3. [Table 70 "LD 11" \(page 235\)](#)
Change SCI for Meridian 1 proprietary telephones.

Table 68
LD 15

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	CDB	Customer Data Block.
CUST		Customer number
	0-99	Range for Large System and CS 1000E system.
	0-31	Range for Small System and Media Gateway 1000B.
ICI	0-19 CA1-CA7	Assign ICI key/lamp pair for SCI.
ICI	0-19 DL0	Dial 0 (calls from telephones in SCI 0).
ICI	0-19 DFO	Fully restricted (call from fully restricted telephones).

Table 69**LD 10**

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	500	Telephone type.
TN	I s c u	Terminal number Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
SCI	0-7	SCI number.

Table 70**LD 11**

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
TN	I s c u	Terminal number Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
SCI	0-7	SCI number.

Feature operation

No specific operating procedures are required to use this feature.

Station Specific Authorization Code

Contents

This section contains information on the following topics:

- “Feature description” (page 237)
- “Operating parameters” (page 238)
- “Feature interactions” (page 238)
- “Feature packaging” (page 238)
- “Feature implementation” (page 238)
- “Feature operation” (page 241)

Feature description

Station Specific Authorization Code (SSAU) enables the system administrator to control the level of authorization code access on a per telephone basis. SSAU applies to analog (500/2500-type) telephones and Meridian 1 proprietary telephones; it does not apply to Basic Rate Interface (BRI) telephones.

Station Specific Authorization Code provides three levels of authorization code access:

- Authcode Unrestricted (AUTU)
An AUTU telephone has no authorization code access limitations. Any authorization code is accepted and processed normally.
- Authcode Restricted (AUTR)
An AUTR telephone can enter up to six assigned authorization codes. The authorization code entered must match one of the preassigned codes. Any other authorization code will be rejected and the call will not be completed.
- Authcode Denied (AUTD)

An AUTD telephone has no access to authorization codes. Any authorization code will be rejected and the call will not be completed.

Operating parameters

The same authorization code can be assigned to more than one AUTR telephone.

There is cross-checking between LDs 10 and 11, which define a station specific authorization code, and LD 88, which ensures that the user has entered a valid authorization code.

LD 88, which is used to delete an existing authorization code, does not check if the authorization code is assigned as a station specific authorization code before the deletion.

The Station Specific Authorization Code feature does not apply when the authorization code is prompted from a tandem node.

Feature interactions

Attendant Administration

Station Specific Authorization Code does not support Attendant Administration.

Authorization Code Security Enhancement

Users cannot freely enter authorization codes from telephones that have AUTR or AUTD Class of Service.

Autodial, Speed Call

The SSAU feature treats stored autodial numbers as if they were entered at the telephone.

Feature packaging

Station Specific Authorization Code (SSAU) is package 229, which requires Basic Authorization Codes (BAUT) package 25.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 71 "LD 88" \(page 239\)](#)
Create Authorization Code data block.
2. [Table 72 "LD 88" \(page 239\)](#)
Create an Authorization Code Table.
3. [Table 73 "LD 10 and LD 11" \(page 240\)](#)

Activate SSAU. Use LD 10 or LD 11 according to telephone type.

4. [Table 74 "LD 20" \(page 240\)](#)

Set Security Password.

Table 71
LD 88

Prompt	Response	Description
REQ	NEW	Create.
TYPE	AUB	Authcode data block.
CUST	xx	Customer number, as defined in LD 15.
SPWD	xxxx	Secure data password.
ALEN	1-14	Number of digits in authcodes.
ACDR	YES NO	Activate CDR for authcodes. There is no default.
RANR	0-511	RAN route number for "Authcode Last" prompt (NAUT).
	0-127	Range for Large System and CS 1000E system.
CLAS	(0)-115	Class code value assigned to authcode (NAUT).
COS	aaa	Class of Service.
TGAR	(0)-31	Trunk Group Access Restrictions.
NCOS	(0)-99	Network Class of Service.
AUTO	YES NO	Automatically generate authcodes.
- SECR	0-9999	Security password (NAUT).
- NMBR	1-9999	Number of authcodes to be generated.
- CLAS	(0)-115	Class code value assigned to authcode (NAUT).

Table 72
LD 88

Prompt	Response	Description
REQ	NEW	Create.
TYPE	AUT	Authorization Code Table.
CUST	xx	Customer number, as defined in LD 15.
SPWD	xxxx	Secure data password.
CODE	xxxx	Authcode (number of digits must equal ALEN).
CLAS	(0)-115	Class code value assigned to authcode (NAUT).

Table 73
LD 10 and LD 11

Prompt	Response	Description
REQ:	NEW CHG	Add, or modify.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
CLS	(AUTU) AUTR AUTD	Authcode unrestricted. Authcode restricted. Authcode denied.
MAUT	(NO) YES	Modify assigned authcodes for this telephone.
SPWD	xxxx	Correct security password (if one is defined).
AUTH	x nnnn X x	x is in the range of 1-6; nnnn is the assigned authcode (a valid authorization code defined in LD 88). X x deletes an assigned authcode.
Changing an AUTR telephone to AUTU or AUTD clears all assigned authcode information previously defined for that telephone.		

Table 74
LD 20

Prompt	Response	Description
REQ:	PRT	Print.
TYPE:	xxx	Type of data block.
TN	I s c u c u	Terminal number. Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit. Format for Small System and Media Gateway 1000B where c = card and u = unit.
CDEN	SD DD 4D 8D	Card density requested.
CUST	xx	Customer number, as defined in LD 15.
SPWD	xxxx	Valid Security data password to display SSAU.
Once SPWD is prompted, a valid security data password as defined in the customer data block is required for displaying Authorization (AUTH) information for sets with Class of Service Authorization Code. Sets with Class of Service Authcode Unrestricted (AUTU) and Authcode Denied (AUTD) do not have AUTH information for display. Entering of a carriage return at the SPWD prompt will result in the AUTH information being skipped during printing.		

In LD 20, Security Password (SPWD) will not be prompted if any of the following conditions exists:

- the Station Specific Authcode Package 220 is not equipped,
- the response to the TN prompt is more than one specific TN,

- the response to the TN prompt is a unique TN, but the customer of this TN does not have a security data password defined,
- the response to the CUST prompt is not a specific customer, or
- the response to the CUST prompt is a specific customer number but the customer does not have a security password defined.

Feature operation

After an authorization code is entered, the Station Specific Authorization Code feature determines if the telephone is allowed to use the entered code. If the authorization code is not allowed on that telephone, the existing invalid authorization code treatment occurs. Otherwise, normal authorization code processing occurs.

Station-to-Station Calling

Contents

This section contains information on the following topics:

- “Feature description” (page 243)
- “Operating parameters” (page 243)
- “Feature interactions” (page 243)
- “Feature packaging” (page 243)
- “Feature implementation” (page 244)
- “Feature operation” (page 244)

Feature description

Station-to-Station Calling allows direct dialing between station users in the same customer group without the assistance of the attendant.

Operating parameters

There are no operating parameters associated with this feature.

Feature interactions

Manual Line Service

If a single line telephone has been assigned a Manual Line Class of Service, the telephone automatically rings the attendant when it goes off-hook.

Private Lines

You must go over the public network to reach a Private Line. The software PRDN is not meant to be dialed directly.

Feature packaging

This feature is included in base system software.

Feature implementation

There are no specific implementation procedures for this feature.

Feature operation

No specific operating procedures are required to use this feature.

Stored Number Redial

Contents

This section contains information on the following topics:

- “Feature description” (page 245)
- “Operating parameters” (page 245)
- “Feature interactions” (page 246)
- “Feature packaging” (page 247)
- “Feature implementation” (page 247)
- “Feature operation” (page 249)

Feature description

Stored Number Redial (SNR) allows telephones and attendant consoles to store one previously dialed number of 4 to 31 digits for automatic redialing.

Depending on the type of telephone, the number can be stored before a call is placed, during Ringback, while the number is busy, or during an active call. On attendant consoles, the number can be stored only before a call is placed. Stored Number Redial (SNR) is not supported on M2317 telephones or analog (500/2500-type) telephones serving as Private Lines.

Operating parameters

When a number is stored, it overwrites any previously stored number.

Storage is limited to one number per analog (500/2500-type) telephone and one number per SNR key. When a call is established through a Tandem TIE Trunk Network (TTTN), the user is required to pause for dial tone. When you store a number using SNR, automatic redialing may fail because required delays are not added. It is possible to include delays in

the outpulsing by dialing the asterisk (*) in the original digit string where dial tone is expected. Each asterisk (*) signifies a three-second delay in outpulsing.

The asterisk (*) used to introduce a pause while outpulsing digits is supported on analog and DTI trunks, but not supported on ISDN trunks. On ISDN trunks, if the OPAO feature is enabled, the asterisk (*) is outpulsed as a called party digit.

The three-second delay is not available from a 500-type telephone.

During the stored Number Redial (SNR) programming mode, if the user attempts to store more digits than the maximum number defined for the telephone or console, SNR programming is canceled and overflow tone is returned. During an active call on a Meridian 1 proprietary telephone, if a user attempts to store more digits than the specified limit, the SNR operation fails, the previously stored number remains unchanged, and a failure indication is not given. The SNR indicator remains off.

For analog (500/2500-type) telephones, in order to store a number dialed to a busy DN, the maximum length of the stored number must be at least five digits (see prompt FTR RDL xx in LD 10).

Feature interactions

Authorization Code Security Enhancement, Charge Account, Forced Charge Account

The Authorization, Charge Account, and Forced Charge Account codes are not stored. To store a code, dial the code prior to using Stored Number Redial to dial the call.

Automatic Redial

The Automatic Redial (ARDL) feature can be activated on a call using the Stored Number Redial (RDL) key.

Calling Party Privacy

During Stored Number Redial (SNR) programming, a user can store the Calling Party Privacy (CPP) code followed by the normal dialing sequence in the SNR data space. Outgoing calls originated by the SNR feature will send the Privacy Indicator to the far end. The CPP code will be counted against the maximum number of digits (currently 31) allowed by the SNR feature.

During an active call on a Meridian 1 proprietary telephone, the Stored Number Redial feature will store the CPP code in the SNR data space if the CPP code was included in the number dialed by the originator. The outgoing redialed calls will send the Privacy Indicator to the far end.

China Number 1 Signaling Enhancements

Delay Digit Outpulsing will be denied when dialing is done by way of Stored Number Redial.

End-to-End Signaling

End-to-End Signaling (EES) activates after a call to a trunk is established by expiration of the end-of-dial timer. Further digits dialed are not stored by the SNR feature once it is in EES mode.

Group Hunt

A Pilot DN will be stored as a Stored Number Redial (SNR) number when it is dialed directly.

Intercept Computer Dial from Directory - Post-dial Operation

An attendant can dial an extension from the Intercept Computer, and then press the Stored Number Redial key to store the called number (following the rules of the Stored Number Redial feature).

Multi-Party Operations

For analog (500/2500-type) telephones, the Last Number Redial/Stored Number Redial feature can be used when normal or special dial tone is received. The last number redialed that can be stored is the first call of a consultation connection, and can be stored only after the connection is completely released.

Feature packaging

Stored Number Redial (SNR) package 64 has no feature package dependencies.

Feature implementation**Task summary list**

The following is a summary of the tasks in this section:

1. [Table 75 "LD 10" \(page 247\)](#)
Add or change SNR for Analog (500/2500-type) telephones.
2. [Table 76 "LD 11" \(page 248\)](#)
Add or change SNR for Meridian 1 proprietary telephones.
3. [Table 77 "LD 12" \(page 248\)](#)
Add or change SNR for attendant consoles.

Table 75
LD 10

Prompt	Response	Description
REQ:	CHG	Change.

Table 75
LD 10 (cont'd.)

Prompt	Response	Description
TYPE:	500	Telephone type.
TN		Terminal number
	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
CLS	(XFD) XFA	Call Transfer (denied) allowed.
FTR	RDL xx	Activate SNR, where: xx = the maximum number of digits that can be stored (that is, 4, 8, 12, (16), 20, 24, 28, 31).

Table 76
LD 11

Prompt	Response	Description
REQ	CHG	Change.
TYPE	a...a	Telephone type. Type ? for a list of possible responses.
TN		Terminal number
	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
KEY	xx RDL yy	Add an SNR key, where xx = key number, and yy = the maximum number of digits that can be stored (that is, 4, 8, 12, (16), 20, 24, 28, 31).

Table 77
LD 12

Prompt	Response	Description
REQ	CHG	Change.
TYPE	2250	Attendant console type.
TN		Terminal number
	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.

Table 77
LD 12 (cont'd.)

Prompt	Response	Description
KEY	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
	xx RDL	Add an SNR key.

Feature operation

Attendant consoles, Meridian 1 proprietary telephones

To store a number prior to dialing (for attendant consoles, and Meridian 1 proprietary telephones):

Without lifting the handset, press **Stored No.**

- Dial the number.
- Press **Stored No.** again. The number is stored, replacing any previous one.

To store a number during Ringback, while the number is busy, or during an active call (for Meridian 1 proprietary telephones only):

- Press Stored No.

To call a stored number:

- Press **DN** (Meridian 1 proprietary telephones) or the Loop key (consoles).
- Press **Stored No.** The number is dialed.

Analog (500/2500-type) telephones

To store a number prior to dialing:

- Lift the handset.
- Dial SPRE 78, or the Flexible Feature Code (FFC) assigned for SNR.
- Dial the number to be stored.
- Hang up. The number is stored, replacing any previous one.

To store a number before a call is placed, during Ringback, while the number is busy, or during an active call:

- Flash the switchhook or press **LINK**.
- Dial SPRE 78, or the FFC assigned for SNR.

To call a stored number:

- Lift the handset.
- Dial SPRE 79, or the FFC assigned for SNR. The number is dialed.

Supervised Analog Lines

Contents

This section contains information on the following topics:

- “Feature description” (page 251)
- “Operating parameters” (page 252)
- “Feature interactions” (page 253)
- “Feature packaging” (page 254)
- “Feature implementation” (page 254)
- “Feature operation” (page 255)

Feature description

The Supervised Analog Lines feature provides two types of call supervision signaling capabilities: battery reversal answer/disconnect supervision; and hook flash disconnect supervision. These forms of supervision are provided to terminal devices connected to analog ports in the system.

Battery Reversal Supervision

Battery reversal answer and disconnect supervision signaling is used for calls originating from the terminal device. It provides both far-end (that is, the called party) answer supervision and far-end disconnect supervision signals to the terminal device. It does not apply to incoming calls terminating at the terminal device.

In the idle state, the analog port in the system provides ground signal on the tip lead and battery on the ring lead. This polarity is maintained during dialing and ringing at the far end. When the far end answers, the battery and ground connections are reversed. The reverse battery is maintained while the call is established. When the far end disconnects, the battery and ground connections are reverted to the idle state to signal that the far

end has disconnected. If the terminal device disconnects first, the system sends the Deactivate Battery Reversal Scan Signal Distribution (SSD) message to the firmware after receiving the on-hook status to revert the polarity to its idle state.

Two types of battery reversal are supported. Battery Reversal for Absolute Answer Only provides an answer supervision signal to the terminal device only when the system detects an absolute answer. Battery Reversal for Absolute and Assumed Answer provides an answer supervision signal to the terminal device even when an assumed answer is detected and the far end is not capable of indicating definite answer (for example, an outgoing call on an unsupervised loop start trunk).

Hook Flash Disconnect Supervision

Hook flash disconnect supervision is used for incoming calls terminating at the terminal device. The disconnect signal is indicated by the removal of the ground connection to the tip lead for a specific period of time, which is provided by firmware ranging from a minimum of 10 milliseconds to a maximum of 2.55 seconds. The analog port is held busy for incoming calls while hook flash is in progress.

Operating parameters

This feature applies to Intelligent Peripheral Equipment that support the Supervised Analog Line feature only.

Supervised Analog Lines require NT1R20AB off premise line cards. However, NT5D11AA or NT5D14AA line cards may also be used.

Disconnect supervision is not provided to the terminal device if the system does not receive any indication of the far end releasing.

If the system does not receive any answer indication, and answer supervision is not extended to the terminal device following an assumed answer condition, disconnect supervision cannot be extended when the far end disconnects.

If the Battery Reversal Supervision feature is configured for an analog line on an analog card that does not support battery reversal, the battery reversal SSD messages from the system software are ignored by the analog card firmware. In this case, no battery reversal signal is extended to the terminal device.

If the Hook Flash Disconnect Supervision feature is configured for an analog line on an analog card that does not support hook flash, the hook flash SSD messages from the system software are ignored by the analog line card firmware. In this case, no hook flash signal is extended to the terminal device.

If the system initializes while an outgoing call originating from an analog line is established and battery reversal is activated, unprotected data is lost. In this case, battery reversal remains activated when the call is cleared down by either party. However, the line status is reverted to normal when the next outgoing call is answered and then cleared down.

If the hook flash timer is set equal to or greater than the on-hook timer, activation of the hook flash disconnect signal also causes the card to send an on-hook message and then an off-hook message to the system. In this case, if the user remains off-hook after the far end disconnects, dial tone is received and an outgoing call can be initiated.

Feature interactions

Call Transfer

If more than one active call is extended to an analog line, the call type associated with an analog line is determined by the first active call. The call type is assumed to be incoming and hook flash supervision applies if a terminal device answers an incoming call from an idle state. If the terminal device performs a switch hook flash to put the first party on hold and initiates a consultation call, the Battery Reversal feature is not supported; no battery reversal answer signal is extended to the terminal device when the second party answers.

If the first party disconnects while the terminal device is connected to the second party, no disconnect supervision is extended to the terminal device. However, hook flash disconnect supervision is extended to the terminal device when the second party disconnects (that is, a disconnect supervision signal is sent only when the last party connected to the terminal disconnects).

If a terminal device originates an outgoing call, battery reversal answer supervision is extended when the called party answers. The polarity of the line remains reversed when the terminal device performs a switch hook flash and then initiates a consultation call to a second party. The analog line is reverted to normal polarity when the terminal device completes the transfer and drops out or when the last of either the held party or the consultation party disconnects.

Conference

If a terminal device answers an incoming call and then initiates a conference, no battery reversal answer supervision signal is extended to the terminal device when new parties of the conference answer. However, a hook flash disconnect supervision signal is extended to the terminal device when the last party in the conference disconnects.

If a terminal device initiates a conference, battery reversal answer supervision is extended to the terminal device when the first party answers. No polarity change is made when additional parties are added to the conference. The polarity is reverted to normal when the terminal device disconnects or when the last party in the conference disconnects.

Multi-Party Operations

As in the cases with Call Transfer and Conference, the call type of the first active call determines whether battery reversal or hook flash supervision applies. Also, supervision signaling is not supported for the second call. A disconnect supervision signal is extended only when the last party disconnects.

Feature packaging

This feature is included in base system software.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 78 "LD 10" \(page 254\)](#)
Enable battery reversal supervision.
2. [Table 79 "LD 10" \(page 255\)](#)
Enable hook flash disconnect supervision.

Table 78
LD 10

Prompt	Response	Description
REQ:	NEW CHG	Add, or change.
TYPE:	500	Telephone type.
TN	I s c u	Terminal number
	c u	Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit.
		Format for Small System and Media Gateway 1000B where c = card and u = unit.
...		
FTR	OSP (1)	Outgoing call supervision. Answer and disconnect supervision for outgoing calls with absolute and assumed answer indication. If the numeric parameter is not entered and the saved value is null, it is defaulted to 1. Otherwise it remains unchanged.

Table 78
LD 10 (cont'd.)

Prompt	Response	Description
	OSP 2	Answer and disconnect supervision for outgoing calls with absolute answer supervision only.
	XOSP	Enter XOSP to disable battery reversal answer and disconnect supervision.

Table 79
LD 10

Prompt	Response	Description
REQ:	NEW CHG	Add, or change.
TYPE:	500	Telephone type.
TN	I s c u	Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
...		
FTR	ISP 1...(75)...255	Enable hook flash disconnect supervision with flash timer in 10 millisecond units. If the numeric parameter is not entered and the saved value is null, it is defaulted to 75. Otherwise it remains unchanged.
	XISP	Enter XISP to disable hook flash disconnect supervision.

Respond to the FTR prompt in LD 10 with OSP 1, and then with ISP 1...(75)...255 to enable both battery reversal supervision and hook flash disconnect supervision.

Feature operation

No specific operating procedures are required to use this feature.

Telelink Mobility Switch 1

Contents

This section contains information on the following topics:

- “Feature description” (page 257)
- “Operating parameters” (page 259)
- “Feature interactions” (page 261)
- “Feature packaging” (page 264)
- “Feature implementation” (page 265)
- “Feature operation” (page 268)

Feature description

The Telelink Mobility Switch 1 feature allows a system in conjunction with the Mobility Control Point (MCP) application to deliver a call from the Public Switched Telephone Network (PSTN) to a portable telephone subscriber. The portable telephone subscriber does not need to have a telephone physically resident in the system. A unique personal Directory Number not related to a physical termination is assigned for each subscriber of a portable. This unique personal directory number is defined as a Dialed Number Identification Services (DNIS) number within the system switch. Digit conversion is used to translate the incoming DNIS number to a Controlled DN (CDN). The CDN contains the Application Module Link (AML) number that connects the system to the MCP application.

When a call comes to the system (acting as the mobility switch) from the PSTN via a DNIS Incoming Digit Conversion (IDC) trunk, the call is terminated to a CDN by the system software through IDC operation. The last few dialed digits are saved as a DNIS (subscriber identity) number.

A CDN can be operated in controlled or default mode. If in controlled mode, call treatment is controlled by the MCP application. If in default mode, call treatment is handled by the system software and default treatment is given to the call.

When a Personal Communications Service (PCS) call terminates to a CDN which is in the controlled mode, the system will notify the MCP application by providing the call's incoming route and DNIS (subscriber identify) number. This enables the MCP application to ascertain which subscriber the caller desires to reach.

The MCP application has a table containing the last zone in which each subscriber is registered, so that the MCP application can send a message to the correct zone to find out the idle/busy status of the portable telephone subscriber.

If a subscriber is busy or unable to answer the call, the MCP application will request the system (acting as a mobility switch) to either return busy or overflow tone to the caller. If the called party has subscribed to a voice messaging service, the MCP can request the system (acting as a mobility switch) to allow the caller to leave a voice message. Meridian Mail can provide a busy tone or a no answer greeting to the caller (for example, party X is busy, would you like to leave a message?)

If the called party is idle, the MCP application will request the system (acting as a mobility switch) to optimally give ringback, provide a Recorded Announcement (RAN) or give silence to the caller, while the MCP application requests the system to make an outgoing call that will be used to alert the called party that an incoming call is waiting. This outgoing call is initiated from a phantom TN. The phantom TN does not need a physical line connection or telephone in the system. The phantom TN needs to be assigned as an associated telephone so that the MCP application will get status messages regarding the state of the phantom telephone. The public number of this outgoing call will be provided by a Zone Controller (ZC). The ZC reserves this incoming line which is connected to the public number.

When the phantom call is received on the reserved line, the ZC alerts the called party's portable. If MCP has requested silence for the call, then at this time the MCP will request ringback treatment for the call. Once the phantom call is answered by the subscriber, the ZC notifies the MCP application. Subsequently, the MCP application requests the system to merge the two related calls (an incoming call in the CDN queue and an outgoing call to the called party), so that the caller of the incoming call and the called party can speak to each other.

When an incoming call terminates to a CDN that is in default mode, the system (acting as a mobility switch) allows the caller to leave a voice message for the called party or give overflow tone to the caller when the call ceiling is exceeded. The CDN will be in default mode under abnormal conditions such as the AML, MCP or Application Programmable Interface (API) going down.

The Mobility Switch will also provide centralized voice prompts in lieu of zones if an exception condition is encountered when a portable is attempting to make an outgoing call.

Operating parameters

Small Systems are not supported due to the phantom TN loop capacity.

There will be a 3 DB loss on a DTI trunk when a Digital Trunk Interface (DTI) trunk is involved in a merge call, and a 0 DB loss on a Primary Rate Interface (PRI) trunk when a PRI trunk is involved in a merge call. It is therefore recommended that a PRI trunk should be used on the Mobility Switch instead of a DTI trunk.

Calls to subscribers without physical sets on the system must be originated from DNIS routes.

The MCP application should request Force Overflow to an incoming call when the DNIS information is not present in an AML-ICC message.

This feature is supported for North American markets only.

ACD-C or ACD-D reports are not a requirement of this feature. Operational measurements of PCS calls are supported by the MCP application.

External calls coming to a CDN with Value Added Server Identification (VASID) connected to the MCP application from a DID (Digital or ISDN) trunk will only be supported by this feature. For this reason disconnect supervision will be guaranteed to be returned to the system (acting as a mobility switch) when the call is disconnected.

This feature only supports TIE, CO ground start (analog, digital or ISDN) trunks as the outgoing trunk of a phantom call with ZC as the destination. For this reason, disconnect supervision must be obtained from the far end when the call is disconnected by the far end.

Combination of CDNs and ACD-DNs (Interactive Voice Response-DN) cannot exceed 240 per each customer on the system (acting as a mobility switch).

The maximum number of routes cannot exceed 512.

The maximum number of IDC/New Flexible Code Restriction (NFCR) Translation Tables per customer cannot exceed 255.

Due to the Federal Communications Commission (FCC) ruling, answer supervision is required to be returned if a Give Silence or Give Music is provided as a first call treatment to a PCS (incoming DID) call as per current operation.

If the system (acting as a mobility switch) initializes, all calls waiting in the CDN queues will be lost. The AML-INIT message will be sent to applications when an initialization occurs. When the MCP application receives an INIT message from the system (acting as a mobility switch), it erases information on existing calls.

A maximum of five Device Groups (DGRPs) will be supported per customer. An Associated Set (AST) Meridian 1 proprietary telephone with Idle Terminal for Third Party Application (ITNA) enabled can only be grouped to one DGRP.

The originator of an outgoing phantom call must be a phantom TN which is an AST Meridian 1 proprietary telephone with ITNA enabled.

An attendant telephone and a Basic Rate Interface (BRI) telephone will not be allowed to merge a call to another telephone or trunk.

When two trunks are joined, at least one trunk must have disconnect supervision.

The Application Module (AM Base) that interfaces with the MCP application cannot control more than one application (that is, MCP and Customer Controlled Routing applications are not supported).

A call that is initiated from the phantom telephone must be in established state, before it can be merged with the caller. If answer supervision is defined for the outgoing trunk, the call from the phantom telephone will be put in established state when the answer supervision answer is returned to the system (acting as a mobility switch). If answer supervision is not defined for the outgoing trunk, the call from the phantom telephone will be put in established state when the End-of-dialing timer has expired (128-32,640 msecs. after the last digit has been sent out).

If answer supervision is not defined for the outgoing trunk to which the phantom trunk is connected, it is possible that a random call may beat the phantom call to the reserved line and the caller will be given a busy tone.

If answer supervision is defined for the outgoing trunk, it is possible that the PSTN might not return the answer supervision signal to the system. If answer supervision is not returned, the system will not allow the phantom telephone call to be merged to the caller.

If answer supervision is defined for the outgoing trunk, it is possible that the answer supervision signal could be significantly delayed across the PSTN if the signal goes through many tandem Central Offices. This causes a subsequent delay between the time the subscriber answers the portable and the time when the incoming call is connected.

No Message Waiting Indication will be sent to the MCP application when a caller has left a voice message.

The MCP application will not know if there is an invalid mailbox (Treatment DN) used to connect to Meridian Mail.

The MCP application must return a dialable number to the system (acting as a mobility switch) to launch the outgoing call to the Zone Controller. The dialable number includes the ESN access code if necessary.

If 1+ dialing is required at the first Central Office that the phantom call goes to from the system, it should either be provided by the MCP application or inserted via digit manipulation on the mobility switch.

Enhanced Serial Data Interface (ESDI) (QPC 513 vintage G or later) or Multi-purpose Serial Data Link (MSDL) (NT6D80AA) is required to connect the system to the AM or a host.

Feature interactions

The following features interact with the Telelink Mobility Switch 1 feature:

- Report Control
- Print CDN Parameters and Options Command
- CNTL Command (determines whether CDN is in controlled mode)
- DFDN Command (sets default of ACD-DN)
- CEIL Command (controls ceiling of the CDN)
- Supervisor Control of Queue Size
- Overflow by Count
- Attendant Extension
- Attendant Recall
- Network ACD (NACD)

- Timed Overflow and Enhanced Overflow
- Display Waiting Calls (DWC key)
- Night Service
- Transition Mode via the Night Service key
- Night Mode via the Night Service key
- Incoming Digit Conversion
- Night Key Digit Manipulation
- Call Forward No Answer
- Call Forward No Answer (Second Level)
- Call Forward All Calls
- Internal Call Forward
- Feature Invocation Messages
- Hunting
- Call Forward Busy
- Remote Call Forward
- Attendant and Network Wide Remote Call Forward
- Network Call Redirection
- Call Forward Override
- Trunk Optimization
- Call Transfer
- Call Transfer – By Interactive Voice Response Unit
- Conference
- Conference – By Interactive Voice Response Unit
- No Hold Conference
- Calling Line Identification
- Basic Rate Interface
- Incremental Software Management
- PBS Set Line Disconnect
- Application Module Link Enhancements
- NCOS Restrictions
- Time-of-day Routing
- Expensive Route Warning Tone

- Off-hook Queuing
- Call Back Queuing
- Remote Virtual Queuing
- Authcode Last
- Equal Access
- 1+ Dialing
- Interchangeable Numbering Plan Area
- Inter Digit Pretranslation
- Free Call Area Screening
- New Flexible Code Restriction
- Call Forward on DumpSysload
- Flexible Numbering Plan
- Multi-party Operation
- Priority Override
- Group Hunt
- Virtual Network Services
- Originator Routing Control, and
- Enhanced Night Service.

The following are a list of features that interact with the Merge Call aspect of this feature:

- Tenant-to-tenant Access
- Class of Service Restrictions
- Network Class of Service (NCOS) Restrictions
- Trunk Group Access Restrictions
- Schedule Access Restrictions
- Trunk Barring
- Feature Group D
- Attendant Barge-in
- Attendant Break-in
- Attendant Busy Verify
- Transfer
- Conference

- No Hold Conference
- Call Waiting
- Internal Call Waiting
- Group Call
- Voice Call
- Call Park
- Station Camp-on
- Dial Intercom
- ACD-DN key
- ACD Emergency/Answer Emergency keys
- ACD Call Agent/Answer Supervisor keys
- ACD Summon Supervisor/Answer Agent keys
- Single Call Arrangement DN keys
- Multiple Call Arrangement DN keys
- HOT Line
- Private Line
- Integrated Service Access Routes
- Integrated Signaling Link
- Application Module Link Unsolicited Status Message, and
- Application Module Link Call Abandoned Message, and Digit Display.

Feature packaging

This feature is included in base system software.

- Automatic Call Distribution, Package B (ACDB) package 41
- Network Alternate Route Selection (NARS) package 58
- Command Status Link (CSL) package 77
- Dialed Number Identification Services (DNIS) package 98
- Incoming DID Digit Conversion (IDC) package 113
- Application Module Link (AML) package 153
- Meridian Link Module (MLM) package 209
- Enhanced ACD Routing (EAR) package 214
- Enhanced Call Treatment (EACT) package 215

- Hold in Queue for Interactive Voice Response (IVR) package 218
- Call Identification (CID) package 247
- Phantom Terminal Number Operation (PHTN) package 254

The following packages are not required, but provide additional functionality:

- Call Detail Recording (CDR) package 4
- Office Data Administration System (ODAS) package 20
- ACD Load Management (LMAN) package 43
- Multi-user Login (MULI) package 242

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 80 "LD 11" \(page 265\)](#)
Configure a phantom loop.
2. [Table 81 "LD 17" \(page 266\)](#)
Create a phantom superloop.
3. [Table 82 "LD 97" \(page 267\)](#)
Administer a service change to a CDN data block.
4. [Table 83 "LD 23" \(page 267\)](#)

Table 80
LD 11

Prompt	Response	Description
REQ:	NEW CHG MOV OUT END CHG	New, change, move, out, end, or change.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
CUST	xx	Customer number, as defined in LD 15
TN	I s c u	Terminal number
	c u	Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit.
		Format for Small System and Media Gateway 1000B where c = card and u = unit.
		If I is a phantom loop and the CSL package is not equipped, an error message will be returned.
TOTN		Destination Terminal Number; prompted when REQ = MOV.

Table 80
LD 11 (cont'd.)

Prompt	Response	Description
CFTN	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
	l s c u	Copy From Terminal Number; prompted when REQ = CPY.
	c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
SFMT	AUTO	DNs and TNs are assigned automatically.
	DN	User enters the DN for each new telephone.
	TN	User enters the TN for each new telephone.
	TNDN	User enters DN and TN for each new telephone.
CDEN	YES	Prompted when REQ = CPY.
DES		Single, double or quad density (not prompted for superloop).
...		ODAS designator.
CLS	(NDD) (DNDD) ...	Class of service options. No digit displayed. Dialed name display denied. Block SPV and AGN if this TN is on a phantom loop.
AST	xx yy	Associate telephone assignment for Meridian Link application.
IAPG	(0)-15	Meridian Link Unsolicited Status Message (USM) group.
ITNA	(NO) YES	Idle TN for the third party application.
DGRP	(1)-5	Device group
...		
KEY	xx SCR yyyy	Single call ringing DN key.

Table 81
LD 17

Prompt	Response	Description
REQ	CHG END	Change, or end.
TYPE	CFN	Configuration Record.
	CEQU	Gate opener.
CEQU	YES	Change Common Equipment parameters. This will be prompted if TYPE = CFN.
	...	

Table 81
LD 17 (cont'd.)

Prompt	Response	Description
- TERM	0-159 0-159... [X] 0-159 [C] 0-159...	Single density local terminal loops. Precede loop number with X to remove. Precede the loop number with C to create a phantom loop.
- REMO	0-159 0-159... [X] 0-159	Single density remote terminal loops. Precede loop number with X to remove.
- TERD	0-159 0-159... [X] 0-159 [C] 0-159...	Double density local terminal loops. Precede loop number with X to remove. Precede the loop number with C to create a phantom loop.
- REMD	0-159 0-159... [X] 0-159	Double density terminal loops.
- TERQ	0-159 0-159... [X] 0-159 [C] 0-159...	Quad density local terminal loops. Precede loop number with X to remove. Precede the loop number with C to create a phantom loop.
- REMQ	0-159 0-159... [X] 0-159	Quad density remote terminal loops. Precede loop number with X to remove.

Table 82
LD 97

Prompt	Response	Description
REQ	CHG	Change.
TYPE	SUPL	Superloop data.
SUPL	0-156 [X] 0-156 [C] 0-156	Superloop number in multiples of four. Precede loop number with X to remove a superloop. Precede the loop number with C to create a phantom superloop.

Table 83
LD 23

Prompt	Response	Description
REQ	NEW CHG	New, or change.
TYPE	CDN	Controlled DN data block.
CUST	xx	Customer number, as defined in LD 15
CDN	Directory Number	Controlled DN
FRRT	RAN route number	First RAN route number.
FRT	1-2044	First RAN timer.
SRRT	RAN route number	Second RAN route number.

Table 83
LD 23 (cont'd.)

Prompt	Response	Description
SRT	1-2044	Second RAN route timer.
FROA	(NO) YES	First RAN to be given immediately.
MURT	Music route	Music route number.
DFDN	Directory Number	Local default ACD-DN or IVR DN.
CEIL	0-(2047)	Call ceiling value.
OVFL	(NO) YES	Force Overflow Tone to the call when ceiling threshold exceeded?
TDNS	(NO) YES	Is the DNIS number an original party?
RPRT	(NO), YES	Information about this ACD-DN (or CDN) will be (excluded) included in management reports and status displays.
CNTL	(NO) YES	Is this CDN in controlled mode?
VSID	0-15	VASID for AML for application.
HSID	0-15	VASID for AML for host.
CWTH	0-(1)-2047	Call waiting LED threshold.
BYTH	(0)-2047	Busy queue threshold.
OVTH	0-(2047)	Overflow queue threshold.
STIO	1 2 3 ... 15	TTYs assigned for status displays.
TSFT	0-510	Telephone service factor threshold.
ACNT	xxxx	Default activity code.

Feature operation

No specific operating procedures are required to use this feature.

Telephones

Several different types of telephones are supported. Regular analog telephones are compatible with the system, as well as several special business telephones designed specifically to take advantage of the many features available on your system.

Ask your Nortel representative which telephone types are supported on your system.

For more information about telephones and consoles, see the following documents:

- *WLAN IP Telephony Installation and Commissioning* (NN43001-504)
- *Attendant PC Console Fundamentals* (NN43001-520)
- *Telephones and Consoles Fundamentals* (NN43001-567)
- *IP Phones Fundamentals* (NN43001-368)
- *DECT Fundamentals* (NN43120-114)

Teletype Terminal Access Control in Multi-customer Environment

Contents

This section contains information on the following topics:

- “Feature description” (page 271)
- “Operating parameters” (page 272)
- “Feature interactions” (page 272)
- “Feature packaging” (page 272)
- “Feature implementation” (page 272)
- “Feature operation” (page 273)

Feature description

This is an enhancement of password usage for the Limited Access to Overlays feature. Under the previously enhanced operation, if no teletype terminal (TTY) activity had occurred for 20 minutes, the system automatically logged off. This value could not be changed. Counters were used to record the number of login attempts made on each TTY. If the threshold for the number of invalid attempts was exceeded, the system rejected any further activity at that port, for a defined period of time. No alarm mechanism was activated. Any attempt to log onto the system during this period of lockout was recorded by the system.

The prompt (LOUT) in LD 17 allows the TTY administrator (PWD2 user) to define a period of time (1-30 minutes) after which the system automatically logs off if no terminal activity has occurred.

The recording of invalid attempts remains the same as before. However, if the threshold for the number of invalid entries is reached, an alarm is activated; this alarm is in the form of the minor alarm lamp being lit on

attendant consoles for all customers of the system. As was the case for the previously enhanced operation, an OVL400 message is sent to all active maintenance ports and to the first TTY administrator that logs on. Other treatments also remain the same.

Operating parameters

There are no operating parameters associated with this feature.

Feature interactions

Intercept Computer

The Intercept Computer (ICP) feature uses maintenance LD 51 to update the system with the intercept service interface information that it stored. This overlay logs off after five minutes if no messages have been received from the Intercept Computer. This five-minute period takes precedence over the value entered in response to the LOUT prompt in LD 17. If this value is less than five minutes, the system will wait for five minutes before logging off.

Feature packaging

International Supplementary Features (SUPP) package 131; Limited Access to Overlays (LAPW) package 164.

Feature implementation

Table 84
LD 17 - Configure TTY Access Control parameters.

Prompt	Response	Description
REQ	CHG	Change.
TYPE	CFN PWD	Configuration Record. Gate opener.
- NPW1	xxx	New Password 1
- LOUT	1-(20)-30	Enter the time, in minutes, after which the system logs off if no terminal activity is detected.
...		
- FLTH	(0)-7	Enter the threshold for failed log-in attempts.
- LOCK	0-(60)-270	Enter, in minutes, the time the port is locked out once the FLTH has been reached.
- FLTA	(NO) YES	Enter YES to have the alarm activated once FLTH has been reached.
- AUDT	(NO) YES	Enter YES to have an audit trail activated for password usage.

Table 84**LD 17 - Configure TTY Access Control parameters. (cont'd.)**

Prompt	Response	Description
- - SIZE	(50)-100	Prompted if AUDT = YES. Enter the size of the audit trail buffer.
- LLID	(NO) YES	Enter YES to activate the display of the last failed log-in attempt usage.

Feature operation

No specific operating procedures are required to use this feature.

Telset Call Timer Enhancement

Contents

This section contains information on the following topics:

- “Feature description” (page 275)
- “Operating parameters” (page 276)
- “Feature interactions” (page 276)
- “Feature packaging” (page 276)
- “Feature implementation” (page 276)
- “Feature operation” (page 276)

Feature description

The Meridian digital telephones have displayable call timers, which start after the End-of-dialing (EOD) time out expires, and not when the called party answers. With this enhancement, the call timers on these telephones do not start until a true answer is detected on all trunks with answer supervision. These include the following:

- internal stations and attendants
- ground start and loop start supervisory trunks
- Direct Inward Dialing (DID) and Direct Outward Dialing (DOD) trunks
- Digital Trunk Interface (DTI) trunks
- Primary Rate Interface (PRI) trunks, and
- TIE trunks.

On trunks without answer supervision, the call timer starts at the EOD time out.

The feature operates in standalone or Integrated Services Digital Network (ISDN) environments.

Operating parameters

There are no operating parameters associated with this feature.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

This feature is included in base system software.

Feature implementation

There are no specific implementation procedures for this feature.

Feature operation

No specific operating procedures are required to use this feature.

Three-Wire Analog Trunk - Commonwealth of Independent States

Contents

This section contains information on the following topics:

- “Feature description” (page 277)
- “Operating parameters” (page 278)
- “Feature interactions” (page 279)
- “Feature packaging” (page 282)
- “Feature implementation” (page 283)
- “Feature operation” (page 295)

Feature description

The Three Wire Analog Trunk – Commonwealth of Independent States (CIS) feature provides the connectivity between the system and the three-wire analog trunks (3WT) used in the CIS. Analog incoming local three-wire trunks, analog incoming toll three-wire trunks, and analog outgoing Direct Inward Dialing (DID) three-wire trunks can be connected to the system.

Cards supported in an Intelligent Peripheral Equipment (IPE) environment are referred to as X3W cards. The following XW3 cards are supported by the Three-Wire Analog Trunk – CIS feature:

- NT5K60AA for incoming local and toll trunks
- NT5K61AA for outgoing trunks

The following functions are provided by the Three-Wire Analog Trunk – CIS feature:

- Delivery of Automatic Number Identification (ANI) on request from the Public Exchange/Central Office for outgoing 3WT analog calls
- Downloading of specific transmission parameters (that is, pad data, public network toll access code, and hardware ID) for X3W cards, and
- Provision of dial tone internally by the system to the originator of the call after seizure of an outgoing X3W trunk.

The trunk state change validation timing is performed by the 3WT cards. For 3WT trunks, the originating party controls the disconnection of a call. When the originating party goes on-hook, the call is released. Note however, that when Malicious Call Trace is enabled, the Local Exchange may require a two-way release. This two-way release applies only on a telephone.

A 3WT Unproductive Timer is used to prevent a call on a X3W trunk from remaining unanswered for too long. This timer can be set to a maximum of 10 minutes.

For outgoing calls, digits are sent from the main Central Processing Unit (CPU) to the 3WT firmware. This is done by Dual-tone Multifrequency (DTMF) signaling for E3W equipment, and by IPE messaging for X3W equipment. The firmware then sends the digits as pulses and controls the actual decadic outpulsing.

Digits for incoming calls are received by the 3WT firmware as pulses. For E3W equipment, each valid pulse is reported to the main CPU by Scan and Signaling Distributor (SSD) messages. For X3W equipment, the pulses are collected by firmware and complete digits are reported to the main CPU as IPE digit messages.

Operating parameters

X3W trunk cards can only be configured on IPE shelves.

Trunk-to-trunk connections are supported, but the Automatic Number Identification (ANI) information will refer to the ANI DN of the incoming route, except with QSIG, Q931, and Digital Private Signaling System #1 (DPNSS1) routes. QSIG, and Q931 ANI information will use the Calling Line Identification (CLID) information, whereas DPNSS1 ANI will use the Originating Line Identifier (OLI) information if this information is present.

The Dynamic Loss Switching feature is not supported, because there is no connection matrix and loss alternative table available for the CIS market. However, Dynamic Loss Switching is supported in Australia, New Zealand, Italy, and China.

The Static Loss Plan Download (SLPD) feature is supported on X3W trunks.

No loss downloading/switching is done for E3W trunks.

ANI is only supported for outgoing calls.

The data in ANI is built only once at the beginning of the call. Once the trunk access code is dialed, the ANI information is downloaded to the 3WT firmware. The download of ANI occurs only once and is not changed or redownloaded for any kind of operation during a call; therefore, if the call goes through any type of modification such as a transfer or call forward for instance, the ANI information sent when requested is that of the original originator of the call.

Toll Operator Manual Ringing and Break-In are not supported on IPE analog trunks.

Data calls are supported, but with the limitations due to the 500 Hz ANI requests that can happen any time during the call and the ANI information being sent on the same voice circuit on which the data is being transmitted; therefore, the transmission of data is not guaranteed.

Multifrequency Shuttle signaling is not supported on X3W trunk cards.

The CIS A-law XCT (NTD17AE) is required.

Feature interactions

Authorization Code

An extension may, referring to the Authorization Code, seize an outgoing CIS 3WT trunk. The Authorization Code category is used to build the ANI message, meaning that a telephone which has a CIS restricting call category can complete a call to the public network using the Authorization Code.

Autodial

Autodial on a E3W trunk will fail for toll calls. The reason is that E3W trunks do not wait for the ANI request from the Public Exchange/Central Office, which is expected to appear after the toll access code is dialed. The Public Exchange then does not accept the call due to failure to receive ANI information.

Dial Tone Detection

Dial Tone detectors are supported with the limitations of the reliability of the tone provided by the Public Exchange.

DPNSS1 Gateway

The ANI information transmitted for this incoming DPNSS1 route will include the Local Exchange Code (LEC) of the CIS outgoing route, the ANI DN, and the Category Code (CAC) of this incoming route.

The ANI DN information which is built will refer to the Originating Line Identifier (OLI) if present and the Route DN Length prompt for ANI (RDNL > 0) in LD 16. If the OLI is available, but RDNL = 0 for that route, the ANI DN is the ANI DN of that incoming route. If the OLI is available, but RDNL = 0 and the ANI DN of the incoming route is not defined, the ANI DN is the ANI DN of the CIS outgoing route. If the OLI is available, but RDNL = 0, and the ANI DN of the incoming route is not defined, and the ANI DN of the CIS outgoing route is not defined, the ANI DN will be built with the Additional Digit (ADDG). If RDNL > 0, its value will be the number of digits extracted from the OLI to be used as the ANI DN. The least significant digit of the OLI will be extracted (for example, if the DN is 4201, the 1 is the least significant digit.)

If there is no OLI, the ANI DN of the DPNSS1 route is used to build the ANI message. If there is no ANI DN on the DPNSS1 route, the ANI DN of the CIS outgoing route is used to build the ANI message. If there is no ANI DN on the CIS outgoing route, the ANI is built with the ADDGs of the CIS route (ADDG is always defined).

Incoming Digit Conversion Enhancement, Incoming DID Digit Conversion

The construction of an ANI message does not care if Incoming Digit Conversion is used. The DN sent as ANI is the actual DN of the telephone, not necessarily the DID number to dial to reach the telephone. Therefore, if an external party uses a DN for making a call to the corresponding extension which is delivered in an ANI message, the call may fail.

Last Number Redial

Last Number Redial on an E3W trunk will fail for toll calls. The reason is that E3W trunks do not wait for the ANI request from the Public Exchange, that is expected to appear after the toll access code is dialed. The Public Exchange will not accept the call due to the failure to receive ANI information.

Multiple Appearance Directory Number

Since the ANI category is defined for each telephone for Three Wire Analog Trunks, two stations with the same multiple Appearance DN can be assigned different ANI categories.

Q931 Gateway/BRI Gateway

The ANI information transmitted for this incoming Q931 route will include the LEC of the CIS outgoing route, the ANI DN, and the CAC of this incoming route.

The ANI DN information which is built will refer to the Calling Line Identification (CLID) if present and the Route DN Length prompt for ANI (RDNL > 0) in LD 16. If the CLID is available but RDNL = 0 for that route, the ANI DN is the ANI DN of that incoming route. If the CLID is available, but RDNL = 0, and the ANI DN of the incoming route is not defined, the ANI DN is the ANI DN of the CIS outgoing route. If the CLID is available, but RDNL = 0, and the ANI DN of the incoming route is not defined, and the ANI DN of the CIS outgoing route is not defined, the ANI DN will be built with the ADDG. If RDNL > 0, its value will be the number of digits extracted from the CLID to be used as the ANI DN. The least significant digits of the CLID will be extracted (for example, if the DN is 4201, the 1 is the least significant digit).

If there is no CLID, the ANI DN of the Q931 route is used to build the ANI message. If there is no ANI DN on the Q931 route, the ANI DN of the CIS outgoing route is used to build the ANI message. If there is no ANI DN on the CIS outgoing route, the ANI is built with the ADDG of the CIS outgoing route (ADDG is always defined).

QSIG Gateway

The ANI information transmitted for this incoming QSIG route will include the LEC of the CIS outgoing route, the ANI DN, and the CAC of this incoming route.

The ANI DN information which is built will refer to the Calling Line Identification (CLID) if present and the Route DN Length prompt for ANI (RDNL > 0) in LD 16. If the CLID is available but RDNL = 0 for that route, the ANI DN is the ANI DN of that incoming route. If the CLID is available, but RDNL = 0, and the ANI DN of the incoming route is not defined, the ANI DN is the ANI DN of the CIS outgoing route. If the CLID is available, but RDNL = 0, and the ANI DN of the incoming route is not defined, and the ANI DN of the CIS outgoing route is not defined, the ANI DN will be built with the ADDG. If RDNL > 0, its value will be the number of digits extracted from the CLID to be used as the ANI DN. The least significant digits of the CLID will be extracted (for example, if the DN is 4201, the 1 is the least significant digit).

If there is no CLID, the ANI DN of the QSIG route is used to build the ANI message. If there is no ANI DN on the QSIG route, the ANI DN of the CIS outgoing route is used to build the ANI message. If there is no ANI DN on the CIS outgoing route, the ANI is built with the ADDG digits of the CIS outgoing route (ADDG is always defined).

The ANI information transmitted for this incoming QSIG route will include the LEC of the CIS outgoing route, the ANI DN, and the CAC of this incoming route.

R2MFC Calling Number Identification

The incoming R2MFC CNI will not be tandemed if the call is outgoing to a CIS trunk. The ANI built will be the LEC of the outgoing CIS route, the ANI DN of this R2MFC incoming route if defined (otherwise it will be the ANI DN of the outgoing CIS route, or the ADDG digit), and the CAC of this incoming R2MFC route.

The category (CAC) used to build the R2MFC Calling Number Identification (CNI) for the analog, digital and Basic Rate Interface (BRI) sets is used to build the CIS ANI. The meaning of CAC is different between the R2MFC CNI signaling and the CIS signaling (analog BRI, and digital). R2MFC CAC prompt values are in the range of 0 to 10, and the default is 0. CIS CAC prompt values are in the range of 0 to 9, and the default value is 3.

If the MFC package is equipped, but not the CIST package, the CAC prompt uses the R2MFC range and default. If the CIST package is equipped (MFC package equipped or not) the CAC prompt uses the CIS range and default.

Speed Call

Speed Call on an E3W trunk will fail for toll calls. E3W trunks do not wait for the ANI request from the Public Exchange, that is expected to appear after the toll access code is dialed. The Public Exchange will not accept the call due to the failure to receive ANI information.

Virtual Network Services

Virtual Network Services is not supported on CIS trunks.

Feature packaging

The Three-Wire Analog Trunk – CIS feature is contained in Commonwealth of Independent States Trunk Interface (CIST) package 221.

The following packages are also required to implement this feature:

- Fast Tone and Digit Switch (FTDS) package 87 (only for E3W cards)
- Flexible Tones and Cadences (FTC) package 125
- International Supplementary Features (SUPP) package 131 for DID/DOD
- Flexible Numbering Plan (FNP) package 160

- Trunk Failure Monitor (TFM) package 182, and
- Meridian 1 Intelligent Peripheral Equipment (XPE) package 203 (only for X3W cards).

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

- [Table 85 "LD 17" \(page 284\)](#)
Configure the system data.
- [Table 86 "LD 16" \(page 284\)](#)
Configure an incoming X3W DID route.
- [Table 87 "LD 16" \(page 286\)](#)
Configure an outgoing X3W DID route and define the toll digit using the TDG prompt.
- [Table 88 "LD 18" \(page 287\)](#)
Configure the Special Service List.
- [Table 89 "LD 16" \(page 287\)](#)
Configure an outgoing X3W DID route and define the toll access code using the SSL prompt.
- [Table 90 "LD 16" \(page 288\)](#)
Configure an incoming E3W DID route.
- [Table 91 "LD 16" \(page 289\)](#)
Configure an outgoing E3W COT route.
- [Table 92 "LD 14" \(page 290\)](#)
Add or change trunk data for X3W incoming DID trunk.
- [Table 93 "LD 14" \(page 291\)](#)
Add or change trunk data for X3W outgoing DID trunk.
- [Table 94 "LD 14" \(page 291\)](#)
Add or change trunk data for E3W incoming three-wire trunk.
- [Table 95 "LD 14" \(page 292\)](#)
Add or change trunk data for E3W outgoing three-wire trunk.
- [Table 96 "LD 10" \(page 292\)](#)
Add or change analog (500/2500-type) telephones for CIS.
- [Table 97 "LD 11" \(page 292\)](#)

- Add or change Meridian 1 proprietary telephones for CIS.
- [Table 98 "LD 12" \(page 293\)](#)
Add or change an attendant console for CIS.
- [Table 99 "LD 27" \(page 293\)](#)
Add or change Basic Rate Interface (BRI) sets for CIS.
- [Table 100 "LD 56" \(page 293\)](#)
Configure dial tone, busy tone, and tone to last party.
- [Table 101 "LD 88" \(page 295\)](#)
Configure the Authcode data block.
- [Table 102 "LD 97" \(page 295\)](#)
Configure the IPE system record for three-wire trunks.

This is an example that describes how the 3WT related features are configured. Only the prompts that are significant for the Three-Wire Analog Trunk – CIS feature are mentioned.

The following features are needed to make the feature work according to this example: B34 Codec Static Loss Plan Downloading; Partial Dial Timer; End-of-Selection Busy; Tone to-Last Party; Special Dial Tones After Dialed Numbers; Trunk Barring, and Special Service List.

Table 85
LD 17

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	PARM	Gate opener.
- PCML	A	System Pulse Code Modulation companding law. A-law is to be used in the CIS market.
...		
- DTRB	70	Dual-tone Multifrequency burst and interdigit pause for the Tone and Digit Switch. Pulse/Pause Ratio 70/70. For outgoing E3W cards, the preferable digitone burst time is 70 ms.

Table 86
LD 16

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	RDB	Route Data Block.
...		

Table 86
LD 16 (cont'd.)

Prompt	Response	Description
TKTP	DID	Direct Inward Dialing trunk data block.
...		
DTRK	NO	This is not a digital trunk route.
...		
ICOG	ICT	Incoming trunk.
...		
CNTL	YES	Change control or timers.
- TIMR	ICF 0	Incoming flash timer should be set to 0. Validation is performed by 3WT firmware.
- TIMR	GTI 128	Incoming guard timer.
- TIMR	EOD 13952	End of dial timer, default value in milliseconds.
- TIMR	DSI 11904	Disconnect supervision timer in milliseconds.
- TIMR	DDL 0	Delay Dial Timer not needed.
...		
NEDC	ORG	Near End Disconnect Control. Originating end control.
FEDC	ORG	Far End Disconnect Control. Originating end control.
CDPC	(NO)	The system is not the controlling party on incoming calls.
...		
OPR	(NO)	This is not an outpulsing route.
PRDL	YES	Partial dial timing is equipped using EOD.
EOS	BSY	Busy signal is sent on time-out.
DNSZ	(0)-7	Number of digits expected on DID routes. 0, the default, indicates no fixed value. This value must be defined according to the numbering plan.
...		
BTT	30	Busy Tone Time. Length of Busy/overflow to be returned on DID routes in seconds.
...		
CAC	0-(3)-9	Route ANI category.
ANDN	0-9999999	Route ANI DN.
RDNL	0-(4)-7	Route DN Length for ANI. This is printed for DPNSS1, MCDN, and QSIG routes only.

Table 87**LD 16**

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	RDB	Route Data Block.
...		
TKTP	DID	Direct Inward Dialing trunk data block.
...		
DTRK	NO	This is not a digital trunk route.
...		
ICOG	OGT	Outgoing trunk.
...		
CNTL	YES	Change control or timers.
- TIMR	ATO 128-(4992)-65408	ANI time out timer in milliseconds. For CIS outgoing trunk routes this defines the time delay performed after the outpulsing of the toll access code.
- TIMR	OGF 0	Outgoing flash timer should be set to 0 in milliseconds. Validation will be done by 3WT firmware.
- TIMR	EOD 13952	End of dial timer, default value.
- TIMR	DSI 11904	Disconnect supervision timer.
- TIMR	DDL 0	Delay Dial Timer not needed.
- TIMR	GTO 2944	Outgoing guard timer.
...		
NEDC	ETH	Near End Disconnect Control Either end control.
FEDC	ETH	Far End Disconnect Control Either end control.
...		
NATL	NO	North American Toll scheme.
TDG	8	Toll Digits. List of digits after trunk access code which indicate toll calls.
...		
OPR	(NO)	This is not an outpulsing route.
...		
ACKW	(NO)	Seizure acknowledge signal is not expected.
...		
LEC	0-9999999	Local Exchange Code. A value must be entered.
ADDG	0-(8)-9	Additional digit.
CAC	0-(3)-9	Route ANI category.

Table 87
LD 16 (cont'd.)

Prompt	Response	Description
ANDN	0-9999999	Route ANI DN.
RDNL	0-(4)-7	Route DN Length for ANI. This is printed for DPNSS1, MCDN, and QSIG routes only.

Table 88
LD 18

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	SSL	Special Service List data block.
CUST	xx	Customer number, as defined in LD 15
SSL	1-15	List number for Special Service List.
SSDG	xxxx	Special Service Digit or Digits (1 to 4 digits).
...		
- TOLL	YES	The SSDG entry is a toll number.
...		
SSDG	xxxx	Special Service Digit or Digits (1 to 4 digits).
...		
- SSUC	YES	The SSDG entry is a Special Service unanswered call.
SSDG	<CR>	

Table 89
LD 16

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	RDB	Route Data Block.
...		
TKTP	DID	Direct Inward Dialing trunk data block.
...		
DTRK	NO	This is not a digital trunk route.
...		
ICOG	OGT	Outgoing trunk.
...		
CNTL	YES	Change control or timers.
NEDC	ETH	Near End Disconnect Control Either end control.
FEDC	ETH	Far End Disconnect Control Either end control.

Table 89
LD 16 (cont'd.)

Prompt	Response	Description
...		
SSL	1	Special Service List number.
...		
LEC	0-9999999	Local Exchange Code.
ADDG	0-(8)-9	Additional digit.
CAC	0-(3)-9	Route ANI category.
ANDN	0-9999999	Route ANI DN.
RDNL	0-(4)-7	Route DN Length for ANI. This is printed for DPNSS1, MCDN, and QSIG routes only.

Table 90
LD 16

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	RDB	Route Data Block.
...		
TKTP	DID	Direct Inward Dialing trunk data block.
...		
DTRK	NO	This is not a digital trunk route.
...		
ICOG	ICT	Incoming trunk.
...		
CNTL	YES	Change control or timers.
- TIMR	ICF 0	Incoming flash timer should be set to 0. Validation has already been done by 3WT firmware.
- TIMR	OGF 0	Outgoing flash timer should be set to 0. Validation has already been done by 3WT firmware.
- TIMR	EOD 13952	End of dial timer, default value.
- TIMR	DSI 11904	Disconnect supervision timer.
- TIMR	DDL 0	Delay Dial Timer not needed.
...		
NEDC	ORG	Near End Disconnect Control Originating end control.
FEDC	ORG	Far End Disconnect Control Originating end control.
CDPC	(NO)	The system is not the controlling party on incoming calls.

Table 90
LD 16 (cont'd.)

Prompt	Response	Description
...		
OPR	(NO)	This is not an outpulsing route.
PRDL	YES	Partial dial timing is equipped using EOD.
EOS	BSY	End of selection and busy signals enabled.
DNSZ	(0)-7	Number of digits expected on DID routes. 0, the default, indicates no fixed value. This value must be defined according to the numbering plan.
...		
BTT	30	Length of busy/overflow tone to be returned on DID routes in seconds.
...		
CAC	0-(3)-9	Route ANI category.
ANDN	0-9999999	Route ANI DN.
RDNL	0-(4)-7	Route DN Length for ANI. This is printed for DPNSS1, MCDN, and QSIG routes only.

Table 91
LD 16

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	RDB	Route Data Block.
...		
TKTP	COT	Central Office Trunk data block.
...		
DTRK	NO	This is not a digital trunk route.
...		
ICOG	OGT	Outgoing trunk.
...		
CNTL	YES	Change control or timers.
- TIMR	ICF 0	Incoming flash timer should be set to 0 in milliseconds. Validation will be done by 3WT firmware.
- TIMR	OGF 0	Outgoing flash timer should be set to 0 in milliseconds. Validation will be done by 3WT firmware.
- TIMR	EOD 13952	End of dial timer, default value.
- TIMR	DSI 11904	Disconnect supervision timer.

Table 91
LD 16 (cont'd.)

Prompt	Response	Description
- TIMR	DDL 0	Delay Dial Timer not needed.
- TIMR	GTO 2944	Outgoing guard timer.
...		
NEDC	ETH	Near End Disconnect Control Either end control.
FEDC	ETH	Far End Disconnect Control Either end control.
CDPC	(NO)	The system is not the controlling party on incoming calls.
...		
NATL	NO	North American Toll scheme.
...		
LEC	0-9999999	Local Exchange Code.
ADDG	0-(8)-9	Additional digit.
CAC	0-(3)-9	Route ANI category.
ANDN	0-9999999	Route ANI DN.
RDNL	0-(4)-7	Route DN Length for ANI. This is printed for DPNSS1, MCDN, and QSIG routes only.

Table 92
LD 14

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	DID	Direct Inward Dialing trunk data block.
...		
XTRK	XDID	Extended Trunk Type. IPE DID trunk card.
...		
SIGL	CIS	Trunk Signaling. Three-wire CIS trunk signaling.
CIST	(NO) YES	Prompted only for incoming routes (that is, ICOG = ICT). NO = Local trunk. YES = Toll trunk.
...		
STRI	IMM	Immediate incoming start arrangement.
...		
SUPN	YES	Answer and disconnect supervision required.

Table 92
LD 14 (cont'd.)

Prompt	Response	Description
CLS	(DIP)	Dial pulse (for 3WT incoming and outgoing).
	(SHL) LOL	Line length used for pad settings.
	(BARD) BARA	Barring (denied) allowed.

Table 93
LD 14

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	DID	Direct Inward Dialing trunk data block.
...		
XTRK	XDID	IPE DID trunk card.
...		
SIGL	CIS	Three-wire CIS trunk signaling.
...		
STRO	IMM	Immediate outgoing start arrangement.
...		
SUPN	YES	Answer and disconnect supervision required.
CLS	(DIP)	Dial pulse (for 3WT incoming and outgoing).
	(SHL) LOL	Line length used for pad settings.
	(BARA) BARD	Barring (allowed) denied.

Table 94
LD 14

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	DID	Direct Inward Dialing trunk data block.
...		
SIGL	EAM	Ear & mouth.
CDEN	DD	Double density.
...		

Table 94
LD 14 (cont'd.)

Prompt	Response	Description
STRI	IMM	Immediate incoming start arrangement.
...		
SUPN	YES	Answer and disconnect supervision required.
CLS	(DIP)	Dial pulse.

Table 95
LD 14

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	COT	Central Office Trunk data block.
...		
SIGL	LOP	Loop start.
CDEN	DD	Double density.
...		
SUPN	YES	Answer and disconnect supervision required.
- STYP	PSP	Polarity sensitive card.
...		
SEIZ	YES	Answer and disconnect supervision required.
CLS	DTN	Digitone.

Table 96
LD 10

Prompt	Response	Description
REQ:	NEW CHG	Add, or change.
TYPE:	500	analog (500/2500-type) telephone data block.
...		
CLS	(DNAA) DNAD	DN of telephone (allowed) denied for use in ANI messages.
CAC_CIS	0-9	Specifies ANI category for 3WT calls.

Table 97
LD 11

Prompt	Response	Description
REQ:	NEW CHG	Add, or change.

Table 97
LD 11 (cont'd.)

Prompt	Response	Description
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
...		
CLS	(DNAA) DNAD	DN of telephone (allowed) denied for use in ANI messages.
CAC	0-9	Specifies ANI category for 3WT calls.

Table 98
LD 12

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	2250	Attendant console type.
...		
CLS	(DNAA) DNAD	DN of telephone (allowed) denied for use in ANI messages.
CAC	0-9	Specifies ANI category for 3WT calls.

Table 99
LD 27

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	DSL	Digital Subscriber Loop data block.
...		
CLS	(DNAA) DNAD	DN of telephone (allowed) denied for use in ANI messages.
CAC	0-9	Specifies ANI category for 3WT calls.

Table 100
LD 56

Prompt	Response	Description
REQ	NEW CHG PRT	Add, change, or print.
TYPE	MCAD	Master Cadence data block.
WACD	30	Cadence number. In this example entry 30 is modified.
CDNC	60 60	On-off phases for cadence.
REQ	NEW CHG PRT	Add, change, or print.
TYPE	FCAD	Firmware Cadence data block.
WACD	30	Cadence number. In this example entry 30 is modified.
CDNC	60 60	On-off phases for cadence. 0.3 second on, 0.3 second off.

Table 100
LD 56 (cont'd.)

Prompt	Response	Description
END	REPT	Repeating cycles.
- CYCS	1	On/off cycles to be repeated.
- WTON	YES	Define tones associated with the cadence.
-- TONES	158	420 Hz and -12 dB below overload.
<hr/>		
REQ	NEW CHG PRT	Add, change, or print.
TYPE	FTC	Flexible Tones and Cadences data block. Used to provide special dial tone after dialed number.
...		
HCCT	YES	Hardware Controlled Cadences and Tones modification of the hardware.
...		
- BUSY		Busy tone.
-- TDSH		
-- XTON	158	420 Hz and -12 dB below overload.
-- XCAD	30	XCT cadence number. 0.3 seconds on, 0.3 seconds off.
...		
- TLP		Tone to last party.
-- TDSH		
-- XTON	158	420 Hz and -12 dB below overload.
-- XCAD	30	XCT cadence number. 0.3 seconds on, 0.3 seconds off.
- TLTP	30	Tone to last party timer in seconds.
...		
SRC	YES	Source Tones.
- SRC1		CIS continuous dial tone within the range.
-- TDSH		
-- XTON	158	420 Hz and -12 dB below overload.
-- XCAD	0	No cadence.
<hr/>		
REQ	NEW CHG PRT	Add, change, or print.
TYPE	DTAD	Special Dial Tone After Dialed Number data block.
DDGT	9	The digit 9 is to be used as an outgoing local access code.
TONE	SRC1	Tone to be provided after the dialed digit 9.

Table 101
LD 88

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	AUB	Authcode data block.
...		
CLAS	(0)-115	Classcode value assigned to Authcode (NAUT).
...		
NCOS	(0)-99	Network Class of Service Group number.
CAC_CIS	0-9	Specifies ANI category for CIS calls.

Table 102
LD 97

Prompt	Response	Description
REQ	CHG	Change.
TYPE	LOSP	Loss Plan Tables. Configure loss parameters for downloading.
...		
TTYP	(STAT)	Install a B34 Static Loss Plan Table.
- STYP	(PRED)	A numbered predefined table is to be used.
-- TNUM	28	28 = CIS Table.
<hr/>		
REQ	CHG	Change.
TYPE	LOSP	Loss Plan Tables. Configure loss parameters for downloading.
...		
TTYP	(STAT)	Install a B34 Static Loss Plan Table.
- STYP	CSTM	Customize a numbered predefined table.
PWD2	xxxx	Response CSTM at STYP prompt requires a PWD2 password or a LAPW password with Loss Planning Customizing Allowed (LOSA) access. This prompt appears if the appropriate password has not been given previously.
- DIDS	Rx Tx	Enter loss levels for DID short line.
- DIDL	Rx Tx	Enter loss levels for DID long line.

Feature operation

No specific operating procedures are required to use this feature.

Time and Date

Contents

This section contains information on the following topics:

- “Feature description” (page 297)
- “Operating parameters” (page 297)
- “Feature interactions” (page 298)
- “Feature packaging” (page 298)
- “Feature implementation” (page 298)
- “Feature operation” (page 299)

Feature description

The Time and Date feature provides the capability to display or modify the system time and date from the attendant console. If Display Time or Display Date keys are installed on the console, pressing the respective key causes the time or date to be shown on the digit display. However, these keys only allow information to be displayed, not changed.

The Change Time or Change Date keys allow the attendant to change the time or date. When a change is made, the system clock is altered to the new values. The change keys also allow display of the time or date.

Operating parameters

The Time and Date feature is available with M2250 consoles.

If the Change Time (MTM) and Change Date (MDT) keys are provided on a console, there is no need for the Display Time (DTM) and Display Date (DDT) keys because the MTM and MDT keys provide the display capability. DTM and DDT keys are used when the console is only allowed to view, but not change, the time and date.

When using the MTM and MDT keys, the date must be entered in the day, month, and year format; and the time must be entered in the 24-hour clock format. This is true even if the M2250 has selected a different date and time format.

The M2250 console continuously shows the time and date on line one of the display. The attendant can change the format of time and date by using the Options menu. The date and time are downloaded to the M2250 console from the system clock and cannot be changed by the Options menu. The change time and date keys are required.

A call cannot be answered while the display/change key is activated; however, the keys can be used once the call is established.

Feature interactions

Hold

Loops used when updating time or date cannot be put on hold.

In-Band Automatic Number Identification

If the agent presses the Time and Date (TAD) key while on an In-Band Automatic Number Identification (IANI) call, the time and date remain displayed throughout the call. To display the ANI number again, place the call on hold and retrieve it. The ANI number reappears.

Network Time Synchronization

As done with the LD 12, every time the Time and Date Attendant key is used to change the system time, a request for synchronization will be made to the Master to accurately set the seconds.

Feature packaging

This feature is included in base system software.

Feature implementation

Table 103

LD 12 - Assign Time and Date keys on attendant consoles.

Prompt	Response	Description
REQ	CHG	Change.
TYPE	2250	Attendant console type.
TN		Terminal number
	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.

Table 103

LD 12 - Assign Time and Date keys on attendant consoles. (cont'd.)

Prompt	Response	Description
KEY	c u xx DDT xx DTM xx MDT xx MTM	Format for Small System and Media Gateway 1000B where c = card and u = unit.
		Add a Display Date key.
		Add a Display Time key.
		Add a Display/Change Date key.
		Add a Display/Change Time key.
		The range of key numbers (xx) is 0-19 on the M2250 console, and 0-9 on all other consoles.

Feature operation

To view the Time, press **Display Time (DTM)**.

To view the Date, press **Display Date (DDT)**.

To change the time, follow these steps:

Step	Action
1	Select an idle loop key.
2	Press Change Time (MTM) .
3	Enter the time using the 24-hour clock for hours and minutes (00 00).
4	Press Change Time (MTM) .
5	Press RIs .

--End--

To change the date, follow these steps:

Step	Action
1	Select an idle loop key.
2	Press Change Date (MDT) .
3	Enter the date using two digits for day, month, and year (dd mm yy).
4	Press Change Date .

5 Press **RIs**.

--End--

Tone to Last Party

Contents

This section contains information on the following topics:

- “Feature description” (page 301)
- “Operating parameters” (page 302)
- “Feature interactions” (page 302)
- “Feature packaging” (page 302)
- “Feature implementation” (page 302)
- “Feature operation” (page 302)

Feature description

This feature allows a Tone to Last Party (TLP) tone to be sent to analog (500/2500-type) telephones or trunks that are in the half disconnect state. The TLP is given until the system releases the trunk, or the TLP timer (0-32 seconds) times out.

During the time that the TLP tone is given to the telephone, the telephone appears busy to all incoming calls. Camp-on is denied, and attendant Break-in, busy verify, and override are temporarily denied during this time.

If a telephone is not placed on-hook and the timer times out, the telephone is in line lockout state, and remains so until it is placed on-hook.

A trunk is in the half disconnect state if the near-end has disconnected, but the system is still holding the trunk, waiting for a message from the far-end, or for the disconnect supervision timer to time out. Barge-in is denied while the trunk is receiving the TLP tone.

The TLP is defined in each tone table. The TLP for analog (500/2500-type) telephones is defined on a customer basis, while the TLP for trunks is defined on a route basis.

Operating parameters

The TLP tone is not given to a telephone that is receiving another tone.

This feature does not apply to service trunks, such as music, paging and recorded announcement.

The TLP tone is not given to a trunk if it is being held because of the guard timer.

Feature interactions

Multi-Party Operations

The TLP tone is not given to a telephone which has Multi-Party Operations (MPO).

Operator Call Back China 1

Operator Call Back China #1 (OPCB) has precedence over TLP.

Feature packaging

This feature requires International Supplementary Features (SUPP) package 131.

Feature implementation

Table 104

LD 56 - Modify or change customer tone and ringing parameters.

Prompt	Response	Description
...		
TLP	ccc ttt x xx xx xx	Tone to Last Party.
TLPT	(0)-32	Tone to Last Party Timer (seconds). No tone is given if TLPT = 0.

Feature operation

No specific operating procedures are required to use this feature.

Tones and Cadences

Contents

This section contains information on the following topics:

- “Feature description” (page 303)
- “Operating parameters” (page 306)
- “Feature interactions” (page 307)
- “Feature packaging” (page 308)
- “Feature implementation” (page 308)
- “Feature operation” (page 308)

Feature description

A tone is the frequency and level of the sound produced while the telephone is ringing, providing dial tone, or providing feature activation tones. A cadence defines the time duration for the on and off phases of a ringing or tone cycle.

A collection of basic tones and cadences is available on all systems. Flexible Tones and Cadences (FTC) package 125 allows the tones to be changed.

Basic Tones and Cadences

Special dial tone

Special dial tone is supplied by the system to indicate a request for Call Transfer, Conference, and Ring Again. Special dial tone differs from regular dial tone in that it has three 128 ms interruptions at the beginning of the tone.

Overflow tone

Overflow tone can be provided on an optional basis to a station user who tries to access a trunk group when all trunks are busy, or who attempts to access features that are unavailable to their telephone. Overflow tone is best described as a fast busy signal.

Tone buzzing

Tone buzzing is used in conjunction with such features as Call Waiting and Manual Signaling (Buzz) to alert the user by a buzz tone through the telephone's loudspeaker. This applies when the telephone is off-hook or has a headset plugged in.

Flexible Tones and Cadences

The Flexible Tones and Cadences (FTC) feature, allowing the system to adapt to the tone specifications of different countries. Tones such as dial, special dial, busy, ringback, overflow, test, normal, and distinctive ringing are hardware controlled from the Tone and Digit Switch (TDS) circuit card (see [Table 105 "Hardware controlled tones" \(page 304\)](#)). Tones such as camp-on, call waiting, intrusion, and override are software controlled, although the basic tone is still coming from the TDS card (see [Table 106 "Software controlled tones" \(page 305\)](#)).

The desired cadences for the software controlled tones are defined by providing the system with the time length of the on and off phases. Software also controls ringing for analog (500/2500-type) telephones, although the voltage is supplied by the ring generator card.

The tone data is stored in tables. Every customer and route must select which tone table to use. Table 0 is filled in with default hexadecimal codes when the first customer is created and must not be changed.

All data related to the flexible tones is kept in isolated areas called Flexible Tone tables. Software Cadence tones and Master Cadence tables have an index into the MCAD table for its corresponding software cadence.

Most of the cadences are expressed in multiples of five milliseconds (ms). Therefore, in addition to the existing 128 ms timing mark, a 96 ms timing mark is introduced by a new read only memory (ROM) pack with new firmware.

Table 105
Hardware controlled tones

Tone	Description
Dial tone	Indicates the system can accept dialing.
Message Waiting dial tone	Indicates a message is waiting at the message center.

Table 105
Hardware controlled tones (cont'd.)

Tone	Description
Call Forward dial tone	Indicates that the user has call forwarded the telephone.
Call Forward Message Waiting dial tone	Indicates that the user has call forwarded the telephone and a message is waiting at the message center.
Control Dial tone	Used for broker service to indicate a control digit is required after the switchhook (only for 2500-type telephones with Digitone class of service).
Busy tone	Indicates that the called DN is busy.
Ringback tone	Given to the calling party while the called party is ringing. Also given to Central Office trunks waiting for the DN to answer.
ACD RGA Ringback tone	Given to a caller to an Automatic Call Distribution (ACD) group when entering the waiting call queue and having RGA (Ring Again).
Overflow tone	Indicates that the trunk route is busy, or the DN is blocked or disabled, or that a not-allowed action has been carried out.
LDN tone	Indicates to a Centralized Attendant Service (CAS) attendant that the incoming call is a Listed DN (LDN) call from a remote site.
Camp-On tone	Provided as an initial burst when the attendant extends a call to a busy DN that is not equipped with the Call Waiting feature.
Camp-On Confirm tone	Confirms to a CAS attendant that a call to a busy DN at remote site has camped on, or that the called DN has not answered after a specified time and the calling party has come back.
Dial "0" Recall tone	Indicates to a CAS attendant that a call is a recall occurring due to attendant recall or call forward busy to an attendant from a remote site.
Hold Confirm tone	Indicates to a CAS attendant that a call placed on silent hold has timed out and is recalling.
Test tone	Provided during testing of trunk circuits.
Distinctive Ring tone	Used to differentiate between routes.
Normal Ring tone	Provided for internal calls and incoming calls if distinctive ringing or precedence ringing is not in use.

Table 106
Software controlled tones

Tone	Description
Agent Observe tone	Given to an agent being observed by a supervisor.
Call Waiting tone	Indicates to a busy station that another call is coming in.
Intrusion tone	Provided when the attendant initiates the Barge-In, Busy Verify, or Break-In feature.

Table 106
Software controlled tones (cont'd.)

Tone	Description
Override tone	Provided when a user operates the Override key and enters the conversation of a busy extension.
Observe Blocking tone	Given to the supervisor who encounters blocking while attempting to observe an agent.
Off-Hook Queuing tone	Given to the call originator when the call enters the off-hook queue.
Set Relocate tone	Given after all information needed to relocate the telephone is given and proven to be correct. Also given to indicate all is correct after plugging the telephone back in at the relocated Terminal Number (TN).
Telset Messaging Alert tone	Indicates to caller that Telset messaging facilities have been entered.
Telset Messaging OK tone	Indicates to caller that the message has been received correctly and everything is fine.
Tel Status Update tone	Indicates a successful status update process.
Special Dial tone	Indicates the availability of a special function such as Conference or Transfer.
Expensive Route Warning tone	When Automatic Route Selection is in use, indicates that all inexpensive routes are busy and an expensive route must be chosen to complete the call.
ACD Call Force tone	Indicates to the ACD agent that the current call has been disconnected and a new caller is about to be given to the agent.

Operating parameters

The tones that can be produced are limited to the tones available on the particular TDS card being used.

Gradual level change is not allowed when a tone is activated.

If the Distinctive Ringing package is equipped, and a trunk route is classmarked for that feature, the cadence chosen for each call comes from the same tone table as for a normal call. The Distinctive Ringing field determines the cadences.

If a parked call was originally distinctive, and FTC is equipped, the Call Park Recall cadence takes precedence. If FTC is not equipped, the distinctive precedence ringing is given.

Because Enhanced Flexible Tones and Cadences (EFTC) is an enhancement to Flexible Tones and Cadences (FTC), the FTC package must be equipped.

A customer option determines whether the cadence will be defined by the originating or the terminating end of the call.

Feature interactions

Audible Reminder of Held Call

This feature allows for a definable cadence as a reminder of a held call. With an analog (500/2500-type) telephone, the cadence is determined by the customer's Flexible Tones and Cadence (FTC) table for the holding party. Ringing on an analog (500/2500-type) telephone is not affected by definitions for the Incoming Route option. The cadence for the reminder, and the duration between reminder rings, is always defined within the customer's tone table.

Call Forward Reminder Tone

The Call Forward Reminder Tone feature provides a way to determine whether the call forwarding feature on an analog (500/2500-type) telephone is active. For systems equipped with the FTC package, the Call Forward Reminder Tone Allowed option gives the dial tone defined by Call Forward Dial Tone to an analog (500/2500-type) telephone that has Call Forward active with no message waiting and the dial tone defined by Call Forward Message Waiting to an analog (500/2500-type) telephone that has Call Forward active and a message waiting. To get different Call Forward and Call Forward Message Waiting reminder dial tones, it is necessary to define a distinct tone and cadence for Call Forward Dial Tone and a distinct tone and cadence for Call Forward Message Waiting in LD 56, as well as to specify Call Forward Reminder Tone Allowed in LD 15.

Call Park Recall and Group Call Ring

Recall Ring and Group Call Ring are given special entries in the FTC table. New entries are added to the FTC overlay (LD 56) to define the cadence for Meridian 1 proprietary telephones, and analog (500/2500-type) telephones. The new Recall Ring entry is used to ring a telephone when recalling a Parked Call.

Conference Warning Tone Enhancement

There are no changes to the limitations to cadence numbers entry values. The same restriction still applies.

Ringing Based on Incoming Route

Enhanced Flexible Tones and Cadences (EFTC) allows the route's tone table to determine the cadence and ringing frequency for incoming calls.

10-Phase Cadence

Programming of software controlled cadences expands with EFTC from 4 intervals to 10, offering greater versatility with the cadences and cadence phases. This affects all cadences under software control.

Feature packaging

Flexible Tones and Cadences (FTC) package 125 has no feature package dependencies.

Feature implementation

There are no specific implementation procedures for this feature.

Feature operation

No specific operating procedures are required to use this feature.

Tones, Flexible Incoming

Contents

This section contains information on the following topics:

- “Feature description” (page 309)
- “Operating parameters” (page 310)
- “Feature interactions” (page 310)
- “Feature packaging” (page 310)
- “Feature implementation” (page 310)
- “Feature operation” (page 311)

Feature description

When a telephone is off-hook, the user is alerted to a second incoming call by a buzz tone. Flexible Incoming Tones (FIT) allows the replacement of the standard buzz tone with a buzz with an on/off cadence. This feature is defined on an individual telephone basis.

When a call is presented to a telephone in any of the following situations, a tone with a special cadence alerts the user:

- Call on DN key while busy on another DN
- Call to a station that is off-hook
- Call Park recall when station is busy on another DN
- Call on Group Call key while busy on another call
- Call Waiting, and
- Call on Dial Intercom key while busy on another call.

The buzz cadence is the same as the ringing cadence that applies to a particular kind of call. For example, if a user receives a call that is a Group Call, FIT alerts users with a buzz cadence unique to group calls. If the user receives a call on the Call Waiting key, FIT provides a buzz cadence signifying call waiting.

Operating parameters

Flexible Incoming Tones applies only to Meridian 1 proprietary telephones.

Flexible Incoming Tones does not apply to the following:

- Automatic Call Distribution (ACD) call forcing
- ACD agent receiving a call on ASP key
- ACD supervisor receiving a call on AMG key
- Manual signaling
- Signal Source activated by an attendant console, and
- Ring Again.

Digital telephones in Handsfree mode receive the regular buzz, even if FIT is enabled.

The telephone buzzes with a cadence only if the customer and telephone options are activated. If either option is off, the telephone receives the standard buzz.

Feature interactions

Automatic Call Distribution

If an Automatic Call Distribution (ACD) agent telephone has FIT allowed and either is off-hook in the handset mode or has the headset plugged in, the agent receives a buzz cadence when a new call is presented. If FIT is not allowed, the agent telephone receives the standard buzz tone.

Dial Intercom Groups

For Dial Intercom Group (DIG) calls with the voice (V) option, if the telephone receiving the call is busy, the user hears one buzz followed by a flashing indicator. This is how DIG works with or without FIT.

Feature packaging

This feature is included in base system software.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. Table 107 "LD 15" (page 311)

Allow or deny Flexible Incoming Tones (FIT) at the customer level.

2. [Table 108 "LD 11" \(page 311\)](#)

Allow or deny Flexible Incoming Tones for Meridian 1 proprietary telephones.

Table 107
LD 15

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	FTR	Features and options
CUST		Customer number
	0-99	Range for Large System and CS 1000E system.
	0-31	Range for Small System and Media Gateway 1000B.
- OPT	(DBD) DBA	FIT (denied) allowed for Meridian digital telephones.

Table 108
LD 11

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
TN	l s c u	Terminal number
	c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
		Format for Small System and Media Gateway 1000B where c = card and u = unit.
CLS	(FITD) FITA	Flexible Incoming Tone (denied) allowed.

Feature operation

No specific operating procedures are required to use this feature.

Total Redirection Count

Contents

This section contains information on the following topics:

- “Feature description” (page 313)
- “Operating parameters” (page 313)
- “Feature interactions” (page 314)
- “Feature packaging” (page 315)
- “Feature implementation” (page 315)
- “Feature operation” (page 316)

Feature description

This feature allows a limit to be defined on the number of redirections within a private network allowed to a call, before the call receives intercept treatment.

Both the limit on the redirection for a call and the type of Intercept treatment that the call receives are customer-defined in LD 15. This applies to on-node and off-node redirections, and to all types of redirections.

Operating parameters

The maximum value that may be given to the Total Redirection Count (TRCNT) limit is seven.

The TRCNT is kept active until the call is established or directed to the attendant.

The TRCNT takes precedence over higher count limits placed on redirected calls, while lower count limits take precedence over the TRCNT.

It is possible to define a different TRCNT limit at each node. For this reason, it is possible for a node to receive a redirected call from another node that exceeds its TRCNT limit. In this case, the TRCNT count for the call is set to the TRCNT limit defined for the node. At least one attempt is made to terminate the call before intercept treatment is given.

For off-node operation, the TRCNT count overrides the Redirection Count (RCNT) count in the Integrated Services Digital Network (ISDN) field in the SETUP message. This implies that the count transmitted to a node is either interpreted as TRCNT or Call Redirection Threshold (RCNT), depending on the configuration at the receiving node.

For off-node calls, this feature applies only to systems using Meridian Customer Defined Networking (MCDN) signaling over ISDN Signaling Link (ISL)/ISDN TIE links. Network Attendant Service is required to route a call to an attendant at another node.

Intercept to the attendant does not count as a redirection attempt.

The following ISDN call restrictions apply:

- Tandem Threshold, which is the limit placed on the number of tandem nodes allowed in a network connection
- The Public Service Telephone Network (PSTN) Threshold, which is the limit placed on the number of PSTNs allowed in a network connection
- The Call Redirection Threshold, which is a limit on the number of times that a call can be redirected off-node. If the Total Redirection Count (TRCNT) Limit is a value greater than zero, the ISDN field in the SETUP message transports the TRCNT information rather than the Redirection Count (RCNT) information
- The $M\mu/A$ Law Conversion Threshold, which is a limit on the number of $M\mu/A$ Law Conversions allowed in a network connection
- Satellite Delay Threshold, which is a limit on the number of satellite delays allowed in a network connection
- Disconnect Supervision Threshold, which limits to one the number of unsupervised trunks allowed in a network connection

Feature interactions

Call Forward No Answer and Transfer

If a call has attempted Call Forward No Answer and was extended by the attendant, the call will not be intercepted when the TRCNT limit has been exceeded. The call will continue to ring the telephone until recalled to the attendant.

If Overflow (OVF), Busy (BSY), or Source (SRCx) is configured as Intercept Treatments a call attempting Call Forward No Answer, that exceeds the Total Redirection Count limit, will not be intercepted. Further redirections are prohibited and the call continues to ring the current telephone.

Group Hunt

Group Hunt takes precedence over the TRCNT feature, in that the TRCNT limit is not applied to a Group Hunt call.

Hunt, Call Forward Busy, Call Forward All, Calls Call Forward No Answer, Second-level Call Forward No Answer

Hunt, Call Forward Busy, Call Forward All Calls, Call Forward No Answer, and Second-level Call Forward No Answer redirections are limited to the value defined in the TRCNT limit (if greater than 0). If this limit is exceeded, intercept treatment is given.

Intercept treatment

Intercept treatment is not given if a call is a Network Automatic Call Distribution (NACD) ACD call, if a call is a Central Office trunk in Night Service (specific treatment is given rather than customer-defined intercept treatment), or if the call is a data call (overflow tone is automatically given).

Feature packaging

For internode operation, Integrated Services Digital Network (ISDN) package 145.

For detecting trunk type across a network, Network Attendant Service (NAS) package 159.

For attendant display, Calling Party Name Display (CPND) package 95.

For the attendant to override a redirection configuration, Attendant Break-in/Trunk Offer (BKI) package 127.

Feature implementation

Use [Table 109 "LD 15" \(page 315\)](#) to configure the type of intercept treatment that the redirected call receives, and the number of times that a call can be redirected before being intercepted.

Table 109
LD 15

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	INT	Intercept treatment options

Table 109
LD 15 (cont'd.)

Prompt	Response	Description
...		
- RCLE	(ATN) OVF ATN	Redirection Count Limited Exceeded as defined by TRCL. ATN is not allowed for attendant calls. NAP is not allowed for any field for RCLE.
TYPE	RDR	Call Redirection
...		
- TRCL	(0)-7	Total Redirection Count Limit. Number of times that a call can be redirected before being intercepted. Zero means that redirection is not limited by this feature, but is limited by various configurations.

Feature operation

When the total redirection count exceeds the defined limit, the call receives the customer-defined intercept treatment. This treatment includes receiving busy indication, overflow indication, or recorded announcement, receiving one of eight special tones, or being routed to the attendant. If the call is routed to the attendant, it is presented on the Incoming Call Indicator (ICI) Intercept key and the reason for redirection is given on the console display. The attendant may then use Attendant Break-In to connect to the desired station (if the desired station is established on a call).

Trunk Barring

Contents

This section contains information on the following topics:

- “Feature description” (page 317)
- “Operating parameters” (page 318)
- “Feature interactions” (page 318)
- “Feature packaging” (page 320)
- “Feature implementation” (page 320)
- “Feature operation” (page 324)

Feature description

The Trunk Barring feature provides the option of denying or allowing a direct or modified connection between customer defined routes.

Trunk Barring works in conjunction with Route Access Restriction Tables (ARTs) defined in LD 56. Trunk Barring is applied on a route basis. The four route categories that Trunk Barring recognizes, and the types of routes in each category, appear in the following table:

Table 110
Route categories and types recognized by Trunk Barring

Route Category	Route Types
Central Trunk Office (COT)	COT, FEX, WAT
Direct Inward Dialing	DID
TIE	TIE, CAA, CAM, CSA
Other trunk types	ADM, DIC, MDM, PAG, RCD

Trunk Barring applies to all methods of connecting the trunks (for example, dialing route access, call modification, or attendant extension). A route is allocated an Access Restriction Table (ART) linked by a table number (ART number) in the Route Data Block. The ART to be used for a connection is determined by the first trunk in the connection independent of whether the trunks are incoming or outgoing. The first trunk in the connection is referred to as the Originating Trunk Connection (OTC).

A default table exists so that LD 56 does not have to be used to assign an ART number to a newly created route. If the default value for each Route Category is ART number 0, no trunk barring will occur.

Operating parameters

When activated in conjunction with the Route Access Restriction Tables, Trunk Barring prohibits previously allowed connections. Previously restricted connections cannot be lifted or circumvented by Trunk Barring.

Trunk Barring does not apply to Recorded Announcement (RAN), Music (MUS), Automatic Wake-Up (AWU), or Centralized Attendant Service (CAS) trunks as it is inconsistent with their defined purposes.

Feature interactions

Access Restrictions

Trunk Barring is at the top of the hierarchy for access restrictions.

Attendant Break-In

Trunk Barring does not result in intercept treatment for Toll Operator Break-In.

Attendant-Extended Calls

When an attendant attempts to extend an Originating Trunk Connection on a barred route, overflow tone is given.

Call Forward

This section applies to Call Forward All Calls, Call Forward Busy, Call Forward by Call Type, Call Forward External Deny, Call Forward Internal Calls, Call Forward No Answer, Call Forward No Answer Second Level, and Call Forwarding

If an Originating Trunk Connection is forwarded to a barred route, the caller receives the intercept treatment specified in the Customer Data Block.

Call Transfer

The originator of a call transfer, unless otherwise restricted, is able to connect to a denied party on a consultation basis. Operating the Transfer key on a Meridian 1 proprietary telephone or going on-hook on

an analog (500/2500-type) telephone does not result in a call transfer if the Originating Trunk Connection is barred. The user of a Meridian 1 proprietary telephone remains connected to the denied party until releasing the connection and returning to the held Originating Trunk Connection. The user of an analog (500/2500-type) telephone is re-rung by the Originating Trunk Connection when a transfer is attempted and denied.

Conference Calls

The originator of a conference call can only connect to a barred route on a consultation basis. A switchhook flash from an analog (500/2500-type) telephone results in a reestablished connection with the Originating Trunk Connection. The user of a Meridian 1 proprietary telephone must release the barred connection to return to the Originating Trunk connection, or the conference containing the Originating Trunk connection; operating the Conference key on a Meridian 1 proprietary telephone has no effect. An attendant can return to the Originating Trunk Connection, or the conference containing the Originating Trunk Connection, by releasing the barred connection. This is done by pressing the RLS DEST key; pressing the Conference key has no effect.

Direct Trunk Access

When an Originating Trunk Connection attempts a trunk connection to a route which is restricted by its Access Restriction Table, the connection is not allowed. The intercept treatment specified in the Customer Data Block is applied.

Enhanced Night Service

Any incoming call that is routed by Enhanced Night Service to a telephone from which it is barred will not be connected. Overflow tone (fast busy) will be given to the incoming trunk instead.

Intercept Treatment

A telephone that is intercepted to the attendant cannot apply Ring Again on No Answer.

ISDN Semi Permanent for Australia

For calls using or requesting an ISPC link, Trunk Barring is provided according to the configuration of the route associated to the phantom trunk TN. This configuration is independent of the route associated to the real TN.

Network Alternate Route Selection (NARS)/Basic Alternate Route Selection (BARS)

If one route is barred, the system will look for the next route in the Route List Index (RLI) and if this route is not barred, the call will go through on this route. If the second route is barred, the system will continue searching the next route in the Route List Index, until an unbarred route is found.

When implementing Trunk Barring caution must be exercised not to circumvent the intended NARS/BARS restrictions.

Toll Operator Break-In

Trunk Barring results in intercept treatment for all route types that can be barred, except Toll Operator Break-In.

Trunk to Trunk Connection

Trunk Barring takes precedence over the Trunk to Trunk Connection feature.

Virtual Network Services

With respect to this feature the following cases apply:

- When the second trunk involved in the call is used by VNS, no trunk barring is applied regardless of the configuration of the first trunk. The call is always allowed to get through.
This implementation completely overrides the Trunk Barring feature.
- When the first trunk involved in the call uses VNS, and the second one is not used by VNS, trunk barring is performed according to the content of the default ART table for the TIE trunk.

Feature packaging

This feature requires Trunk Barring (TBAR) package 132.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 111 "LD 56" \(page 322\)](#)
Modify trunk barring Access Restriction Tables (ARTs).
2. [Table 112 "LD 56" \(page 323\)](#)
Change or print ART number for the route.
3. [Table 113 "LD 56" \(page 323\)](#)
Change or print the route category default table.

In most cases that require barring, only one ART is necessary, although multiple ARTs may be defined per route. Whenever a new route is created (in LD 16), the default ART defined for that route type is assigned to the route. This default depends on the route type being created.

The flexibility of assigning ART by route is also available. The default table which specifies which ART table is to be assigned to a route type is changeable in LD 56. Until this is done, the default ART is used.

The following is a guideline on how to configure Trunk Barring:

1. Gather all information regarding the type of route to be used in the system.
2. For each route type, list beside it the route types that are barred from connecting to it.
3. For each route type, assign a code number from 1 to 63. Look for the route types that are barred from accessing the same types and assign the same code number to them. If a route type is not barred from accessing any other route type, it is assigned code number 0.
4. When each route type is assigned a code number, go back to step 2 and replace the route types that the route is barred from accessing with their code number.
5. Using LD 56, create all necessary Access Restriction Tables (ARTs). Using the code number of the originating route type as the ART number, deny the necessary route type using the code numbers assigned in the previous step.
6. Assign each ART to a route in one of two methods:
7. Use LD 56 to create the Route Category Default Table (RCDT). As each route is created using LD 16, it is assigned the default ART according to route type.
8. Use LD 56 to assign to existing routes the desired ART.

The following is an example of how to configure trunk barring using the procedures listed above. This example is not reflective of the typical situation, but is only used to show the steps involved.

List all route types.

- COT
- TIE
- DID
- PAG
- DIC
- RAN – ignore because it cannot be barred.
- MDM

List route types to which the originator is barred access.

- COT is not barred from accessing any type.
- TIE is barred from accessing COT, PAG, DIC, and DID.

- DID is barred from accessing TIE, DIC, and MDM.
- PAG cannot be originator, but can be barred by other route types.
- DIC cannot be originator, but can be barred by other route types.
- MDM is barred from accessing COT, DID, PAG, and DIC.

Assign each originating route type a code number from 0 to 63.

- COT is assigned 0 (it is not barred access to any route type).
- TIE is assigned 1.
- DID is assigned 2.
- PAG is assigned 0 (this cannot be an originating route, but it can be barred by other route types).
- DIC is assigned 0 (this cannot be an originating route, but it can be barred by other route types).
- MDM is assigned 3.

Replace the route types the originator is barred from accessing with their code numbers.

- COT (ART 0) – not barred.
- TIE (ART 1) – is barred from accessing 0, and 2.
- DID (ART 2) – is barred from accessing 0, 1, and 3.
- PAG/DIC (ART 3) – not barred.
- MDM (ART 4) – bars 0, and 2.

Configure the Route Category Default Table (RCDT).

- COT 0.
- TIE 1.
- DID 2.
- OTH 0 – MDM will initially be assigned ART 0 like DIC and PAG, but can be changed using the RART prompt.

Table 111
LD 56

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	TBAR	Add or change Access Restriction Table(s) (ARTs).
ART	(0)-63	Select ART to add or change. If ART table 0 is defined, no restrictions apply.

Table 111
LD 56 (cont'd.)

Prompt	Response	Description
DENY	<CR>	Return to REQ prompt.
	yyy yyy	Enter ART numbers denied to Originating Trunk Connection (OTC).
	ALL	Deny all ARTs to OTC.
	xALL	All ART numbers allowed to OTC.
	Xyyy Xyyy	Enter ART numbers allowed to OTC, or change to remove previously blocked connections.
	<CR>	Return to REQ prompt with no table being stored.

Table 112
LD 56

Prompt	Response	Description
REQ	CHG PRT	Change or Print. REQ = NEW, or OUT is disallowed for RART.
TYPE	RART	Change ART number for the route.
CUST	xx	Customer number, as defined in LD 15
ROUT	(0)-511 (0)-127	Route number. For Small Systems
ART	(0)-63 <CR>	ART to assign to route(s). If ART table 0 is defined, no restrictions apply. Return to REQ prompt. ART remains unchanged.

Table 113
LD 56

Prompt	Response	Description
REQ	CHG PRT	Change or Print. REQ = NEW, or OUT is disallowed for RCDT.
TYPE	RCDT	Change the route category default table.
COT	(0)-63	COT, FEX, and WAT routes are assigned the entered ART when the route is created in LD 16.
DID	(0)-63	DID routes are assigned the entered ART when the route is created in LD 16.

Table 113
LD 56 (cont'd.)

Prompt	Response	Description
TIE	(0)-63	CAA, CAM, CSA, and TIE routes are assigned the entered ART when the route is created in LD 16.
OTH	(0)-63 <CR>	ADM, DIC, MDM, PAG, and RCD routes are assigned the entered ART when the route is created in LD 16. Return to the REQ prompt.

Feature operation

Barring is implemented via service change by a qualified technician. If the connection is not allowed, intercept treatment defined by the ACCD prompt in LD 15 is implemented.

Trunk Failure Monitor Enhancement

Contents

This section contains information on the following topics:

- “Feature description” (page 325)
- “Operating parameters” (page 325)
- “Feature interactions” (page 326)
- “Feature packaging” (page 326)
- “Feature implementation” (page 326)
- “Feature operation” (page 326)

Feature description

This enhancement to the “Trunk Failure Monitor” (page 327) feature provides a visual display on M2250 attendant consoles to indicate Direct Inward Dialing (DID)/Direct Outward Dialing (DOD)/TIE trunk line-break alarm conditions, and optionally to indicate 2.0 Mbps Digital Trunk Interface or Primary Rate Interface (PRI) Out-of-service conditions. The upper-most left key lamps on the console flash to indicate these trouble conditions.

Operating parameters

Trunk Failure Monitor (TFM) package 182 must be equipped.

This enhancement is not supported for:

- Tenant Groups attendants
- 1.5 Mbps Digital Trunk Interface (DTI), and
- Automatic Trunk Maintenance.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

This feature requires Trunk Failure Monitor (TFM) package 182.

Feature implementation

Table 114

LD 15 - Configure the attendant trunk failure display.

Prompt	Response	Description
REQ:	NEW CHG	Add, or change.
TYPE:	FTR	Features and options
...		
- TFDR	(NO) YES	Trunk Failure Display required. Prompted with TFM package 182. Requires M2250 console.

Feature operation

The upper-most left key lamps on the console flash to indicate trouble conditions.

If the attendant is in Position Busy, Night Service, or Loop Busy state, without a call on the console, pressing the upper-most left key causes the display to show the failed trunk unit or loop number. The lamp state changes from flashing to lit. If there is more than one failed trunk or loop, the display shows them one at a time, and the lamps remain flashing until all failed trunk units or loop numbers are displayed.

When the trouble conditions have been resolved, the lamps become dark to indicate that the trunk or loop is available for normal use.

Trunk Failure Monitor

Contents

This section contains information on the following topics:

- “Feature description” (page 327)
- “Operating parameters” (page 327)
- “Feature interactions” (page 328)
- “Feature packaging” (page 328)
- “Feature implementation” (page 328)
- “Feature operation” (page 328)

Feature description

The Trunk Failure Monitor (TFM) feature detects Line Break Alarm Signals (LBAS), which are generated because of trouble conditions on Direct Inward Dialing (DID), Direct Outward Dialing (DOD), or TIE trunks, or service degraded to Out-of-service (OOS) on 2.0 Mbps Digital Trunk Interface (DTI) or Primary Rate Interface (PRI) trunks. If a line break is detected, a trunk message is printed on the maintenance TTY, and the affected trunk is rendered BUSY to stop any further seizure of the trunk during outgoing calls.

Once the line break trouble condition has been fixed, a different Line Break Alarm Signal (LBAS) is generated. The TFM feature detects this signal, prints another trunk message on the TTY indicating that the trouble condition has been corrected, and renders the repaired trunk unit IDLE for normal use.

Operating parameters

TFM is not supported by the Attendant Administration feature.

TFM is not supported on 1.5 Mbps DTI.

TFM requires the QPC730B for DID or DOD trunks, and the QPC774 for TIE trunks.

A Centralized Attendant Service (CAS) attendant can only monitor the trunks on the switch on which the attendant is located.

This feature is supported on the M2250 attendant console.

Feature interactions

Extended DID/DOD Software Support - Europe

As part of the Trunk Failure Monitor feature, the BAR/UNBAR messages are received from IPE XDID trunks (LD 15 must be configured with TFDR = YES); when a BAR message indicating a problem situation is received, a TRK501 message is printed on the TTY, the uppermost key lamps light up on the attendant console, and the trunk is placed into BUSY state to prevent the trunk from being seized for new outgoing calls. The reception of an UNBAR message indicates that the problem situation has been cleared. A TRK502 message is printed on the TTY, the lamps on the attendant console are darkened, and the trunk is idled. Note that Baring Allowed (BARA) CLS must be configured on the XDID trunk for the described process to occur.

Extended Flexible Central Office Trunk Software Support

As part of the Trunk Failure Monitor feature, the BAR/UNBAR messages are received from IPE XFCOT trunks. When a BAR message indicating a problem situation is received, a trunk message is printed on the TTY, the uppermost key lamps light up on the attendant console, and the trunk is placed into BUSY state to prevent the trunk from being seized for new outgoing calls. The reception of an UNBAR message indicates that the problem situation has been cleared. A message is printed on the TTY, the lamps on the attendant console are darkened, and the seized trunk is idled. Note that BARA Class of Service must be configured on the trunk for the described processing to occur.

Feature packaging

Trunk failure Monitor (TFM) package 182.

Feature implementation

There are no specific implementation procedures for this feature.

Feature operation

No specific operating procedures are required to use this feature.

Trunk to Trunk Connection

Contents

This section contains information on the following topics:

- “Feature description” (page 329)
- “Feature interactions” (page 332)
- “Feature packaging” (page 333)
- “Feature implementation” (page 333)
- “Feature operation” (page 334)

Feature description

The Trunk to Trunk Connection feature introduces the following capabilities: transfer on ringing of external trunk across the network, transfer of one supervised outgoing external trunk to another, conference of external trunks and outgoing trunk to trunk charging. These capabilities are available on an analog (500/2500-type) telephone, proprietary telephone or an attendant console.

Transfer on Ringing of External Trunk over Network

Allows the transfer on ringing of an established external trunk call over a supervised analog network TIE trunk. If the called party does not answer within a specified time, the call will slow answer recall to the attendant on the transferring node. This capability ensures that available network resources are not occupied indefinitely.


Transfer of External Trunks

Allows the transfer of one outgoing external trunk to another trunk provided both calls are answered and both trunks have answer supervision.

As illustrated in [Figure 10 "Transfer on ringing of external call" \(page 330\)](#), Set A is on an incoming/outgoing call with Set X, an external trunk. Set A initiates a call transfer of Set X to Set B. With the Trunk to Trunk

Connection feature, Set A can transfer on ringing without waiting for Set B to answer. If Set B does not answer the transferred call, the external trunk will slow answer recalls to the attendant on the transferring node.

Figure 10
Transfer on ringing of external call

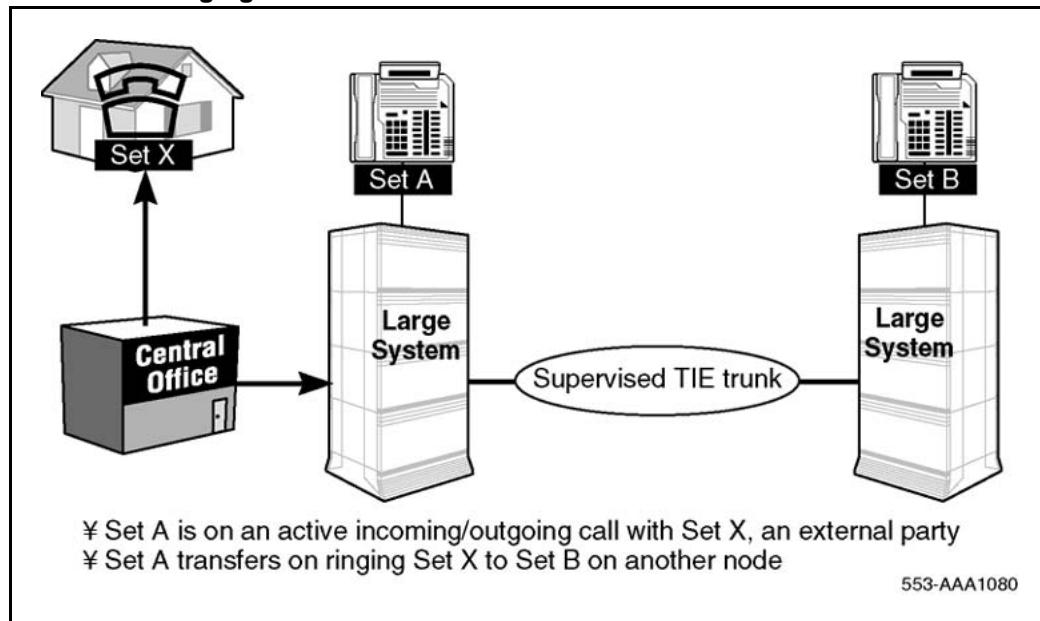


Conference of External Trunks

Allows external trunks to remain established in a conference call in circumstances when all external trunks involved in the call offer disconnect supervision.

[Figure 11 "Conference of external trunks" \(page 331\)](#) illustrates the Conference of External Trunk capabilities of this feature. Set A is on an established conference call with two or more external trunks, Set X and Set Y. When Set A disconnects during the conference, Set X and Set Y continue in the established call.

Figure 11
Conference of external trunks

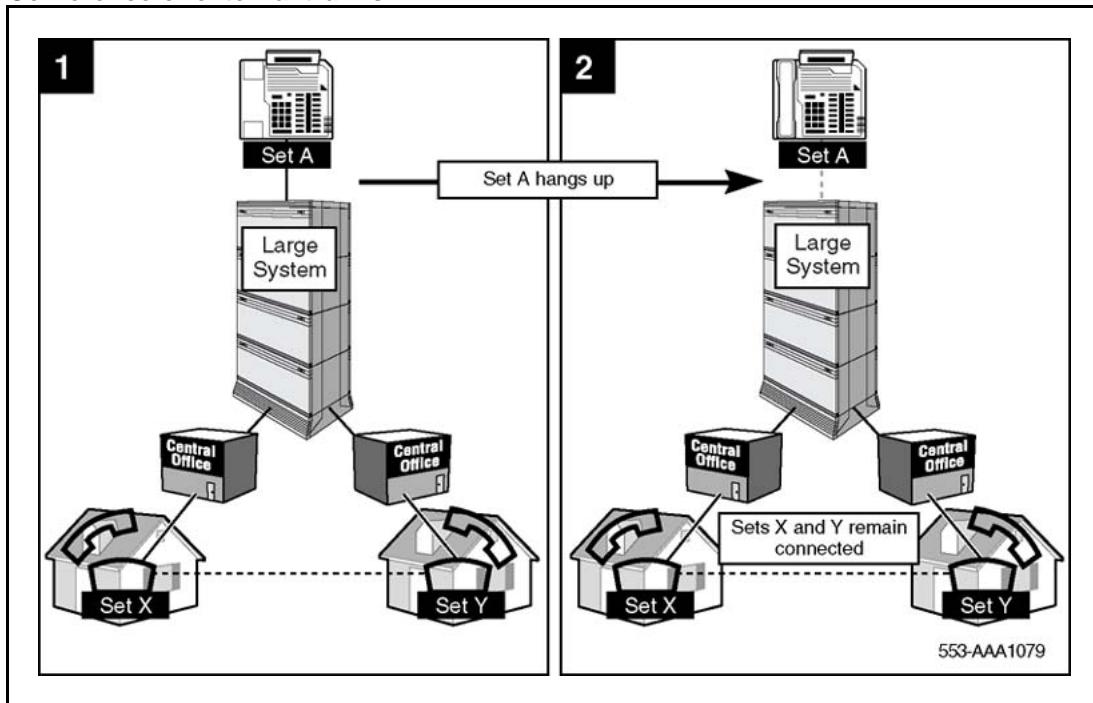

Outgoing Trunk to Trunk Charging

Ensures that outstanding charging information, relevant to both outgoing calls, is contained in relevant Call Detail Recording records.

Operating parameters

Slow answer recall occurs when an external trunk is transferred on ringing across an answer supervised network TIE trunk to a telephone that does not answer. However, the resulting recall will be to an attendant on the transferring node and not to the original telephone which transferred the call.

When transferring one outgoing trunk to another, it is required that the two external calls involved are both answered prior to completing the transfer. Both external trunks involved must have both answer and disconnect supervision.

When the last internal party disconnects from a conference call, involving two or more external trunks, all external trunks must have disconnect supervision for the call to remain established. If any one of the remaining external trunks does not have disconnect supervision, all external trunks will be dropped.

No change is made to existing VNS operation.

Feature interactions

Busy Tone Detection for Japan

Busy Tone Detection for Japan does not impact Trunk to Trunk Connection. However, whichever occurs first, prevails.

Call Transfer

To transfer an external trunk on ringing across a supervised analog network TIE trunk, the external trunk and internal TIE line must have both answer and disconnect supervision, and the external call must be established. To transfer one outgoing external trunk to another, both external trunks must have answer and disconnect supervision, and both external calls must be established.

Centralized Answering Position

A Small System may not have an actual attendant console. Instead, the Small System will use Centralized Answering Position (CAP). The CAP Directory Number (DN) is the customer Night DN. Since no attendant is configured, the customer is viewed to be in Night Service and any calls for the attendant are directed to the CAP. Slow Answer Recall may be presented to a CAP when no attendant console is configured for the customer.

Conference

Trunk to Trunk Connection allows external trunks to remain established in a call, provided that all external trunks involved have disconnect supervision. With respect to charging costs associated with a conference call, once the last telephone involved in the conference call disconnects, a search is made of all remaining trunks in the call to determine which call is established in the call for the longest period of time. This trunk is the chargeable Terminal Number (TN). This process is repeated to find the next chargeable TN.

Multi-Party Operations - Ringing No Answer

In a standalone environment, the RGNA prompt in the Customer Data Block will be used when an external trunk is transferred on ringing and the called party does not answer. In a network environment, the RTIM timer value in the Customer Data Block will be used for slow answer recall.

Message Registration

The last party releasing the call collects the total value of outstanding Periodic Pulse Metering (PPM) generated on outgoing trunks. If the last party is an internal telephone, the outstanding PPM is stored against the meter of the telephone. If the last party is an internal TIE trunk, the outstanding PPM is stored against the meter associated with the internal TIE trunk access code. If the last party is an outgoing external trunk, the outstanding PPM is stored against the meter associated with the external trunk access code.

Night Service

If an attendant is placed in Night Service, calls to the attendant are directed to a station with the Night DN. Recalls are not directed to the Night DN. Recalls are put in the attendant call waiting queue when in Night Service.

Night Service Enhancement

Recalls made while the attendant is in Night Service are routed to the Night DN, if the original call is an external call. In such a case, the destination party is disconnected, the internal network trunk is released and the original extended call is presented to the Night DN. If the original call is internal, recalls are put in the attendant call waiting queue when in Night Service.

Trunk Barring

Trunk Group Access Restriction

Trunk Barring and Trunk Group Access Restriction takes precedence over the Trunk to Trunk Connection feature.

Feature packaging

This feature is included in base system software.

DID to TIE (DTOT) for Japan package 176 must be restricted to enable this feature.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 115 "LD 15" \(page 333\)](#)
Modifications to Customer Data Block.
2. [Table 116 "LD 15" \(page 334\)](#)
Modifications to Customer Data Block.

Table 115

LD 15

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	ATT_DATA	Attendant console options
CUST	0-99	Customer number Range for Large System and CS 1000E system.

Table 115
LD 15 (cont'd.)

Prompt	Response	Description
RTIM	0-31 xxx yyy zzz	Range for Small System and Media Gateway 1000B. Enter defined value for the Slow Answer Recall timer where: xxx = 0-(30)-378 Slow Answer Recall yy y= 0-(30)-510 Camp On Recall zzz = 0-(30)-510 Call Waiting Recall

Table 116
LD 15

Prompt	Response	Description
REQ:	CHG	Change
TYPE:	NET	Trunk and network options.
CUST		Customer number
	0-99	Range for Large System and CS 1000E system.
	0-31	Range for Small System and Media Gateway 1000B.
...		
ISDN	YES	Change the Integrated Services Digital Network options.
- PSTN	NO	Public Switched Telephone Network. Limit the number of PSTNs allowed in a network connection to one PSTN. NO = Put no limit on the number of PSTN connections. YES = Limit the number of PSTN connections.
...		
DITI	YES	Allow Direct Inward Dialing to TIE connections for customer.
TRNX	YES	YES = Allow transfer on ringing of an external trunk over a supervised analog network TIE trunk across private network. NO = Prevent transfer on ringing of an external trunk over a supervised analog network TIE trunk across private network.
EXTT	(NO)	NO = Prevent connection of supervised external trunks through either Call Transfer or Conference.
	YES	YES = Allow connection of supervised external trunks through either Call Transfer or Conference.
	<CR>	CR = Carriage return past the prompt.

Feature operation

No specific operating procedures are required to use this feature.

Trunk Traffic Reporting Enhancement

Contents

This section contains information on the following topics:

- “Feature description” (page 335)
- “Operating parameters” (page 336)
- “Feature packaging” (page 337)
- “Feature packaging” (page 337)
- “Feature implementation” (page 337)
- “Feature operation” (page 337)

Feature description

The following modifications to trunk traffic reporting have been implemented to improve the accuracy of TFC002 traffic reports. The options are selected in the Configuration Data Block.

Traffic Period Option

Without enabling this option, trunk usage added its entire duration into the traffic period in which the disconnection occurred. If the duration was longer than 36 CCS (CCS = 100 call seconds), but less than 50 CCS, a TFS401 message was output. However, that duration was still accumulated and included in the traffic reports. If the duration was longer than or equal to 50 CCS, a TFS402 message was output. This duration was not accumulated, and was excluded from the traffic reports.

The Traffic Period Option enables the CCS to be reported in each traffic report interval. The peg count is still reported at disconnect time as per existing operation.

Note that when the Traffic Period Option is first enabled, the first traffic report may get some TFS403 messages.

Trunk Seizure Option

Without enabling this option, system traffic statistics began accumulating when a call was established. System software determined that the call was established when one of the following occurred: the End-of-Dialing (EOD) timer timed out after the last digit was dialed; the octothorpe (#) was dialed; or answer supervision was received. In some situations, customers could not match system traffic reports with their carrier reports, because many carriers start accumulating statistics when a trunk is seized.

The Trunk Seizure Option provides the ability to start accumulating statistics upon trunk seizure, rather than when the call is established.

Operating parameters

If the duration of a call is less than two to four seconds, the peg count is not accumulated. This functionality only applies when the trunk seizure option is enabled.

Due to the accumulation at trunk seizure, peg counts occur even if a call is unanswered.

Feature interactions

Automatic Call Distribution

A trunk call to an Automatic Call Distribution (ACD) DN will only be considered established once this call is answered. It is not considered established while the call is waiting in the ACD queue. Therefore, at the end of a traffic period, if a trunk call is in the ACD queue, the Traffic Period Option will not accumulate the duration for this call.

Note that when the duration is accumulated at disconnect or at the end of a traffic period after this call is answered, the total duration including the time the call was in the ACD queue is accumulated. This total duration may be longer than a single traffic period due to the time in the ACD queue and a TFS401, TFS402, or TFS403 message may be output.

Music Trunks

The Trunk Seizure Option is not supported on Music trunks.

Recorded Announcement Trunks

The Trunk Seizure Option is not supported on Recorded Announcement trunks.

Traffic Monitor

The Traffic Monitor feature outputs certain traffic data approximately every minute. The trunk usage and peg count output by the Traffic Monitor feature can be enhanced by enabling the Trunk Seizure Option. The accumulated duration and peg count of a call will begin at trunk seizure time instead of at the time the call was established.

The Traffic Monitor output that starts during the same time that the regular traffic report starts is impacted if the Traffic Period Option is enabled. With this option enabled, the duration of all currently established calls is accumulated at the end of the traffic period. Therefore, this additional duration is also accumulated in the next minute's traffic monitor output. For example, the Traffic Monitor feature and the Traffic Period Option are both enabled. Regular traffic reports are output every half hour. The difference in the accumulated duration from 10:29 to 10:30 may increase dramatically due to the additional durations accumulated for currently established calls at the end of this traffic period.

Feature packaging

This feature is included in base system software.

Feature implementation

Table 117

LD 17 - Configure Traffic Reporting option.

Prompt	Response	Description
REQ	CHG	Change.
TYPE	PARM	Gate opener.
...		
- TPO	(NO), YES	Traffic Period Option. Enter YES to enable, NO to disable, and <CR> to keep the current value.
- TSO	(NO), YES	Trunk Seizure Option. Enter YES to enable, NO to disable, and <CR> to keep the current value.

Feature operation

No specific operating procedures are required to use this feature.

Trunk Verification from a Station

Contents

This section contains information on the following topics:

- “Feature description” (page 339)
- “Operating parameters” (page 340)
- “Feature interactions” (page 340)
- “Feature packaging” (page 340)
- “Feature implementation” (page 341)
- “Feature operation” (page 341)

Feature description

Trunk Verification from a Station (TVS) provides the capability for a classmarked 2500-type telephone (that is, basic push-button telephone having no feature keys) to seize a particular trunk within a trunk group, receive a dial tone, and outpulse digits to complete a call to a remote maintenance site. This feature is used as part of a PC-based Network Management system to allow physical testing of each trunk in the network.

Any compatible, customer-provided PC-based circuit switched network administration and maintenance system can access the trunk to be tested by calling a remote customer-provided responder. The responder supplies the various tones needed to perform the trunk test. The PC then stores and processes the results. Once the testing is complete, the PC disconnects from the tested trunk and accesses the next trunk in the route.

To the system, the PC appears as a 2500-type telephone, which requires the capability to seize a particular trunk member within a trunk route.

Operating parameters

It is recommended that the telephone with a Trunk Verification Allowed (TVA) Class of Service also have CFW All Calls To External DN Denied (CXFD), CFW Busy Denied (FBD), and CFW No Answer Denied (FND) Classes of Service. This setup prevents any restricted telephone from accessing trunks by calling the TVA telephone and subsequently getting transferred or forwarded.

Also, it is strongly recommended that this unit not be configured with an LPA. This will prevent the unit from initiating the PBXT (test message waiting lamps) command in LD 32.

The telephone with a Trunk Verification Allowed (TVA) Class of Service should also be assigned Warning Tone Denied (WTD) Class of Service. This will prevent Attendant Busy Verification, which could impair the trunk frequency measurements that take place during a TVS call. This also prevents the trunk that this telephone has seized from being barged into by the attendant.

Trunk Verification from a Station is not applicable to B-channels on digital links.

When using the Trunk Verification feature to test network trunks, any trunk state other than an idle, such as busy, disabled or maintenance busy, an overflow tone is returned.

Feature interactions

The environment in which the TVS feature will be invoked is a machine environment. That is, the user of the 2500-type telephone with this feature will usually be a PC-based maintenance system. Therefore, minimal interaction exists with other features.

When the 2500-type telephone with a TVA Class of Service makes a TVS call, any Trunk Group Access Restrictions/Trunk Access Restriction Groups (TGAR/TARG) defined in the system are removed for this call.

When a trunk group is bussed out by an attendant console, access to that trunk group is not allowed with the TVS feature.

Feature packaging

This feature is included in base system software.

Feature implementation

Table 118

LD 10 - Allow or deny Trunk Verification from a 2500 telephone.

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	500	Telephone type.
TN		Terminal number
	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
CLS	(TVD) TVA DTN	(Deny) allow TVS. Digitone service is required for 2500 telephones.

Feature operation

To verify that a trunk is working properly (from a 2500 telephone with TVA Class of Service), follow these steps:

Step	Action
1	Lift the handset.
2	Dial SPRE + 70 + ACOD + mmm where: SPRE is the special function access prefix 70 is the special access code for the TVS feature ACOD is the access code of the trunk group to be tested, and mmm is the number of the trunk member that is to be seized; mmm must be three digits (for example, 001).
	--End--

Uninterrupted Line Connections

Contents

This section contains information on the following topics:

- “Feature description” (page 343)
- “Operating parameters” (page 343)
- “Feature interactions” (page 343)
- “Feature packaging” (page 344)
- “Feature implementation” (page 344)
- “Feature operation” (page 345)

Feature description

Uninterrupted Line Connections are connections assigned Warning Tone Denied (WTD) Class of Service. The feature prohibits the imposition of any Camp On or intrusion tones on that line.

This feature is recommended for modem or data lines.

Operating parameters

There are no operating parameters associated with this feature.

Feature interactions

Attendant Barge-In, Attendant Busy Verify, Override

These features cannot be applied to stations with a WTD Class of Service.

Camp-On

A call can be camped on to a station with a WTD Class of Service, but tone is not provided.

Feature packaging

This feature is included in base system software.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 119 "LD 10" \(page 344\)](#)
Assign Warning Tone Allowed for analog (500/2500-type) telephones.
2. [Table 120 "LD 11" \(page 344\)](#)
Assign Warning Tone Allowed for Meridian 1 proprietary telephones.
3. [Table 121 "LD 14" \(page 345\)](#)
Assign Warning Tone Allowed for trunks.

Table 119
LD 10

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	500	Telephone type.
TN	I s c u	Terminal number
	c u	Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit.
		Format for Small System and Media Gateway 1000B where c = card and u = unit.
CLS	(WTA) WTD	Warning tone (allowed) denied.

Table 120
LD 11

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
TN	I s c u	Terminal number
	c u	Format for Large System and CS 1000E system, where I = loop, s = shelf, c = card, u = unit.
		Format for Small System and Media Gateway 1000B where c = card and u = unit.
CLS	(WTA) WTD	Warning tone (allowed) denied.

Table 121
LD 14

Prompt	Response	Description
REQ	CHG	Change.
TYPE	aaa	Trunk type, where: aaa = ADM, AID, ATVN, AWR, CAA, CAM, COT, CSA, DIC, DID, FEX, ISA, MDM, MUS, PAG, RAN, RCD, RLM, RLR, TIE, or WAT.
TN	I s c u c u	Terminal Number For Large Systems For Small Systems
CLS	(WTA) WTD	Warning tone (allowed) denied.

Feature operation

No specific operating procedures are required to use this feature.

United Kingdom Analog Hardware Support

Contents

This section contains information on the following topics:

- “Feature description” (page 347)
- “Operating parameters” (page 349)
- “Feature interactions” (page 349)
- “Feature packaging” (page 349)
- “Feature implementation” (page 349)
- “Feature operation” (page 351)

Feature description

The United Kingdom Analog Hardware Support feature provides the following capabilities:

- UK Analog Trunk Enhancements
- UK Transmission Plans

UK Analog Trunk Enhancements

Software changes have been implemented for the following hardware packs, in order to comply with UK standards:

- XDID (Extended DID trunk card)
- XCOT (Extended Central Office trunk card)
- XTD (Extended Tone Detector card), and
- XFEM (Extended Flexible E&M trunk card).

XDID

Situation	Solution
A DID trunk is not available for a new call.	A backward signal is sent to the Public Switched Telephone Network.
A short line and long line DID trunk requires support.	A 2dB Short Line (SHL) and Long Line (LOL) pad matrix have been defined.

XCOT

Situation	Solution
Support the following types of disconnect signaling required for Central Office trunks: <ul style="list-style-type: none"> • Earth Signaling (Ground Start), • Loop Calling (Disconnect Clearing), and • Loop Calling (Guarded Release) signaling. 	The appropriate disconnect sequences have been programmed.
For Periodic Pulse Metering (PPM), an option is required to default to a meter pulse frequency of 50 Hz (the XCOT pack for the UK can only accept this value).	In the Route Data Block, if the PPM frequency is not prompted, the value will default to 50 Hz.
For Periodic Pulse Metering, the counting of buffered and unbuffered pulses.	The software has been modified to support both buffered and unbuffered PPM pulses.
A time-configurable detector is required to monitor the disconnection of loop trunks, disconnect clear trunks, and release guard trunks.	The Loop Calling Timer (LCT), with a configurable range of 128-32640 milliseconds, has been introduced in the Route Data Block.
UK ringing must be recognized.	To recognize UK ringing, the default value of the ring validation timer has been changed from 512 milliseconds to 256 milliseconds.
UK COT with Earth Signalling (Ground Start) or Loop Calling Disconnect Clearing provides hardware answer supervision.	The software has been modified to support answer supervision for both Earth Signalling (Ground Start) and Loop Calling Disconnect Clearing. Prompt SUPN appears for both types of signaling in LD 14. Answer supervision is not provided for Loop Calling Guarded Release.

XTD

The XTD pack can be configured, on a per-call basis, for either Dual-tone Multifrequency (DTMF) or Dial Tone Detection (DTD) signaling.

XFEM

The XFEM pack supports recorded announcement trunks, paging trunks, and music trunks, two-wire E&M, four-wire E&M, and 2280 Hz TIE trunks.

UK Digital Transmission Plans

Software changes have been implemented in order to comply with UK digital transmission plans for the following:

- Digital trunks, and
- Meridian Modular telephones.

Digital trunks

Situation	Solution
The transmission parameter values for digital trunks must be fixed.	The transmission parameter values for digital trunks are automatically downloaded, based on a zero default value.

Meridian Modular telephones

Situation	Solution
The transmission parameter values must be fixed and automatically downloaded, on a per-system basis.	The software has been changed to prevent transmission parameter prompts from appearing. The transmission parameters will be fixed for the UK, and will be downloaded on a per-system basis.

Operating parameters

There are no operating parameters associated with this feature.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

This feature is included in base system software.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 122 "LD 13" \(page 350\)](#)
Configure the DTD/DTR data block.
2. [Table 123 "LD 14" \(page 350\)](#)
Configure UK trunks, their associated signaling and transmission option.
3. [Table 124 "LD 16" \(page 351\)](#)

Define the Loop Calling Detection Timer, and how the ground signal from a Recorded Announcement (RAN) machine should be interpreted for XFEM cards.

Table 122
LD 13

Prompt	Response	Description
...		
TYPE	XTD	Extended Dial Tone Detector and Digitone Receiver data block.
...		
XTDT	(0)-7	Extended Tone Detector Table Number, prompted when type = XTD. If a table other than 0 is entered, it must exist in LD 97.
- DTO	(NO) YES	Dial Tone Detection Only. (NO) = Do not disable DTR detection. YES = Disable DTR detection, only perform dial tone detection.

Table 123
LD 14

Prompt	Response	Description
...		
XTRK	XFEM XDID XCOT	Extended Flexible E&M trunk card. Extended DID trunk card. Extended CO trunk card.
...		
SIGL	LDC LGR	Trunk signaling. Loop calling, disconnect clear. Accepted when TYPE = COT and UK package is equipped. Loop calling, guarded release. Accepted when TYPE = COT and UK package is equipped.
...		
CLS	(SHL) LOL	(Short line) Long line Class of Service.

Table 123
LD 14 (cont'd.)

Prompt	Response	Description
	NTC	Transmission Class of Service, where: NTC = Non-transmission Compensated
	TRC	TRC = Transmission Compensated, and
	VNL	VNL = Via Net Loss. For E&M4 Wire and AC15 defined on XFEM trunks, NTC is used for circuit switched network-to-PSTN Link connections, while VNL is used for circuit switched network-to-circuit switched network TIE connections. SHL replaces TRC and LOL replaces NTC and VNL for XDID and XCOT trunks in Phase 7C and later.

Table 124
LD 16

Prompt	Response	Description
...		
TIMR	LCT 0-128-1280	Loop Calling Detection Timer in milliseconds. Default for COT trunks = 128. Default for all other trunks = 256.
...		
GRD	(PLAY)	Determines how the ground signal from a RAN machine should be interpreted for XFEM cards. The ground signal from the RAN machine indicates that the machine is playing.
	IDLE	The ground signal from the RAN machine indicates that the machine is idle.

Feature operation

No specific operating procedures are required to use this feature.

User Selectable Call Redirection

Contents

This section contains information on the following topics:

- “Feature description” (page 353)
- “Operating parameters” (page 354)
- “Feature interactions” (page 355)
- “Feature packaging” (page 357)
- “Feature implementation” (page 358)
- “Feature operation” (page 360)

Feature description

User Selectable Call Redirection (USCR), enhances the implementation of several existing features. First, it enables the user to modify DNs at the telephone for the following redirections:

- Flexible Call Forward No Answer DN (FDN)
- Hunt DN (HUNT)
- External Flexible Call Forward No Answer DN (EFD), and
- External Hunt DN (EHT).

The Station Control Password feature must be active, with passwords defined in LD 15, for the user to change these redirection DNs.

Second, it expands the number of selectable Ringing Cycle Options (RCOs) for Flexible Call Forward No Answer (CFNA) from one to three.

User assignment of redirection DNs

USCR permits the user to modify any of the redirection DN's for FDN, HUNT, EFD, and EHT from a rotary, push-button, or digital telephone.

Depending on the type of telephone, there are three ways to access this feature: using a Special Service Prefix Code (SPRE 9915), a Flexible Feature Code (FFC), or the User Selectable Redirection (USR) key.

The user can also change the RCO from a telephone after accessing USCR. For security reasons, the user must enter the Station Control Password (SCPW) before changing the redirection DNs or the RCO.

Ringing Cycle Options (RCOs) for CFNA

The original implementation of Call Forward No Answer provided a single option (CFNA in LD 15) that defined the number of normal ringing cycles before CFNA treatment. The value could be in the range of 1-15, with a default of 4. This value determined how many times the telephone rang before CFNA treatment was initiated.

The CFNA prompt is now replaced with prompts CFN0, CFN1, and CFN2, each of whose value can be in the range of 1-15, with a default of 4. The number of distinctive ringing cycles for CFNA is also expanded. The DFNA prompt in LD 15 is replaced with DFN0, DFN1, and DFN2, with the same value range and default.

Additionally, the Ringing Cycle Option (RCO) prompt appears in LDs 10 and 11 for each telephone. Its value, in the range of 0-2, is a pointer to the CFNx and DFNx entries in the Customer Data Block. The following chart explains the relationship of the RCO value and the CFNx and DFNx entries in the Customer Data Block.

Operating parameters

To assign or print the RCO for a telephone requires that it have the Flexible Call Forward No Answer Allowed (FNA) Class of Service or Message Waiting Allowed (MWA) Class of Service.

The user's telephone must have User Selectable Redirection Allowed (USRA) Class of Service and a Station Control Password (SCPW). The user must enter the correct password to access USCR.

Table 125

Relationship between RCO value and CFNx, DFNx contents

An RCO value (per telephone) of	Selects these CFNA and DFNA entries (with sample contents shown)	And has this effect
0	CFN0 (Default value of 4)	CFNA treatment after four rings
	DFN0 (Value set to 2)	CFNA treatment after two distinctive rings

Table 125

Relationship between RCO value and CFNx, DFNx contents (cont'd.)

An RCO value (per telephone) of	Selects these CFNA and DFNA entries (with sample contents shown)	And has this effect
1	CFN1 (Value set to 6)	CFNA treatment after six rings
	DFN1 (Value set to 5)	CFNA treatment after five distinctive rings
2	CFN2 (Value set to 3)	CFNA treatment after three rings
	DFN2 (Default value of 4)	CFNA treatment after four distinctive rings

Basic Rate Interface (BRI) telephones do not support USCR because they cannot access SPRE or FFC, and have no feature keys. Therefore, BRI telephones will always use the entries for CFN0 and DFN0.

The user cannot use USCR to initially configure call redirection features. The features must be equipped, and the initial call redirection DNs must be established, via a service change.

This feature cannot be used remotely. A user can only change redirection DNs or the RCO for the telephone being used to access USCR.

Feature interactions

Automatic Call Distribution

An Automatic Call Distribution (ACD) DN cannot be stored as a redirection DN unless the ACD queue is defined as a Message Center.

Attendant Administration

Attendant Administration does not support assigning the USR key, RCO, or USRA/USRD Class of Service.

Autodial

USCR does not support Autodial; Autodial cannot be used to dial all or part of the digits for USCR programming.

Call Forward All Calls

When CFW redirects a call from telephone A to telephone B, and telephone B does not answer, the RCO of telephone B determines how long it rings. After the designated number of rings, the FDN of telephone A redirects the call.

Call Forward by Call Type

USCR enables a user to assign EFD from the telephone.

Call Forward No Answer**Flexible Call Forward No Answer**

The single parameters previously used to define normal ringing cycles (CFNA) and distinctive ringing cycles (DFNA) are expanded to three (CFN0-2 and DFN0-2), with the Ringing Cycle Options (RCO) parameter used to select the specific CFNA and DFNA entries for each telephone.

Call Forward No Answer, Second Level

The number of ringing cycles before Second Level Call Forward No Answer (SFA) is determined by the RCO for the ringing DN, as with CFNA.

Call Redirection by Time of Day

User Selectable Call Redirection is not supported by Call Redirection by Time of Day.

Dial Access to Features and Services

The 9915 feature code accesses USCR from an analog (500/2500-type) telephone or a Meridian 1 proprietary telephone. The user dials this code after dialing the SPRE.

Directory Number Delayed Ringing

With User Selectable Call Redirection (USCR) a user can change the number of CFNA/DFNA ringing cycles. If the user changes the CFNA/DFNA value so that CFNA takes place before the Directory Number Delayed Ringing timer runs out, none of the SCN/MCN keys will receive an audible notification.

Distinctive/New Distinctive Ringing

The single parameter previously used to define distinctive ringing cycles (DFNA) is expanded to three (DFN0-2), with the Ringing Cycle Options (RCO) parameter used to select the specific DFNA entry for each telephone.

DPNSS1 Diversion

The User Selectable Call Redirection feature triggers Diversion Validation. If the numbering plan is DPNSS1 then diversion occurs. Numbering plan routes are checked to determine if redirection DN's are through DPNSS1 on a first choice route basis. If the number plan is not a DN through DPNSS1, then User Selectable Call Redirection works as usual.

Enhanced Hot Line**Flexible Hot Line**

An analog (500/2500-type) telephone with a Hot Line feature cannot use User Selectable Call Redirection, because it cannot access any features through SPRE or FFC.

Hunting

User Selectable Call Redirection permits a user to change the HUNT DN or EHT from a telephone. An attendant DN is only allowed for HUNT and EHT if the customer has the attendant defined as a message center (LD 15 – MATT=YES).

Message Center (MC) and Message Waiting

USCR affects the number of times the DN rings before the call is forwarded to the Message Center. The RCO in the Terminal Number (TN) block of the Multiple Appearance Redirection Prime (MARP) for the called DN determines the number of times the DN rings.

Multiple Appearance Redirection Prime (MARP)

When a Multiple Appearance DN is rung, the determination of the number of ringing cycles for CFNA depends on the value of the MARP prompt in LD 17. If the value is YES, the number of ringing cycles is determined by the RCO number of the DN that is classified as a MARP TN. If the DN is a Multiple Appearance DN (MADN), the RCO values in the other TN blocks for that DN are ignored.

If the MARP value is NO, the RCO is taken from the first TN in the DN block with a primary appearance of the DN. If there is none, the last TN in the DN block is used.

Pretranslation

If Pretranslation (package 92) is enabled, the digits entered as the redirection DN are pretranslated before they are stored. Note that no Pretranslation occurs when the redirection DNs are used in such call processing features as Hunting or CFNA, eliminating the possibility that the redirection DN is pretranslated twice.

Short Hunting

USCR does not support changing the HUNT or EHT for a telephone with Short Hunt enabled. USCR also does not support entering 000 from a telephone as the HUNT.

Speed Call

Speed Call is not supported by USCR.

Feature packaging

Flexible Feature Codes (FFC) package 139 is a prerequisite for the user activation part of this feature because it provides for the Station Control Password.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 126 "LD 15" \(page 358\)](#)
Configure USCR in the Customer Data Block.
2. [Table 127 "LD 10 " \(page 359\)](#)
Configure USCR for analog (500/2500-type) telephones.
3. [Table 128 "LD 11 " \(page 359\)](#)
Configure USCR for Meridian 1 proprietary telephones.
4. [Table 129 "LD 57 " \(page 359\)](#)
Configure USCR Flexible Feature Codes.

Table 126

LD 15

Prompt	Response	Description
REQ:	NEW CHG	ADD, or change.
TYPE:	RDR	Call Redirection
CUST		Customer number
	0-99	Range for Large System and CS 1000E system.
	0-31	Range for Small System and Media Gateway 1000B.
- CFN0	1-(4)-15	Number of normal rings for CFNA, Option 0.
- CFN1	1-(4)-15	Number of normal rings for CFNA, Option 1.
- CFN2	1-(4)-15	Number of normal rings for CFNA, Option 2.
- DFN0	1-(4)-15	Number of distinctive rings for DFNA, Option 0.
- DFN1	1-(4)-15	Number of distinctive rings for DFNA, Option 1.
- DFN2	1-(4)-15	Number of distinctive rings for DFNA, Option 2.
TYPE	FFC	Gate opener.
...		
- SCPL	(0-8	Length of Station Control Password. If 0 = password disabled, USCR cannot be used.

Table 127
LD 10

Prompt	Response	Description
REQ:	NEW CHG	Add, or change.
TYPE:	500	Telephone type.
RCO	(0) 1 2	Ringing Cycle Option for CFNA, in the range of 0-2, with a default of 0.
SCPW	xxx...xx	Station Control Password.
CLS	(USRD) USRA	User Selectable Redirection Class of Service (permitting SPRE and FFC access) (denied) allowed.

The technician can use easy change to change the RCO and USRA/USRD CLS. At the ITEM prompt, type RCO <value> where the value is 0-2.

Table 128
LD 11

Prompt	Response	Description
REQ:	NEW CHG	Add, or change.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
RCO	(0) 1 2	Ringing Cycle Option for CFNA, in the range of 0-2, with a default of 0.
SCPW	xxx...xx	Station Control Password.
CLS	(USRD) USRA	User Selectable Redirection Class of Service (permitting SPRE, FFC, and USR key access) (denied) allowed.
KEY	xx USR	Key number of the USR key.

The technician can use easy change to change the RCO and USRA/USRD CLS. At the ITEM prompt, type RCO <value> where the value is 0-2.

Table 129
LD 57

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
CUST	xx	Customer number, as defined in LD 15
CODE	USCR ALL	Prompt for USCR FFC, or all FFC code types.
USCR	xxxxxxxx	USCR FFC (1-7 digits).
	yyyyyyyy	Define additional FFC codes, as needed.
	<CR>	Ends the entry of FFC codes.

Feature operation

As a prerequisite to accessing the feature, the conditions shown in [Table 130 "Requirements for accessing USCR" \(page 360\)](#) must be met for the selected access method.

Table 130
Requirements for accessing USCR

Requirement	Access Method		
	USR Key	SPRE	FFC
FFC package equipped	Yes	Yes	Yes
SCPL is defined (>0)	Yes	Yes	Yes
SCPW is defined	Yes	Yes	Yes
Telephone has USR key	Yes	No	No
USRA Class of Service defined	Yes	Yes	Yes
SPRE defined	No	Yes	Yes
USCR FFC defined	No	No	Yes

To assign/query a redirection DN using SPRE:

- Take the telephone off-hook, or press the DN key on a digital telephone.
- Enter the SPRE.
- Enter the USCR feature access code (9915).
- Enter the Station Control Password.
- Enter the USCR option code, as shown in [Table 131 "USCR option codes" \(page 360\)](#).

Table 131
USCR option codes

Code	Used to assign
1	FDN redirection DN
2	HUNT redirection DN
3	EFD redirection DN
4	EHT redirection DN
5	RCO

- Enter the new RCO if assigning the RCO; enter the redirection DN if assigning the DN.
- Place telephone on-hook, or press the Rls key on a Meridian 1 proprietary telephone.

To assign or query a redirection DN using the USR key:

- Press the dark USR key.
- Enter the Station Control Password.
- Enter the USCR option code from [Table 131 "USCR option codes" \(page 360\)](#).
- Enter the new RCO if assigning the RCO; enter the redirection DN if assigning the DN.
- Press the USR key again.

To assign or query a redirection DN using an FFC:

- Take the telephone off-hook, or press the DN key on a Meridian 1 proprietary telephone.
- Enter the USCR FFC.
- Enter the Station Control Password.
- Enter the USCR option code, as shown in [Table 131 "USCR option codes" \(page 360\)](#).
- Enter the new RCO if assigning the RCO; enter the redirection DN if assigning the DN.
- Place telephone on-hook, or press the **RIs** key on a Meridian 1 proprietary telephone.

Variable Flash Timing and Ground Button

Contents

This section contains information on the following topics:

- “Feature description” (page 363)
- “Operating parameters” (page 364)
- “Feature interactions” (page 364)
- “Feature packaging” (page 364)
- “Feature implementation” (page 364)
- “Feature operation” (page 365)

Feature description

These two methods of operation allow an analog (500/2500-type) telephone user to obtain special dial tone and activate various system features while on an established call. They are also used to return to the original call. Both of these functions are referred to as a recall. The following are the two parts of the feature.

Variable Flash Timing

This part is an enhancement to Flash Timing. It allows further flexibility in defining the limits for the flash. A minimum range of 20 to 768 milliseconds has been added and the maximum range has been extended to 1500 milliseconds. These settings are made on a customer basis in LD 15. A switchhook flash of less than the minimum is ignored and one of greater than the maximum is read as a disconnect. All flashes between the minimum and maximum provide a recall.

Ground Button

This part is an alternative to Flash Timing. It requires the installation of a ground button line card in place of a regular 500-type line card and analog (500/2500-type) telephones which have the ground button capability. The ground button can be depressed for any length of time over the minimum flash timing to provide a recall.

Operating parameters

Variable Flash Timing and Ground Button Operation are supported only on Digitone sets.

Ground Button Operation requires that a QPC532 Ground Button line card be installed on sets that have the capability, rather than a regular 500-type line card.

Using SPRE codes, it is possible to invoke the same features from an analog (500/2500-type) telephone as from a feature telephone.

Feature interactions

Message Waiting

The Ground Button Recall message to the software uses the same data store as the Message Waiting feature. The telephone state indicates which feature is active. The state is idle for Message Waiting and active for Ground Button Recall.

Feature packaging

This feature requires International Supplementary Features (SUPP) package 131.

Feature implementation

Table 132

LD 15 - Assign minimum and maximum flash time for each customer member

Prompt	Response	Description
REQ:	NEW CHG	Add, or change.
TYPE:	TIM	Timers.
...		
- FLSH	xxx yyy	<p>Minimum and maximum switchhook flash timer in milliseconds.</p> <p>xxx = 20-(45)-768. yyy = 384-(896)-1500.</p> <p>The timing specified will be used for EPE equipment only. XPE equipment will use the FLSH specified in LD 97.</p>

Feature operation

Variable Flash Timing

Any switchhook flash between 20 and 1500 milliseconds provides a recall.

Ground Button

Pressing the ground button for any length of time over 20 milliseconds provides a recall.

Variable Guard Timing

Contents

This section contains information on the following topics:

- “Feature description” (page 367)
- “Operating parameters” (page 367)
- “Feature interactions” (page 367)
- “Feature packaging” (page 367)
- “Feature implementation” (page 368)
- “Feature operation” (page 368)

Feature description

The guard timing capability for a trunk prevents outgoing calls from reseizing trunks for a specified time after disconnection, thereby protecting trunks against glare conditions. This feature allows the customer to specify one guard timing interval for incoming call disconnection and one guard timing interval for outgoing call disconnection.

Operating parameters

There are no operating parameters associated with this feature.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

This feature is included in base system software.

Feature implementation

Table 133

LD 16 - Configure Guard Timers for trunk.

Prompt	Response	Description
...		
CFWR	(NO) YES	CFW restriction (not allowed) allowed.
IDOP	(NO) YES	Respond YES to allow the trunk CDR for internal calls to identify the originating station instead of the forwarding station.
TIMR	GTI 128-(896)-32 640	Incoming Guard timer.
TIMR	GTO 128-(896)-3 2640	Outgoing Guard timer.

Feature operation

No specific operating procedures are required to use this feature.

Virtual Office for M3900

Feature description

For information about M3900 (Single Site) Virtual Office, see *Features and Services Fundamentals — Book 4 of 6 (I to M)*.

Virtual Office login/logout for Multiple Line Appearance

Contents

This section contains information about the following topics:

- “Feature description” (page 371)
- “Operating parameters” (page 371)
- “Feature interactions” (page 372)
- “Feature packaging” (page 372)
- “Feature implementation” (page 372)
- “Feature operation” (page 373)

Feature description

Use this feature for Virtual Office login or logout if Multiple Line Appearance exists on an IP Phone and one of the line keys is busy. The line key is busy if a call exists on a Multiple Appearance Directory Number (MADN) that another appearance originates or terminates.

Operating parameters

The operations of this feature depend on the direction of the Virtual Office action.

Virtual Office login to an IP Phone with multiple line appearance

IP Phone A is configured with Virtual Office Login Allowed (VOLA) Class of Service (CLS). IP Phone B is configured with Virtual Office User Allowed (VOUA) CLS.

IP Phone A tries to perform a Virtual Office login to IP Phone B. IP Phone B has a MADN configured as Single Call Ringing/Non-ringing (SCR/SCN). Another appearance of the same DN exists on another IP Phone and is in an active call; IP Phone B has no active calls.

The Virtual Office login from IP Phone A to IP Phone B succeeds if IP Phone A uses another DN on IP Phone B as the user ID.

Virtual Office logout from an IP Phone with Multiple Line Appearance

IP Phone A is configured with VOLA CLS. IP Phone B is configured with VOUA CLS.

IP Phone B is in the Virtual Office logout state. The Terminal Number (TN) of IP Phone B uses a MADN configured as SCR/SCN. Another appearance of the same DN exists on another IP Phone and is in an active call; IP Phone B has no active calls.

IP Phone A can log out from IP Phone B and IP Phone B returns to the home TN.

Virtual Office login from an IP Phone with Multiple Line Appearance

IP Phone C with the VOLA CLS uses a MADN configured as SCR/SCN. Another appearance of the same DN exists on another IP Phone and is in an active call; IP Phone C has no active calls. IP Phone C can perform a Virtual Office login to another IP Phone with the VOUA CLS.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

This feature is included in base system software.

Feature implementation

Use Element Manager to configure Virtual Office Login/Logout for Multiple Line Appearance on an IP Phone.

Procedure 1 **Configuring VOLA and VOUA CLS**

Step	Action
1	Log on to Element Manager with a valid user account.
2	In the Navigator pane, select Phones . The Search for Phones Web page appears.
3	Select a search criteria from the Criteria list.
4	Sort the telephone list by telephone type, and then click the box beside the telephones to update. The Phone Details Web page appears.
5	Scroll to the Features section.

- 6 For VOLA, select **Allowed** from the list.
- 7 For VOUA, select **Allowed** from the list.

See [Figure 12 "VOLA and VOUA" \(page 373\)](#).

--End--

Figure 12
VOLA and VOUA

Feature	Description	Value
USRA	User Selectable Call Redirection	Denied
VOLA	Virtual Office Login	Allowed
VOUA	Virtual Office User	Allowed
WTA	Warning Tone	Allowed
XHA	Exclusive Hold	Denied
XLST	Pretranslation Group	0

Feature operation

The home office IP Phone TN must have Virtual Office login to this TN using a remote phone (VOUA) enabled.

This means that if you want to use Virtual Office to log into your home office IP Phone from a remote IP Phone, then your home office IP Phone must have VOUA (Virtual Office User Allowed) configured.

Virtual Office administrator logout

Contents

This section contains information about the following topics:

- “Feature description” (page 375)
- “Operating parameters” (page 375)
- “Feature interactions” (page 376)
- “Feature packaging” (page 376)
- “Feature implementation” (page 376)
- “Feature operation” (page 378)

Feature description

Use this feature to locate idle Virtual Office IP Phones and log them out, as necessary. You can force logout for all IP Phones or a specific IP Phone idle for more than the configured Idle Time.

You can search for Virtual Office logged-in IP Phones based on idle time criteria in the Search For Phones Web page in Element Manager, and then log them out. You must have LD 117 permission to use this feature.

You can search for IP Phones that are idle for greater than or equal to a specified time.

Operating parameters

This feature provides the following functionality:

- logout all Default Virtual Office Logout Allowed (DVLA) logged-in idle IP Phones, which are idle for more than Idle Time minutes (if specified).
- logout a specific DVLA IP Phone if it is logged in and idle.
- parse specified file from /e/temp/ directory on the Call Server and log out all DVLA IP Phones for which Terminal Numbers (TN) exist in the file.

The file must contain only the TN, in string format, (for example, 096 0 00 30), on each line.

- provide information (TN, Prime DN, Idle Time) about logged-in DVLA IP Phones, which are idle for more than the Idle Time minutes (if specified). This feature cannot provide more than 1000 records simultaneously. If the system collects more information, an error message prints.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

This feature is included in base system software.

Feature implementation

Task summary list

The following list is a summary of the tasks in this section:

1. [Procedure 2 “Searching with Idle Time” \(page 376\)](#)
2. [Procedure 3 “Advanced Searching with Idle Time” \(page 377\)](#)
3. [Procedure 4 “Logging out a Virtual Office IP Phone” \(page 377\)](#)

To search for an Virtual Office IP Phone based on the Idle time criteria, use the following procedure:

Procedure 2 Searching with Idle Time

Step	Action
1	Log on to Element Manager with a valid user account.
2	In the Navigator pane, select Phones . The Search for Phones Web page appears.
3	In the Criteria list, select Idle Time (>=) .
4	Type the required value in the Value field.
ATTENTION You must type a value between 1 and 1440 (minutes) as the Idle Time. If you type an invalid value, the search does not complete.	
5	Click Search . The page refreshes to show the results that match the search criteria.

ATTENTION

If the IP Phone data is not synchronized with the Call Server, then the search returns partial results. Click the log file link to view the list of IP Phones not present in the database.

--End--

To perform an advanced search for a Virtual Office IP Phone with Idle Time, use the following procedure:

Procedure 3
Advanced Searching with Idle Time

Step	Action
1	Log on to Element Manager with a valid user account.
2	In the Navigator pane, select Phones . The Search for Phones Web page appears.
3	Click Advanced . The Advanced Search Web page appears.
4	In the Field list, select IDLE TIME - Idle Time .
5	Type the required value. You can use other criteria like AND and OR logic operators, and different field values.
6	Click Search . The page refreshes to show the results that match the search criteria.

--End--

To logout a Virtual Office IP Phone, use the following procedure:

Procedure 4
Logging out a Virtual Office IP Phone

Step	Action
1	Log on to Element Manager with a valid user account.
2	Search for a Virtual Office IP Phone using the Procedure 2 "Searching with Idle Time" (page 376) procedure or Procedure 3 "Advanced Searching with Idle Time" (page 377) procedure.
3	Select the check box that corresponds to the IP Phone to log out.

Logout from multiple IP Phones by selecting the corresponding check boxes.

4 From the More list, elect **Logout**.
The system prompts for confirmation to log out from the selected IP Phone.

5 Click **OK**.
The page refreshes to show the Search for Phones Web page with the selected IP Phones removed from the search result list.

--End--

Feature operation

Use this feature to log out only idle DVLA IP Phones.

A warning message appears on the IP Phone for one minute before logout. The IP Phone user can press Yes to accept the logout or press No to cancel it.

Virtual Office logout during midnight routines

Contents

This section contains information about the following topics:

- “Feature description” (page 379)
- “Operating parameters” (page 379)
- “Feature interactions” (page 379)
- “Feature packaging” (page 379)
- “Feature implementation” (page 380)
- “Feature operation” (page 381)

Feature description

Use this feature to configure automatic logout during midnight routines for inactive IP Phones with a Class of Service (CLS) of Default Virtual Office Logout Allowed (DVLA). An IP Phone with a DVLA CLS is inactive if the IP Phone user does not press a key for a configured period of time.

Operating parameters

If you enable this feature, IP Phones with a DVLA CLS unregister from the Terminal Proxy Server (TPS) during midnight routines if the IP Phones are inactive longer than the configured Idle Time .

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

This feature is included in base system software.


Feature implementation

Use Element Manager to configure Virtual Office logout during midnight routines.

Procedure 5


Configuring Virtual Office logout during midnight routines in Element Manager

Step	Action
1	Log on to Element Manager with a valid user account.
2	In the Navigator pane, select Phones , Properties .
3	In the Virtual Office Setting pane, click Retrieve to retrieve the Virtual Office Setting from the Call Server.

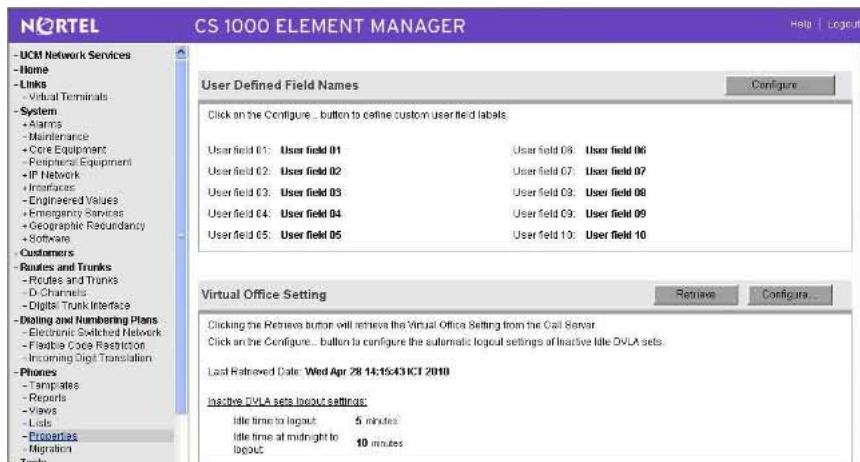

4 Click **Configure** to configure the automatic logout settings of inactive idle DVLA IP Phones.

The **Edit Virtual Office Setting** Web page appears and shows the current configuration.

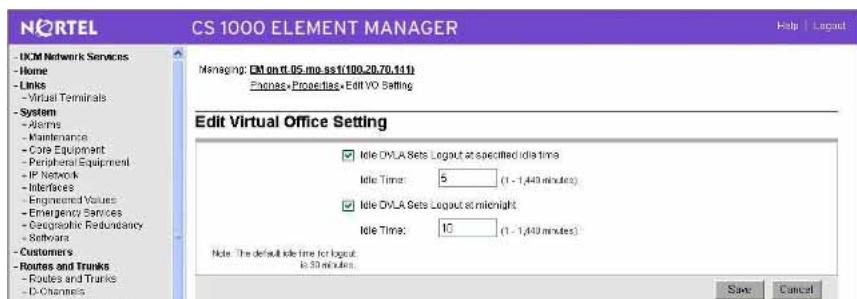

5 Select the check box for **Idle DVLA Sets Logout at midnight**.
The Idle Time field appears.

- 6 Type the idle time in the Idle Time field.

ATTENTION

The idle time must be a value between 1 and 1440 minutes. The default is 30 minutes.

- 7 Click **Save**.

The page refreshes and the Properties Web page appears.

--End--

Feature operation

The system disables Virtual Office logout during midnight routines by default. You can configure Idle Time Interval to a value from 1 to 1440 minutes. The default Idle Time interval is 30 minutes.

Virtual Office logout on IDLE condition

Contents

This section contains information about the following topics:

- “Feature description” (page 383)
- “Operating parameters” (page 383)
- “Feature interactions” (page 383)
- “Feature packaging” (page 384)
- “Feature implementation” (page 384)
- “Feature operation” (page 384)

Feature description

Use this feature to configure a rule for automatic logout of idle IP Phones with a Class of Service (CLS) of Default Virtual Office Logout Allowed (DVLA). If the Virtual Office IP Phone remains in the IDLE condition for a specific time interval, the IP Phone automatically logs out. The IP Phone user receives a warning message with the option to cancel the rule and restart the IDLE timer.

Operating parameters

If you enable this feature, DLVA IP Phones which are in the IDLE condition for a specific time interval automatically log out. The IP Phone displays a warning message with the option for the IP Phone user to cancel the logout and restart the IDLE timer.

Virtual Office logout on IDLE condition is disabled by default. You can configure Idle Time Interval with a value from 1 to 1440 minutes. The default Idle Time Interval is 30 minutes.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

This feature is included in base system software.

Feature implementation

Use Element Manager to configure Virtual Office logout on IDLE condition.

Procedure 6

Configuring Virtual Office logout on IDLE condition in Element Manager

Step	Action
1	Log on to Element Manager with a valid user account.
2	In the Navigator pane, select Phones, Properties .
3	Click Configure . The Edit Virtual Office Setting Web page appears and shows the current configuration.
4	Select the check box for Logout a DVLA Set after the specified idle time has elapsed . The Idle Time field appears.
5	Type the idle time in the Idle Time field.
<div style="border: 1px solid black; padding: 5px;">ATTENTION The idle time must be a value between 1 and 1440 minutes.</div>	
6	Click Save . The page refreshes and the Properties Web page appears.

--End--

Feature operation

If this feature is enabled and the DVLA IP Phone is in the IDLE condition longer than the configured Idle Time interval, the message *Logout phone now?* appears on the IP Phone. The IP Phone user can select Yes or No. If the IP Phone user selects Yes, the IP Phone logs out. If the IP Phone user selects No, the Idle Time interval restarts and the IP Phone does not log out of Virtual Office. If the IP Phone user does not select a response, logout occurs.

Virtual Office-only IP Phones

Contents

This section contains information about the following topics:

- “Feature description” (page 385)
- “Operating parameters” (page 385)
- “Feature interactions” (page 385)
- “Feature packaging” (page 386)
- “Feature implementation” (page 386)
- “Feature operation” (page 387)

Feature description

Use this feature to configure Virtual Office-only IP Phones. Virtual Office-only IP Phones do not use an assigned Directory Number (DN) or consume a Terminal Number (TN) license. By default, these IP Phones are in the Virtual Office logout state. Use these IP Phones for Virtual Office login only.

Operating parameters

Configure the Default Virtual Office Logout Allowed (DVLA) Class of Service (CLS) for the IP Phone.

The IP Phone registers with the Call Server by using a TN. If the TN has a DVLA CLS, the IP Phone registers in the Virtual Office logout state.

The IP Phone is in the Default Virtual Office Logout Denied (DVLD) CLS by default and the IP Phone registers in the Virtual Office logout state.

Feature interactions

There are no feature interactions associated with this feature.

Feature packaging

This feature is included in base system software.

Feature implementation

For a Virtual Office-only IP Phone, use Element Manager to configure DVLA CLS .

Procedure 7 Configuring DVLA CLS

Step	Action
1	Log on to Element Manager with a valid user account.
2	In the Navigator pane, select Phones . The Search for Phones Web page appears.
3	Select search criteria from the Criteria list.
4	Sort the telephone list by telephone type, and then click the check box beside the telephone to update the list. The Phone Details Web page appears.
5	Use the scroll bar to navigate to the Features section.
6	For DVL (Default Virtual Office Logout), select Allowed from the list. See Figure 13 "DVL on Phone Details Web page" (page 387) .

--End--

Figure 13
DVL on Phone Details Web page

Phone Details

General Properties | Features | Keys | UserFields |

General Properties

Customer Number: 0 *
 Terminal Number: *
 Designation: * (1-6 characters)
 Zone:

Features

Feature	Description	Value
DRDA	Distinctive Ringing by DN	Denied
DTA	Data Line, Data Adapter, Data Unit	SL-1 Data Terminal
DVL	Default Virtual Office logout	Denied

Feature operation

Use the DVLA CLS IP Phone to log in to Virtual Office.

Voice Call

Contents

This section contains information on the following topics:

- “Feature description” (page 389)
- “Operating parameters” (page 390)
- “Feature interactions” (page 390)
- “Feature packaging” (page 391)
- “Feature implementation” (page 391)
- “Feature operation” (page 392)

Feature description

Voice Call allows you to talk through the speaker of a Meridian digital telephone from another Meridian digital telephone. The called party does not have to lift the handset to hear you. For a two-way conversation, the called party must lift the handset or activate Handsfree, unless Handsfree Voice Call is enabled.

If the called telephone is busy on another DN, the caller hears continuous ringing. The called party hears a single beep and the Voice Call DN key flashes. If the telephone is busy on the Voice Call DN, the caller hears a busy tone. A fast busy tone may indicate that the Voice Call DN is no longer available (it may not be a Single Appearance DN).

Handsfree Voice Call

Handsfree Voice Call is a system feature that can be used with such telephones as the M2317 and M2616.

Handsfree Voice Call provides the option of configuring VCC/DIG (with voice option) to be answered in either Handsfree mode or loudspeaker only mode. Calls answered in Handsfree (HVA) mode establish a

two-way voice path, while those answered in loudspeaker only (HVD) mode establish a one-way voice path from the calling telephone to the destination telephone.

Operating parameters

Both telephones must be Meridian digital telephones.

The Voice Call DN must be single appearance.

Handsfree Voice Call allowed/denied is configured at the system level and can be used with only digital telephones that have Handsfree capabilities (such as the M2317 and M2616). It requires Handsfree Allowed/HFA Class of Service on the destination telephone, which is configured at the telephone level. Basic Rate Interface (BRI) telephones do not support the Handsfree feature.

Feature interactions

Auto Answer Back

This feature is not affected by the Handsfree Voice Call feature.

Automatic Line Selection

This feature is not selected by automatic Outgoing Line Selection. It is selected for Incoming Ringing and Non-Ringing Line Selection.

Call Party Name Display

The telephone originating a Voice Call displays the called DNs Call Party Name Display. The called telephone shows the caller's DN and name on its display.

Display of Calling Party Denied

Display information on telephones involved in a Voice Call is based on the individual Class of Service of each telephone.

Flexible Feature Code Boss Secretarial Filtering

A call to a Voice Call key on a boss telephone with filtering active is not filtered to the secretary telephone.

Flexible Voice/Data Terminal Number

If a dynamic TN has a single appearance DN key that terminates on a Voice Call (VCC) key, the called party hears a single beep if occupied on another DN. However, if the called party is a dynamic TN in data mode, the DN key lamp flashes. A beep is not provided.

Hot Line

The terminating DN of a Voice Call arrangement may be the incoming DN of a two-way Hot Line.

When engineering call-modification paths (such as Hunting and Call Forward No Answer), the Hot Line Restriction option will cancel the normal call-modification operation for internal non-Hot Line calls.

Manual Signaling

The same DN can be used for both Voice Call and Manual Signaling (Buzz) as long as it remains a Single Appearance DN.

Multiple Appearance DNs

If a Voice Call DN is added to a second telephone, the DN becomes a Multiple Appearance DN (MADN). Voice Call no longer works on that DN and fast busy tone is returned.

On Hold on Loudspeaker

It is possible to program this feature with a loudspeaker DN, but operation will be the same as for direct dial to a loudspeaker DN.

Feature packaging

This feature requires Voice Call requires the Optional Features (OPTF) package 1.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 134 "LD 11" \(page 391\)](#).
 - Configure Voice Call for the originating Meridian 1 proprietary telephone.
2. [Table 135 "LD 15" \(page 392\)](#)

Configure Handsfree Voice Call for the system.

**Table 134
LD 11**

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	a...a	Telephone type. Type ? for a list of possible responses.
TN		Terminal number
	l s c u	Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.

Table 134
LD 11 (cont'd.)

Prompt	Response	Description
KEY	xx SCR yyy...y	Adds a single appearance single call key on the terminating telephone, where: xx = key number, and yyy...y = the DN assigned to the Voice Call key for the originating telephone.
KEY	xx VCC yyy...y	Adds a Voice Call key on the originating telephone, where: xx = key number, and yyy...y = the DN of the terminating telephone. This key activates the feature.

Table 135
LD 15

Prompt	Response	Description
REQ:	CHG	Change.
TYPE:	FTR	Features and options
CUST		Customer number
	0-99	Range for Large System and CS 1000E system.
	0-31	Range for Small System and Media Gateway 1000B.
- OPT	(HVD) HVA	Handsfree Voice Call (denied) allowed.

Feature operation Voice Call

To make a Voice Call:

- Lift the handset and press **Voice Call**. The DN is automatically dialed. If the called telephone is busy on another DN, you hear continuous ringing. If the telephone is busy on the Voice Call DN, you hear busy tone.

To end a Voice Call:

- Press **RIs**.

To answer a Voice Call on an idle telephone:

- Let the call ring once. The call is answered automatically, activating the Voice Call DN over the speaker. For a two-way conversation, lift the handset.

If busy on another DN, you hear a single beep and the Voice Call DN flashes. You must end your present call to receive the Voice Call.

Handsfree Voice Call

HVA option

The originating telephone (telephone A) places a VCC/DIG call to the destination telephone (telephone B).

1. Telephone B rings once.
2. After one ring, telephone B automatically answers the call in Handsfree mode.

The DN and Handsfree LCDs are lit and a two-way voice path is established.

HVD option

Telephone A places a call to telephone B.

1. Telephone B rings once.
2. After one ring, telephone B automatically answers the call in loudspeaker only mode.

The DN LCD is lit and the Handsfree LCD remains dark, establishing a one-way voice path from telephone A to telephone B. At this point, telephone A is unable to hear the person at telephone B.

To reestablish a two-way voice path, telephone B must either go off-hook or press the Handsfree button.

Busy calls are not changed by Handsfree Voice Call.

VTRK Failover Upon Network Failure

Contents

This section contains information on the following topics:

- “Feature description” (page 395)
- “Administration and maintenance” (page 397)
- “Element Manager configuration” (page 397)
- “New SNMP alarms” (page 400)

Feature description

The VTRK Failover Upon Network Failure feature enables Virtual Trunk (VTRK) calls to survive a network failure.

Upon network failure, the Leader Signaling Server is isolated from the rest of the network, which caused it to unregister its VTRKs from the Call Server. In the meantime, the Follower Signaling Server did not receive the Leader *I'm Master* broadcast message, so an election is called and the Follower Signaling Server becomes the master. As a result, the VTRK application attempts to register with the Call Server. The Call Server grants the request since the Leader Signaling Server already sent a server offline message. VTRK calls are now made through the Follower Signaling Server.

Once the network connection is reestablished, an election is called again. The Follower Signaling Server relinquishes mastership and unregisters its VTRKs from the Call Server. The Leader Signaling Server is able to reregister VTRKs. VTRK calls are now made through the Leader Signaling Server again.

The VTRK Failover Upon Network Failure feature implements the VTRK Network Health Monitor to monitor the health of the network, which is configured using Element Manager.

The VTRK Network Health Monitor task starts when the Signaling Server boots. The VTRK Network Health Monitor task receives a request from the Signaling Server applications to monitor the connectivity status of a given IP address. The Virtual Trunk uses this monitor task to send ping messages to the list of preconfigured IP addresses.

The monitored IP addresses are read from the config.ini file. The following example shows a sample of the new section in the config.ini file with VTRK Network Health Monitor task configured using Element Manager.

Config.ini file with VTRK Network Health Monitor task enabled

[VTRK NETMON]

```
ENABLE = 1
IP = 192.168.2.1
IP = 192.168.2.10
```

If VTRKNETMON section is not present, or if there is no valid IP address, then the TLAN Gateway is monitored by default.

The following parameters apply to the config.ini file:

- **ENABLE**—specifies if the VTRK Network Health Monitor monitors IP addresses or not. If there is no value present, the IP addresses are monitored by default.
 - **ENABLE = 1** (VTRK Network Health Monitor monitors IP addresses)
 - **ENABLE = 0** (VTRK Network Health Monitor does not monitor IP addresses)
- **IP** — specifies all IP addresses to be monitored by the VTRK Network Health Monitor. Invalid IP address formats are ignored.

If at least one IP address in the monitored list is reachable and the Signaling Server is Leader, the Virtual Trunks remain registered with the Call Server. If all monitored IP addresses are unreachable, the Leader Signaling Server unregisters its Virtual Trunks to enable the Follower Signaling Server to register with the Call Server and take over the Virtual Trunk operation.

The VTRK Network Health Monitor sends ICMP PING requests every ten seconds to each monitored IP address. If no response is received within five seconds, five more PING retries are sent, one second apart. If there is still no response, the IP address is considered unreachable. The detection time for each IP address is between 10 and 20 seconds.

When all monitored IP addresses are determined unreachable and the Signaling Server is Leader, the Virtual Trunks are unregistered from the Call Server. In the meantime, this isolated Signaling Server continues to monitor the network status by pinging all monitored IP addresses every ten seconds. When the network recovers, the Signaling Server reregisters the Virtual Trunks if it is the node Master. If only a subset of all monitored IP addresses are unreachable, the Signaling Server maintains its Virtual Trunk registration, and all IP addresses, whether they are reachable or not, are pinged every ten seconds.

As soon as one ping response is received, the corresponding IP addresses is determined reachable. If the isolated Signaling Server is the Leader, it attempts to register its Virtual Trunks with the Call Server. If this Signaling Server is the Follower, it ignores this event and continues to monitor the list of IP addresses by sending a PING request every ten seconds.

Although the monitored IP addresses are pinged separately, they are read from the config.ini file and are monitored at the same time when the Signaling Server boots. Thus, the time to detect a network failure is between 10 and 20 seconds

Administration and maintenance

The oam CLI prompt is added to the **oam > shell**.

Table 136
New CLI prompt

Prompt	Response	Description
oam	vtrkNetMonShow	Print the current list of monitored IP addresses and their status.

Element Manager configuration

Use Element Manager to configure the following new functionalities:

- VTRK Network Health Monitor configuration for an IP Telephony node
- VTRK Network Health Monitor CLI commands support for an IP Telephony node

VTRK Network Health Monitor configuration for an IP Telephony node

Log on to Element Manager. Navigate to **IP Network > Nodes: Servers, Media Cards** to open the Node Configuration window to begin configuration.

Adding an IP address to VTRK Network Health Monitor

Step	Action
1	Enter a node number in the New Node field or expand a configured node.
2	Expand the VTRK Network Monitor configuration window.
3	Click Add .
4	Expand the Virtual Trunk Network Health Monitor configuration window. The Monitor check box is selected by default.
5	Click Add beside Monitored IP address to add a new IP address field. Once the maximum of 8 IP address fields is reached, the Add button is disabled.
6	Enter a valid IP address.
7	Click Save and Transfer .

--End--

Editing a monitored IP address in VTRK Network Health Monitor

Step	Action
1	In the Node Configuration window, click the Edit button of a node.
2	Expand the VTRK Network Monitor configuration window.
3	Edit the configured monitored IP address.
4	Select or deselect the Monitor check box. If the Monitor check box is deselected, the Add button beside Monitored IP address and the Add button beside each monitored IP address rows is disabled.
5	Click Save and Transfer .

--End--

Viewing new CLI commands in Element Manager

Step	Action
1	Log on to Element Manager. Navigate to IP Network > Maintenance and Reports .
2	Expand a configured node.

- 3 Click **GEN CMD** against a Signaling Server element.
- 4 Select **Vtrk** from the Group dropdown list.
- 5 Select **vtrkNetMonShow** from the Command drop down list.
- 6 Click **Run**.

--End--

Deleting a monitored IP address in VTRK Network Health Monitor

Step	Action
1	In the Node Configuration window, expand the Node.
2	Expand the VTRK Network Monitor configuration window.
3	Click the Remove button beside a configured monitored IP address to delete it.
4	Click Save and Transfer .

--End--

Table 137
VTRK Network Monitor button description in Element Manager

Action	Response	Comment
Monitor	Check box	Selected by default. If selected, ENABLE = 1 If deselected, ENABLE = 0.
IP address	128 bit IPv4 address in the format: xxx.xxx.xxx.xxx	Each row caption is suffixed with the number of rows. Up to 8 IP addresses are configured. Config.ini stores these values in the following format: [VTRK NETMON] ENABLE = 1 IP = 47.11.221.22 IP = 47.11.221.23
Click the Check box	If the check box is selected, the Add and Remove buttons are enabled. If the check box is deselected, the Add and Remove buttons are disabled.	When the Monitored check box is deselected, all configured IP addresses, and the Add and Remove buttons are disabled.

Click the Add button	A new row appears to enter a Monitored IP address.	The Add button is enabled if the number of IP address rows are less than 8. The Add button is disabled after 8 rows of IP addresses are displayed and when the Monitor check box is deselected.
Click the Remove button	The Monitored IP address row is deleted and the next row caption changes to reflect the current row number.	Click the Remove button beside the Monitored IP address to delete the IP address. If the Monitor check box is deselected, the Remove button is disabled.

VTRK Network Health Monitor Configuration CLI commands

Log on to Element Manager. Navigate to IP Network > Maintenance and Reports.

Running the vtrkNetMonShow command

Step	Action
1	Expand a configured node.
2	Click the GEN CMD button against a Signaling Server element.
3	Select vtrk from the Group drop down list.
4	Select vtrkNetMonShow .
5	Click Run .

--End--

New SNMP alarms

The following new SNMP alarms are created on the Signaling Server:

- ITG4121

Message: "Monitored IP: <%s>: Fail Retry"

Description: this is created when a ping was sent to an IP address and no response was received within five seconds. Five more pings are sent and didn't receive response in Five seconds. Five more pings are to be sent one second apart before it is determined that the IP address is unreachable. This alarm is created by tNetMon task.

Severity: Warning

- ITG5121

Message: "Monitored IP <%s>: OK"

Description: this is created when a ping response was received for a previously unreachable IP address. This alarm is reported by tNetMon Task

Severity: Clear

- ITG1121

Message: "Monitored IP <%s>: Unreachable"

Description: this is created when five ping retries failed; that is, no response was received. This alarm is reported by tNetMon Task

Severity: Critical

- ITG1122

Message: "Virtual Trunk Network is: Down"

Description: this alarm is created by VTRK task when all the monitored IP addresses are determined to be unreachable and this Signalling Server is current node master. **Severity:** Critical

- ITG5122

Message: "Virtual Trunk Network is: OK"

Description: this alarm is created by VTRK task when the first IP reachable event occurs to clear the isolation alarm.

Severity: Clear

X08 to X11 Gateway

Contents

This section contains information on the following topics:

- “Feature description” (page 403)
- “Operating parameters” (page 406)
- “Feature interactions” (page 407)
- “Feature packaging” (page 408)
- “Feature implementation” (page 409)
- “Feature operation” (page 409)


Feature description

X08/X11 Gateway is a feature which allows the use of both Generic X08 and Generic X11 software in the same network. This feature allows individual system nodes, running X08 and X11 software, to interface with one another. The Gateway makes this interconnection possible by allowing X11 nodes to bridge between both R2 Multifrequency Compelled (R2/MFC) signaling and L1 signaling, and Integrated Services Digital Network (ISDN) signaling. Although certain configurations of the X08 nodes may be necessary, no changes to X08 software are required.

This feature provides connectivity between X08 and X11 nodes, using L1, R2 Multifrequency Compelled (MFC), and Integrated Services Digital Network (ISDN) signaling protocols. The X08 L1 Signaling supports call setup, a numbering plan and Calling Number Identification (CNI). However, the L1 Signaling that is provided into X11 is a subset of the X08 L1 Signaling, supporting only the supplementary services required to support CNI and the suppression of Bring Up Receiver (BUR) signals.

Figure 14 "R2 MFC Connections and Tandems" (page 404) summarizes the types of R2 MFC connections and tandems that are supported by the X08 to X11 Gateway.

Figure 14
R2 MFC Connections and Tandems

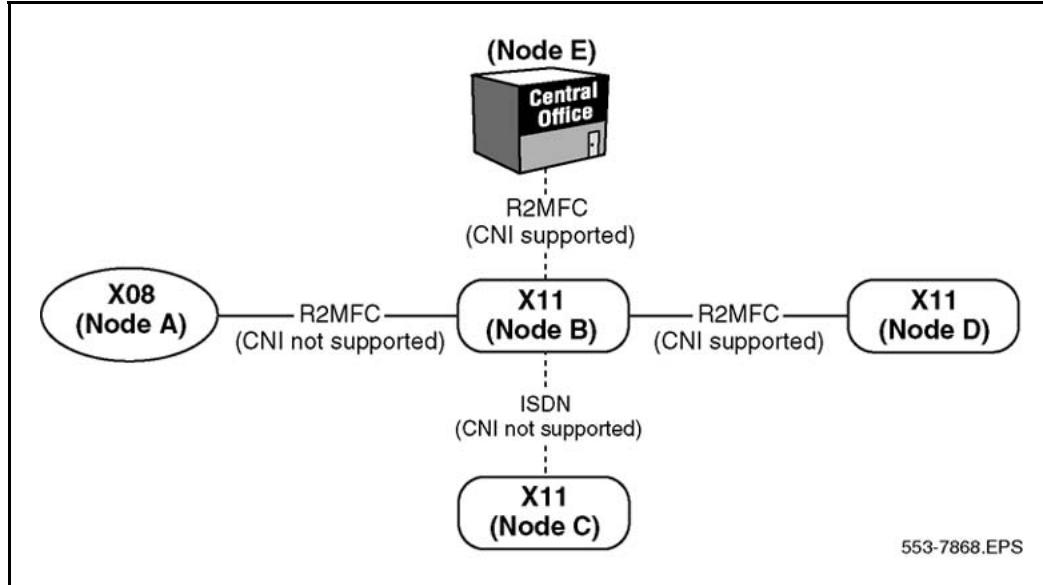

X08 to X11 connections using R2 MFC routes (Node A to Node B) – CNI is not supported because X08 does not provide outgoing CNI signaling.


X11 to a private exchange using R2 MFC routes (Node B to Node E) – CNI is supported in both directions (DID/DOD).

Tandems using R2 MFC and ISDN routes, as follows:

- Tandems from an X08 node to an X11 node using R2 MFC routes to another X11 node using ISDN routes (Node A to Node B to Node C). CNI is not supported for this tandem.
- Tandems from one X11 node to another X11 node using R2 MFC routes to another X11 node using ISDN routes (Node D to Node B to Node C). CNI is not supported for this tandem.
- Tandems from a Public Exchange to an X11 node using R2 MFC CO routes to another X11 node using ISDN routes (Node E to Node B to Node C).

Figure 15 "L1 MFC Connections and Tandems" (page 405) summarizes the types of L1 connections and tandems that are supported by the X08 to X11 Gateway (tandemming to X11 nodes using the R2 MFC Signaling is not allowed):

Figure 15
L1 MFC Connections and Tandems

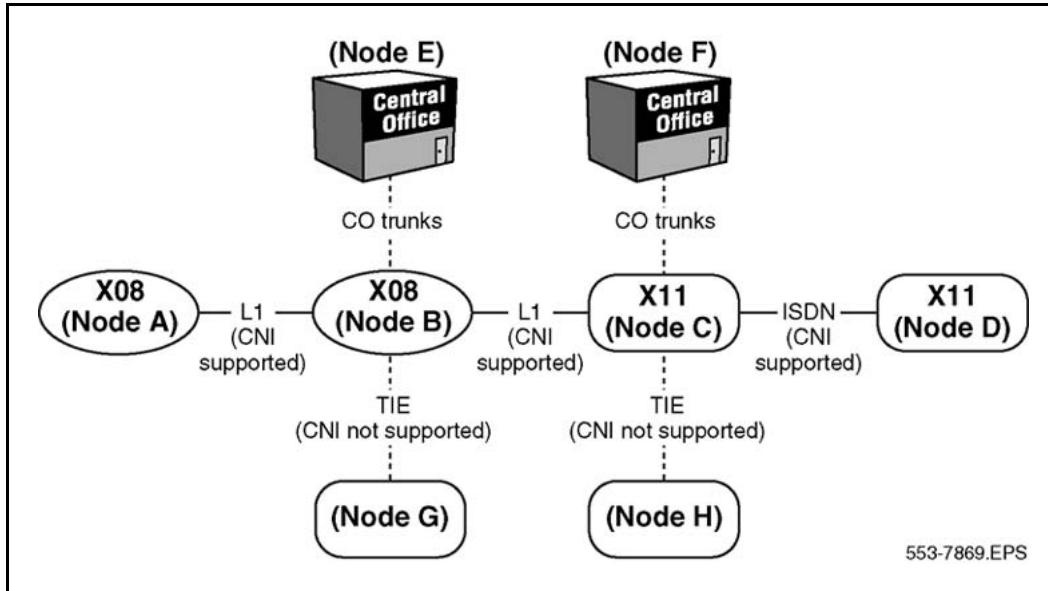

X08 to X11 connections using L1 routes (Node B to Node C) – CNI is supported.

X08 or X11 connections to a private exchange using CO routes (Node B to Node E or Node C to Node F) – These routes can be analog or digital, and are non-R2MFC. CNI is not supported.

X08 or X11 connections to a private exchange using TIE routes (Node B to Node G or Node C to Node H) – These routes can be analog or digital, and are non-R2MFC. CNI is not supported.

Tandems using L1 and ISDN routes, as follows:

- Tandems from an X08 node to an X11 node using L1 routes to another X11 node using ISDN routes (Node B to Node C to Node D). CNI is supported.
- Tandems from an X08 node to an X11 node using L1 routes to a private exchange using analog or digital routes (Node B to Node C to Node F). CNI is not supported for this tandem.
- Tandems between X08 and X11 nodes using L1 routes to a node using TIE routes (Node B to Node C to Node H, and Node C to Node B to Node G). CNI is not supported.

Operating parameters

Routes using R2/MFC signaling can only be tandemed to routes using L1 signaling in cases where:

- the L1 route uses L1 Basic signaling (no supplementary services);
- the X11 node makes no Calling Number Identification (CNI) requests;
- the X08 node makes no call extensions for Ring Again (RGA); and
- signal assignment is co-ordinated between the X11 and X08 nodes.

L1 signaling in X11 must use TIE trunks.

L1-signaled routes will support CNI only when End-to-End Signaling is used.

The following groups of features do not operate on L1-signaled calls between X08 and X11 nodes:

- features requiring Bring Up Receiver (BUR) signals;
- call diversions;
- X08 trunk optimization;
- call transfer to an unestablished connection;
- Break-in, Recall, Incoming Call Identification (ICI) requests and Night Service Notification attendant features; and
- Ring Again (RGA).

X08 L1 signaling allows only one unsupervised trunk in a call connection. An X11 node tandeming an L1 connection from an X08 node does not inform the X08 node of unsupervised-trunk usage.

R2/MFC tandems support End-to-End Signaling only when the tandem node uses either the same R2/MFC table for both trunks or uses two tables with identical contents and the same End-to-End Signaling code. Calling Number Identification (CNI) is carried end-to-end even where End-to-End Signaling is not available.

X08 to X11 connections, using R2/MFC, do not support CNI. Outgoing CNI, on a tandem R2/MFC connection from an X08 node, uses the customer identifier of the tandeming X11 node, plus the Access Code of the route from the X08 node.

CNI is not supported over R2/MFC to ISDN tandem connections.

A third level of R2/MFC signaling, consisting only of backward signals, is not supported. This level of signaling is used for coin-box calls or calls from subscribers with home meters.

CNI in Call Detail Recording (CDR) records will have the same length only when all DNs, route access codes, trunk identifiers and attendant identifiers have the same length.

X08 does not have Integrated Services Digital Network (ISDN) capabilities.

Feature interactions

The network supported features using Gateway depends on the specific types of connection involved in any particular call.

Calling Number Identification (CNI)

Calling Number Identification (CNI) is supported on R2/MFC signaling connections between X11 nodes and Central Offices (COs), in both directions of calling, provided that the trunk being used has CNI-allowed Class of Service. CNI has the following characteristics across this type of connection:

- CNI begins with an optional customer identifier, 1-8 digits long;
- the customer identifier is followed by a caller identifier (a DN of 0-7 digits, an attendant identifier, a trunk identifier or a route access code);
- the attendant identifier has a maximum of 4 digits (identified on a customer basis); if the attendant identifier has not been defined, the attendant DN is used;
- the trunk identifier has 0-7 digits (as assigned in LD 14);
- the trunk identifier does not have a unique value;
- the route access code is used if the trunk identifier has not been defined;
- a maximum of 16 digits of CNI can be carried across an R2/MFC connection, and
- end-to-end CNI to the CO works when the call tandems across more than one X11 node, using R2/MFC.

CNI is not supported on tandem connections between R2/MFC and ISDN routes.

In R2/MFC connections between X08 and X11 nodes, end-to-end CNI is only supported in cases where it has been requested by the X08 node. The X08 node will not support outgoing CNI. On an outgoing connection, the CNI supplied to the far end is that of the tandeming node when the tandeming node has not received CNI on an R2/MFC connection.

CNI is fully supported on R2/MFC connections between X11 nodes. End-to-end CNI to a CO works when the call tandems across more than one X11 node, using R2/MFC. If a tandeming node does not receive CNI, that node sends its own CNI forward.

CNI is supported on L1-signaled routes only when End-to-End Signaling is used.

Network Ring Again

Network Ring Again is not supported across any R2/MFC signaling connection or across L1-signaled connections between X08 and X11 nodes.

Feature packaging

The following packages are required for X08/X11 Gateway:

For R2/MFC Signaling, the following package is required:

- R2/MFC package 128

For L1 Signaling, the following packages are required:

- L1 package 188 and
- R2/MFC package 128.

For R2/MFC—ISDN Gateway, the following packages are required:

- Integrated Services Digital Network (ISDN) package 145;
- Primary Rate Access (PRA) package 146;
- DID-to-Network package 161; and
- R2/MFC package 128.

For L1—ISDN Gateway, the following packages are required:

- R2/MFC package 128;
- L1 package 188;
- Integrated Services Digital Network (ISDN) package 145;
- Primary Rate Access (PRA) package 146;
- DID-to-Network package 161; and
- Network Attendant Service (NAS) package 159 is required when the L1—ISDN Gateway must transport CNI.

Feature implementation

Task summary list

The following is a summary of the tasks in this section:

1. [Table 138 "LD 14 " \(page 409\)](#)

Assign trunk for X08 to X11 gateway.

2. [Table 139 "LD 16 " \(page 409\)](#)

Assign trunk route for X08 to X11 gateway.

Table 138

LD 14

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	TIE	TIE trunk.
TN	l s c u	Terminal number Format for Large System and CS 1000E system, where l = loop, s = shelf, c = card, u = unit.
	c u	Format for Small System and Media Gateway 1000B where c = card and u = unit.
CUST	xx	Customer number, as defined in LD 15
TKID	nnnnnnn	Trunk Type Identifier (Does not have to be unique).

Table 139

LD 16

Prompt	Response	Description
REQ	NEW CHG	Add, or change.
TYPE	RDB	Route Data Block.
CUST	xx	Customer number, as defined in LD 15
ROUT	0-511	Route number Range for Large Systems.
	0-127	Range for Small System and Media Gateway 1000B.
TKTP	TIE	TIE trunk type.
CCNI	(NO) YES	Call Number Indicator or CNI enabled on route.

Feature operation

No specific operating procedures are required to use this feature.

Nortel Communication Server 1000

Features and Services Fundamentals — Book 6 of 6 (S to Z)

Release: 7.0

Publication: NN43001-106

Document revision: 04.01

Document release date: 4 June 2010

Copyright © 1994-2010 Nortel Networks. All Rights Reserved.

While the information in this document is believed to be accurate and reliable, except as otherwise expressly agreed to in writing NORTEL PROVIDES THIS DOCUMENT "AS IS" WITHOUT WARRANTY OR CONDITION OF ANY KIND, EITHER EXPRESS OR IMPLIED. The information and/or products described in this document are subject to change without notice.

Nortel, Nortel Networks, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

All other trademarks are the property of their respective owners.

To provide feedback or to report a problem in this document, go to www.nortel.com/documentfeedback.

www.nortel.com