


PHOTOMULTIPLIER TUBES AND ASSEMBLIES

FOR SCINTILLATION COUNTING & HIGH ENERGY PHYSICS



HAMAMATSU

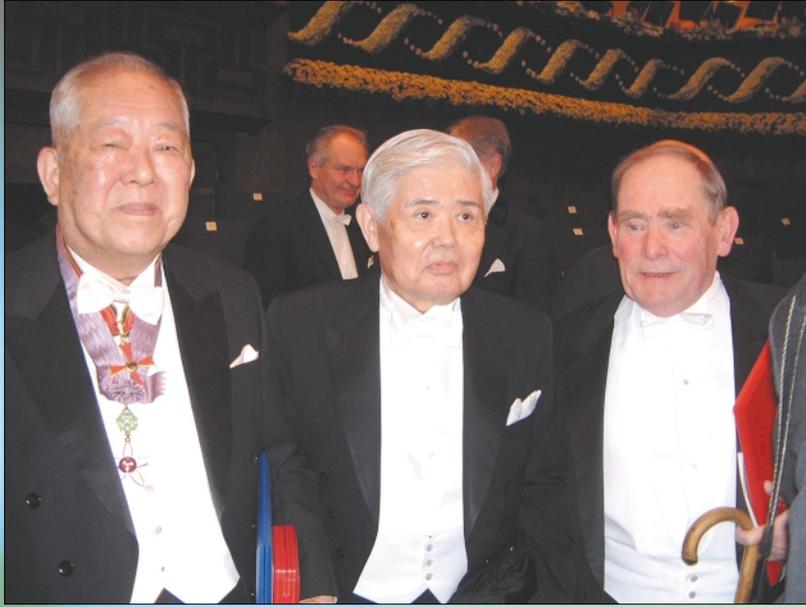

TOPIC

Masatoshi Koshiba (left), Professor Emeritus at the University of Tokyo, who was awarded the Nobel prize in physics; Teruo Hiruma (middle), President of Hamamatsu Photonics; Dr. Sydney Brenner (right) who was awarded the Nobel Prize in Physiology or Medicine. They met together on December 10th, 2002, at the Stockholm Concert Hall.
(Photo courtesy of The Chunichi Shimbun)

INTRODUCTION

In ionizing radiation measurements, scintillation counters which are combinations of scintillators and photomultiplier tubes are used as most common and useful devices in detecting X-, alpha-, beta-, gamma-rays and other high energy charged particles. A scintillator emits flashes of light in response to input ionizing radiations and a photomultiplier tube coupled to a scintillator detects these scintillation lights in a precise way.

In high energy physics experiments, one of important apparatuses is a Cherenkov counter in which photomultiplier tubes detect Cherenkov radiations emitted by high energy charged particles passing through a dielectric material.

To detect radiations accurately, photomultiplier tubes may be required to have high detecting efficiency (QE & energy resolution), wide dynamic range (pulse linearity), good time resolution (TTS), high stability & reliability, and to be operatable in high magnetic field environment or at high temperature condition. A ruggedized construction is required according to circumstances. On the other hand, several kinds of position sensitive photomultiplier tubes have been developed and are used in these measurements.

This catalog provides a quick reference for Hamamatsu photomultiplier tubes, especially designed or selected for scintillation counters and Cherenkov radiation detectors, and includes most of types currently available ranging in size from 3/8" through 20" in diameter. It should be noted that this catalog is just a starting point in describing Hamamatsu product line since new types are continuously under-development.

Please feel free to contact us with your specific requirements.

Photomultiplier Tubes and Assemblies

For Scintillation Counting
and High Energy Physics

TABLE OF CONTENTS

	Page
Photomultiplier Tubes	
Operating Characteristics	2
Selection Guide by Application	14
List Guide for Photomultiplier Tubes	16
Photomultiplier Tubes	18
Dimensional Outlines and Basing Diagrams for Photomultiplier Tubes	24
Typical Gain Characteristics	34
Position Sensitive Photomultiplier Tubes	38
Voltage Distribution Ratios	40
Photomultiplier Tube Assemblies	
Quick Reference for PMT Hybrid Assemblies	42
Dimensional Outlines and Circuit Diagrams for PMT Hybrid Assemblies	44
Quick Reference for PMT Socket Assemblies	52
Dimensional Outlines and Circuit Diagrams for PMT Socket Assemblies	54
Dimensional Outlines for E678 Series Sockets	60
Index by Type No.	62
Cautions and Warranty	64
Typical Photocathode Spectral Response and Emission Spectrum of Scintillators	65

Operating Characteristics


This section describes the prime features of photomultiplier tube construction and basic operating characteristics.

1. GENERAL

The photomultiplier tube (PMT) is a photosensitive device consisting of an input window, a photocathode, focusing electrodes, an electron multiplier (dynodes) and an anode in a vacuum tube, as shown in Figure 1. When light enters the photocathode, the photocathode emits photoelectrons into vacuum by the external photoelectric effect. These photoelectrons are directed by the potential of focusing electrode towards the electron multiplier where electrons are multiplied by the process of secondary electron emission.

The multiplied electrons are collected to the anode to produce output signal.

Figure 1: Cross-Section of Head-On Type PMT

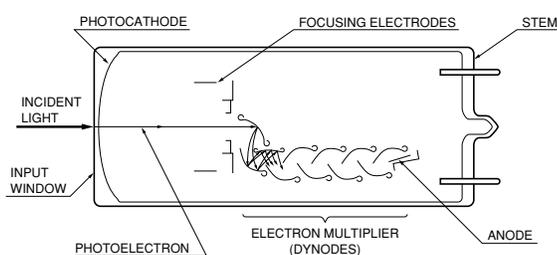

TPMHC0048EA

2. PHOTOCATHODE

2.1 Spectral Response

The photocathode of PMT converts energy of incident light into photoelectrons by the external photoelectric effect. The conversion efficiency, that is photocathode sensitivity, varies with the wavelength of incident light. This relationship between the photocathode sensitivity and the wavelength is called the spectral response characteristics.

Typical spectral response curves of the variation of alkali photocathodes are shown on the inside of the back cover.

The spectral response range is determined by the photocathode material on the long wavelength edge, and by the window material on the short wavelength edge.

In this catalog, the long wavelength cut-off of spectral response range is defined as the wavelength at which the cathode radiant sensitivity drops to 1 % of the maximum sensitivity.

2.2 Quantum Efficiency and Radiant Sensitivity

Spectral response is usually expressed in term of quantum efficiency and radiant sensitivity as shown on the inside the back cover.

Quantum efficiency (QE) is defined as the ratio of the number of photoelectrons emitted from the photocathode to the number of incident photons.

It's customarily stated as a percentage.

The equation of QE is as follows:

$$QE = \frac{\text{Number of Photoelectrons}}{\text{Number of Photons}} \times 100 (\%)$$

Radiant sensitivity (S) is the photoelectric current from the photocathode divided by the incident radiant power at a given wavelength, expressed in A/W (ampere per watt).

The equation of S is as follows:

$$S = \frac{\text{Photoelectric Current}}{\text{Radiant Power of Light}} (A/W)$$

Quantum efficiency and radiant sensitivity have the following relationship at a given wavelength.

$$QE = \frac{S \times 1240}{\lambda} \times 100 (\%)$$

where λ is the wavelength in nm (nanometer).

2.3 Window Materials

The window materials commonly used in PMT are as follows:

(1) Borosilicate glass

This is the most frequently used material. It transmits light from the infrared to approximately down to 300 nm.

For scintillation counting application, the low noise borosilicate glass (this is called K-free glass) may be used. It contains very little amount of potassium (K_2O and ^{40}K) which can cause unwanted background noise because of its radioisotopes.

(2) UV-transmitting glass

This glass transmits ultraviolet light well as the name implies, and it is widely used. The UV cut-off wavelength is approximately 185 nm.

(3) Synthetic silica

This material transmits ultraviolet light down to 160 nm. Silica is not suitable for the stem material of tubes because it has a different thermal expansion coefficient from kovar metal which is used for the tube leads. Thus, borosilicate glass is used for the stem. In order to seal these two materials having different thermal expansion ratios, a technique called graded seal is used. This is a technique to seal several glass materials having gradually different thermal expansion ratios. Another feature of silica is superiority in radiation hardness.

2.4 Photocathode Materials

The photocathode is a photoemissive surface with very low work and high energy physics applications:

(1) Bialkali

This has a spectral response which fits the emission spectra of most scintillators. Thus, it is frequently used for scintillator applications.

(2) High Temperature Bialkali

This is particularly useful at higher operating temperatures up to 175 °C. Its major application is oil well logging. Also it can be operated with very low dark current at the room temperature.

(3) Extended Green Bialkali

This is a variant of bialkali photocathode and has especially high sensitivity in a green region. It's suitable for scintillating tile or fiber calorimeters with wavelength shifters and for CsI(Tl) scintillators.

As stated above, the spectral response range is determined by the materials of the photocathode and the window as shown in Figure 20.

It is important to select appropriate materials which will suit the application.

2.5 Luminous and Blue Sensitivity

Since the measurement of spectral response characteristics of a PMT requires a sophisticated system and time, it isn't practical to provide spectral response data on each tube. Instead, cathode and anode luminous sensitivity data are usually attached.

The cathode luminous sensitivity is the photoelectric current from the photocathode per incident light flux (10^{-5} to 10^{-2} lumen) from a tungsten filament lamp operated at a distribution temperature of 2856K.

The cathode luminous sensitivity is expressed in the unit of $\mu\text{A/lm}$ (micro amperes per lumen).

Note that the lumen is a unit used for luminous flux in the visible region, therefore these values may be meaningless for tubes which are sensitive out of the visible region (refer to Figure 2).


The cathode blue sensitivity is the photoelectric current from the photocathode per incident light flux of a tungsten filament lamp at 2856K passing through a blue filter. Corning CS-5-58 filter which is polished to half stock thickness is used for the measurement of this sensitivity. This filter is a band-pass filter and its peak wavelength of transmittance is 400 nm.

Since the light flux, once transmitted through the blue filter, can not be expressed in lumen, the blue sensitivity is usually represented by the blue sensitivity index.

The blue sensitivity is a very important parameter in the scintillation counting since most of the scintillators produce emission spectrum in the blue region, and may dominate the factor of energy resolution.

These parameters of cathode luminous and blue sensitivities are particularly useful when comparing tubes having the same or similar spectral response ranges. Hamamatsu final test sheets accompanied with tubes usually indicate these parameters.

Figure 2: Typical Human Eye Response and Spectral Distribution of 2856K Tungsten Lamp

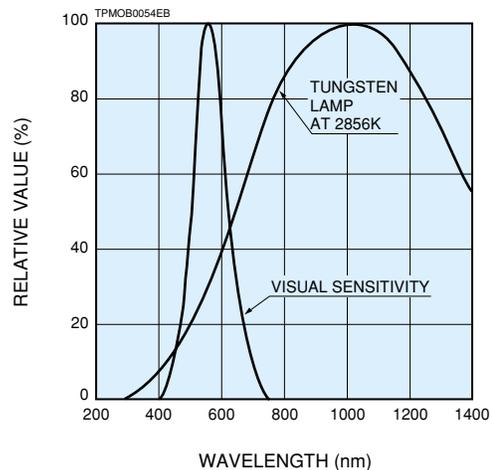

3. ELECTRON MULTIPLIER (DYNODES)

The superior sensitivity (high gain and high S/N ratio) of PMT is due to a low noise electron multiplier which amplifies electrons in a vacuum with cascade secondary emission process. The electron multiplier consists of several to up to 19 stages of electrodes which are called dynodes.

3.1 Dynode Types

There are several principal types of dynode structures. Features of each type are as follows:

(1) Linear focused type

Fast time response, high pulse linearity

(2) Box and grid type

Good collection efficiency, good uniformity

(3) Box and linear focused type

Good collection efficiency, good uniformity, low profile

(4) Circular cage type

Fast time response, compactness

(5) Venetian blind type

Good uniformity, large output current

(6) Fine mesh type

High immunity to magnetic fields, good uniformity, high pulse linearity, position detection possible.

(7) Coarse mesh

Immunity to magnetic fields, high pulse linearity, position detection possible.

(8) Metal channel type

Compact dynode construction, fast time response, position detection possible.

Also hybrid dynodes combining two of the above dynodes have been developed. These hybrid dynodes are designed to provide the merits of each dynode type.

4. ANODE

The PMT anode output is the product of photoelectric current from the photocathode and gain. Photoelectric current is proportional to the intensity of incident light. Gain is determined by the applied voltage on a specified voltage divider.

4.1 Luminous sensitivity

The anode luminous sensitivity is the anode output current per incident light flux (10^{-10} to 10^{-5} lumen) from a tungsten filament lamp operated at a distribution temperature of 2856K. This is expressed in the unit of A/lm (amperes per lumen) at a specified anode-to-cathode voltage with a specified voltage divider.

4.2 Gain (Current Amplification)

Photoelectrons emitted from a photocathode are accelerated by an electric field so as to strike the first dynode and produce secondary electron emissions. These secondary electrons then impinge upon the next dynode to produce additional secondary electron emissions. Repeating this process over successive dynode stages (cascade process), a high gain is achieved. Therefore a very small photoelectric current from the photocathode can be observed as a large output current from the anode of the PMT.

Gain is simply the ratio of the anode output current to the photoelectric current from the photocathode. Ideally, the gain of the PMT is defined as δ^n , where n is the number of dynode stage and δ is an average secondary emission ratio.

While the secondary electron emission ratio δ is given by

$$\delta = A \cdot E^\alpha$$

where A is constant, E is an interstage voltage, and α is a coefficient determined by the dynode material and geometric structure. It usually has a value of 0.7 to 0.8.

When a voltage V is applied between the cathode and the anode of the PMT having n dynode stages, gain G becomes

$$G = \delta^n = (A \cdot E^\alpha)^n = \left\{ A \cdot \left(\frac{V}{n+1} \right)^\alpha \right\}^n$$

$$= \frac{A^n}{(n+1)^{\alpha n}} V^{\alpha n} = K \cdot V^{\alpha n} \quad (K: \text{constant})$$

Figure 3: Example of Gain vs. Supply Voltage

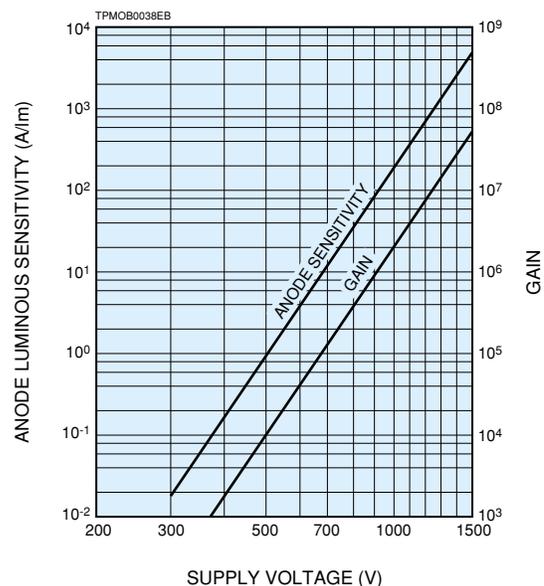


Figure 3 shows gain characteristics.

Since generally PMTs have 8 to 12 dynode stages, the anode output varies directly with the 6th to 10th power of the change in applied voltage. The output signal of the PMT is extremely susceptible to fluctuations in the power supply voltage, thus the power supply should be very stable and exhibit minimum ripple, drift and temperature coefficient. Regulated high voltage power supplies designed with this consideration are available from Hamamatsu.

5. ANODE DARK CURRENT

A small amount of output current flows in a PMT even when it is operated in complete darkness. This current is called the anode dark current. The dark current and the noise resulted from are critical factors to determine the lower limit of light detection.

The causes of dark current may be categorized as follows:

(1) Thermionic emission of electrons

Since the materials of the photocathode and dynodes have very low work functions, they emit thermionic electrons even at the room temperature. Most of the dark current originates from the thermionic emissions especially from the photocathode, and it is multiplied by the dynodes.

(2) Ionization of residual gases

Residual gases inside the PMT can be ionized by the flow of photoelectrons. When these ions strike the photocathode or earlier stages of dynodes, secondary electrons may be emitted, thus resulting in relatively large output noise pulses. These noise pulses are usually observed as afterpulses following the primary signal pulses and may be a problem in detecting short light pulses. Present PMT's are designed to minimize afterpulses.

(3) Glass scintillation

In case electrons deviating from their normal trajectories strike the glass envelope, scintillations may occur and dark pulses may result. To eliminate these pulses, PMT's may be operated with the anode at high voltage and the cathode at the ground potential. Otherwise it is useful to coat the glass bulb with a conductive paint connected to the cathode (called HA coating: see page 9).

(4) Ohmic leakage

Ohmic leakage resulting from insufficient insulation of the glass stem base and socket may be another source of dark current. This is predominant when a PMT is operated at a low voltage or low temperature.

Contamination by dirt and humidity on the surface of the tube may cause ohmic leakage, and therefore should be avoided.

(5) Field emission

When a PMT is operated at a voltage near the maximum rating value, some electrons may be emitted from electrodes by strong electric fields causing dark pulses. It is therefore recommended that the tube be operated at 200 volts to 300 volts lower than the maximum rating.

The anode dark current decreases along time after a PMT is placed in darkness. In this catalog, anode dark currents are specified as the state after 30 minutes storage in darkness.

6. TIME RESPONSE

In applications where forms of the incident light are pulses, the anode output signal should reproduce a waveform faithful to the incident pulse waveform.

This reproducibility depends on the anode pulse time response.

(1) Rise Time (refer to Figure 4)

The time for the anode output pulse to rise from 10% to 90% of the peak amplitude when the whole photocathode is illuminated by a delta-function light pulse.

(2) Electron Transit Time (refer to Figure 4)

The time interval between the arrival of a delta-function light pulse at the photocathode and the instant when the anode output pulse reaches its peak amplitude.

(3) T.T.S. (Transit Time Spread) (refer to Figure 5)

This is also called the transit time jitter. This is the fluctuation in transit time between individual pulses, and may be defined as the FWHM of the frequency distribution of electron transit times. T.T.S. depends on the number of incident photons. The values in this catalog are measured in the single photoelectron state.

Figure 4: Definition of Rise Time and Transit Time


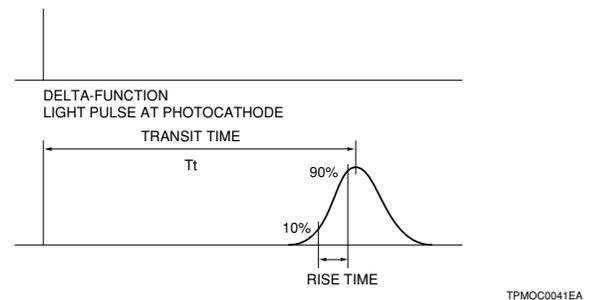


Figure 5: Definition of T.T.S.

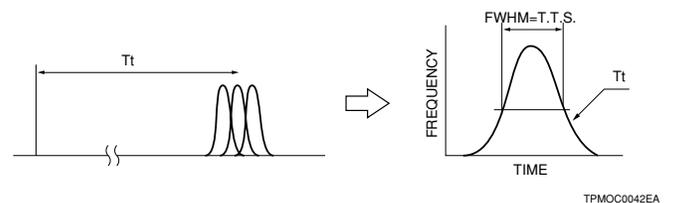


(4) C.R.T. (Coincident Resolving Time)

This is one of the important parameters in high energy physics applications and is defined as the FWHM of a coincident timing spectrum of a pair PMT's facing each other when they detect coincident gamma-ray emission due to positron annihilation of a radiation source (^{22}Na). The scintillators used are CsF, BGO or BaF_2 crystals. These PMT's can be selected for special requirements.

These parameters are affected by the dynode structure and applied voltage. In general, PMTs of the linear focused or circular cage structure exhibit better time response than that of the box-and-grid or venetian blind structure.

Figure 6 shows typical time response characteristics vs. applied voltage for types R2059 (51 mm dia. head-on, 12-stage, linear-focused type).

Figure 6: Time Response Characteristics vs. Supply Voltage

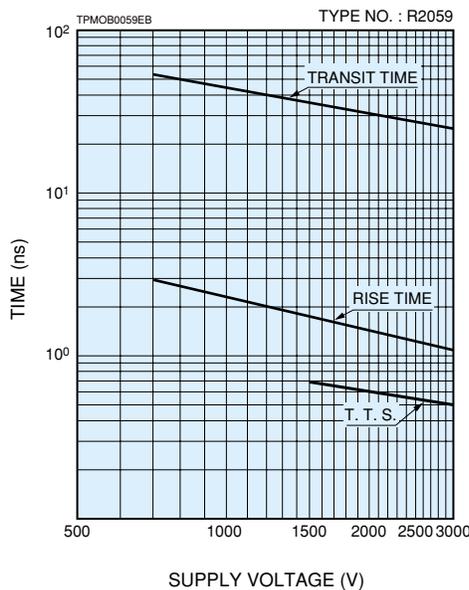

7. PULSE LINEARITY


The definition of the pulse linearity is proportionality between the input light amount and the output current in the pulse operation mode. When intense light pulses are to be measured, it's necessary to know the pulse linearity range of the PMT.

In this catalog, typical values of pulse linearity are specified at two points ($\pm 2\%$ and $\pm 5\%$ deviations from linear proportionality), as shown in Figure 7.

The two-pulse technique is employed in this measurement. LED's are used for a pulsed light source. Its pulse width is 50ns and the repetition rate is 1 kHz.

The deviation from the proportionality is called non-linearity in this catalog. The cause of non-linearity is mainly a space charge effect in the later stages of an electron multiplier. This space charge effect depends on the pulse height of the PMT output current and the strength of electric fields between electrodes. Even if the electrical charge is small, the pulse height of the PMT output should be considered.

Figure 7: Example of Pulse Linearity Characteristic

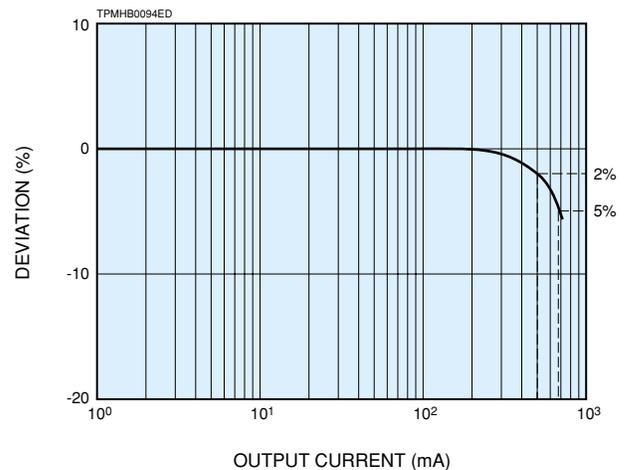


The special voltage distribution ratios are designed to achieve strong electric fields in the later stages of the electron multiplier. Some types are specified with these special voltage dividers.

8. UNIFORMITY

Although the focusing electrodes of a PMT are designed so that electrons emitted from the photocathode or dynodes are collected efficiently by the first or following dynodes, some electrons may deviate from their desired trajectories and collection efficiency is degraded. The collection efficiency varies with the position on the photocathode from which the photoelectrons are emitted, and influences the spatial uniformity of a photomultiplier tube. The spatial uniformity is also determined by the photocathode surface uniformity itself.

In general, head-on type PMT's provide better spatial uniformity than side-on type PMT's because of less limitations in the photocathode to first dynode geometry. Tubes especially designed for gamma camera applications have excellent spatial uniformity. Example of spatial uniformity is shown in Figure 8.

Figure 8: Example of Spatial Uniformity

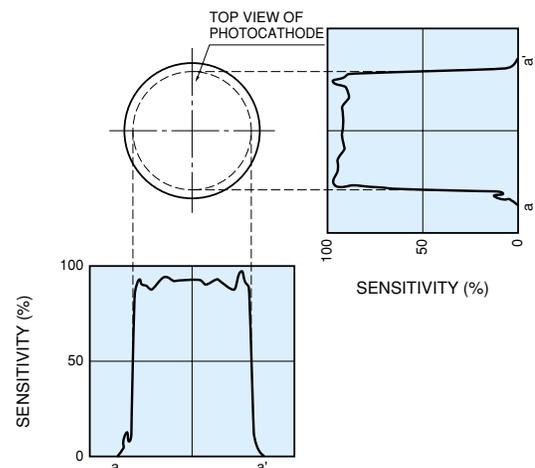

9. ANODE DARK CURRENT

In scintillation counting, there are two relevant stability characteristics for the PMT in pulse height mode operation, the long term and the short term. In each case a ^{137}Cs source (662 keV), and an NaI(Tl) scintillator, and a multichannel pulse height analyzer are used. PMT's are warmed up for about one hour in the dark with voltage applied.

9.1 Long Term Stability (Mean gain deviation)

This is defined as follows when the PMT is operated for 16 hours at a constant count rate of 1 k s^{-1} :

$$Dg = \frac{\sum_{i=1}^n |P - P_i|}{n} \cdot \frac{100}{P} (\%)$$

where P is the mean pulse height averaged over n readings, P_i is the pulse height at the i-th reading, and n is the total number of readings.


9.2 Short Term Stability

This is the gain shift against count rate change. The tube is initially operated at about 10 k s^{-1} . The photo-peak count rate is then decreased to approximately 1 k s^{-1} by increasing the distance between the ^{137}Cs source and the scintillator coupled to the PMT.

9.3 Drift and Life Characteristics

While operating a photomultiplier tube continuously over a long period, anode output current of the photomultiplier tube may vary slightly with time, although operating conditions have not changed. This change is referred to as drift or in the case where the operating time is 10^3 hours to 10^4 hours it is called life characteristics. Figure 9 shows typical life characteristics. Drift is primarily caused by damage to the last dynode by heavy electron bombardment. Therefore the use of lower anode current is desirable. When stability is of prime importance, the use of average anode current of $1\ \mu\text{A}$ or less is recommended.

Figure 9: Examples of Life

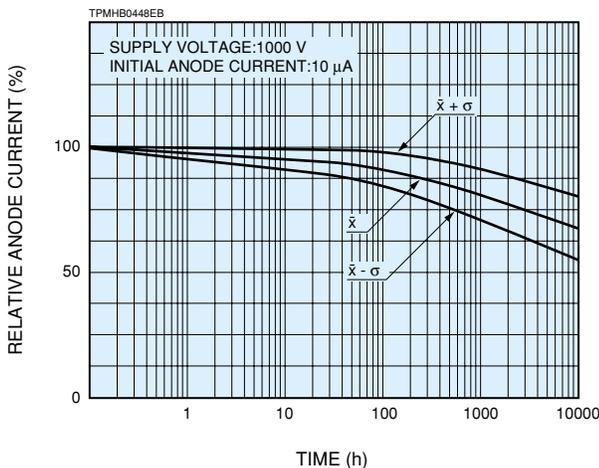


10. ENVIRONMENT

10.1 Temperature Characteristics

The sensitivity of the PMT varies with the temperature. Figure 10 shows typical temperature coefficients of anode sensitivity around the room temperature for bialkali and high temp. bialkali photocathode types. In the ultraviolet to visible region, the temperature coefficient of sensitivity has a negative value, while it has a positive value near the longer wavelength cut-off. Since the temperature coefficient change is large near the longer wavelength cut-off, temperature control may be required in some applications.

Figure 10: Typical Temperature Coefficients of Anode Sensitivity

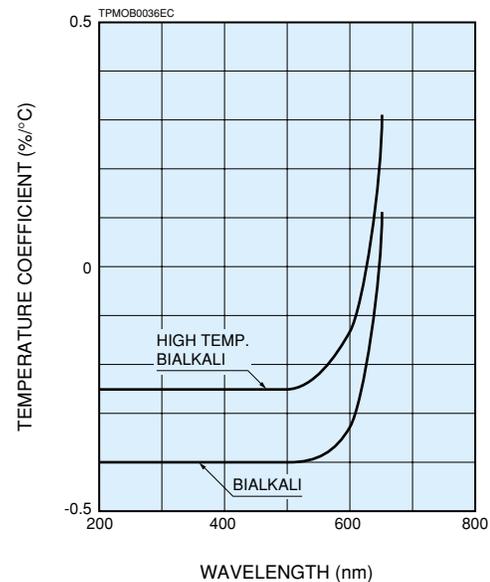

10.2 Magnetic Field

Most PMTs are affected by the presence of magnetic fields. Magnetic fields may deflect electrons from their normal trajectories and cause a loss of gain. The extent of the loss of gain depends on the type of the PMT and its orientation in the magnetic field. Figure 11 shows typical effects of magnetic fields on some types of PMTs. In general, a PMT having a long path from the photocathode to the first dynode are very sensitive to magnetic fields. Therefore head-on types, especially of large diameter, tend to be more adversely influenced by magnetic fields.

When a PMT has to be operated in magnetic fields, it may be necessary to shield the PMT with a magnetic shield case. (Hamamatsu provides a variety of magnetic shield cases.)

For example, the shield case, of which inner diameter is 60 mm and the thickness is 0.8 mm, can be used in a magnetic field of around 5 mTesla without saturation. If a magnetic field strength is more than 10 mTesla, the double shielding method is necessary for a conventional PMT, otherwise proximity mesh types should be used. It should be noted that the magnetic shielding effect decreases towards the edge of the shield case as shown in Figure 12. It is suggested to cover a PMT with a shield case longer than the PMT length by at least half the PMT diameter.

Figure 11: Typical Effects by Magnetic Fields Perpendicular to Tube Axis


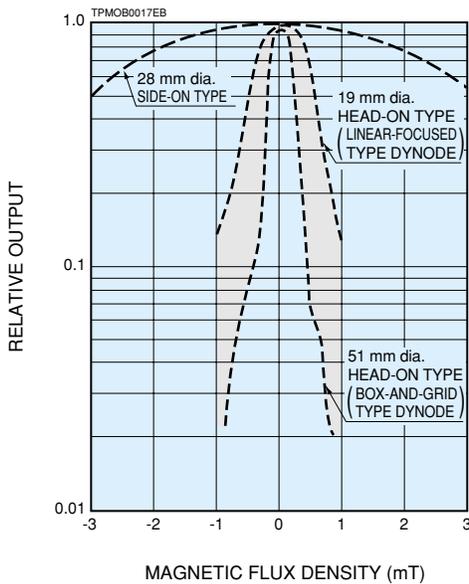


Figure 12: Edge Effect of Magnetic Shield Case

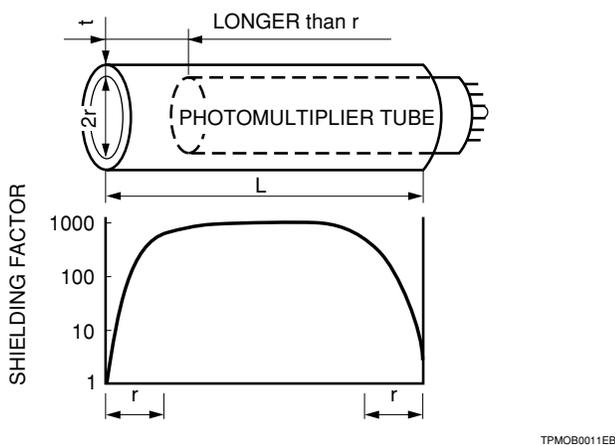

The proximity mesh made of non-magnetic material has been introduced as alternate dynodes in PMT's. These types (see page 22) exhibit much higher immunity to external magnetic fields than the conventional PMT's. Also triode and tetrode types (see page 22) are useful for applications at high light intensities.


11. VOLTAGE DIVIDER CONSIDERATION

11.1 General


Interstage voltages for PMT dynodes are usually supplied by a voltage divider network consisting of multiple series of resistors. Schematic diagrams of typical voltage divider networks are illustrated in Figure 13. Circuit (a) is a basic arrangement and (b) is for pulse operations. Figure 14 shows the response of a PMT using the voltage divider (a) as a function of the input light flux. The deviation from the linearity (non-linear region B) is caused by an increase in dynode voltages resulting from the redistribution of the decreased voltage primarily between the last dynode and the anode. As the input light level increases, the anode output current begins to saturate at near the value of the current flowing through the voltage divider (region C) due to the effect of voltage losses in the last few stages. Therefore, the upper limit of dynamic range of the PMT is determined by the voltage divider current. To prevent this problem, it is suggested that the voltage divider current be maintained at least 20 times the anode output current required from the PMT.

Figure 13: Schematic Diagrams of Voltage Divider Networks

(a) Basic arrangement for DC operation

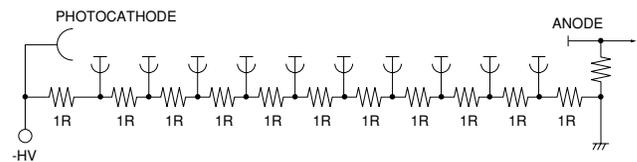


(b) For pulse operation

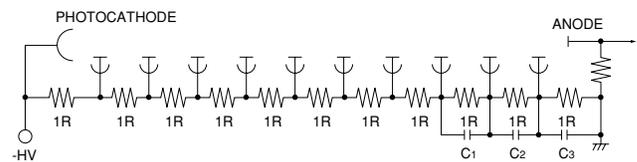

TACCC0030EB

Figure 14: Response of a PMT Using Voltage Divider (a)

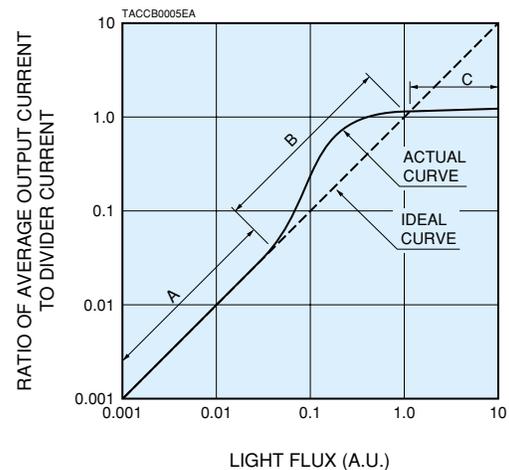

11.2 Decoupling (Charge Storage) Capacitors

Generally high output current is required in applications where the input light is in the form of pulses. In order to maintain dynode potentials at a constant value during pulse durations and handle high peak currents, large capacitors are used as shown in Figure 13 (b). The capacitor values depend on the output charge. If linearity of better than 1 % is needed, the capacitor value between the last dynode and the anode should be at least 100 times the output charge per pulse, as shown in the following formula:

$$C > 100 \frac{I \cdot t}{V} \text{ (farads)}$$

where I is the peak output current in amperes, t is the pulse width in seconds, and V is the voltage across the capacitor in volts.

Hamamatsu provides socket assemblies incorporating voltage divider networks. They are compact, rugged, and carefully engineered to minimize electric leakage. (See page 52.)

12. CATHODE POTENTIAL


12.1 General

The general technique used for voltage divider circuits is to ground the anode with a high negative voltage applied to the photocathode. This scheme eliminates the potential difference between the external circuit and the anode, facilitating the connection of such circuits such as ammeters or current to voltage conversion operational amplifiers to the PMT.

In scintillation counting, it is often impossible to use this technique, since the grounded scintillator is directly coupled to the PMT.

In such cases, it is recommended that the cathode to be grounded, as shown in Figure 15, with a high positive voltage applied to the anode.

Figure 15: Cathode Ground Scheme

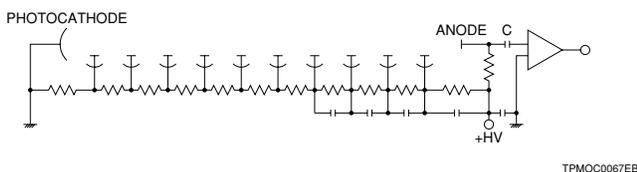

Using this scheme, a coupling capacitor C is used to isolate the high positive voltage applied to the anode from the signal, making it impossible to obtain a DC signal output. If the count rate of the PMT output pulses is high, this scheme may cause a base line shift.

12.2 External Potential

If the input window or glass envelope near the photocathode is grounded, slight conductivity of glass material causes a current flow between the photocathode, which has a high negative potential, and ground.

This may cause electrolysis of photocathode, leading to significant deterioration.

Also this may cause noise resulted from the light flashes at the above input window or glass envelope.


For those reasons, when designing a PMT housing with an electrostatic or magnetic shield case, extreme care should be required.

12.3 HA Coating

When the anode ground scheme is used, bringing a grounded metallic holder or magnetic shield case near the glass envelope of PMT can cause electrons to strike the inner glass wall, resulting in the noise.

This problem can be solved by applying a black conductive paint around the glass envelope and connecting it to the cathode potential. Then PMT is wrapped with an insulating black cover, as shown in Figure 16. This method is called HA coating.

Figure 16: HA Coating

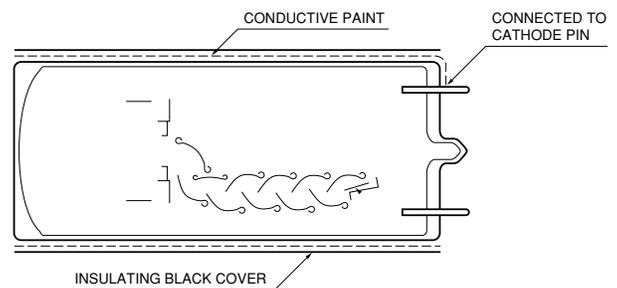

TPMHC0049EB

13. SCINTILLATION COUNTING

13.1 General

Scintillation counting is one of the most common and effective methods in detecting radiation particles. It uses a PMT coupled to a scintillator which produces light by incidence of radiation particles.

In radiation particle measurement, there are two parameters that should be measured. One is the energy of individual particle and the other is the amount of particles. When radiation particles enter the scintillator, they produce light flashes in response to each particle. The amount of flash is proportional to the energy of the incident particle and individual light flashes are detected by the PMT. Consequently, the output pulses obtained from the PMT contain information on both the energy and number of pulses, as shown in Figure 17.

Figure 17: Incident Particles and PMT Output



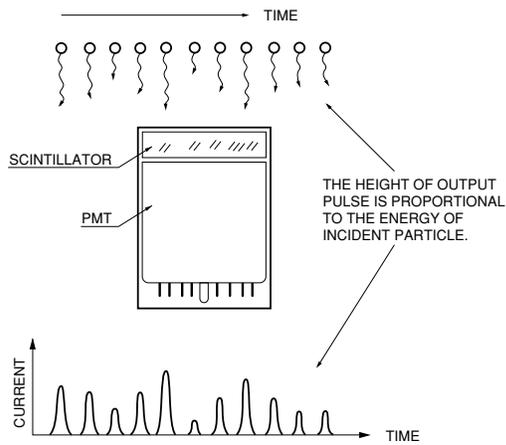


Figure 18: Typical Pulse Height Distribution (Energy Spectral)


(a) $^{55}\text{Fe} + \text{NaI}(\text{TI})$

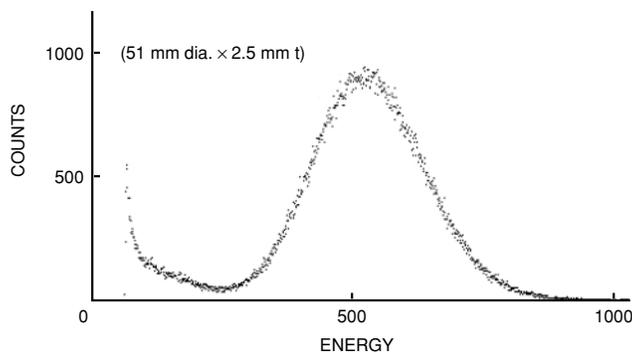

(b) $^{137}\text{Cs} + \text{NaI}(\text{TI})$

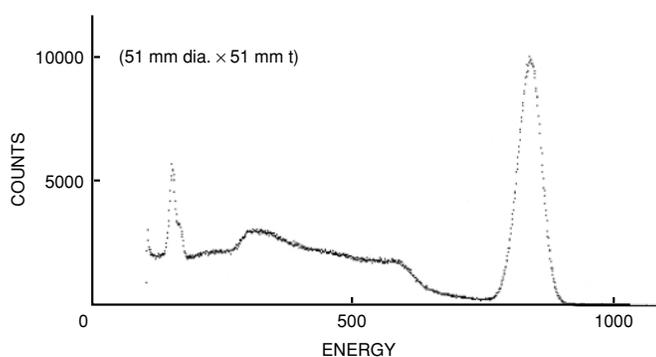

(c) $^{60}\text{Co} + \text{NaI}(\text{TI})$

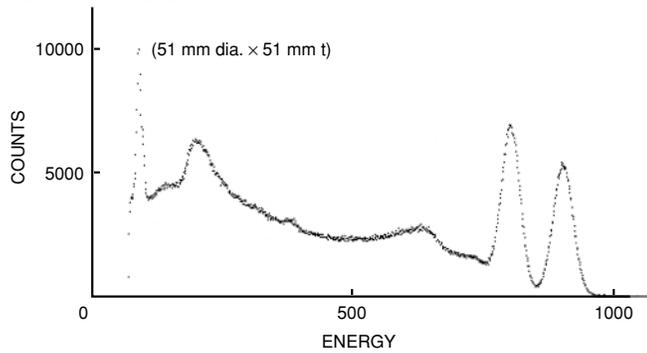


By analyzing these output pulses using a multichannel analyzer (MCA), pulse height distribution (PHD), or energy spectra, as shown in Figure 18, are obtained. From the PHD, the number of incident particles at various energy levels can be measured.

13.2 Energy Resolution

For the energy spectrum measurement, it is very important to have a distinct peak at each energy level. This characteristic is evaluated as the pulse height resolution or the energy resolution and is most significant in the radiation particle identification. Figure 19 shows the definition of the energy resolution using NaI(Tl) scintillator and ^{137}Cs γ -ray source. It is customarily stated as a percentage.

Figure 19: Definition of Pulse Height Resolution

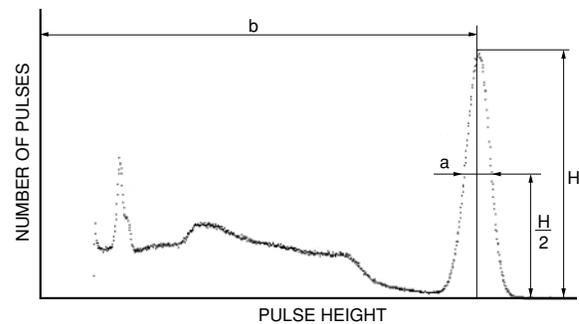

$$\text{Energy Resolution (FWHM)} = \frac{a}{b} \times 100\%$$

The following factors determine the energy resolution.

- (1) Energy conversion efficiency of the scintillator
- (2) Intrinsic energy resolution of the scintillator
- (3) Quantum efficiency of the photocathode
- (4) Collection efficiency of photoelectrons at the first dynode
- (5) Secondary emission yield of dynodes (especially first dynode)

The equation of the pulse height resolution is described as follows:

$$R(E)^2 = R_S(E)^2 + R_P(E)^2$$

where $R(E)$: energy resolution

$R_S(E)$: energy resolution of a scintillator

$R_P(E)$: energy resolution of a PMT

$R_P(E)^2$ is described as follows:

$$R_P(E)^2 = \frac{2.35^2}{N\eta\alpha} \times \frac{\delta}{\delta-1}$$

where N : mean number of incident photon

η : quantum efficiency

α : collection efficiency


δ : mean secondary emission yield of each dynode

To obtain a good energy resolution, it is important to use a good scintillator having a high efficiency and a good intrinsic energy resolution. It is also important to reduce a light loss between a PMT and a scintillator. For this purpose, it is useful to couple them with silicon oil having a refractive index close to that of the faceplate window used in the PMT.

13.3 Emission Spectrum of Scintillator

The quantum efficiency of the PMT is one of the main factors to determine its energy resolution. It is necessary to choose a PMT whose spectral response matches the scintillator emission. Figure 20 shows PMT typical spectral response vs. emission spectra of scintillators. For NaI(Tl), which is the most popular scintillator, bialkali photocathode PMTs are widely used.

Figure 20: Typical Spectral Response and Emission Spectra of Scintillators

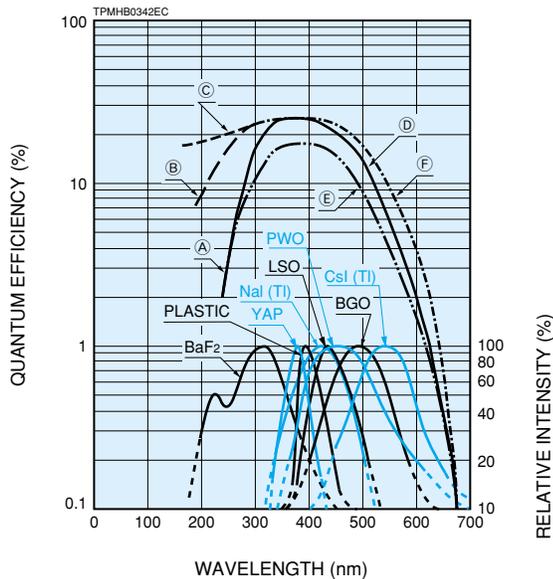

- Ⓐ: Borosilicate Glass
- Ⓑ: UV Glass
- Ⓒ: Synthetic Silica
- Ⓓ: Bi-alkali Photocathode
- Ⓔ: High Temp. Bi-alkali Photocathode
- Ⓕ: Extended Green Bi-alkali Photocathode

13.4 Features of Scintillators

Figure 21 shows typical temperature responses of various scintillators. These characteristics should be considered in the actual operation.

Table 1 shows a summary of scintillator characteristics. These data are reported by scintillator manufactures.

Figure 21: Typical Temperature Response of Various Scintillators

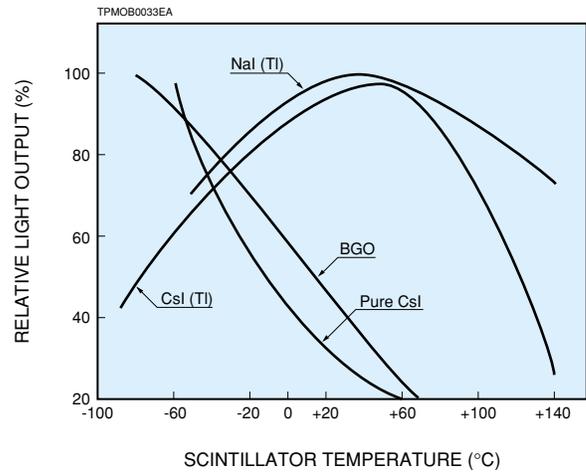


Table 1: Summary of Scintillator Characteristics


	NaI(Tl)	BGO	CsI(Tl)	Pure CsI	BaF ₂	GSO: Ce	Plastic	LSO: Ce	PWO	YAP: Ce
Density (g/cm ³)	3.67	7.13	4.51	4.51	4.88	6.71	1.03	7.35	8.28	5.55
L _{rad} (cm)	2.59	1.12	1.85	1.85	2.10	1.38	40	0.88	0.87	2.70
Refractive Index	1.85	2.15	1.80	1.80	1.58	1.85	1.58	1.82	2.16	1.97
Hygroscopic	Yes	No	Slightly	Slightly	Slightly	No	No	No	No	No
Luminescence (nm)	410	480	530	310	325	430	400	420	470	380
Decay time (nsec)	230	300	1000	10	630	30	2.0	40	15	30
Relative Light Output	100	15	45 to 50	<10	20	20	25	70	0.7	40

14. METAL PACKAGE PHOTOMULTIPLIER TUBE

In general including, the development of more compact and portable equipment has continuously progressed. This has led to a strong demand for miniaturization of highly sensitive photodetectors like PMTs. However, it is difficult to miniaturize conventional PMTs with glass envelopes and sophisticated electrode structures.

Accordingly, PMTs have been mainly used in high-precision photometric systems, while semiconductor sensors have been used in general purpose, compact and portable equipments/applications. To meet the increasing needs for small photodetectors with high sensitivity, Hamamatsu has developed subminiature PMTs (R7400 series) using a metal package in place of the traditional glass envelope. These tubes have a size as small as semiconductor sensors, without sacrificing high sensitivity, and have the high speed response offered by conventional PMTs. The remarkable features of R7400 series are: smallest size, fast time response, ability of low light level detection and good immunity to magnetic fields.


Figure 22: Cross Section and Top View of R7400

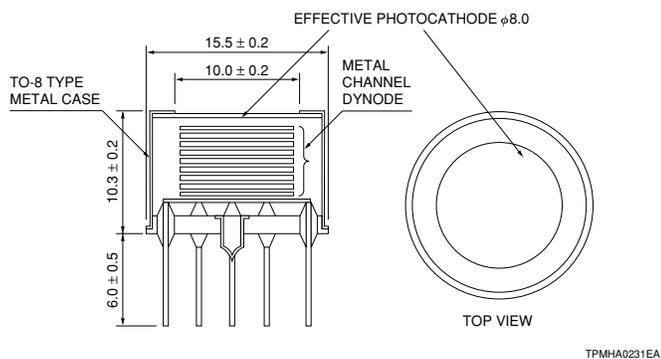

R7400 is a subminiature PMT that incorporates an eight stages electron multiplier constructed with stacked thin electrodes (metal channel dynode) into a TO-8 type metal can package of 15 mm in diameter and 10 mm in height. The development of this metal package and its unique thin electrodes have made the fabrication of this subminiature PMT possible. The electrode structure of the electron multiplier was designed by means of advanced computer simulation and electron trajectory analysis.

Furthermore, our long experience with micromachining technology has achieved a closed proximity assembly of these thin electrodes. Figure 22 shows a cross section of the R7400 and Figure 23 shows that of a metal channel dynode with simulated electron trajectories.


Figure 23: Cross Section of Metal Channel Dynode with Electron Trajectories

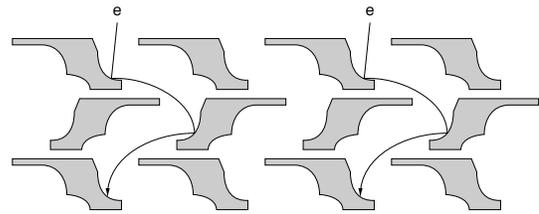

TPMHC0101EA

The R7600 series is another version of metal package PMT. It incorporates 10 to 12 stages of metal channel dynodes into a metal package of 26 mm × 26 mm square and 20 mm in height. The prime features are similar to those of R7400 series, but its effective area is 18 mm × 18 mm instead of 8 mm diameter of R7400. The dimensional outline of R7600U is shown in Figure 24. In this figure, "U" means a tube having an insulation plastic cover. It is necessary to prevent electric shock with some insulation material, because a metal package has a cathode potential voltage.

Figure 24: Dimensional Outline of R7600U

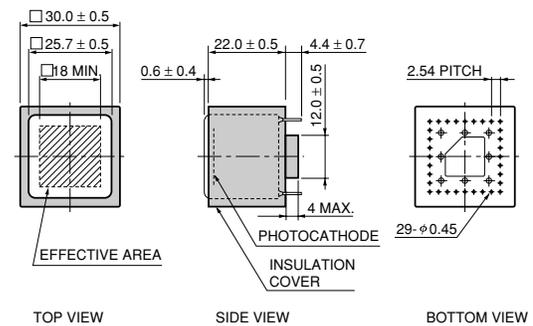

TPMHA0278EI

As the metal channel dynode is a sort of an array of small linear focused dynodes, secondary electrons hardly go to the adjacent dynode channel in a process of multiplication. It is possible to make multi-anode PMTs utilizing this feature. R7600 series is offering 6 various types of anode shapes as well as single channel type. These anode shapes are categorized into 3 groups. The first group is multianode in matrix. 4 (2 × 2), 16 (4 × 4) and 64 (8 × 8) matrix channels types are available. (see Figure 25) Those are suitable for scintillating fiber readout as well as RICH (Ring Image CHERENKOV counter). The second group is linear anode. 16 (1 × 16) and 32 (1 × 32) linear channels types are available. (see Figure 26) Those are suitable for coupling with slit shape scintillators and ribbon-shaped scintillating fiber bundle. The third one is crossed-plate anode. 6X + 6Y type is available. (see Figure 27) It is possible to get position information by using a center-of-gravity method, this PMT is suitable for compact PET and radiation imaging.

Figure 25: Anode Variation of R7600 Series (1)

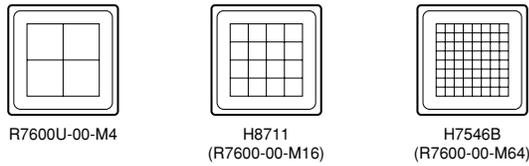


Figure 26: Anode Variation of R7600 Series (2)


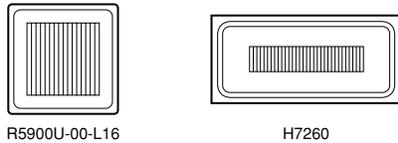


Figure 27: Anode Variation of R7600 Series (3)

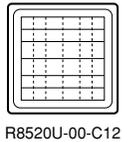

- * R5900 series has flange at the bottom of the metal package, whereas R7600 series doesn't have it.
- ** R8520 is one of R7600 series, but it has longer length compared with that of R7600 series.

TPMHC0204EB

15. FINE MESH PHOTOMULTIPLIER TUBE

In recent years, the demand for photodetectors to be operated in strong magnetic fields has increased, especially in the field of high energy physics. Conventional PMTs electron trajectories are affected by magnetic fields. The gain of these PMTs is decreased under such conditions. Therefore, it is necessary for these PMTs to either use a light guide to send signal light to a region outside the magnetic field or to use a magnetic shield. The light guide and its coupling to a PMT cause loss of light and deterioration of the timing characteristics of the signal light. The use of magnetic shield adds cost and energy loss for the next particle detector.

PMTs using fine mesh dynodes, they are called Fine Mesh PMTs, have been developed as photodetectors which can be operated in high magnetic fields over 1.5 Tesla. Other features are fast time response and wide dynamic range. Figure 28 shows a cross section of a Fine Mesh PMT and Figure 29 shows details of a fine mesh dynode. Its mesh diameter is around $4\ \mu\text{m}$ and its pitch is approximately $13\ \mu\text{m}$.

When an electron hits on the upper part of the fine mesh dynode, secondary electrons are emitted upward from the fine mesh dynode. Those electrons return to the same dynode and pass through it to reach to next fine mesh dynode. This process is repeated through the last dynode stage and finally electrons are multiplied 10^6 or more. When magnetic field is set parallel to a tube axis, the electron trajectories are affected by Lorentz's force and electrons make spiral movement, since the electric field is parallel to the tube axis. Its spiral diameter is determined by the strength of magnetic field. When magnetic field is increased, the number of electrons, which are emitted upward from the fine mesh dynode and return to the same dynode, is increased, Due to this effect, a tube gain is decreased. Fine Mesh PMT consists of 15 to 19 stages of fine mesh dynodes. Each dynode as well as the photocathode is set in close each other. Tube diameters from 1" to 2.5" are available.

Figure 28: Cross Section of a Fine Mesh PMT


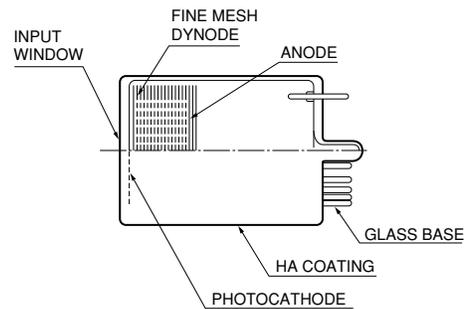


Figure 29: Details of a Fine Mesh Dynode

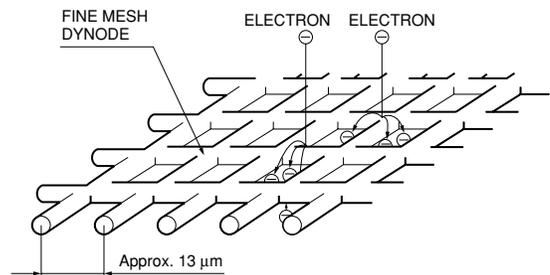

TPMOC0012EB

Selection Guide by Applications

Applications	Examples of Applicable PMT
--------------	----------------------------

HIGH ENERGY PHYSICS

COLLISION EXPERIMENT

CALORIMETER	R4125, R7899-01 (H8643), R5505-70 (H6152-70), R6427 (H7415), R580 (H3178-51), R580-17 (H3178-61), R7761-70 (H8409-70), R329-02 (H6410), R1828-01 (H1949-51), R2154-02, R5924-70 (H6617-70), R7723, R6504-70 (H8318-70), R6091 (H6559), R1250 (H6527)
TOF COUNTER	R1635 (H3164-10), R4124, R1450 (H6524), R3478 (H6612), R4998 (H6533), R7899-01 (H8643), R6427 (H7415), R1828-01 (H1949-51), R2083 (H2431), R5496 (H6156-50), R7723, R4143 (H6525), R1250 (H6527)
TAGGING DETECTOR	R1635 (H3164-10), R4124, R1450 (H6524), R3478 (H6612), H8711 (R7600-00-M16)
TRACKING DETECTOR	R7600U-00-M4, R5900U-00-L16, H8711 (R7600-00-M16), H7546B (R7600-00-M64), H7260 (R7259)
RICH (Ring Image Cherenkov Counter)	R7600U-00-M4, H8711 (R7600-00-M16), H7546B (R7600-00-M64)
THRESHOLD CHERENKOV COUNTER	R2256-02 (H6521), R5113-02 (H6522), R2059 (H3177-51), R1584 (H6528)
ANY USE in High Magnetic Field	R5505-70 (H6152-70), R7761-70 (H8409-70), R5924-70 (H6614-70), R6504-70 (H8318-70)

R7600 series is flangeless type of R5900 series.

SOLAR NEUTRINO AND LONG BASELINE EXPERIMENT

WATER CHERENKOV COUNTER	R6594, R5912, R5912-02, R7081, R7081-20, R8055, R3600-02 (R3600-06), R7250
--------------------------------	----------------------------------------------------------------------------

COSMIC RAY EXPERIMENT

GAMMA RAY TELESCOPE	R1635 (H3164-10), R2248, R4124, R2102, R6427 (H7415), R7525
FLUORESCENCE DETECTOR	R580 (H3178-51), R6231, R6232, R6233
AIRSHOWER DETECTOR	R1166 (H6520), R580 (H3178-51), R329-02 (H6410), R1828-01 (H1949-51), R6091 (H6559), R1250 (H6527)

Models in blue are assembly type.

Applications	Examples of Applicable PMT
--------------	----------------------------

MEDICAL

GAMMA CAMERA	R1306, R6231, R6232, R1307, R1538-01, R6233, R6234, R6235, R6236, R6237
COMPACT GAMMA CAMERA	R8520U-00-C12, R2486-02, R3292-02, H8711 (R7600-00-M16), H7546B (R7600-00-M64), H8500 (R8400)
ANIMAL PET	R8520U-00-C12, R2486-02, R3292-02, H8711 (R7600-00-M16), H7546B (R7600-00-M64), H8500 (R8400)
WHOLE BODY PET	R1635 (H3164-10), R1450 (H6524), R7899-01 (H8643), R1548-07
SURGICAL PROBE	R1635 (H3164-10), R1166 (H6520), R8520U-00-C12, R2486-02
LIQUID SCINTILLATION COUNTER	R331, R331-05

R7600 series is flangeless type of R5900 series.

RADIATION MONITOR

SURVEY METER	R1635 (H3164-10), R647-01 (H3165-10), R1924A, R7899-01 (H8643), R7400U
AREA MONITOR	R1306, R6231, R329-02 (H6410), R4607-06, R6232, R1307, R6233, R877, R877-01
COMPACT PROBE	R1635 (H3164-10), R647-01 (H3165-10), R5611-01 (H8135), R7375-01, R1924A, R7373A-01, R7354, R8143
2-D IMAGING MONITOR	R8520U-00-C12, R2486-02, R3292-02, H8500 (R8400)
ANY USE in HIGH TEMPERATURE	R4177-06, R3991-04, R1288A-06
ANY USE in SHOCK and VIBRATION	R4177-06, R5611-01 (H8135), R3991-04, R1924A, R1288A-06

Models in blue are assembly type.

List Guide for Photomultiplier Tubes

Tube Diameter	Type No.	Spectral Response Range (nm) / Curve Code	Outline No.	Socket & Socket Assembly	Dynode Structure / No. of Stages	Cathode Sensitivity			Anode Sensitivity			
						Luminous Typ. ($\mu\text{A}/\text{lm}$)	Blue Sens. Index (CS 5-58) Typ.	Q.E. at Peak Typ. (%)	Anode to Cathode Supply Voltage (V)	Gain Typ.	Luminous Typ. (A/lm)	Dark Current
											Typ. (nA)	Max. (nA)

1 Spectral Response

The relationship between photocathode sensitivity and wavelength of input light.


Curve code corresponds to that of spectral response curve on the inside back cover.

(Refer to section 2 on page 2 for further details.)

2 Outline No.

This number corresponds to that of PMT dimensional outline drawing shown on later pages.

Basing diagram symbols are explained as follows:

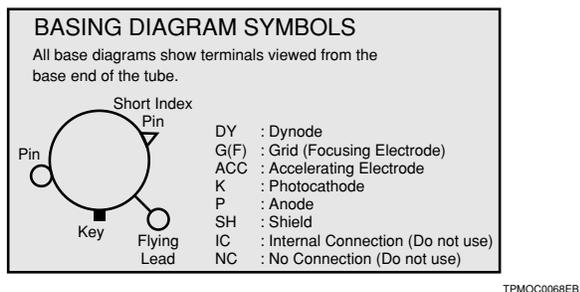

3 Socket & Socket Assembly

★ mark : A socket will be supplied with a PMT.

no mark : A socket will be supplied as an option.

The number in square corresponds to the outline number of the PMT socket assembly on page 52 and 53.

4 Dynode

<Dynode Structure>

Each mark means dynode structure as follows:

- LINE : linear focused
- BOX : box and grid
- B & L : box and linear focused
- CC : circular cage
- VB : venetian blind
- FM : fine mesh
- CM : coarse mesh
- MC : metal channel

<No. of Stages>

The number of dynodes used.

(Refer to section 3 on page 4 for further details.)

5 Cathode Sensitivity (Luminous)

The photoelectric current from the photocathode per incident light flux from a tungsten filament lamp operated at 2856K.

(Refer to section 2.5 on page 3 for further details.)

6 Cathode Blue Sensitivity Index

The photoelectric current from the photocathode per incident light flux from a tungsten filament lamp operated at 2856K passing through a blue filter which is Corning CS 5-58 polished to 1/2 stock thickness.

(Refer to section 2.5 on page 3 for further details.)

7 QE (Quantum Efficiency)

The ratio of the number of photoelectrons emitted from the photocathode to the number of incident photons.

This catalog shows quantum efficiency at the peak wavelength.

(Refer to section 2.2 on page 2 for further details.)

8 Anode to Cathode Voltage

The voltage indicates a standard applied voltage used to measure characteristics. The number in circles corresponds to that of the voltage distribution ratio on page 40 and 41.

9 Gain (Current Amplification)

The ratio of the anode output current to the photoelectric current from the photocathode.

(Refer to section 4.2 on page 4 for further details.)

10 Anode Sensitivity (Luminous)

The output current from the anode per incident light flux from a tungsten filament lamp operated at 2856K.

(Refer to section 4.1 on page 4 for further details.)

Maximum Rating 12		Time Response 13			Typical Pulse Height Resolution 14 (%)	Stability 15		Pulse Linearity 16		Note	Type No.
Anode to Cathode Voltage (V)	Average Anode Current (mA)	Rise Time Typ. (ns)	Transit Time Typ. (ns)	T.T.S. Typ. (FWHM) (ns)		Long Term (%)	Short Term (%)	±2 % Deviation (mA)	±5 % Deviation (mA)		

11 Anode Dark Current

The output current from the anode measured after 30 minutes storage in complete darkness.
(Refer to section 5 on page 5 for further details.)

12 Maximum Rating

<Anode to Cathode Voltage>

The maximum anode to cathode voltages are limited by the internal structure of the PMT.
Excessive voltage causes electrical breakdown. The voltage lower than the maximum rating should be applied to the PMT.

<Average Anode Current>

This indicates the maximum averaged current over any interval of 30 seconds. For practical use, operating at lower average anode current is recommended.
(Refer to section 9.3 on page 7 for further details)

13 Time Response

<Rise Time>

The time for the anode output pulse to rise from 10 % to 90 % of the peak amplitude.

<Electron Transit Time>

The time interval between the arrival of a delta function light pulse at the photocathode and the instant when the anode output pulse reaches its peak amplitude.

<T.T.S. (Transit Time Spread)>

This is the fluctuation in transit time among individual pulses, and is defined as the FWHM of the frequency distribution of transit time.

<C.R.T. (Coincident Resolving Time)>

This is defined as the FWHM of a coincident timing spectrum of a pair PMT's. The scintillator used are BGO, BaF₂ or CsF crystals.
(Refer to section 6 on page 5 and 6 for further details.)

14 Pulse Height Resolution (P.H.R.)

The P.H.R. is measured with the combination of an NaI(Tl) scintillator and a ¹³⁷Cs source as a standard measurement. If other scintillators or γ-ray sources are used, note is attached.
(Refer to section 13.2 on page 10 and 11 for further details.)

15 Stability

<Long Term Stability (Mean Gain Deviation)>

This is defined as follows under the operation for 16 hours at a constant count rate of 1k s⁻¹:

$$Dg = \frac{\sum_{i=1}^n |P-P_i|}{n} \cdot \frac{100}{P} (\%)$$

where P is the mean pulse height averaged over n readings, P_i is the pulse height at the i-th reading, and n is the total number of readings.

<Short Term Stability>

This is the gain shift on count rate change. The tube is first operated at about 10k s⁻¹. The photo-peak count rate is then decreased to about 1k s⁻¹ by increasing the distance between the ¹³⁷Cs source and the tube coupled to the NaI(Tl) scintillator.
(Refer to section 9 on page 7 for further details.)

16 Pulse Linearity

Typical values of pulse linearity are specified at two points (±2 % and ±5 % deviation points from linear proportionality).
(Refer to section 7 on page 6 for further details.)

Photomultiplier Tubes

Tube Diameter	Type No.	Spectral Response Range (nm) / Curve Code	Outline No.	Socket & Socket Assembly	Dynode Structure / No. of Stages	Cathode Sensitivity			Anode Sensitivity					
						Luminous Typ. ($\mu\text{A/lm}$)	Blue Sens. Index (CS 5-58) Typ.	Q.E. at Peak Typ. (%)	Anode to Cathode Supply Voltage (V)	Gain Typ.	Luminous Typ. (A/lm)	Dark Current		
													Typ. (nA)	Max. (nA)
10 mm (3/8 inch) to 38 mm (1-1/2 inch) Dia. Types														
10 mm (3/8")	R1635	300 to 650/A-D	1	E678-11N* 1	LINE / 8	100	10.0	25	1250 6	1.0×10^6	100	1	50	
	R2496	160 to 650/C-D	1	E678-11N* 1	LINE / 8	100	10.0	25	1250 8	1.0×10^6	100	2	50	
13 mm (1/2")	R647-01	300 to 650/A-D	3	E678-13A* 2	LINE / 10	110	10.0	25	1000 15	1.4×10^6	150	1	2	
	R4124	300 to 650/A-D	2	E678-13A* 3	LINE / 10	100	10.0	25	1000 28	1.0×10^6	100	1	15	
	R4177-06	300 to 650/A-E	3	E678-13E*	LINE / 10	30	4.5	12	1500 15	5.0×10^5	15	0.5	10	
19 mm (3/4")	R1166	300 to 650/A-D	4	E678-12L* 4	LINE / 10	110	10.5	26	1000 18	1.0×10^6	110	1	5	
	R1450	300 to 650/A-D	5	E678-12L* 4	LINE / 10	115	11.0	27	1500 24	1.7×10^6	200	3	50	
	R3478	300 to 650/A-D	6	E678-12L* 5	LINE / 8	115	11.0	27	1700 12	1.7×10^6	200	10	300	
	R3991-04	300 to 650/A-E	7	E678-12A*	CC / 10	30	4.5	12	1500 27	3.3×10^5	10	0.1	10	
	R4125	300 to 650/A-D	5	E678-12L* 6	LINE / 10	115	11.0	27	1500 19	8.7×10^5	100	10	50	
	R5325	300 to 650/A-F	6	E678-12L*	LINE / 6	125	11.0	27	1500 1	8.0×10^3	1	1	10	
	R5611-01	300 to 650/A-D	7	E678-12A*	CC / 10	90	10.5	26	1000 27	5.5×10^5	50	3	20	
25 mm (1")	R1288A-06	300 to 650/A-E	8	E678-14C*	LINE / 10	30	4.5	12	1500 27	3.3×10^5	10	0.1	10	
	R1924A	300 to 650/A-D	8	E678-14C* 10	LINE / 10	90	10.5	26	1000 27	2.0×10^6	180	3	20	
	R4998	300 to 650/A-D	9	E678-12A*	LINE / 10	70	9.0	22	2250 17	5.7×10^6	400	100	800	
	R5380	300 to 650/A-F	10	E678-14C*	LINE / 6	125	11.0	27	1000 3	6.0×10^3	0.75	1	10	
	R5505-70	300 to 650/A-D	11	E678-17A* 8	FM / 15	80	9.5	23	2000 55	5.0×10^5	40	5	30	
	R7899-01	300 to 650/A-D	12	E678-12A*	LINE / 10	95	11.0	27	1250 28 <1500 29>	2.0×10^6 < 1.7×10^6 >	190 <160>	2 <2>	15 <20>	
28 mm (1-1/8")	R6427	300 to 650/A-D	13	E678-14C* 11/12	LINE / 10	95	11.0	27	1500 30 <1500 31>	5.0×10^6 < 2.0×10^6 >	475 <190>	10 <4>	200 <80>	
	R7111	300 to 650/A-D	14	E678-14C* 10	LINE / 10	90	10.5	26	1000 27	2.0×10^6	180	3	20	
	R7525	300 to 650/A-D	15	E678-14C*	LINE / 8	95	11.0	27	1500 9 <1500 10>	5.0×10^5 < 2.0×10^5 >	45 <19>	5 <2>	100 <40>	
38 mm (1-1/2")	R580	300 to 650/A-D	16	E678-12A* 13	LINE / 10	95	11.0	27	1250 21 <1500 23>	1.1×10^6 < 7.9×10^5 >	100 <75>	3 <2>	20 <15>	
	R580-17	300 to 650/A-F	17	E678-12A*	LINE / 10	125	11.0	27	1250 25 <1500 26>	1.2×10^6 < 1.1×10^6 >	150 <140>	4 <4>	20 <20>	
	R980	300 to 650/A-D	18	E678-12A* 13	CC / 10	100	11.5	28	1000 21	3.5×10^5	35	3	5	
	R3886	300 to 650/A-D	19	E678-12A* 13	CC / 10	90	10.5	26	1000 21	5.0×10^5	45	3	5	
	R5330	185 to 650/B-D	16	E678-12A*	LINE / 6	95	11.0	27	1250 2	1.0×10^4	0.95	2	15	
	R7761-70	300 to 650/A-D	20	—	FM / 19	80	9.5	23	2000 56	1.0×10^7	800	15	100	

Note: The data in square bracket < > is measured with tapered voltage distribution ratio.
Please refer to page 16 for meaning of numbers in 2, 3 and 8.

(at 25 °C)

Maximum Rating ¹²		Time Response ¹³			Typical Pulse Height Resolution ¹⁴	Stability ¹⁵		Pulse Linearity ¹⁶		Note	Type No.
Anode to Cathode Voltage (V)	Average Anode Current (mA)	Rise Time Typ. (ns)	Transit Time Typ. (ns)	T.T.S. Typ. (FWHM) (ns)		Long Term (%)	Short Term (%)	±2 % Deviation (mA)	±5 % Deviation (mA)		
1500	0.03	0.8	9	0.5	23/BGO *1	1.0	2.0	3	7	UV type (R3878) is available.	R1635
1500	0.03	0.7	9	0.5	23/BGO *1	1.0	2.0	3	7		R2496
1250	0.1	2.5	24	2.0	7.8	1.0	2.0	3	7	SILICA (R760) and UV (R960) types are available.	R647-01
1250	0.03	1.1	12	0.5	8.1	1.0	2.0	2	5	UV type (R4141) is available.	R4124
1800	0.02	2.0	20	—	12.0	2.0	2.0	8	13	Flying Lead type (R4177-04) is available.	R4177-06
1250	0.1	2.5	27	2.8	7.8	1.0	2.0	4	7	SILICA (R762) and UV (R750) types are available.	R1166
1800	0.1	1.8	19	0.76	7.8	1.0	2.0	4	8		R1450
1800	0.1	1.3	14	0.36	7.8	1.0	2.0	4	8	SILICA (R2076) and UV (R3479) types are available.	R3478
1800	0.02	1.0	13	—	11.0	2.0	2.0	2	5		R3991-04
1800	0.1	2.5	16	0.85	7.8	1.0	2.0	100	170		R4125
1800	0.1	1.2	9.5	—	7.8	1.0	2.0	80	120	UV with 5-stage type (R5364) is available.	R5325
1250	0.1	1.5	17	0.8	8.0	1.0	2.0	1	2	Glass Base type (R5611) is available.	R5611-01
1800	0.02	1.3	13	—	9.0	1.0	2.0	20	40		R1288A-06
1250	0.1	1.5	17	0.9	7.8	1.0	2.0	30	50	Flying Lead type (R1924A-01) is available.	R1924A
2500	0.1	0.7	10	0.16	8.0	1.0	2.0	40	70	SILICA type (R5320) is available.	R4998
1800	0.1	1.6	12	—	7.5	1.0	2.0	80	120		R5380
2300	0.01	1.5	5.6	0.35	9.5	2.0	2.0	180	250	For +HV operation.	R5505-70
1800	0.1	1.6 <1.6>	17 <16>	0.6 <0.7>	7.8	1.0	2.0	30 <100>	50 <150>	Glass Base type (R7899) is available.	R7899-01
2000	0.2	1.7 <1.7>	16 <16>	0.5 <0.5>	7.8	1.0	2.0	10 <100>	30 <150>	UV type (R7056) is available.	R6427
1250	0.1	1.6	18	0.9	7.8	1.0	2.0	30	50		R7111
1750	0.2	1.3 <1.3>	14 <14>	—	7.8	1.0	2.0	10 <100>	30 <150>		R7525
1750	0.1	2.7 <2.7>	37 <40>	4.5 <4.5>	7.7	1.0	1.0	40 <150>	60 <200>		R580
1750	0.1	2.7 <2.7>	27 <40>	2.0 <2.0>	7.7	1.0	1.0	40 <150>	60 <200>		R580-17
1250	0.1	2.8	40	4.8	7.6	1.0	1.0	1	3		R980
1250	0.1	2.5	32	2.2	7.6	1.0	2.0	1	3		R3886
1600	0.1	2.5	25	—	7.7	1.0	2.0	80	120		R5330
2300	0.01	2.1	7.5	0.35	9.5	2.0	2.0	350	500	For +HV operation.	R7761-70

Note 1: This data is measured with ²²Na source and BGO scintillator.

Tube Diameter	Type No.	Spectral Response Range (nm) / Curve Code	Outline No.	Socket & Socket Assembly	Dynode Structure / No. of Stages	Cathode Sensitivity			Anode Sensitivity				
						Luminous Typ. ($\mu\text{A/lm}$)	Blue Sens. Index (CS 5-58) Typ.	Q.E. at Peak Typ. (%)	Anode to Cathode Supply Voltage (V)	Gain Typ.	Luminous Typ. (A/lm)	Dark Current	
												Typ. (nA)	Max. (nA)
51 mm (2")	R329-02	300 to 650/A-D	21	E678-21C* 19	LINE / 12	90	10.5	26	1500 ⁴⁶ <2000 ⁴⁸ >	1.1×10^6 < 3.0×10^6 >	100 <270>	6 <10>	40 <100>
	R331-05	300 to 650/A-D	22	E678-21C* 19	LINE / 12	90	10.5	26	1500 ⁴⁶	1.3×10^6	120	200 min ⁻¹ *2	600 min ⁻¹ *2
	R1306	300 to 650/A-D	23	E678-14V ¹⁶ ¹⁷	BOX / 8	110	12.0	30	1000 ⁵	2.7×10^5	30	2	20
	R1828-01	300 to 650/A-D	24	E678-20A* ¹⁵	LINE / 12	90	10.5	26	2500 ⁴⁰ <2500 ⁴¹ >	2.0×10^7 < 1.0×10^7 >	1800 <900>	50 <25>	400 <200>
	R1840	300 to 650/A-D	25	E678-14V	CM / 10	60	8.0	20	1250 ²¹ <1250 ²² >	1.7×10^5 < 1.3×10^5 >	10 <8>	5 <5>	50 <50>
	R2083	300 to 650/A-D	26	E678-19F*	LINE / 8	80	10.0	25	3000 ¹³	2.5×10^6	200	100	800
	R2154-02	300 to 650/A-D	27	E678-14V ¹⁴	LINE / 10	90	10.5	26	1250 ²¹ <1500 ²³ >	1.0×10^6 < 6.0×10^5 >	90 <54>	5 <3>	20 <15>
	R4607-06	300 to 650/A-E	28	E678-15B*	CC / 10	30	4.5	12	1500 ²¹	3.3×10^5	10	3	50
	R5924-70	300 to 650/A-D	29	—	FM / 19	70	9.0	22	2000 ⁵⁶	1.0×10^7	700	30	200
	R6231	300 to 650/A-D	30	E678-14V ¹⁸	B&L / 8	110	12.0	30	1000 ⁷	2.7×10^5	30	2	20
R7723	300 to 650/A-D	31	E678-21C*	LINE / 8	90	10.5	26	1750 ¹¹	1.0×10^6	90	3	20	
60 mm	R6232	300 to 650/A-D	32	E678-14V ¹⁸	B&L / 8	110	12.0	30	1000 ⁷	2.7×10^5	30	2	20
64 mm (2.5")	R6504-70	300 to 650/A-D	33	—	FM / 19	70	9.0	22	2000 ⁵⁶	1.0×10^7	700	50	300
76 mm (3")	R1307	300 to 650/A-D	34	E678-14V ¹⁶ ¹⁷	BOX / 8	110	12.0	30	1000 ⁵	2.7×10^5	30	2	20
	R2238	300 to 650/A-D	35	E678-14V	CM / 12	60	8.0	20	1250 ⁴² <1250 ⁴³ >	5.0×10^5 < 4.0×10^5 >	30 <23>	5 <5>	50 <50>
	R4143	300 to 650/A-D	36	E678-20A*	LINE / 12	80	9.5	23	2500 ³⁸ <2500 ³⁹ >	5.0×10^6 < 5.6×10^5 >	400 <45>	50 <10>	500 <50>
	R6091	300 to 650/A-D	37	E678-21C* ¹⁹	LINE / 12	90	10.5	26	1500 ⁴⁶ <2000 ⁴⁸ >	5.0×10^6 < 1.0×10^7 >	450 <900>	10 <30>	60 <120>
	R6233	300 to 650/A-D	38	E678-14V ¹⁸	B&L / 8	110	12.0	30	1000 ⁷	2.7×10^5	30	2	20
127 mm (5")	R877	300 to 650/A-D	39	E678-14V ²⁰	BOX / 10	95	11.0	27	1250 ¹⁶	4.2×10^5	40	10	50
	R1250	300 to 650/A-D	40	E678-20A* ²¹	LINE / 14	70	9.0	22	2000 ⁵⁰ <2500 ⁵¹ >	1.4×10^7 < 4.0×10^7 >	1000 <2800>	50 <300>	300 <1800>
	R1512	300 to 650/A-D	39	E678-14V ²⁰	VB / 10	95	11.0	27	1500 ¹⁶	1.1×10^6	100	20	100
	R1584	185 to 650/B-D	41	E678-20A* ²¹	LINE / 14	70	9.0	22	2000 ⁵⁰	1.4×10^7	1000	50	300
	R6594	300 to 650/A-D	42	E678-20A*	B&L / 10	80	10.0	25	1500 ³² <1500 ³³ >	3.0×10^6 < 2.0×10^6 >	240 <160>	30 <20>	300 <200>
204 mm (8")	R5912	300 to 650/A-D	43	E678-20A* ²¹	B&L / 10	70	9.0	22	1500 ⁵²	1.0×10^7	700	50	700
	R5912-02	300 to 650/A-D	43	E678-20A*	B&L / 14	70	9.0	22	1700 ⁵⁴	1.0×10^9	70 000	1000	5000
254 mm (10")	R7081	300 to 650/A-D	44	E678-20A* ²¹	B&L / 10	80	10.0	25	1500 ⁵²	1.0×10^7	800	50	700
	R7081-20	300 to 650/A-D	44	E678-20A*	B&L / 14	80	10.0	25	1700 ⁵⁴	1.0×10^9	80 000	1000	5000
332 mm (13")	R8055	300 to 650/A-D	45	E678-20A*	B&L / 10	60	8.0	20	1500 ⁵³	1.0×10^7	600	200	1000
508 mm (20")	R3600-02	300 to 650/A-D	46	E678-20A*	VB / 11	60	8.0	20	2000 ³⁶	1.0×10^7	600	200	1000
	R7250	300 to 650/A-D	47	E678-20A*	B&L / 10	60	8.0	20	2000 ⁵³	1.0×10^7	600	200	1000

Note: The data in square bracket < > is measured with tapered voltage distribution ratio.
Please refer to page 16 for meaning of numbers in 2, 3 and 6.

(at 25 °C)

Maximum Rating ¹²		Time Response ¹³			Typical Pulse Height Resolution ¹⁴	Stability ¹⁵		Pulse Linearity ¹⁶		Note	Type No.
Anode to Cathode Voltage (V)	Average Anode Current (mA)	Rise Time Typ. (ns)	Transit Time Typ. (ns)	T.T.S. Typ. (FWHM) (ns)		Long Term (%)	Short Term (%)	±2 % Deviation (mA)	±5 % Deviation (mA)		
2700	0.2	2.6 <2.7>	48 <40>	1.1 <1.1>	7.6	1.0	1.0	15 <100>	30 <200>	SILICA (R2256-02) and UV (R5113-02) types are available.	R329-02
2500	0.2	2.6	48	1.1	—	—	—	15	30	SILICA type (R331) is available.	R331-05
1500	0.1	7.0	60	—	6.3 (8.5) *3	0.5	0.5	1	5	K-FREE type (R1306-15) is available.	R1306
3000	0.2	1.3 <1.7>	28 <32>	0.55 <0.55>	7.8	1.0	1.0	100 <250>	200 <500>	SILICA (R2059) and UV (R4004) types are available.	R1828-01
1500	0.1	5.0 <5.0>	15 <17>	0.7 <1.3>	8.5	0.5	1.0	80 <200>	200 <400>		R1840
3500	0.2	0.7	16	0.37	7.8	1.0	2.0	100	150	SILICA type (R3377) is available.	R2083
1750	0.1	3.4 <3.4>	31 <33>	3.6 <3.6>	7.6	1.0	1.0	50 <150>	70 <200>	Glass Base type (R3149) is available.	R2154-02
1800	0.02	2.5	29	—	10.0	2.0	2.0	1	5		R4607-06
2300	0.1	2.5	9.5	0.44	9.5	2.0	2.0	500	700	For +HV operation.	R5924-70
1500	0.1	5.0	48	11.7	6.3 (8.5) *3	0.5	0.5	5	10	Flying Lead type (R6231-01) is available.	R6231
2000	0.2	1.6	30	1.7	7.6	1.0	1.0	80	120	10-stage type (R7724) is available. 12-stage type (R7725) is available.	R7723
1500	0.1	6.0	52	12.2	6.3 (8.5) *3	0.5	0.5	5	10	Flying Lead type (R6232-01) is available.	R6232
2300	0.1	2.7	11	0.47	9.5	2.0	2.0	700	1000	For +HV operation.	R6504-70
1500	0.1	8.0	64	—	6.3 (8.5) *3	0.5	0.5	1	5	K-FREE type (R1307-07) is available.	R1307
1500	0.1	5.5 <5.5>	17 <21>	0.8 <2.0>	8.5	0.5	1.0	200 <500>	500 <650>		R2238
3000	0.2	1.8 <1.8>	32 <36>	0.6 <0.6>	7.8	1.0	1.0	100 <150>	180 <250>	UV type (R4885) is available.	R4143
2500	0.2	2.6 <2.3>	48 <40>	2 <1.5>	7.8	1.0	1.0	40 <80>	60 <110>		R6091
1500	0.1	6.0	52	12.2	6.3 (8.5) *3	0.5	0.5	5	10	Flying Lead type (R6233-01) is available.	R6233
1500	0.1	10.0	90	—	8.0	0.5	0.5	10	20	K-FREE type (R877-01) is available.	R877
3000	0.2	2.5 <2.2>	54 <53>	1.2 <1.2>	8.3	1.0	1.0	100 <160>	150 <250>		R1250
2000	0.1	7.0	82	—	8.0	0.5	1.0	5	20		R1512
3000	0.2	2.5	54	1.2	—	—	—	100	150		R1584
2000	0.1	3.5 <3.5>	45 <45>	1.5 <1.5>	—	—	—	30 <100>	50 <150>		R6594
2000	0.1	3.8	55	2.4	—	—	—	20	40		R5912
2000	0.1	4.0	68	2.8	—	—	—	40	70		R5912-02
2000	0.1	4.3	63	2.9	—	—	—	20	40		R7081
2000	0.1	4.5	78	3.3	—	—	—	40	70		R7081-20
2500	0.1	6.0	100	3.4	—	—	—	60	80		R8055
2500	0.1	10	95	5.5	—	—	—	20	40		R3600-02
2500	0.1	7.0	110	3.5	—	—	—	60	80		R7250

Note 2: This data is a value of coincidental background noise.

Note 3: This data in parentheses is measured with ⁵⁷Co.

Tube Diameter	Type No.	Spectral Response Range (nm) / Curve Code	Outline No.	Socket & Socket Assembly	Dynode Structure / No. of Stages	Cathode Sensitivity			Anode Sensitivity				
						Luminous Typ. ($\mu\text{A}/\text{lm}$)	Blue Sens. Index (CS 5-58) Typ.	Q.E. at Peak Typ. (%)	Anode to Cathode Supply Voltage (V)	Gain Typ.	Luminous Typ. (A/lm)	Dark Current	
												Typ. (nA)	Max. (nA)

Metal Package Photomultiplier and Assemblies

16 mm TO-8 type	R7400U	300 to 650/A-D	48	E678-12M 22/23	MC / 8	70	8.0	21	800 4	7.0×10^5	50	0.2	2
	R7400U-06	160 to 650/C-D	49	E678-12M 22/23	MC / 8	70	8.0	21	800 4	7.0×10^5	50	0.2	2
30 mm Square type	R7600U	300 to 650/A-D	50	E678-32B 24	MC / 10	70	8.0	20	800 20	2.0×10^6	140	2	20
	R7600U-00-M4	300 to 650/A-D	51	E678-32B 25	MC / 10	70	8.0	20	800 20	2.0×10^6	140	0.5	5
	R5900U-00-L16	300 to 650/A-D	52	E678-32B 26	MC / 10	70	8.5	21	800 15	4.0×10^6	280	0.2	2
Assemblies	H8711	300 to 650/A-D	P51 28	—	MC / 12	80	8.5	21	800 44	3.5×10^6	280	0.8	—
	H7546B	300 to 650/A-D	P51 29	—	MC / 12	80	8.5	21	800 45	3.0×10^5	24	0.2	—
	H7260	300 to 650/A-D	P51 30	—	MC / 10	70	8.5	21	800 15	2.0×10^6	140	0.2	2
	H8500	300 to 650/A-D	P51 31	—	MC / 12	55	7.5	21	1000 49	1.0×10^6	55	32	100

Fine Mesh Photomultipliers

25 mm (1")	R5505-70	300 to 650/A-D	11	E678-17A* 8	FM / 15	80	9.5	23	2000 55	5.0×10^5	40	5	30
38 mm (1.5")	R7761-70	300 to 650/A-D	20	—	FM / 19	80	9.5	23	2000 56	1.0×10^7	800	15	100
51 mm (2")	R5924-70	300 to 650/A-D	29	—	FM / 19	70	9.0	22	2000 56	1.0×10^7	700	30	200
64 mm (2.5")	R6504-70	300 to 650/A-D	33	—	FM / 19	70	9.0	22	2000 56	1.0×10^7	700	50	300

Square, Rectangular Shape Photomultipliers

10 mm (3/8")	R2248	300 to 650/A-D	53	E678-11N* 1	LINE / 8	95	9.5	23	1250 6	1.1×10^6	100	1	50
13 mm (1/2")	R2102	300 to 650/A-D	54	E678-13A* 2	LINE / 10	100	9.5	23	1000 15	1.0×10^6	100	1	15
60 mm	R6236	300 to 650/A-D	55	E678-14V 18	B&L / 8	110	12.0	30	1000 7	2.7×10^5	30	2	20
76 mm (3")	R6237	300 to 650/A-D	56	E678-14V 18	B&L / 8	110	12.0	30	1000 7	2.7×10^5	30	2	20
25 mm (1" Dual)	R1548-07	300 to 650/A-D	57	E678-17A* 7	LINE / 10	80	9.5	23	1250 30	2.5×10^6	200	20	250

Hexagonal Shape Photomultipliers

60 mm	R1538	300 to 650/A-D	58	E678-14V 17	BOX / 8	110	12.0	30	1000 5	2.7×10^5	30	2	20
60 mm	R6234	300 to 650/A-D	59	E678-14V 18	B&L / 8	110	12.0	30	1000 7	2.7×10^5	30	2	20
76 mm (3")	R6235	300 to 650/A-D	60	E678-14V 18	B&L / 8	110	12.0	30	1000 7	2.7×10^5	30	2	20

2 π Shape Photomultipliers

19 mm (3/4")	R7375-01	300 to 650/A-D	61	E678-12A*	CC / 10	90	10.5	26	1000 27	1.1×10^6	100	3	20
25 mm (1")	R7373A-01	300 to 650/A-D	62	E678-12A*	LINE / 10	90	10.5	26	1000 27	1.1×10^6	100	3	20
28 mm (1-1/8")	R7354	300 to 650/A-D	63	E678-14C*	B&L / 9	90	10.5	26	1000 14	1.5×10^6	120	2	10
	R8143	300 to 650/A-D	64	E678-14C*	BOX / 11	90	10.5	26	1000 35	2.2×10^6	200	2	10

Note: Please refer to page 16 for meaning of numbers in 2, 3 and 8.

(at 25 °C)

Maximum Rating ¹²		Time Response ¹³			Typical Pulse Height Resolution ¹⁴	Stability ¹⁵		Pulse Linearity ¹⁶		Note	Type No.
Anode to Cathode Voltage (V)	Average Anode Current (mA)	Rise Time Typ. (ns)	Transit Time Typ. (ns)	T.T.S. Typ. (FWHM) (ns)		Long Term (%)	Short Term (%)	±2 % Deviation (mA)	±5 % Deviation (mA)		
1000	0.1	0.78	5.4	0.23	—	1.0	2.0	15	30	UV type (R7400U-03) is available.	R7400U
1000	0.1	0.78	5.4	0.23	—	1.0	2.0	15	30		R7400U-06
900	0.1	1.4	8.8	0.26	—	1.0	2.0	30	60	UV type (R7600U-03) is available.	R7600U
900	0.1	1.2	8.8	0.32	—	—	—	30	60	(see note 4)	R7600U-00-M4
900	0.1	0.60	7.4	0.18	—	—	—	0.8	1.2	(see note 4)	R5900U-00-L16
1000	0.017	0.83	10.9	0.30	—	—	—	0.5	1	(see note 4), Assembly with divider network	H8711
1000	0.018	1.0	10.9	0.30	—	—	—	0.3	0.6	(see note 4), Assembly with divider network	H7546B
900	0.1	0.60	6.8	0.18	—	—	—	0.6	0.8	(see note 4), Assembly with divider network	H7260
1100	0.1	0.8	6.0	0.4	—	—	—	1	2	(see note 4), Assembly with divider network	H8500
2300	0.01	1.5	5.6	0.35	9.5	2.0	2.0	180	250	For +HV operation.	R5505-70
2300	0.01	2.1	7.5	0.35	9.5	2.0	2.0	350	500	For +HV operation.	R7761-70
2300	0.1	2.5	9.5	0.44	9.5	2.0	2.0	500	700	For +HV operation.	R5924-70
2300	0.1	2.7	11	0.47	9.5	2.0	2.0	700	1000	For +HV operation.	R6504-70
1500	0.03	0.9	9.0	0.6	23/BGO*1	1.0	2.0	3	7		R2248
1250	0.1	2.5	24	2.2	8.1	1.0	2.0	3	7		R2102
1500	0.1	6.0	52	12.2	6.3 (8.5)*3	0.5	0.5	5	10	Flying Lead type (R6236-01) is available.	R6236
1500	0.1	6.0	52	12.2	6.3 (8.5)*3	0.5	0.5	5	10	Flying Lead type (R6237-01) is available.	R6237
1750	0.1	1.8	20	1.0	20/BGO*1	1.0	2.0	10	15		R1548-07
1500	0.1	8.0	60	—	6.3 (8.5)*3	0.5	0.5	1	5	Flying Lead type (R1538-01) is available.	R1538
1500	0.1	6.0	52	12.2	6.3 (8.5)*3	0.5	0.5	5	10	Flying Lead type (R6234-01) is available.	R6234
1500	0.1	6.0	52	12.2	6.3 (8.5)*3	0.5	0.5	5	10	Flying Lead type (R6235-01) is available.	R6235
1250	0.1	1.5	17	0.8	8	1.0	2.0	1	2		R7375-01
1250	0.1	2	19	1.1	7.8	1.0	2.0	15	30		R7373A-01
1500	0.1	11	33	4.5	8	1.0	2.0	8	10		R7354
1250	0.1	25	72	—	8	1.0	2.0	0.2	0.5		R8143

Note 1: This data is measured with ²²Na source and BGO scintillator.


Note 3: This data in parentheses is measured with ⁵⁷Co.

Note 4: Dark current, time response and pulse linearity data is typical value for channel.

Dimensional Outline and Basing Diagrams

For Photomultiplier Tubes

1 R1635, R2496

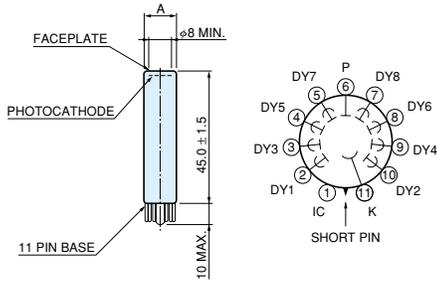


	A
R1635	9.7 ± 0.4
R2496	10.5 ± 0.5

R2496 has a plano-concave faceplate.


TPMHA0343EB

2 R4124

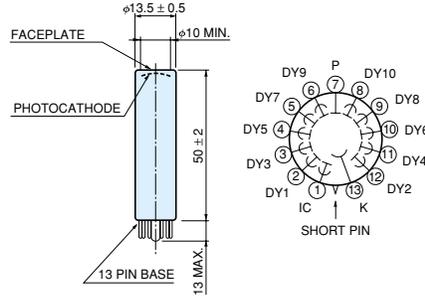

TPMHA0102EA


3 R647-01, R4177-06

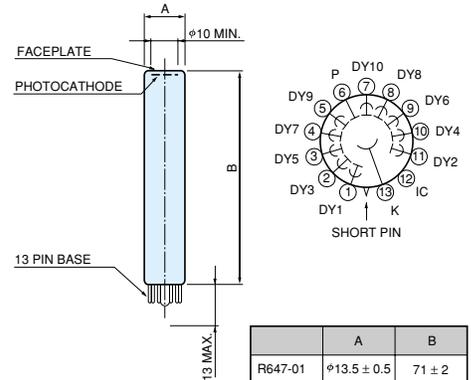

	A	B
R647-01	$\phi 13.5 \pm 0.5$	71 ± 2
R4177-06	$\phi 14.5 \pm 0.7$	61 ± 2


TPMHA0120EA

4 R1166

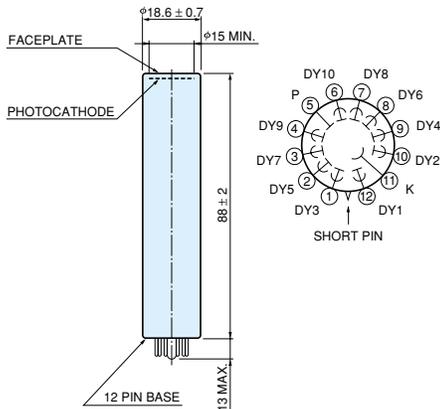


TPMHA0344EA

5 R1450, R4125

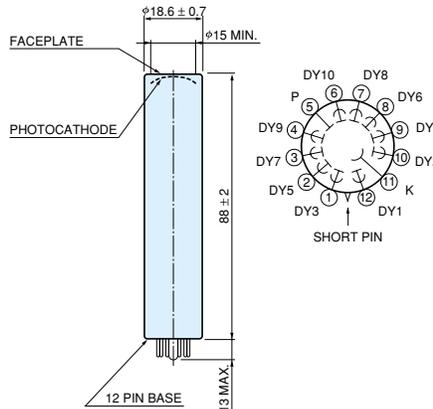

TPMHA0307EA


6 R3478, R5325

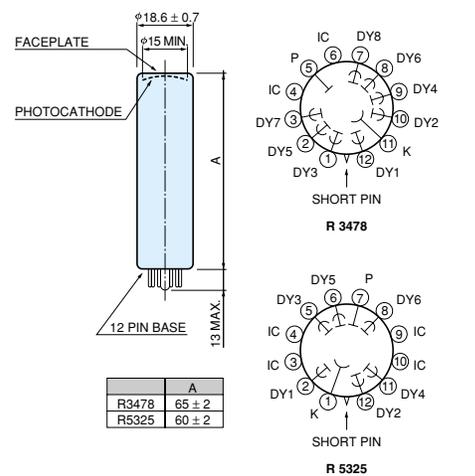

	A
R3478	65 ± 2
R5325	60 ± 2

TPMHA0431EB


7 R3991-04, R5611-01

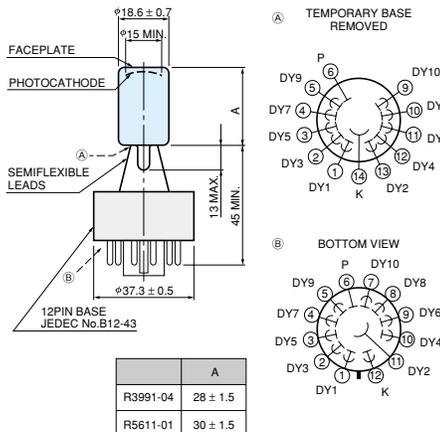

	A
R3991-04	28 ± 1.5
R5611-01	30 ± 1.5


TPMHA0117EB

8 R1288A-06, 1924A

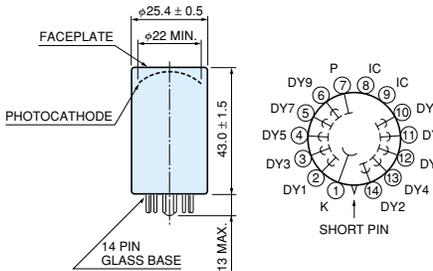

TPMHA0040EC


9 R4998

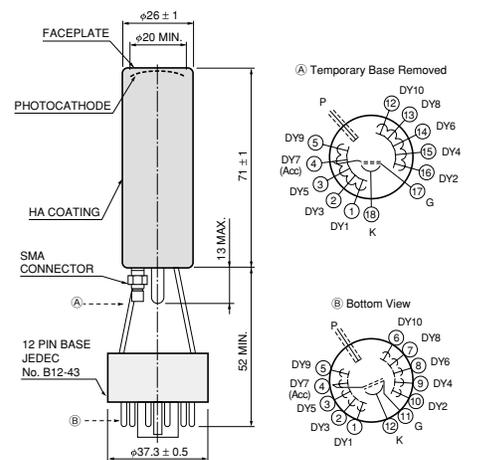

TPMHA0093EC


(Unit: mm)

10 R5380

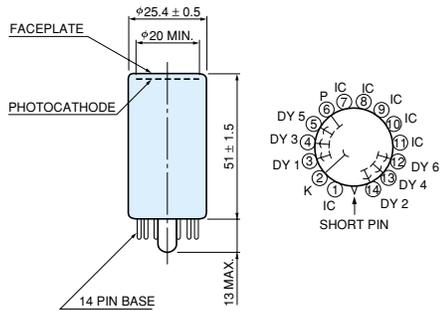


TPMHA0070EA

11 R5505-70

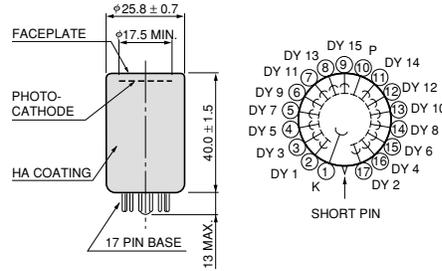


TPMHA0236EA

12 R7899-01

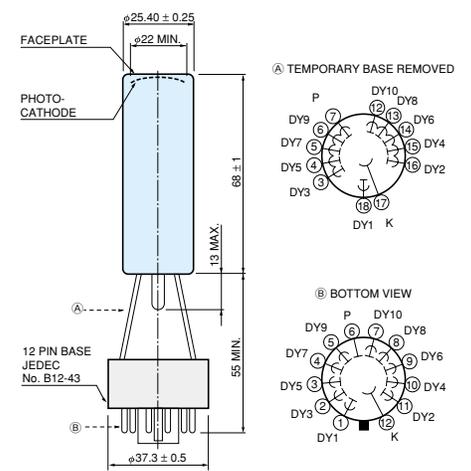


TPMHA0474EA

13 R6427

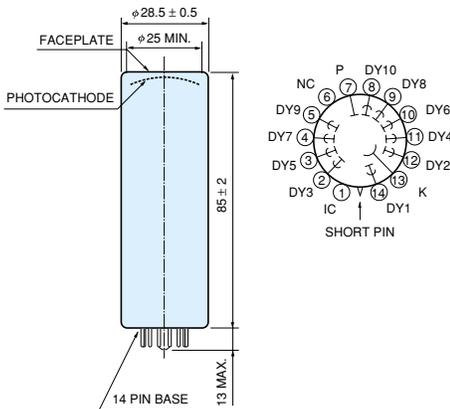


TPMHA0387EA

14 R7111

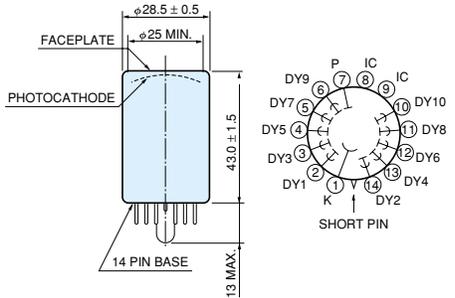


TPMHA0506EA

15 R7525

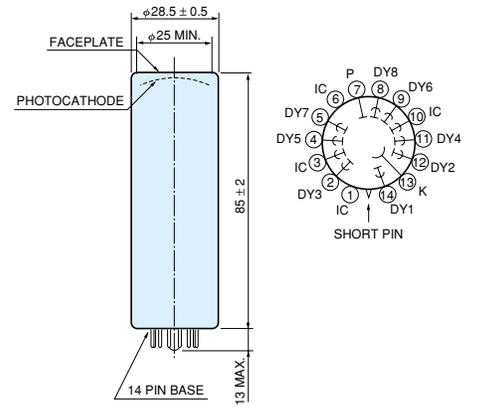


TPMHA0450EB

16 R580, R5330

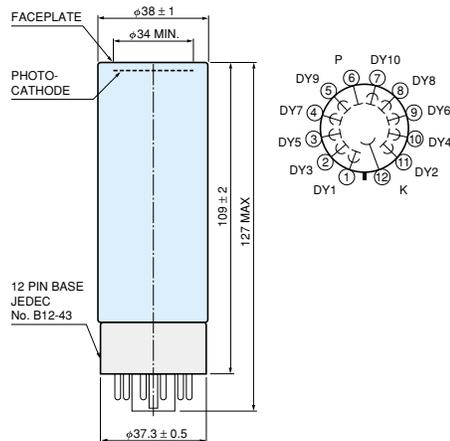


TPMHA0121EA

17 R580-17

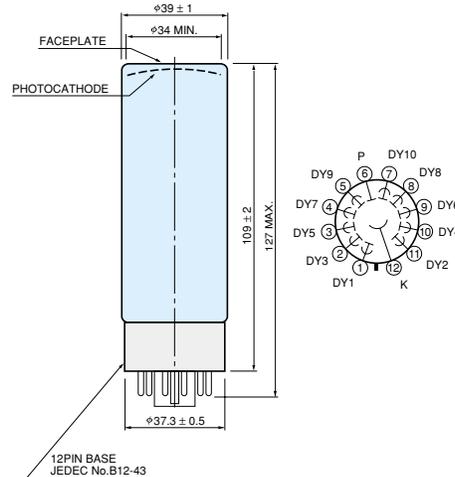


TPMHA0116EA

18 R980

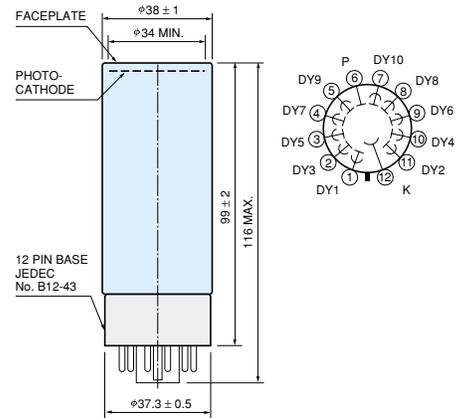


TPMHA0228EA

25 R1840

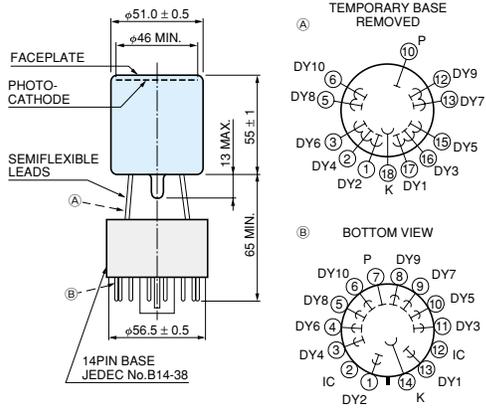


TPMHA0095EB

26 R2083

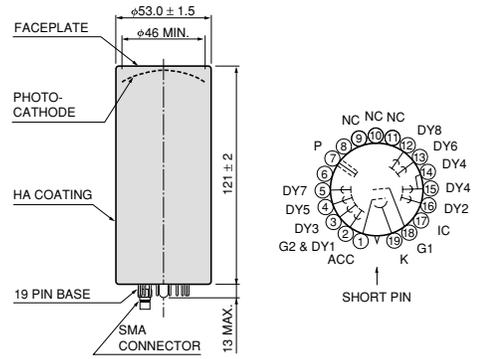


TPMHA0185EC

27 R2154-02

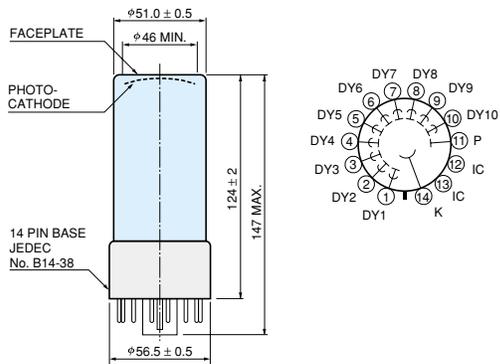


TPMHA0296EB

28 R4607-06

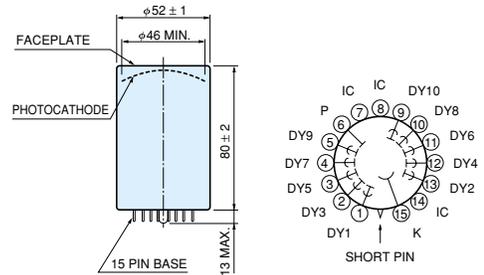


TPMHA0003EC

29 R5924-70

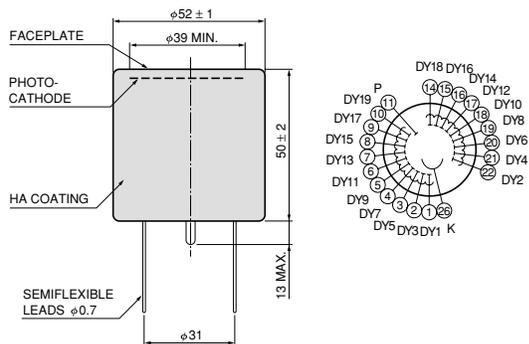


TPMHA0490EA

30 R6231

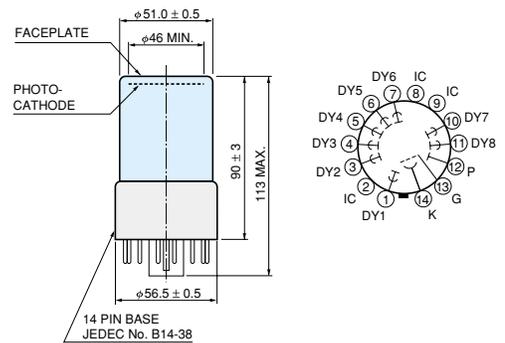


TPMHA0388EB

31 R7723

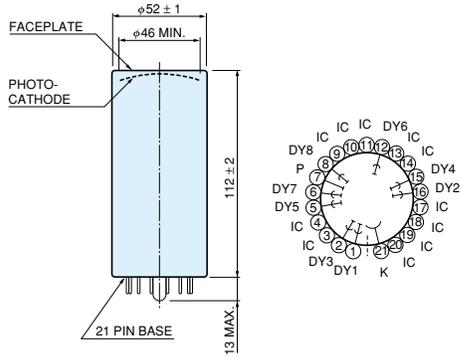


TPMHA0509EC

32 R6232

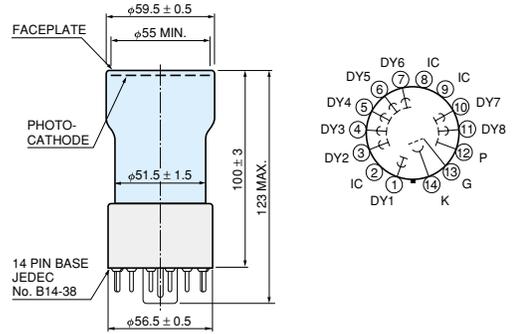


TPMHA0510EA

33 R6504-70

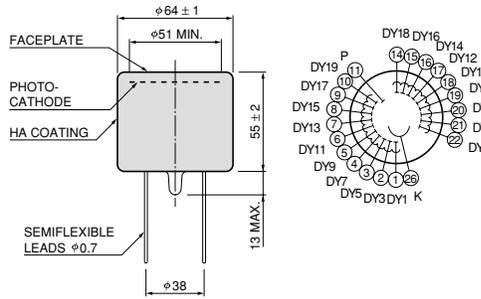


TPMHA0336EA

34 R1307

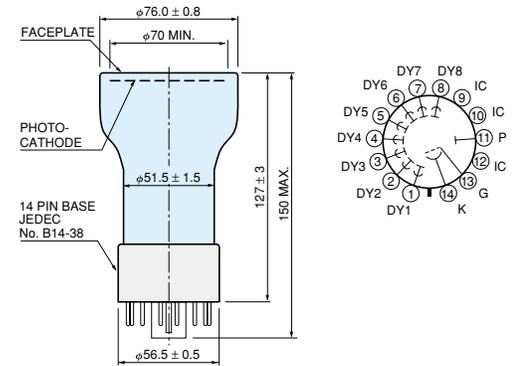


TPMHA0078EA

35 R2238

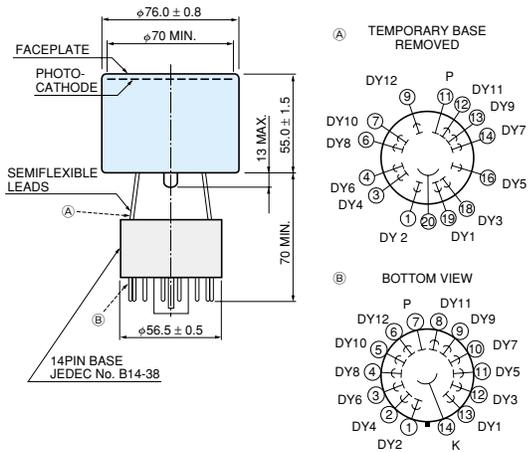


TPMHA0078EC

36 R4143

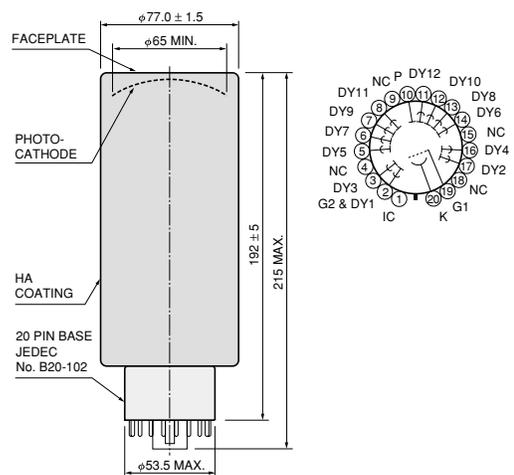


TPMHA0112EB


43 R5912, R5912-02

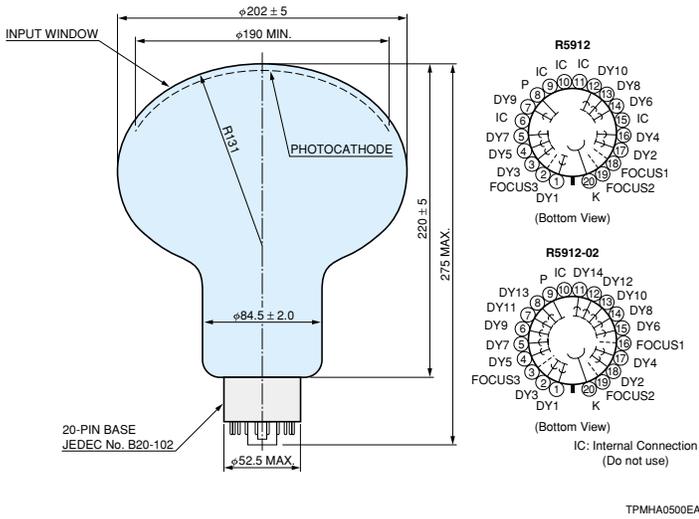


44 R7081, R7081-20

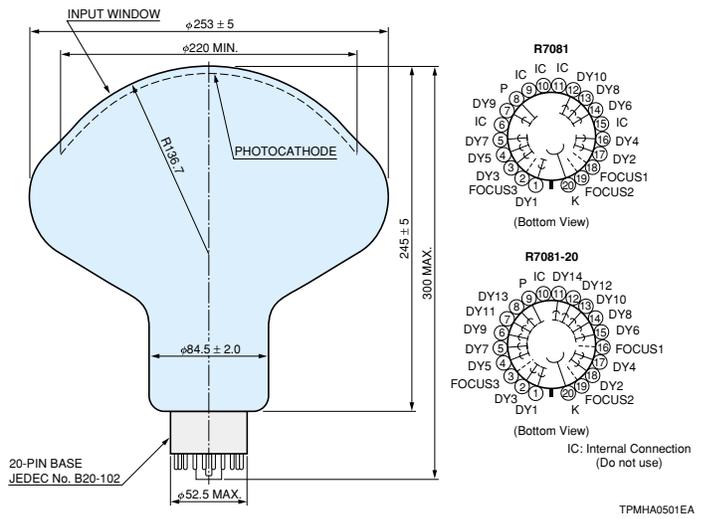


45 R8055

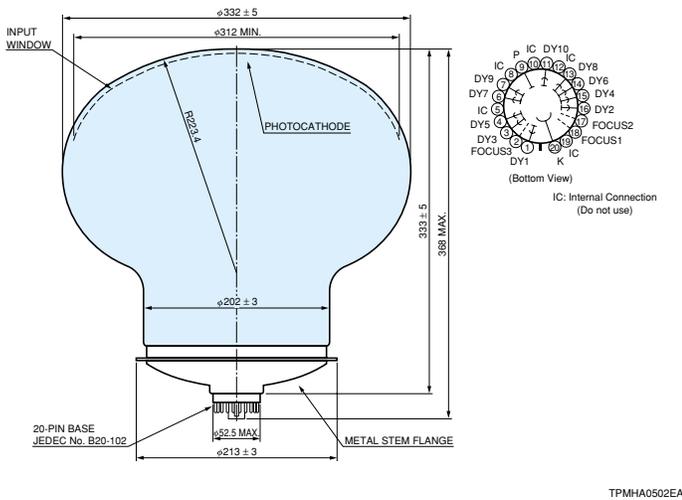

46 R3600-02

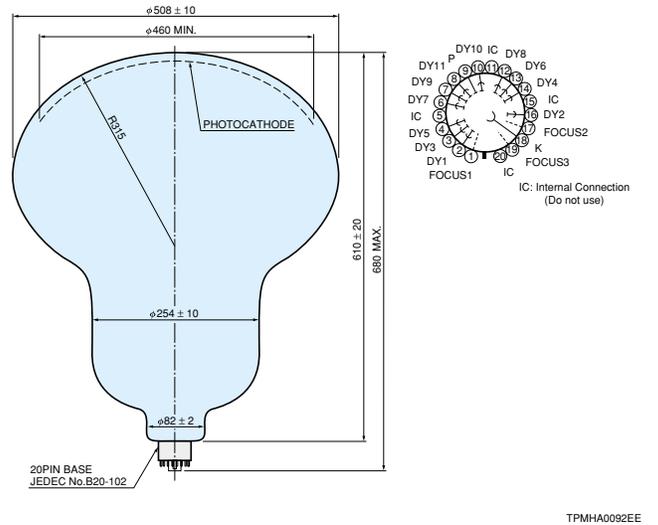


47 R7250

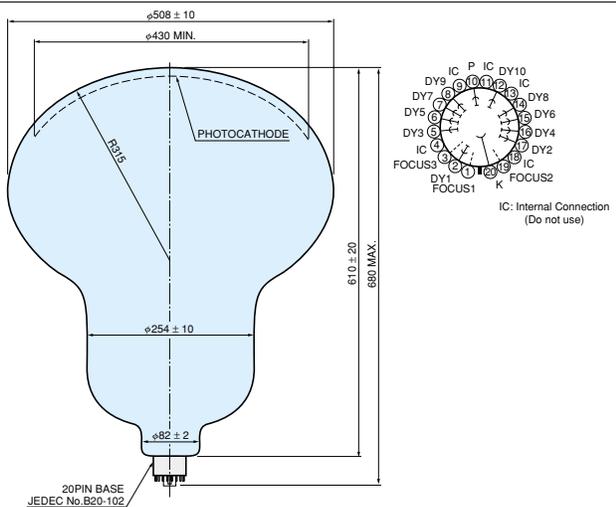


(Unit: mm)

48 R7400U

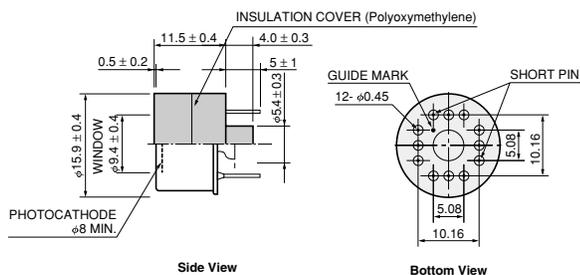


TPMHA0411EC

49 R7400U-06

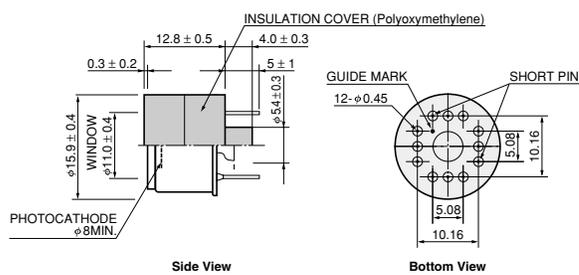


TPMHA0410EC

50 R7600U

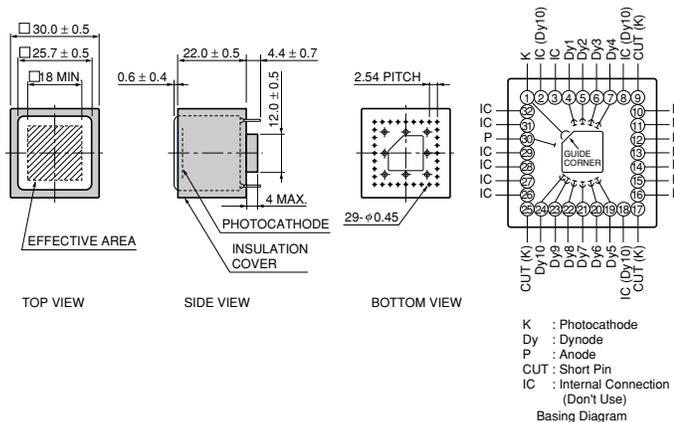


TPMHA0278EI

51 R7600U-00-M4

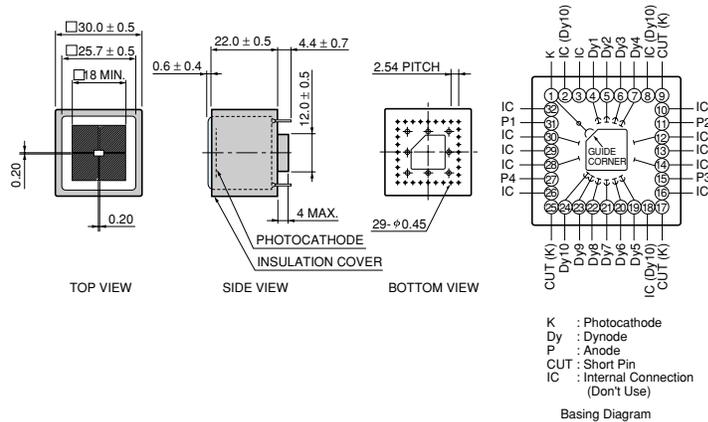


TPMHA0297EI

52 R5900U-00-L16

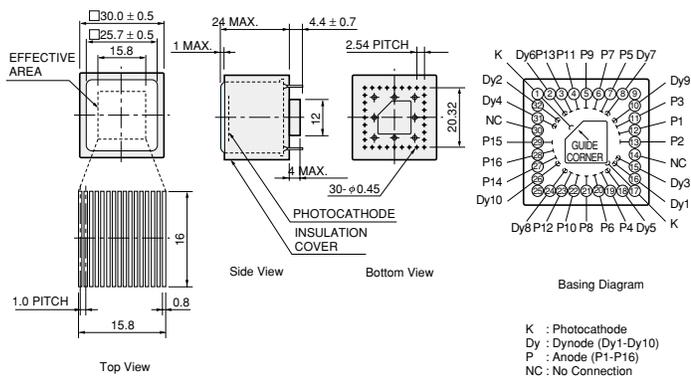


TPMHA0298EE

53 R2248

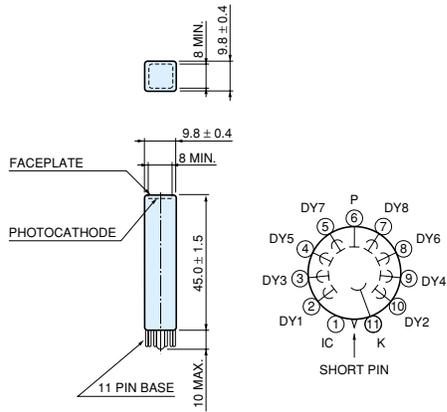


TPMHA0098EC

54 R2102

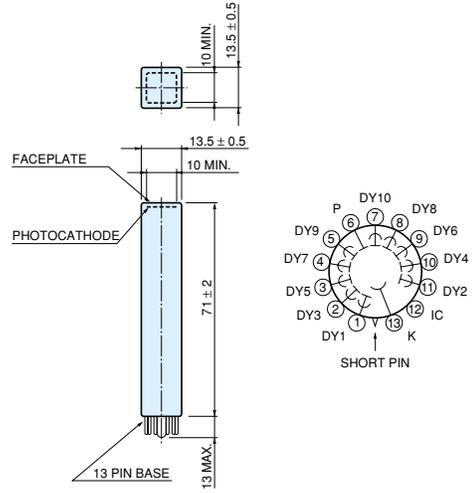


TPMHA0098EA

55 R6236

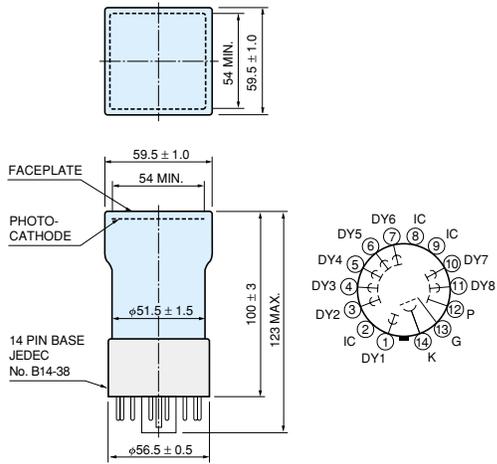


TPMHA0392EB

56 R6237

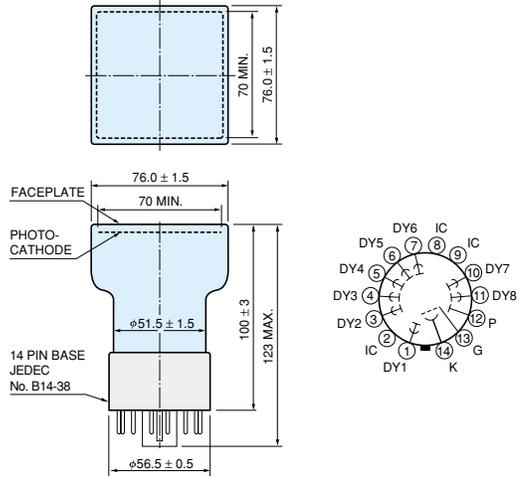


TPMHA0393EB

57 R1548-07

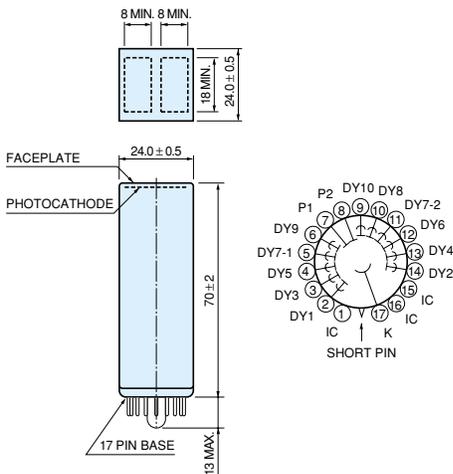

TPMHA0511EA


58 R1538

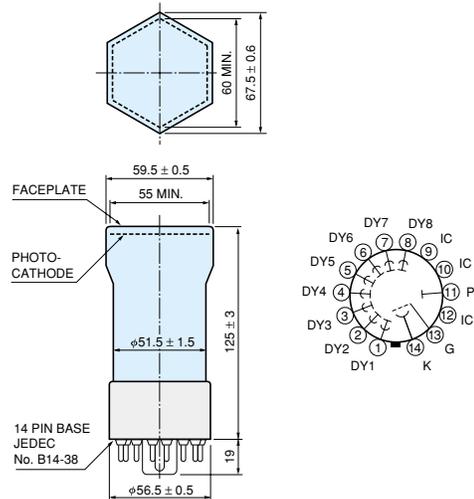

TPMHA0512EA


(Unit: mm)

59 R6234

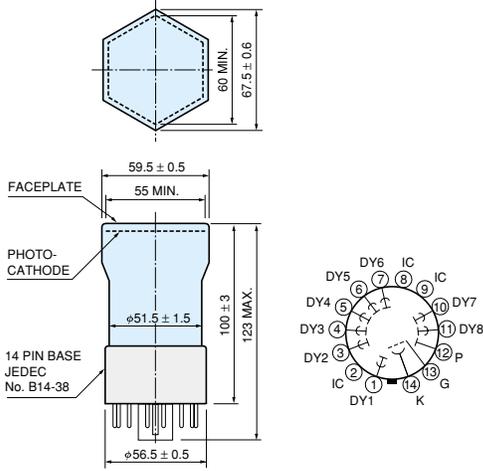


TPMHA0390EB

60 R6235

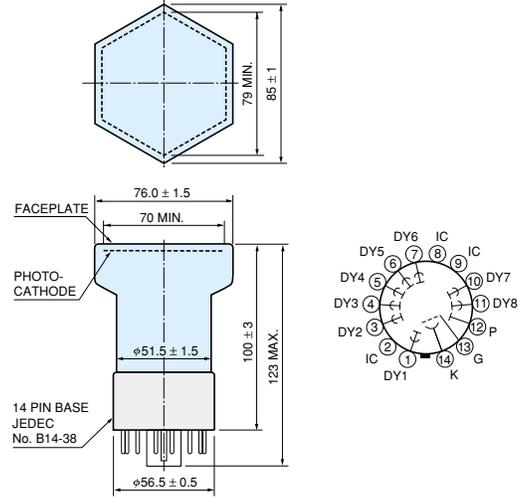


TPMHA0391EB

61 R7375-01

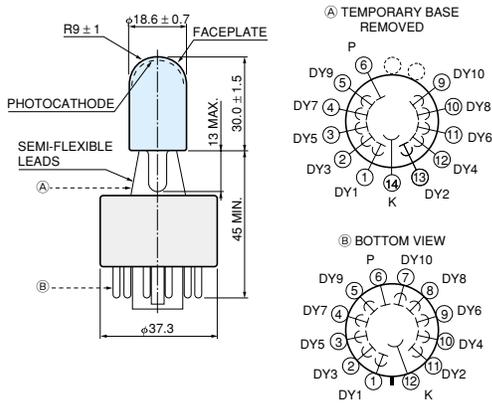


TPMHA0459EA

62 R7373A-01

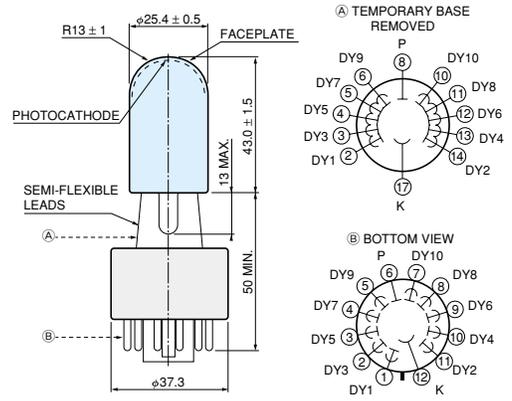


TPMHA0460EA

63 R7354

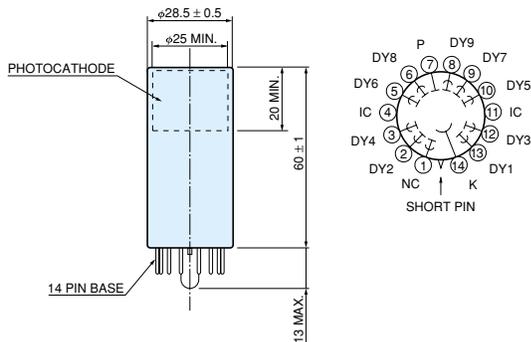

TPMHA0416EA


64 R8143

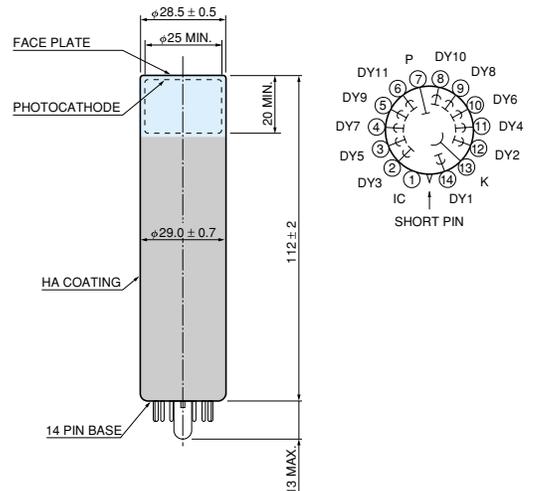


TPMHA0507EA

Typical Gain Characteristics


● 10 mm (3/8") Dia. and Metal package Types

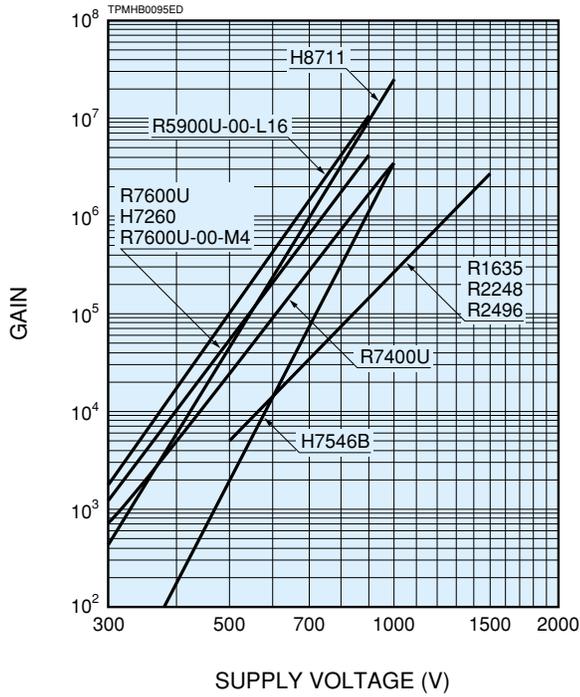


● 13 mm (1/2") Dia. Types

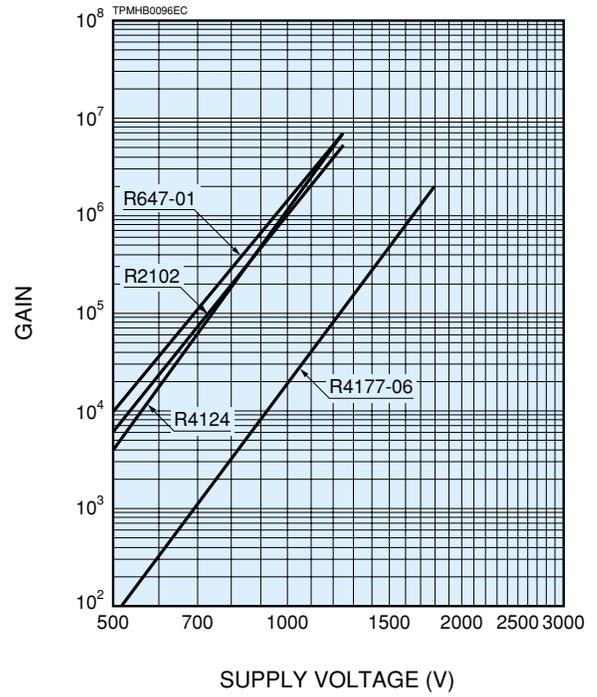


● 19 mm (3/4") Dia. Types

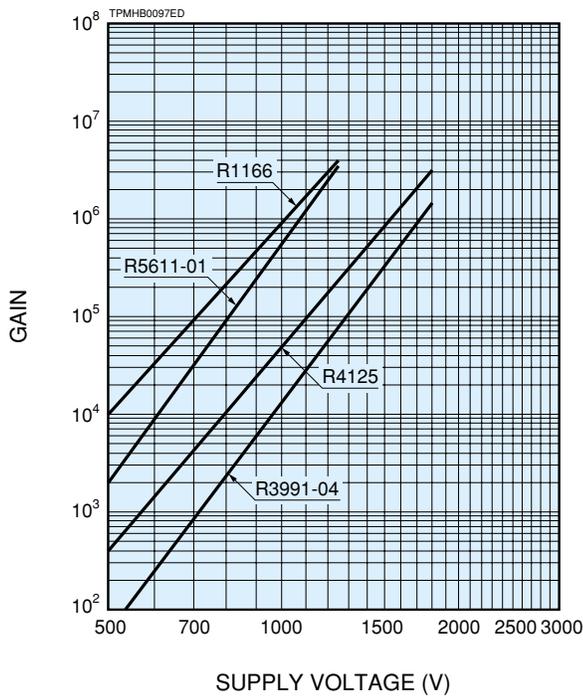


● 19 mm (3/4") Dia. Types

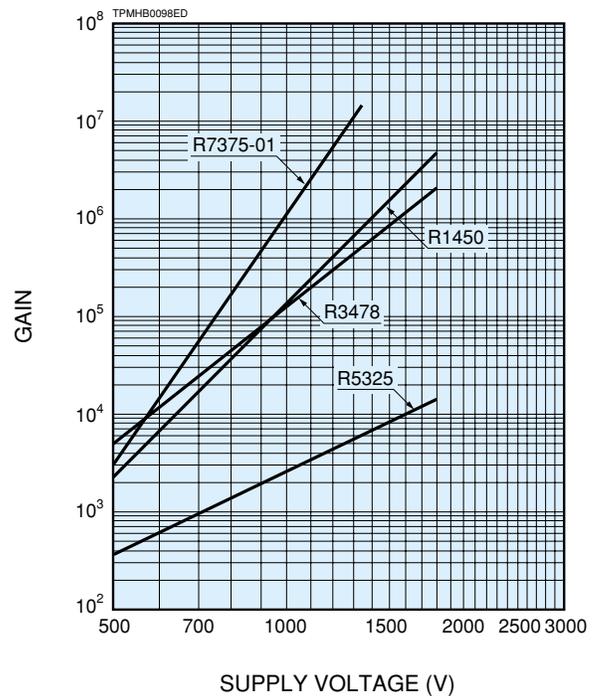


● 25 mm (1") Dia. Types

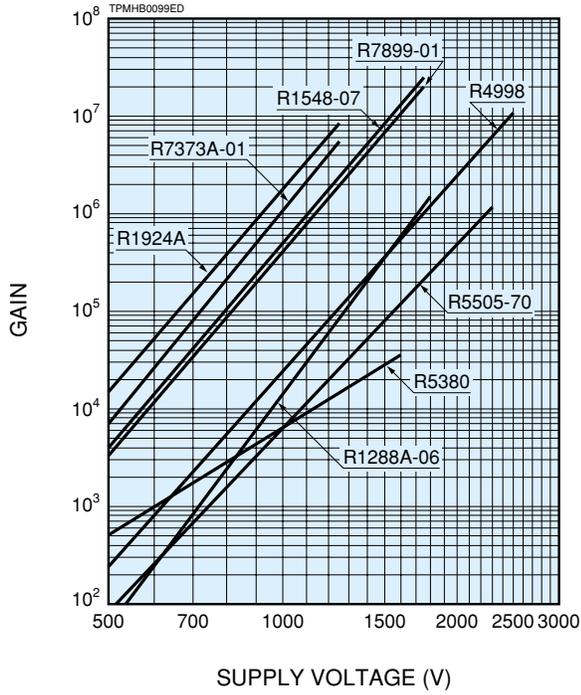


● 28 mm (1-1/8") Dia. Types

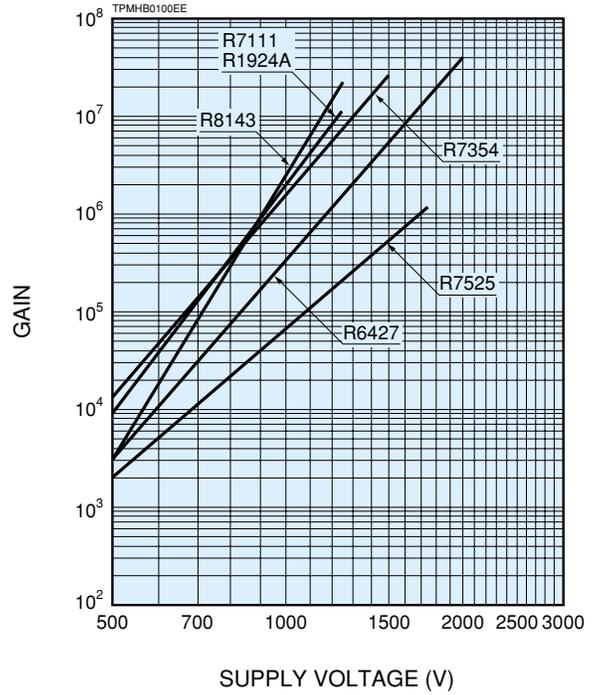


● 38 mm (1-1/2") Dia. Types

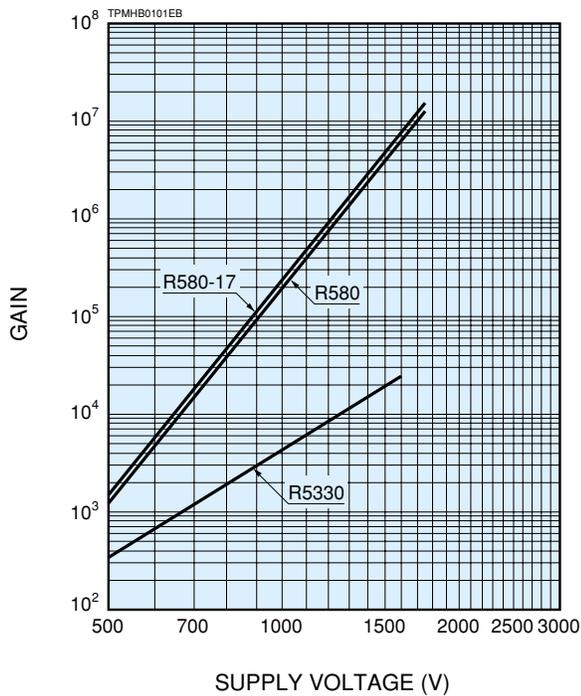


● 38 mm (1-1/2") Dia. Types

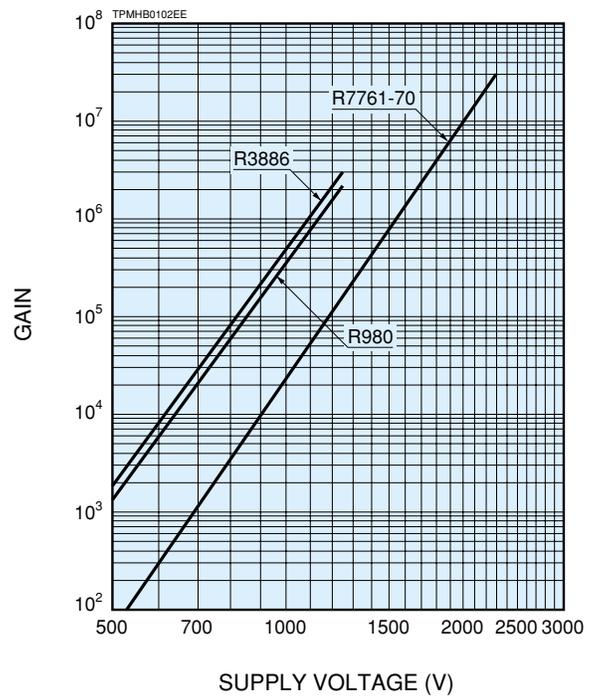


● 51 mm (2") Dia. Types

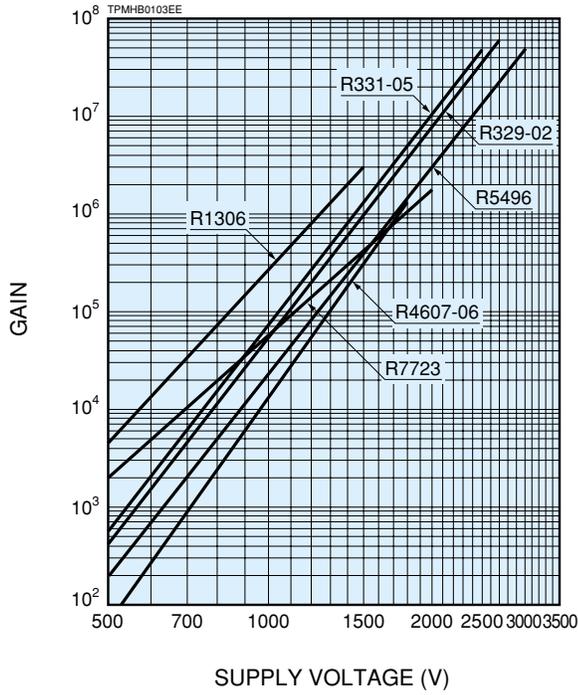


● 51 mm (2") Dia. Types

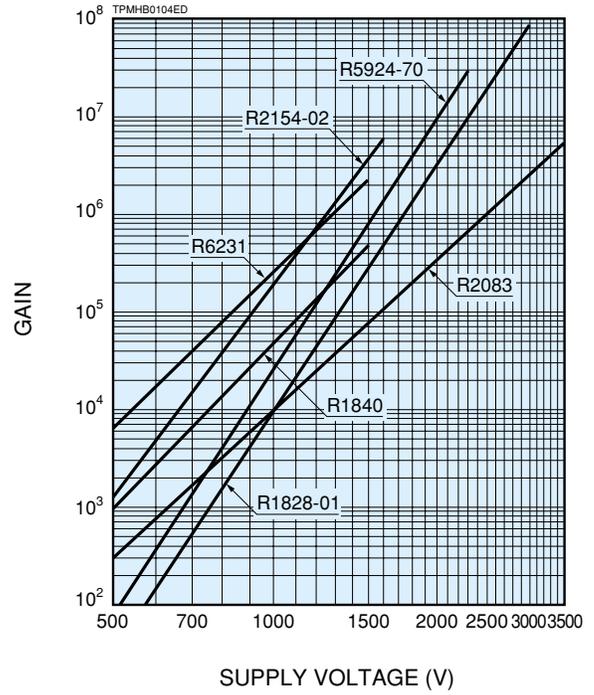


● 60 mm and 64 mm (2.5") Dia. Types

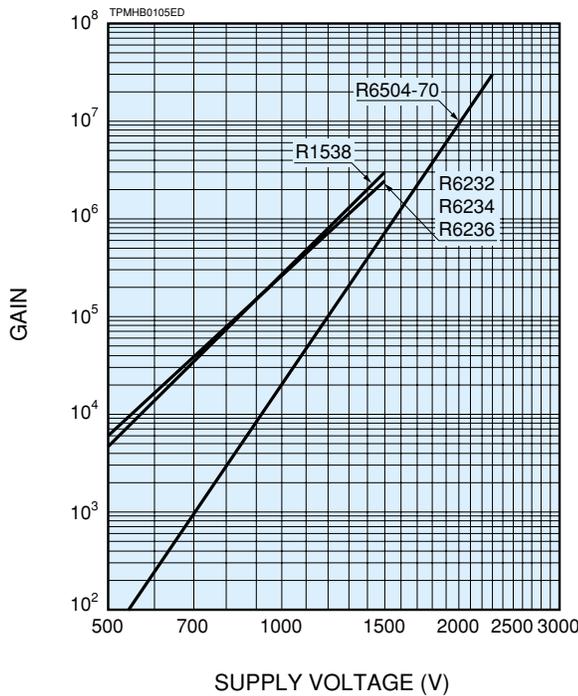


● 76 mm (3") Dia. Types

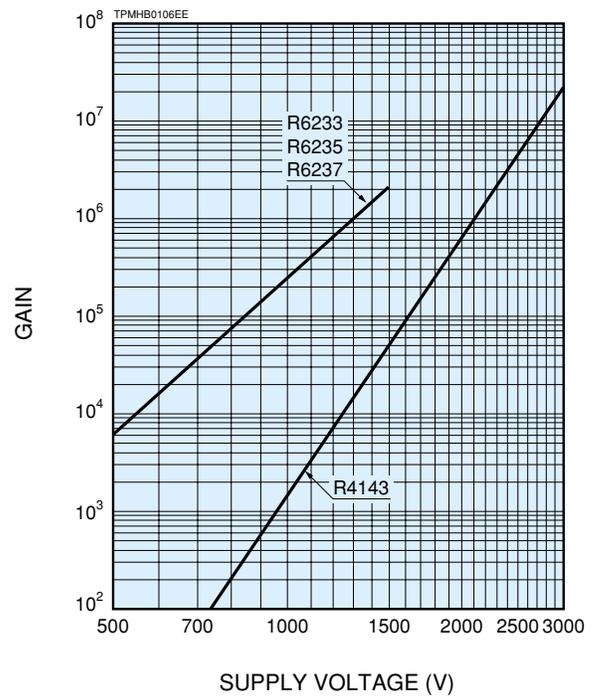



● 76 mm (3") Dia. Types

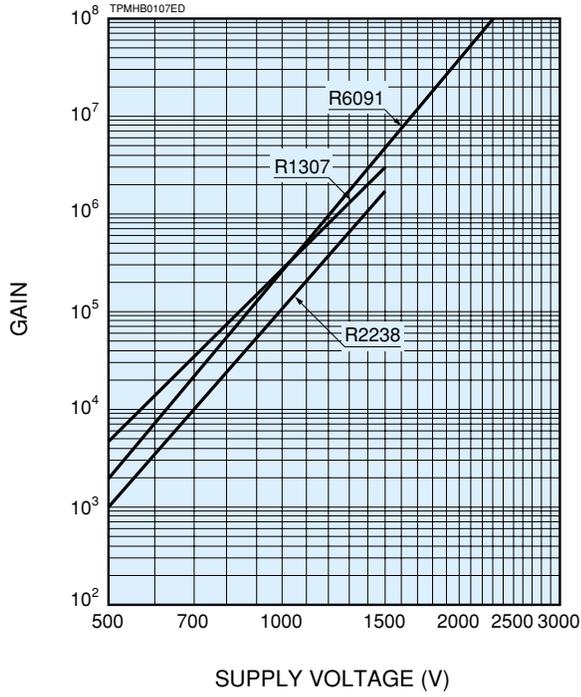

● 127 mm (5") Dia. Types

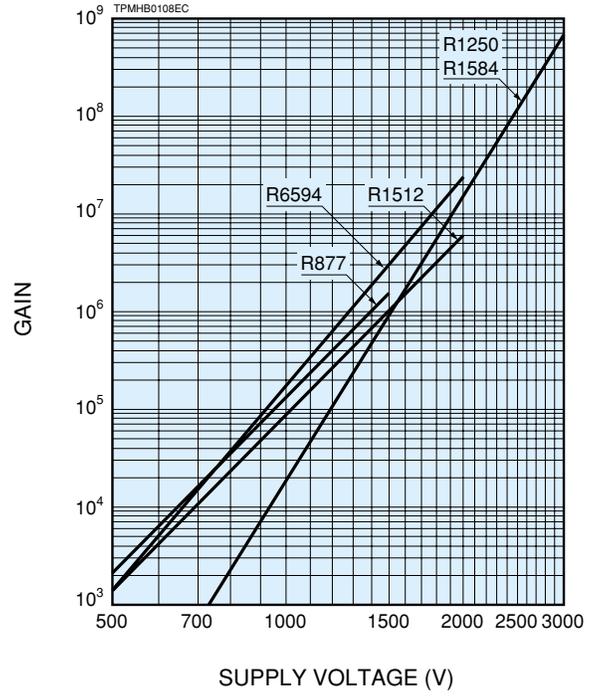

● 204 mm (8"), 254 mm (10") and 508 mm (20") Dia. Types

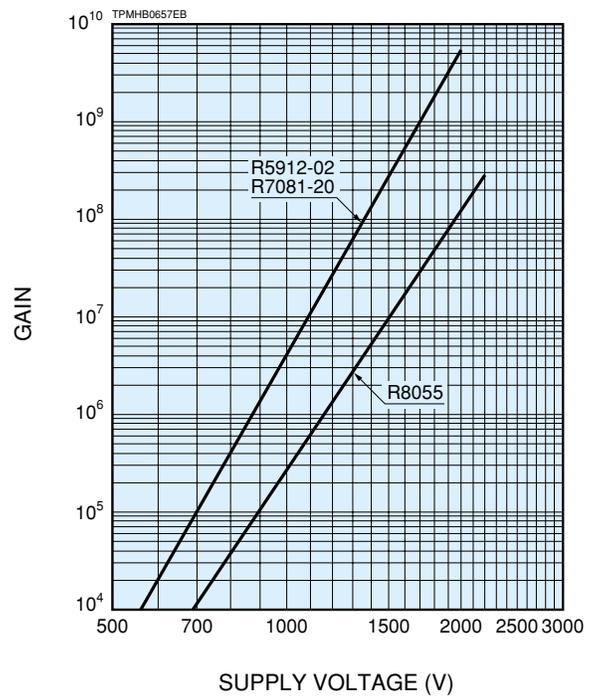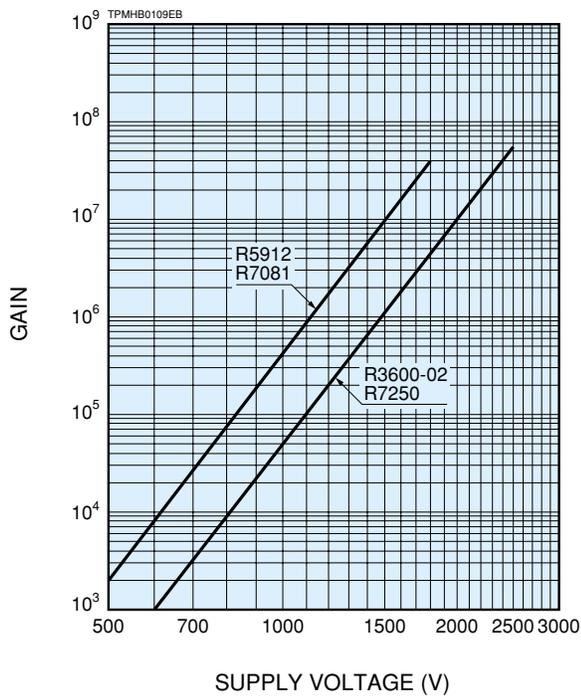

Position Sensitive Photomultiplier Tubes

Tube Diameter	Type No.	Spectral Response Range (nm) / Curve Code	Outline No.	Anode Sensitivity			Socket & Socket Assembly	Dynode Structure / No. of Stages	Cathode Sensitivity		
				Effective Area (mm)	Number of Plates or wires	Anode Pitch (mm)			Luminous Typ. (μA/lm)	Blue Sens. Index (CS 5-58) Typ.	Q.E. at Peak Typ. (%)

Position Sensitive Photomultiplier Tubes with Metal Channel Dynodes



30 mm Square	R8520U-00-C12	300 to 650/A-D	①	22 × 22	6(X) + 6(Y) Plates	4.0	E678-32B 27	MC / 11	80	9.0	24
--------------	---------------	----------------	---	---------	--------------------	-----	-------------	---------	----	-----	----

Position Sensitive Photomultiplier Tubes

3" round	R2486-02	300 to 650/A-D	②	φ50	16(X) + 16(Y) Wires	3.75	—	CM / 12	80	9.0	23
5" round	R3292-02	300 to 650/A-D	③	φ100	28(X) + 28(Y) Wires	4.0	—	CM / 12	80	9.0	23

Note: Please refer to page 16 for meaning of numbers in ②, ③ and ④.


① R8520U-00-C12

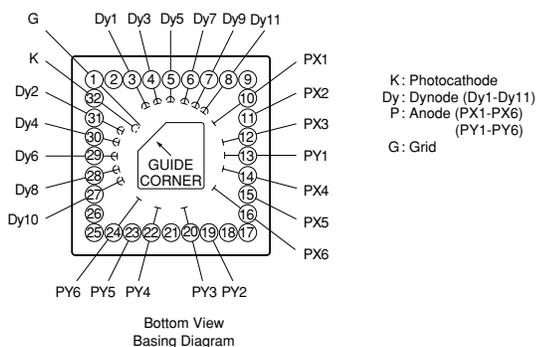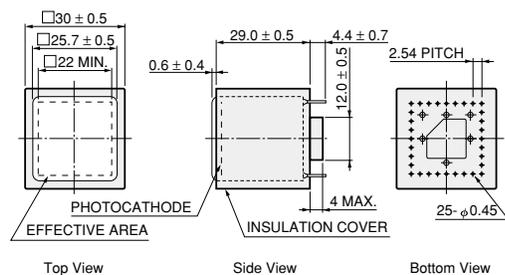



TPMHA0484EC

Anode Sensitivity					Maximum Rating ¹²		Typical Time Response ¹³			Note	Type No.
Anode to Cathode Supply Voltage ⁸	Gain Typ. ⁹	Luminous Typ. (A/lm) ¹⁰	Dark Current ¹¹		Anode to Cathode Voltage (V)	Average Anode Current (mA)	Rise Time Typ. (ns)	Transit Time Typ. (ns)	T.T.S. Typ. (FWHM) (ns)		
			Typ. (nA)	Max. (nA)							
800 ³⁴	1.0×10^6	70	2	10	1000	0.1	2.4	11.5	0.70	R8520-00-C12, without cover type, is available.	R8520U-00-C12
1250 ³⁷	5.0×10^5	40	20	50	1300	0.06	5.5	17	—	No suffix number: PMT alone -01: PMT + Voltage Divider -02: -01 + Resistor Chain	R2486-02
1250 ³⁷	1.3×10^5	10	40	150	1300	0.06	6.0	20	—	No suffix number: PMT + HA -01: PMT + HA + Voltage Divider -02: -01 + Resistor Chain	R3292-02

2 R2486-02

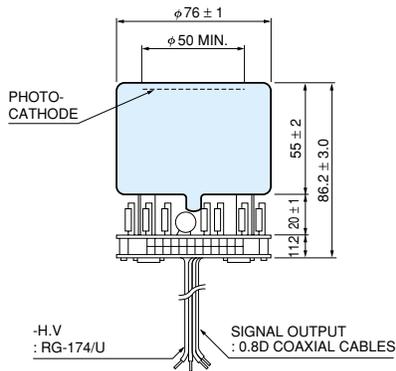


TPMHA0160ED

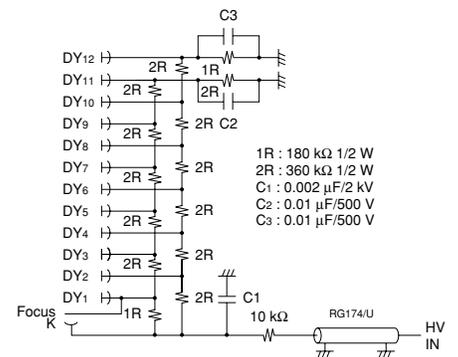
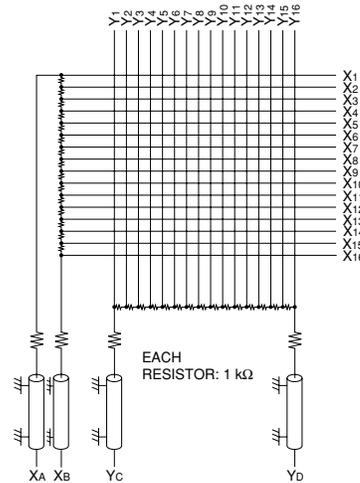


TPMHC0086EE

3 R3292-02

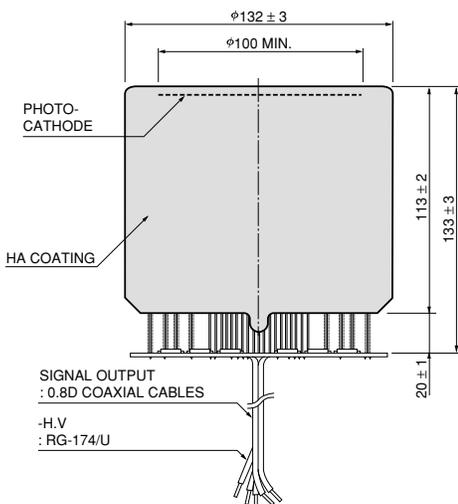

TPMHA0162EE

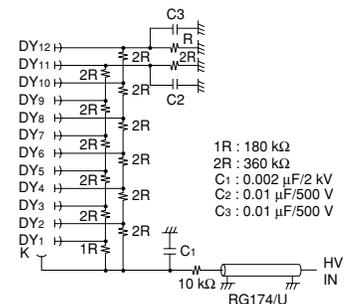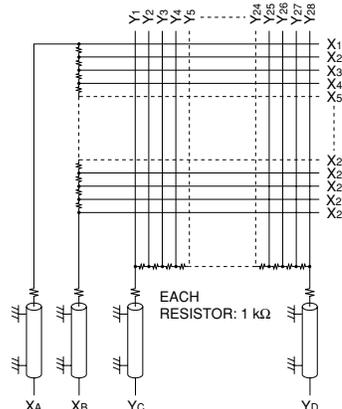

TPMHC0088EE

Voltage Distribution Ratios

Interstages for the dynodes of a PMT are supplied by a voltage divider network consisting of series resistors, as shown on the right page. The cathode ground scheme (1) is usually used in scintillation counting because it reduces noise resulting from glass scintillation. In fast-pulse light applications, use of the anode ground scheme (2) is suggested. Either scheme requires decoupling (charge-storage) capacitors connected to the last few stages of dynodes in order to maintain the dynode vol-

tage at a constant value during pulse duration. refer to section 11 and 12 on page 8 and 9 for further details.

To free the user from the necessity of designing voltage divider and performing troublesome parts selection, Hamamatsu provides a variety of socket assemblies which enable sufficient performance to be derived from PMT's by making simple connections only.

Voltage Distribution Ratio

Voltage Distribution No.	Number of stages	Voltage Distribution Ratios							
		K	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	P
①	6	2	1	1	1	1.5	2	3	
②		2	1	1	1	2	4	2	
③		3	1	1	1	2	3	2	

<Symbols>

K: Photocathode G: Grid F: Focusing Electrode

Dy: Dynode GR: Guard Ring P: Anode

Acc: Accelerating Electrode

No.	stages	K	G1	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	P
④	8	1	—	1	1	1	1	1	1	1	1	0.5
⑤		1	1	1	1	1	1	1	1	1	1	1
⑥		2	—	2	1	1	1	1	1	1	1	1
⑦		2	2	1	1	1	1	1	1	1	1	1
⑧		3	—	1.5	1.5	1	1	1	1	1	1	1
⑨		4	—	1	1.5	1	1	1	1	1	1	1
⑩		4	—	1	1.5	1	1.2	1.5	2	3.3	3	
⑪		4	—	1	2	1	1	1	1	2	1	
⑫	7	—	1	1.5	1	1	1	1	1	1	1	

No.	stages	K	G1	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Acc	Dy7	Dy8	P
⑬	8	1.3	4.8	1.2	1.8	1	1	1	1	0.5	3	2.5	

Acc: Grid (Accelerating Electrode)

No.	stages	K	G1	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	P
⑭	9	4	—	1	1	1	1	1.5	1	1	1	1	

No.	stages	K	G1	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	Dy10	P
⑮	10	1	—	1	1	1	1	1	1	1	1	1	1	1
⑯		1	1	1	1	1	1	1	1	1	1	1	1	1
⑰		1.3	4.8	1.2	1.8	1	1	1	1	1	1.5	3	2.5	
⑱		1.5	—	1	1	1	1	1	1	1	1	1	1	1
⑲		1.5	—	1	1	1	1	1	1	1.2	1.8	3.6	3.3	
⑳		1.5	—	1.5	1.5	1	1	1	1	1	1	1	1	1
㉑		2	—	1	1	1	1	1	1	1	1	1	1	1
㉒		2	—	1	1	1	1	1	1	1.2	1.5	1.8	2	
㉓		2	—	1	1	1	1	1	1.2	1.5	2.2	3.6	3	
㉔		2	—	1	1.5	1	1	1	1	1	1	1	0.75	
㉕		2.6	—	1.2	1.2	1	1	1	1	1	1	1	1	1
㉖		2.6	—	1.2	1.2	1	1	1	1	1.5	2.3	3	3.5	
㉗		3	—	1	1	1	1	1	1	1	1	1	1	1
㉘		3	—	1	1.5	1	1	1	1	1	1	1	1	1
㉙		3	—	1	1.5	1	1	1	1	2	3	3.6	3.3	
㉚		4	—	1	1.5	1	1	1	1	1	1	1	1	1
㉛	4	—	1	1.5	1	1	1	1.2	1.5	2	3.3	3		


(Note 1)

No.	stages	K	Dy1	F1	F3	F2	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	Dy10	P
⑳	10	8	0.18	0	0.17	0.85	1.5	1	1	1	1	1	1	1	1	1
㉑		8	0.18	0	0.17	0.85	1.5	1	1	1	1.2	1.5	1.8	3	2.4	


Note 1: Acc should be connected to Dy7 except R4998.

Schematic Diagram of Voltage Divider Networks

(1) Cathode Ground Scheme (+HV)

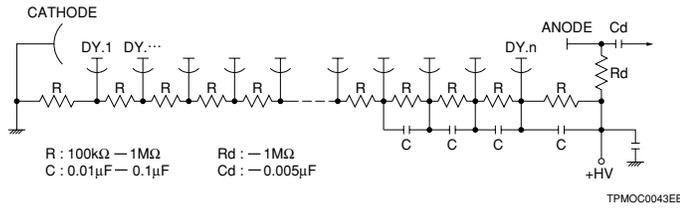

(2) Anode Ground Scheme (-HV)

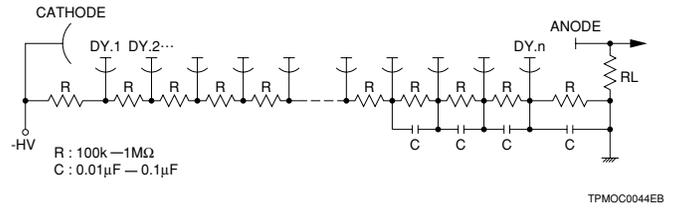

Voltage Distribution Ratio

Voltage Distribution No.	Number of stages	Voltage Distribution Ratios													
		K	G1	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	Dy10	Dy11	P
34	11	0.5	1.5	2	1	1	1	1	1	1	1	1	1	1	0.5
35	11	1	—	1	1	1	1	1	1	1	1	1	1	1	1

No.	stages	K	F2	F1	F3	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	Dy10	Dy11	P
36	11	5	1	2	0.02	3	1	1	1	1	1	1	1	1	1	1	1

No.	stages	K	G1	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	Dy10	Dy11	Dy12	P
37	12	1	—	1	1	1	1	1	1	1	1	1	1	1	1	1
38		1	3	1.2	1.8	1	1	1	1	1	1	1	1.5	1.5	3	2.5
39		1	3	1.2	1.8	1	1	1	1	1.5	2.5	3.6	4.5	8.6	4	
40		1.2	2.8	1.2	1.8	1	1	1	1	1	1	1.5	1.5	3	2.5	
41		1.2	2.8	1.2	1.8	1	1	1.2	1.5	2	2.8	4	5.7	8	5	
42		2	—	1	1	1	1	1	1	1	1	1	1	1	1	1
43		2	—	1	1	1	1	1	1	1	1	1	1.2	1.5	1.8	2
44		2	—	2	2	1	1	1	1	1	1	1	1	1	1	1
45		3	—	2	2	1	1	1	1	1	1	1	1	1	2	5
46		4	0	1	1.4	1	1	1	1	1	1	1	1	1	1	1
47		4.3	0	1	1.6	1	1	1	1	1	1	1	1.6	2	3.3	2
48		4.3	0	1	1.6	1	1	1	1.2	1.5	2	2.4	3	3.9	3	

(Note 2)
(Note 2)
(Note 2)

No.	stages	K	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	Dy10	Dy11	Dy12	GR	P
49	12	1	1	1	1	1	1	1	1	1	1	1	1	0.9	0.1	

No.	stages	K	G1	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	Dy10	Dy11	Dy12	Dy13	Dy14	P
50	14	2.5	7.5	1.2	1.8	1	1	1	1	1	1	1	1	1.5	1.5	3	2.5	
51		2.5	7.5	1.2	1.8	1	1	1	1	1.2	1.5	2	2.8	4	5.7	8	5	

No.	stages	K	Dy1	F2	F1	F3	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	Dy10	Dy11	Dy12	Dy13	Dy14	P
52	10	11.3	0	0.6	0	3.4	5	3.33	1.67	1	1	1	1	1	—	—	—	—	1	
53		18.5	0	0.6	0	3.4	5	3.3	1.7	1	1	1	2	3	—	—	—	—	4	
54	14	11.3	0	0.6	0	3.4	5	3.33	1.67	1	1	1	1	1	1.2	1.5	2.2	3	2.4	

No.	stages	K	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	Dy10	Dy11	Dy12	Dy13	Dy14	Dy15	Dy16	Dy17	Dy18	Dy19	P
55	15	2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	—	—	—	—	1	
56	19	2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	

Note 2: Shield should be connected to Dy5.

Quick Reference for PMT Hybrid Assemblies

Assembly Type No.	PMT Characteristics				Assembly Characteristics							Notes
	Tube Diameter	Tube Type No. / Voltage Distribution Ratio	Reference Page for PMT Feature	Outline No.	H.V Input Terminal	Signal Output Terminal	Case Material	Maximum Rating		Maximum Average Anode Current ^① (μ A)		
								Overall Voltage (V)	Divider Current (mA)			
H3164-10	10 mm (3/8")	R1635	⑥	18	①	Coaxial Cable *	RG-174/U	Magnetic Shield Wrapping	-1500	0.41	17 at 1250 V	H3164-11 (with 50 Ω **)
H3695-10		R2496	⑧	18	②	Coaxial Cable *	RG-174/U	Magnetic Shield Wrapping	-1500	0.37	15 at 1250 V	H3695-11 (with 50 Ω **)
H3165-10	13 mm (1/2")	R647-01	⑮	18	③	RG-174/U	RG-174/U	Magnetic Shield Wrapping	-1250	0.34	14 at 1000 V	H3165-11 (with 50 Ω **)
H6520	19 mm (3/4")	R1166	⑮	18	④	Coaxial Cable *	RG-174/U	Magnetic Shield Case	-1250	0.33	13 at 1000 V	H6520-01 (with 50 Ω **)
H6524		R1450	⑳	18	⑤	Coaxial Cable *	RG-174/U	Magnetic Shield Case	-1800	0.43	18 at 1500 V	H6524-01 (with 50 Ω **)
H6613		R2076	⑫	19	⑥	Coaxial Cable *	RG-174/U	Magnetic Shield Case	-1800	0.35	17 at 1700 V	H6613-01 (with 50 Ω **)
H6612		R3478	⑫	18	⑦	Coaxial Cable *	RG-174/U	Magnetic Shield Case	-1800	0.35	17 at 1700 V	H6612-01 (with 50 Ω **)
H8135		R5611-01	㉗	18	⑧	Coaxial Cable *	RG-174/U	Magnetic Shield Case	-1250	0.29	12 at 1000 V	
H6533	25 mm (1")	R4998	⑰	18	⑨	Coaxial Cable *	RG-174/U	Magnetic Shield Case	-2500	0.36	16 at 2250 V	H6610 (R5320)
H6152-70		R5505-70	⑤⑤	18	⑩	Coaxial Cable *	RG-174/U	P.O.M Case	+2300	0.41	10 at 2000 V	+HV
H8643		R7899-01	㉙	18	⑪	Coaxial Cable *	RG-174/U	Magnetic Shield Case	-1800	0.42	18 at 1500 V	
H7415	28 mm (1-1/8")	R6427	⑳	18	⑫	Coaxial Cable *	RG-174/U	Magnetic Shield Case	-2000	0.41	16 at 1500 V	H7415-01 (with 50 Ω **) H7416 (R7056)
H3178-51	38 mm (1-1/2")	R580	㉑	18	⑬	SHV	BNC	Magnetic Shield Case	-1750	0.63	27 at 1500 V	
H3178-61		R580-17	㉕	18	⑭	SHV	BNC	Magnetic Shield Case	-1750	0.61	26 at 1500 V	
H8409-70		R7761-70	⑤⑥	18	⑮	Coaxial Cable *	RG-174/U	P.O.M Case	+2300	0.33	10 at 2000 V	+HV

Note :

① The maximum average anode current is defined as 5 % of divider current when standard high voltage is applied.

* marks: It's possible to attach an SHV connector fitting RG-174/U to the coaxial cable.

** marks: 50 Ω is a terminal resistor at anode output.

Assembly Type No.	PMT Characteristics				Assembly Characteristics							Notes
	Tube Diameter	Tube Type No. / Voltage Distribution Ratio		Reference Page for PMT Feature	Outline No.	H.V Input Terminal	Signal Output Terminal	Case Material	Maximum Rating		Maximum Average Anode Current ^① (μ A)	
									Overall Voltage (V)	Divider Current (mA)		
H6410	51 mm (2")	R329-02	48	20	16	SHV	BNC	Magnetic Shield Case	-2700	0.67	25 at 2000 V	H6521 (R2256-02) H6522 (R5113-02)
H7195		R329-02	47	20	17	SHV	BNC \times 3***	Magnetic Shield Case	-2700	1.23	46 at 2000 V	
H1949-50		R1828-01	40	20	18	SHV	BNC \times 3***	Magnetic Shield Case	-3000	1.39	58 at 2500 V	H3177-50 (R2059) H4022-50 (R4004)
H1949-51		R1828-01	40	20	19	SHV	BNC	Magnetic Shield Case	-3000	0.70	29 at 2500 V	H3177-51 (R2059) H4022-51 (R4004)
H2431-50		R2083	13	20	20	SHV	BNC	Magnetic Shield Case	-3500	0.61	26 at 3000 V	H3378-50 (R3377)
H6614-70		R5924-70	56	20	21	Coaxial Cable *	RG-174/U	P.O.M Case	+2300	0.33	15 at 2000 V	+HV
H8318-70	64 mm (2.5")	R6504-70	56	20	22	Coaxial Cable *	RG-174/U	P.O.M Case	+2300	0.33	15 at 2000 V	+HV
R2238-01	76 mm (3")	R2238	42	20	23	RG-174/U	RG-174/U	—	-1500	0.45	19 at 1250 V	
H6525		R4143	38	20	24	SHV	BNC	Magnetic Shield Case	-3000	0.70	29 at 2500 V	H6526 (R4885)
H6559		R6091	48	20	25	SHV	BNC	Magnetic Shield Case	-2500	0.62	25 at 2000 V	
H6527	127 mm (5")	R1250	50	20	26	SHV	BNC	Magnetic Shield Case	-3000	1.02	34 at 2000 V	
H6528		R1584	50	20	26	SHV	BNC	Magnetic Shield Case	-3000	1.02	34 at 2000 V	
R3600-06	508 mm (20")	R3600-02	36	20	27	RG-174/U or equiv.	RG-58C/U	—	+2500	0.44	18 at 2000 V	
H8711	Metal Package PMT	16 ch (4 \times 4)	44	22	28	Terminal PIN	Terminal PIN	P.O.M Case	-1000	0.35	14 at 800 V	(14 μ A is total anode current of 16 ch.)
H7546B		64 ch (8 \times 8)	45	22	29	Terminal PIN	Terminal PIN	P.O.M Case	-1000	0.45	18 at 800 V	(18 μ A is total anode current of 64 ch.)
H7260		32 ch (1 \times 32)	15	22	30	Terminal PIN	Terminal PIN	P.O.M Case	-900	0.37	100 at 800 V	(100 μ A is total anode current of 32 ch.)
H8500		64 ch (8 \times 8)	49	22	31	Terminal PIN	Terminal PIN	—	-1100	0.18	100 at 1000 V	(100 μ A is total anode current of 64 ch.)

Note :

① The maximum average anode current is defined as 5 % of divider current when standard high voltage is applied.

* marks: It's possible to attach an SHV connector fitting RG-174/U to the coaxial cable.


** marks: 50 Ω is a terminal resistor at anode output.

*** marks: It has 2 anode outputs and 1 dynode output.

Dimensional Outlines and Circuit Diagrams


For PMT Hybrid Assemblies

1 H3164-10

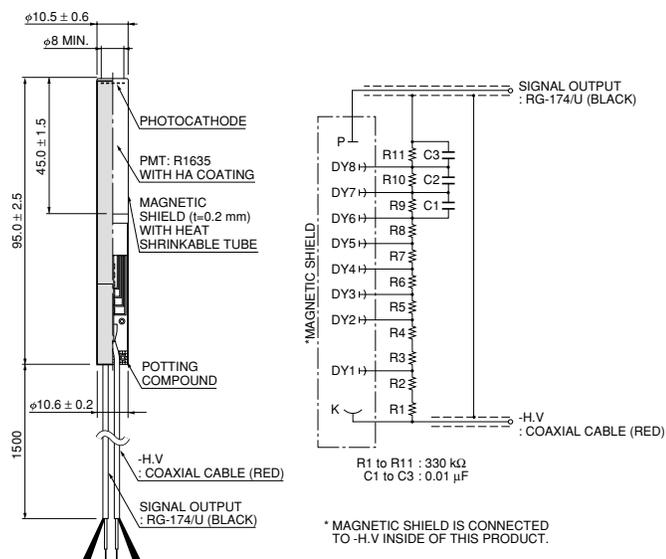


TPMHA0309EC

2 H3695-10

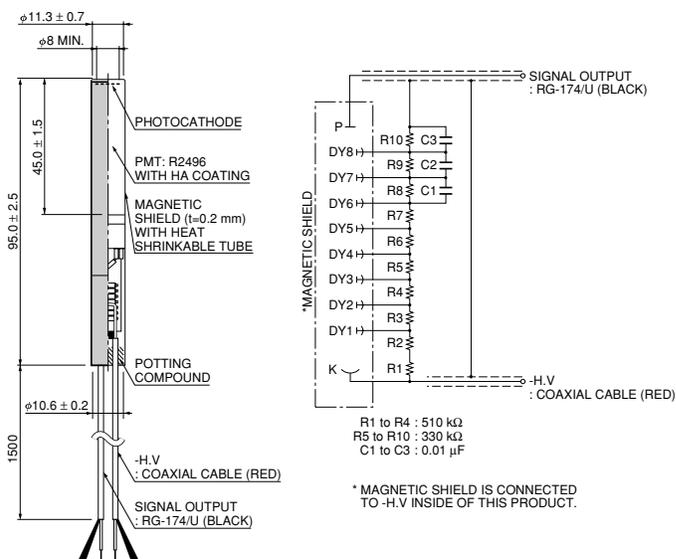


TPMHA0310EB

3 H3165-10

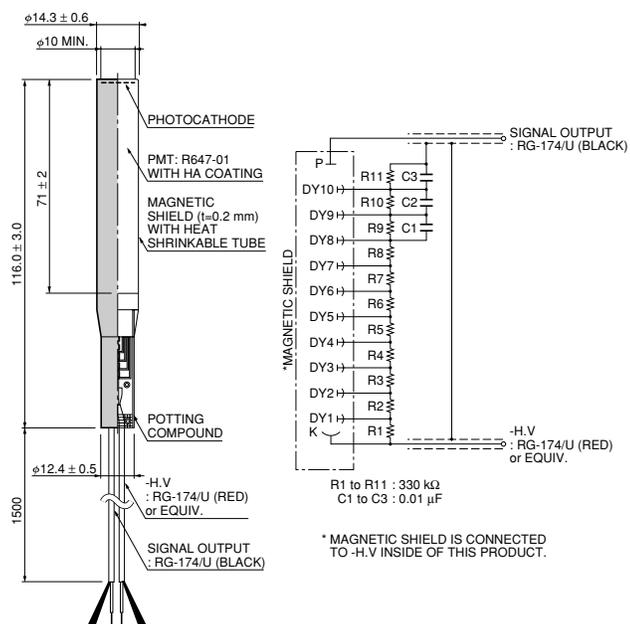

TPMHA0311EC



4 H6520

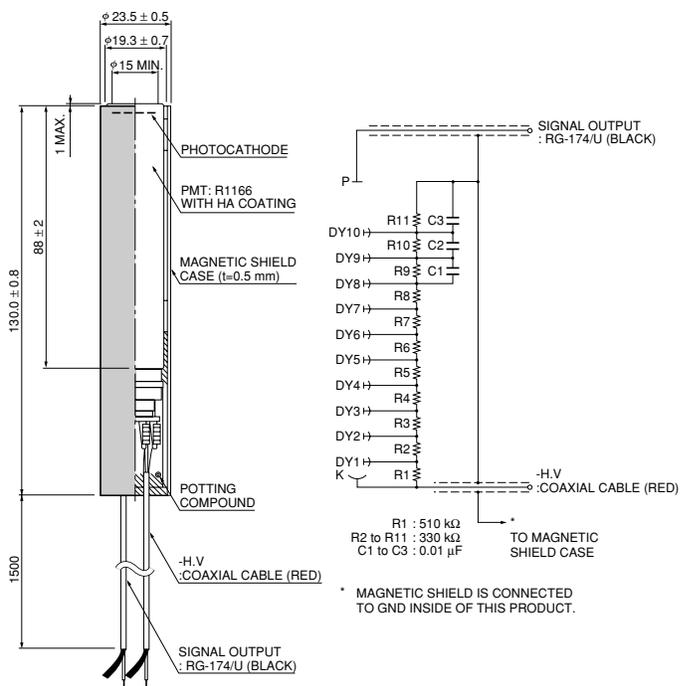

TPMHA0312EB



(Unit: mm)

5 H6524

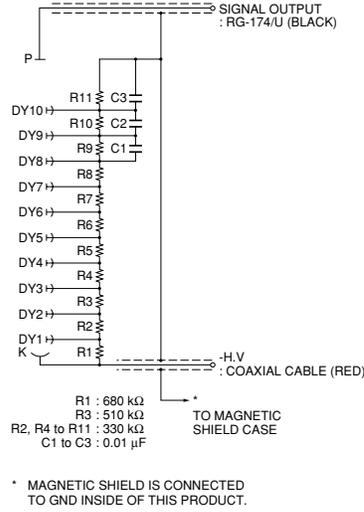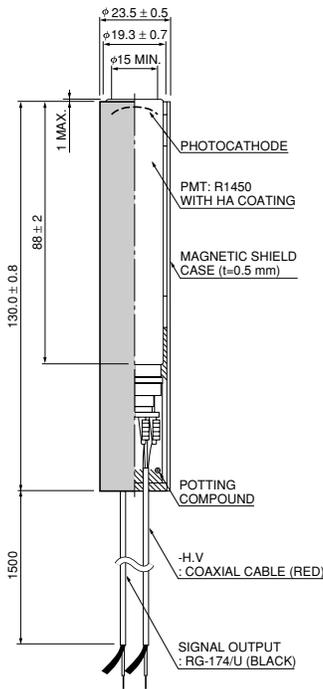



TPMHA0313EA

6 H6613

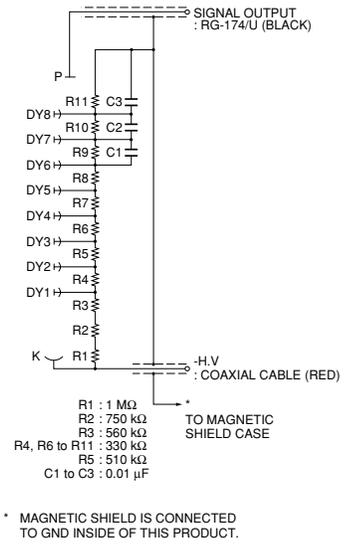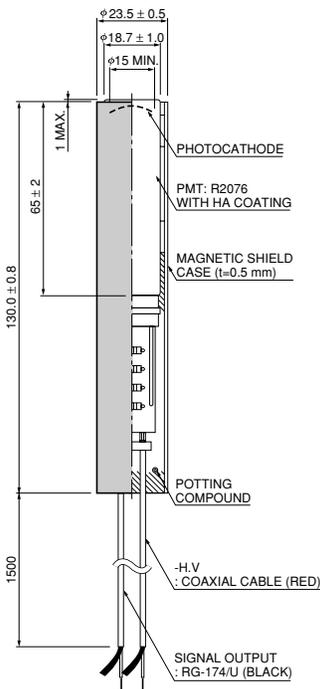



TPMHA0314EA

7 H6612

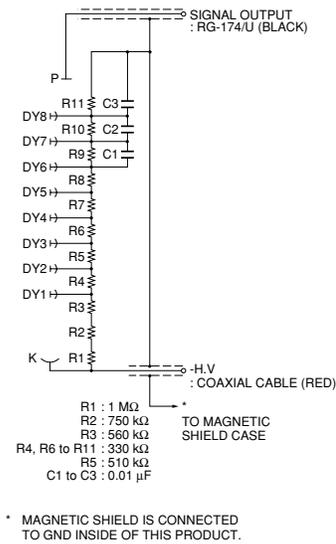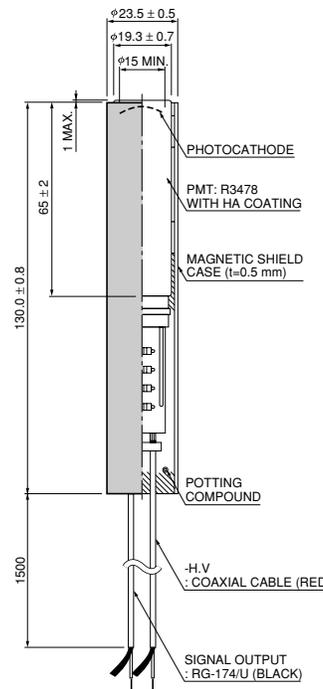



TPMHA0315EA

8 H8135

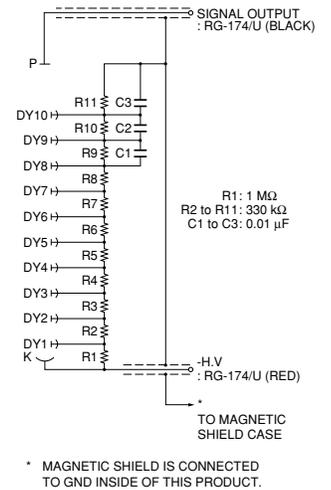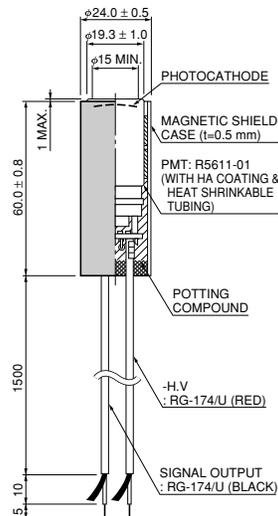

TPMHA0513EA



9 H6533

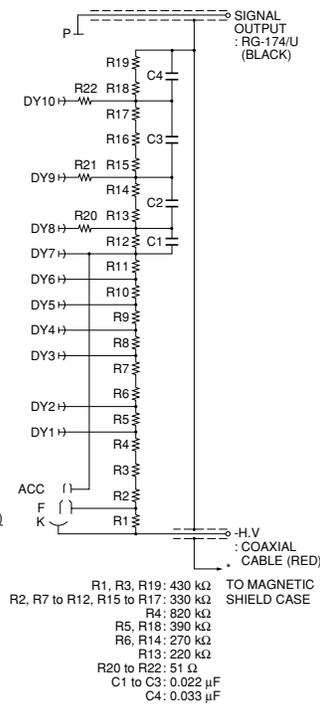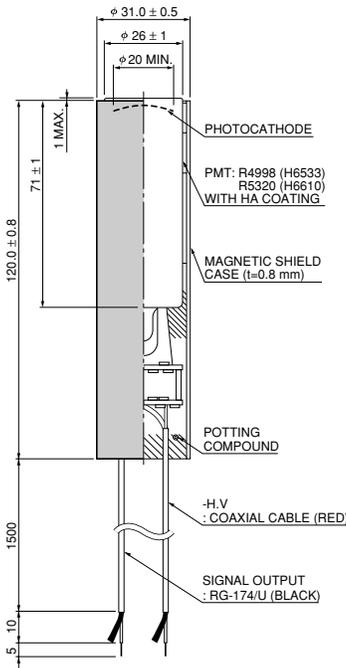

* MAGNETIC SHIELD IS CONNECTED TO GND INSIDE OF THIS PRODUCT.



TPMHA0317EB

10 H6152-70

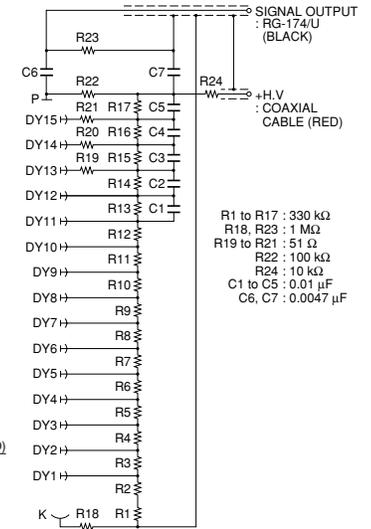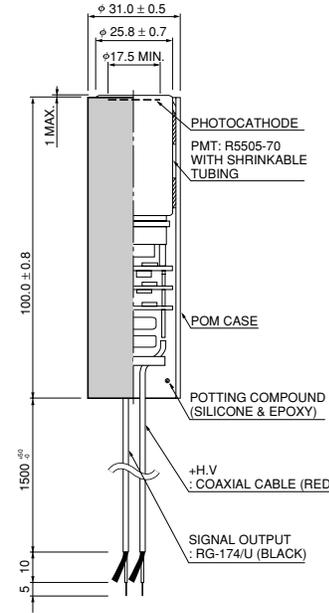

TPMHA0470EA



11 H8643

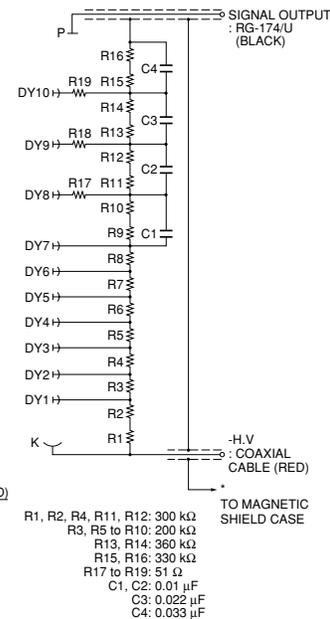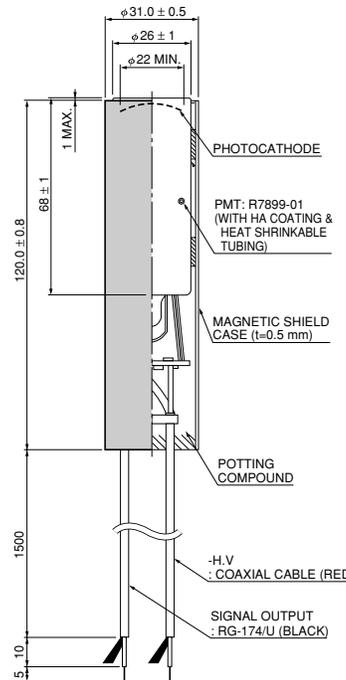

* MAGNETIC SHIELD IS CONNECTED TO GND INSIDE OF THIS PRODUCT.

TPMHA0514EA

12 H7415

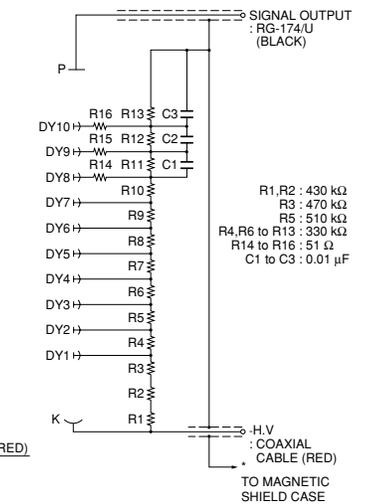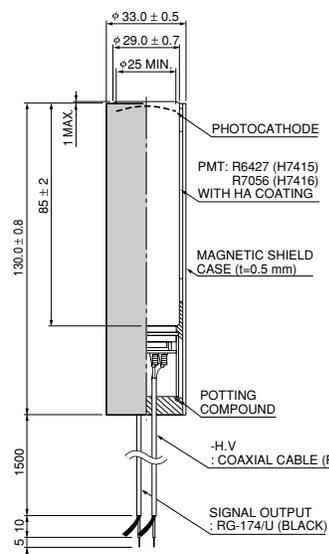


* MAGNETIC SHIELD IS CONNECTED TO GND INSIDE OF THIS PRODUCT.


TPMHA0318EB

(Unit: mm)

13 H3178-51

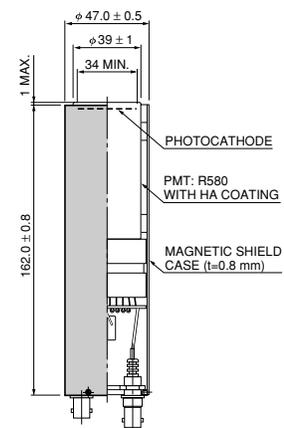


* R580-17 has a plano-concave face plate.

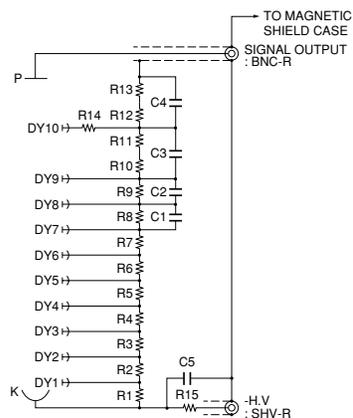


- R1, R10, R12 : 300 kΩ
- R2 to R6, R13 : 150 kΩ
- R7 : 180 kΩ
- R8 : 220 kΩ
- R9 : 330 kΩ
- R11 : 240 kΩ
- R14 : 51 Ω
- R15 : 10 kΩ
- C1 : 0.01 μF
- C2 : 0.022 μF
- C3 : 0.047 μF
- C4 : 0.1 μF
- C5 : 4700 pF

* MAGNETIC SHIELD IS CONNECTED TO GND INSIDE OF THIS PRODUCT.

14 H3178-61

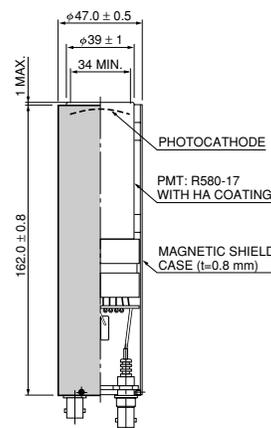

* R580-17 has a plano-concave face plate.

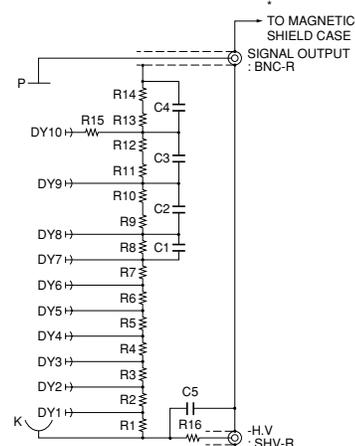



- R1 : 390 kΩ
- R2, R3, R9, R12 : 180 kΩ
- R4 to R7 : 150 kΩ
- R8, R14 : 220 kΩ
- R10 : 160 kΩ
- R11 : 270 kΩ
- R13 : 300 kΩ
- R15 : 51 Ω
- R16 : 10k Ω
- C1 : 0.01 μF
- C2 : 0.022 μF
- C3 : 0.047 μF
- C4 : 0.1 μF
- C5 : 4700 pF

* MAGNETIC SHIELD IS CONNECTED TO GND INSIDE OF THIS PRODUCT.

TPMHA0320EB




TPMHA0321EB

15 H8409-70

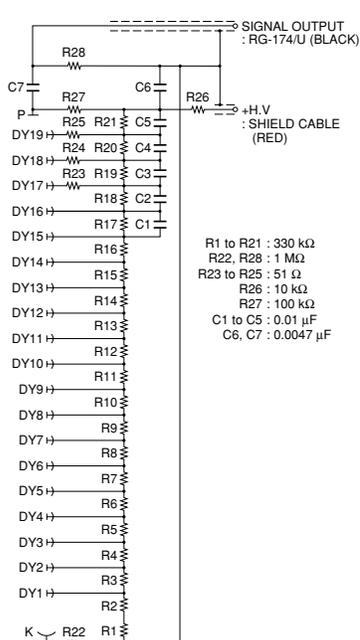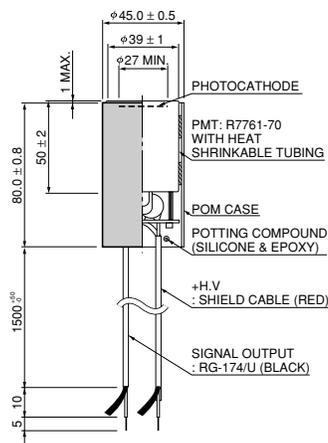

- R1 to R21 : 330 kΩ
- R22, R28 : 1 MΩ
- R23 to R25 : 51 Ω
- R26 : 10 kΩ
- R27 : 100 kΩ
- C1 to C5 : 0.01 μF
- C6, C7 : 0.0047 μF

16 H6410

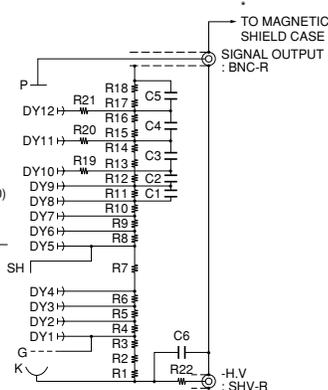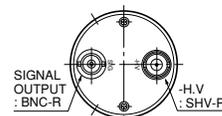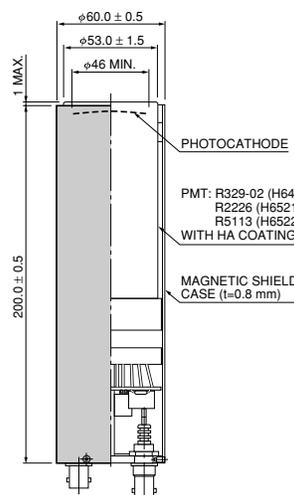


- R1, R5 : 240 kΩ
- R2, R10, R16 : 220 kΩ
- R3, R9 : 180 kΩ
- R4, R6 to R8, R14, R18 : 150 kΩ
- R11, R13, R17 : 300 kΩ
- R12, R15 : 360 kΩ
- R19 : 51 Ω
- R20, R21 : 100 Ω
- R22 : 10 kΩ
- C1 : 0.022 μF
- C2 : 0.047 μF
- C3 : 0.1 μF
- C4 : 0.22 μF
- C5 : 0.47 μF
- C6 : 470 pF

* MAGNETIC SHIELD IS CONNECTED TO GND INSIDE OF THIS PRODUCT.

TPMHA0476EA


TPMHA0324EB

17 H7195

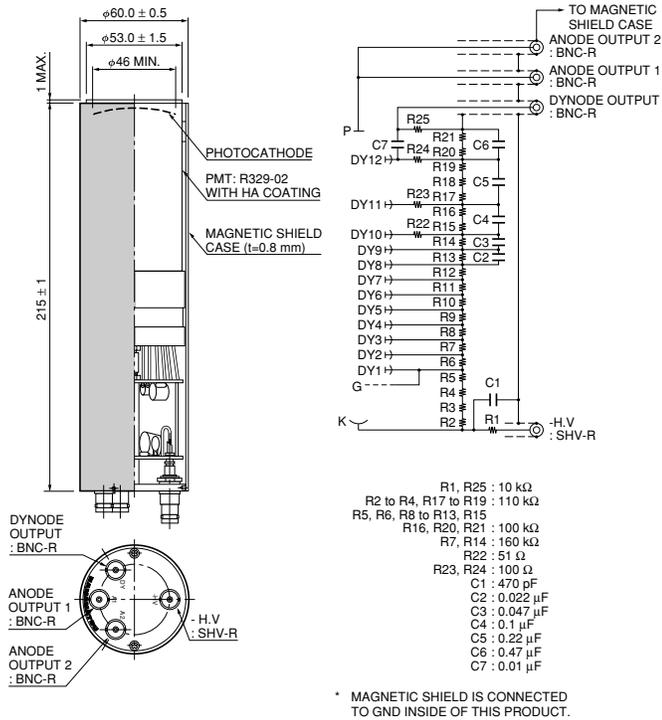


TPMHA0323EB

18 H1949-50

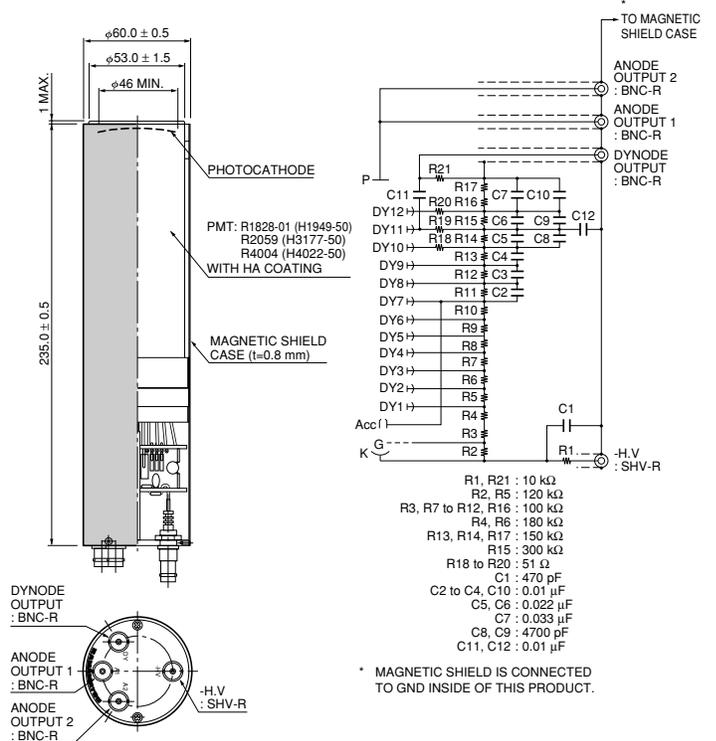


TPMHA0325EC

19 H1949-51

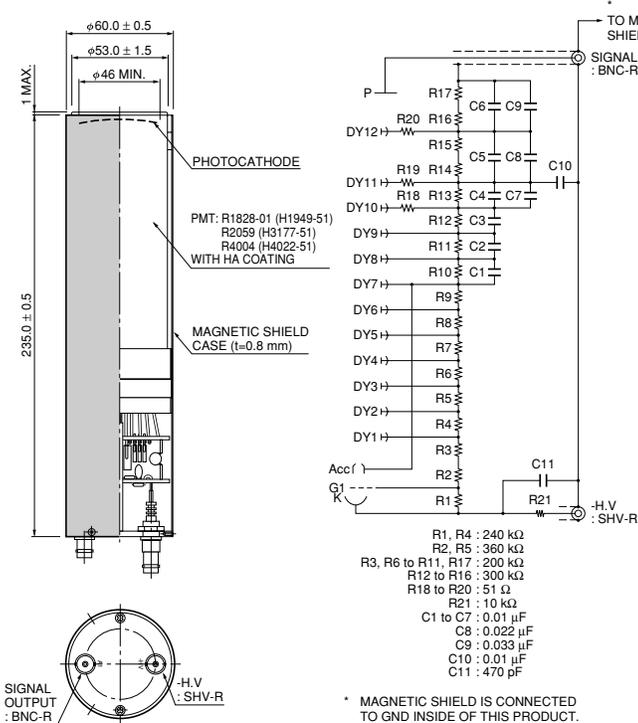

TPMHA0326EC


20 H2431-50

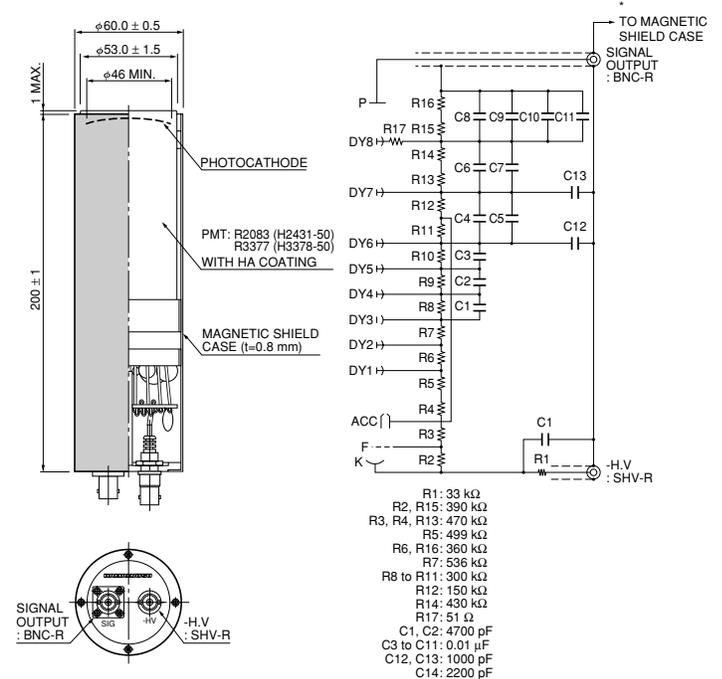

TPMHA0327EB


(Unit: mm)

21 H6614-70

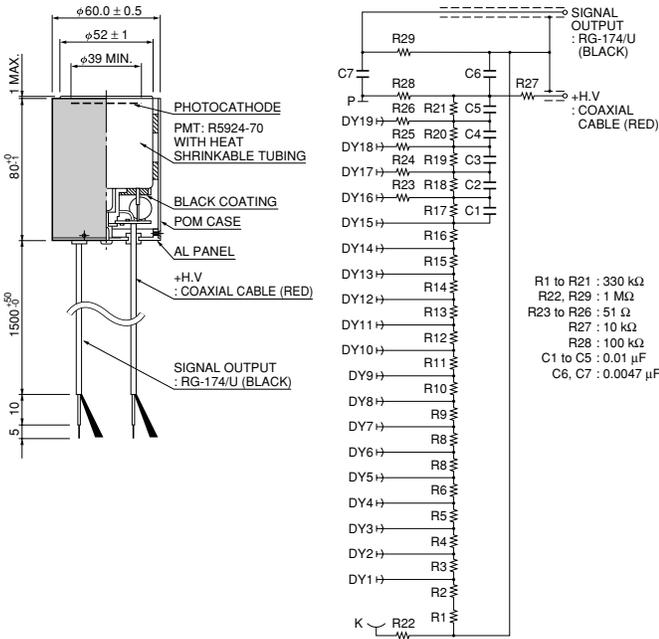


TPMHA0472EA

22 H8318-70

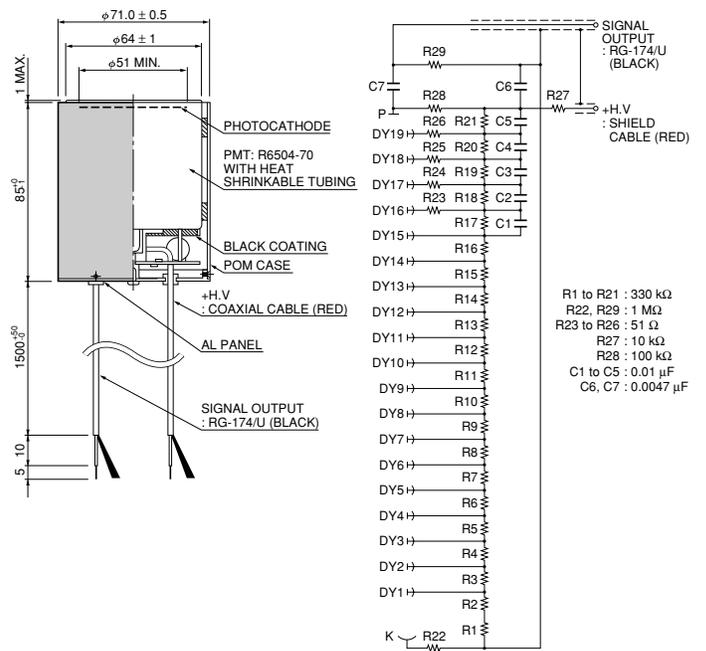


TPMHA0473EA

23 R2238-01

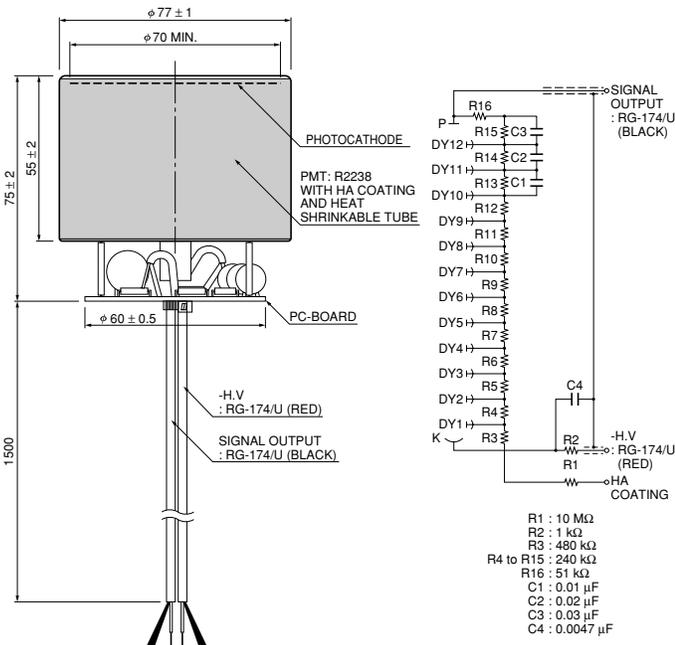

TPMHA0151EA


24 H6525, H6526

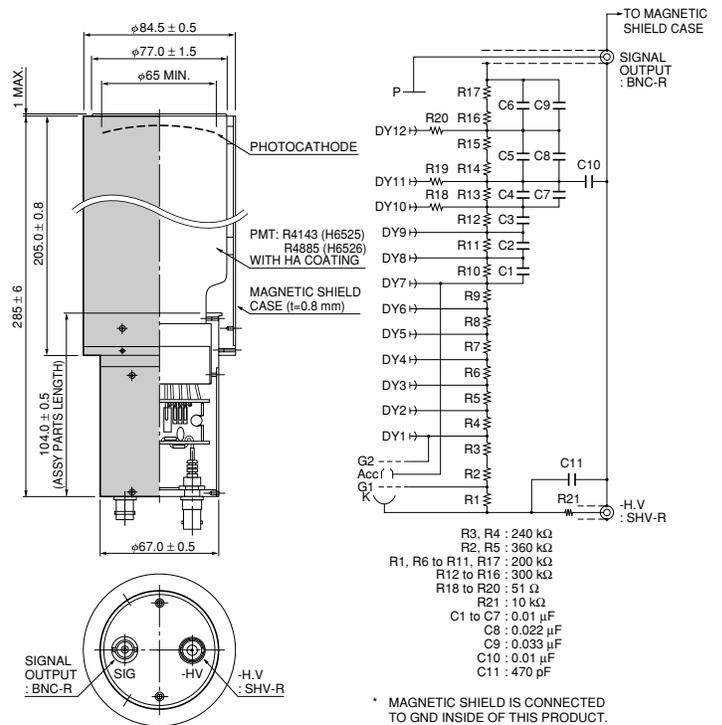

* MAGNETIC SHIELD IS CONNECTED TO GND INSIDE OF THIS PRODUCT.


TPMHA0330EB

25 H6559

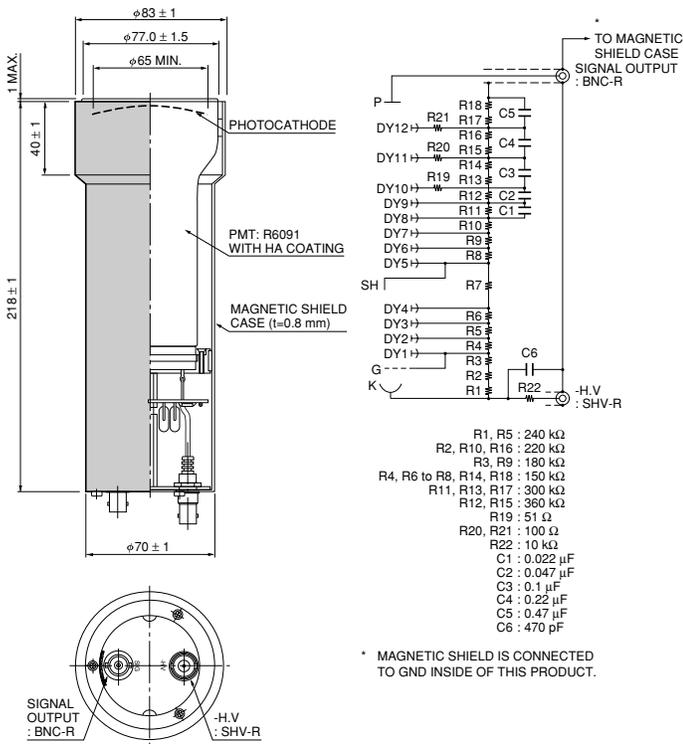


TPMHA0331EB

26 H6527, H6528

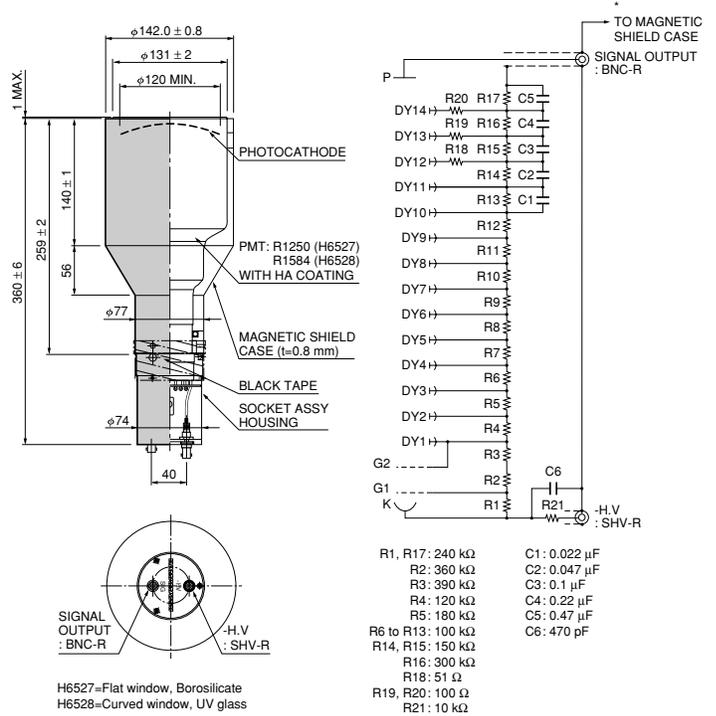

TPMHA0332EC

27 R3600-06

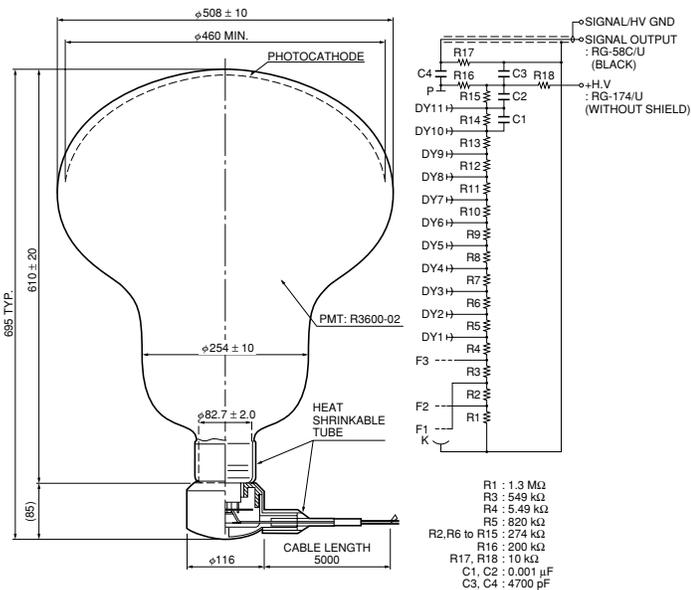

TPMHA0156EC

Quick Reference for PMT Socket Assemblies

Assembly Type No.	PMT Characteristics				Assembly Characteristics							Notes
	Tube Diameter	Tube Type No. / Voltage Distribution Ratio	Reference Page for PMT Feature	Outline No.	H.V Input Terminal	Signal Output Terminal	Output Signal	Maximum Rating		Maximum Average Anode Current ^① (μ A)		
								Overall Voltage (V)	Bleeder Current (mA)			
E1761-21	10 mm (3/8")	R1635	⑥	18	1	SHV	BNC	DC/PULSE	-1500	0.41	17 at 1250 V	
E1761-22		R2248		22								
		R2496	⑧	18	1	SHV	BNC	DC/PULSE	-1500	0.37	15 at 1250 V	
E849-90	13 mm (1/2")	R647-01	⑮	18	2	SHV	BNC	DC/PULSE	-1250	0.34	14 at 1000 V	
		R2102		22								
E849-68		R4124	⑳	18	3	AWG22	RG-174/U	DC/PULSE	-1250	0.28	11 at 1000 V	
E974-17	19 mm (3/4")	R1166	⑱	18	4	SHV	BNC	DC/PULSE	-1800	0.47	19 at 1500 V	
E974-22		R1450	㉔	18								
E2253-05		R3478	⑫	18	5	SHV	BNC	DC/PULSE	-1800	0.35	17 at 1700 V	
E974-19		R4125	⑲	18	6	AWG22	RG-174/U	DC/PULSE	-1800	0.32	13 at 1500 V	
E2037-02	25 mm (1")	R1548-07	⑳	22	7	AWG24	AWG24	DC/PULSE	-1750	0.18	6 at 1250 V	6 μ A is for total of 2 anodes.
E6133-04		R5505-70	㉕	18	8	SHV	BNC	PULSE	+2300	0.41	17 at 2000 V	E6133-03 (-HV) is available.
E2924-11		R7899	㉘	19	9	AWG22	RG-174/U	DC/PULSE	-1800	0.41	13 at 1250 V	For R7899 (Glass Gase Type)
E2924-500	25 mm (1") 28 mm (1-1/8")	R1924A	㉚	18	10	SHV	BNC	DC/PULSE	-1250	0.30	11 at 1000 V	
		R7111		18								
E2624-14	28 mm (1-1/8")	R6427	⑳	18	11	SHV	BNC	DC/PULSE	-2000	0.42	15 at 1500 V	
E2624-04		R6427	㉑	18	12	AWG22	RG-174/U	DC/PULSE	-2000	0.49	18 at 1500 V	
E2183-500	38 mm (1-1/2")	R580		18	13	SHV	BNC	DC/PULSE	-1750	0.45	15 at 1250 V	
		R980	㉒	18					-1250	0.32	12 at 1000 V	
		R3886		18					-1250	0.32	12 at 1000 V	
E2183-501		R580		18	13	SHV	BNC	DC/PULSE	-1750	0.63	26 at 1500 V	
	R980	㉓	18	-1250					0.45	17 at 1000 V		
	R3886		18	-1250					0.45	17 at 1000 V		
E1198-07	51 mm (2")	R2154-02	㉔	20	14	AWG22	RG-174/U	DC/PULSE	-1750	0.44	15 at 1250 V	
E2979-500		R1828-01	④	20	15	SHV	BNC	DC/PULSE	-3000	0.70	29 at 2500 V	
E1198-05	51 mm (2")	R1306		20	16	AWG22	RG-174/U	DC/PULSE	-1500	0.46	15 at 1000 V	-HV
		R1538	⑤	22								
		R1307		20								
E1198-20	60 mm (2.4")	R1306		20	17	Coaxial Cable	RG-174/U	PULSE	+1500	0.46	15 at 1000 V	+HV
		R1538	⑤	22								
E1198-26	76 mm (3")	R6231		20	18	Coaxial Cable	RG-174/U	DC/PULSE	-1500	0.38	12 at 1000 V	-HV
		R6232	⑦	20								
		R6233		20								
E1198-27		R6231		20	18	Coaxial Cable	RG-174/U	PULSE	+1500	0.38	12 at 1000 V	+HV
	R6232	⑦	20									
	R6233		20									
E5859	51 mm (2")	R329-02	④	20	19	SHV	BNC	DC/PULSE	-2700	0.67	18 at 1500 V	shield case is available. +HV type (E5859-02) is available.
		R6091		20					-2500	0.62		
E5859-01	76 mm (3")	R329-02		20	19	SHV	BNC	DC/PULSE	-2700	0.75	20 at 2000 V	shield case is available. +HV type (E5859-03) is available.
	R331-05	④	20	-2500					0.70			
	R6091		20									
E6316-01	127 mm (5")	R877	⑮	20	20	SHV	BNC	DC/PULSE	-1500	0.38	15 at 1250 V	shield case is available.
		R1512		20					-2000	0.51	18 at 1500 V	
E7693		R1250	⑤	20	21	SHV	BNC	DC/PULSE	-3000	1.03	34 at 2000 V	
		R1584		20								
E7694	204 mm (8") 254 mm (10")	R5912	⑤	20	21	SHV	BNC	DC/PULSE	-1800	0.39	15 at 1500 V	+HV type (E7694-01) is available.
		R7081		20								

Note: ① The maximum average anode current is defined as 5 % of divider current when standard high voltage is applied.


Assembly Type No.	PMT Characteristics				Assembly Characteristics							Notes
	Tube Diameter	Tube Type No. / Voltage Distribution Ratio	Reference Page for PMT Feature	Outline No.	H.V Input Terminal	Signal Output Terminal	Output Signal	Maximum Rating		Maximum Average Anode Current ^① (μ A)		
								Overall Voltage (V)	Bleeder Current (mA)			
E5770	16 mm TO-8 Type	R7400U	④	22	22	PIN	PIN	DC/PULSE	-1000	0.36	14 at 800 V	on-board type
E5780		R7400U-06	④	22	23	AWG22	RG-174/U	DC/PULSE	-1000	0.36	14 at 800 V	cable type
E5996	30 mm Square Type	R7600U R7600U-03	⑳	22	24	RG-174/U	RG-174/U	DC/PULSE	-900	0.33	14 at 800 V	
E7083		R7600U -00-M4	⑳	22	25	RG-174/U	Coaxial cable	DC/PULSE	-900	0.33	14 at 800 V	
E6736		R5900U -00-L16	⑮	22	26	RG-174/U	Coaxial cable	DC/PULSE	-900	0.38	16 at 800 V	Active base type (E6572) is available.
E7514		R8520U -00-C12	⑳	38	27	RG-174/U	Coaxial cable	DC/PULSE	-1000	0.34	13 at 800 V	

Note: ① The maximum average anode current is defined as 5 % of divider current when standard high voltage is applied.


Dimensional Outline and Circuit Diagrams

For PMT Socket Assemblies


1 E1761-21, E1761-22

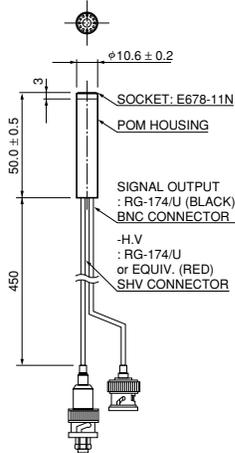

E1761-21

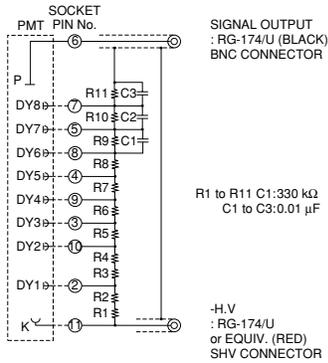



E1761-22

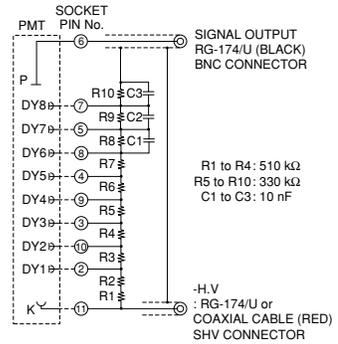

TACCA0075EA



TACCA0076EB

2 E849-90

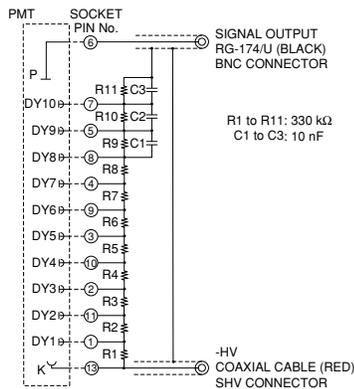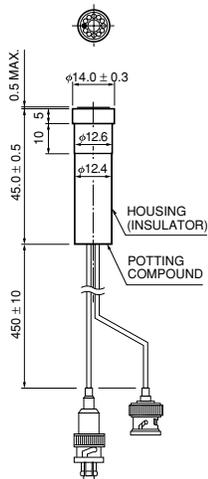


TACCA0077EC

3 E849-68

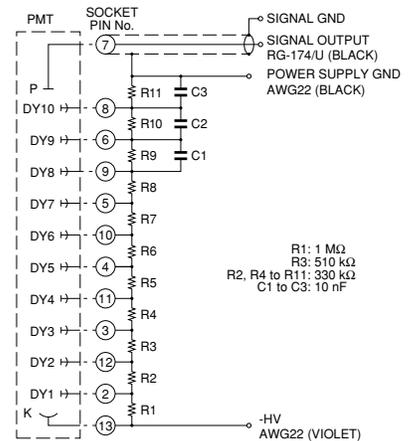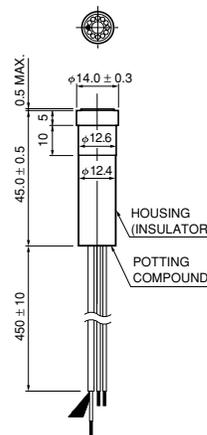


TACCA0210EB

4 E974-17, E974-22

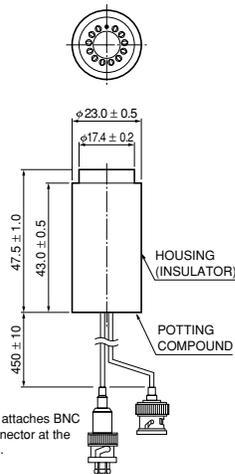


E974-17, -18 attaches BNC and SHV connector at the end of cables.

E974-17

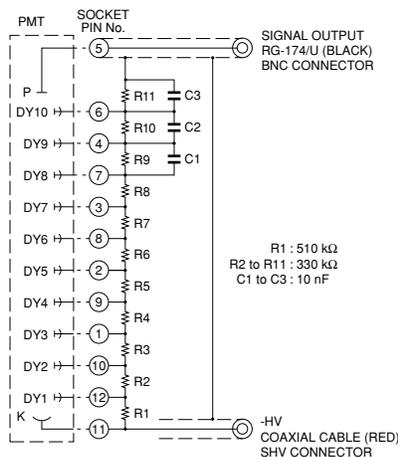



E974-22

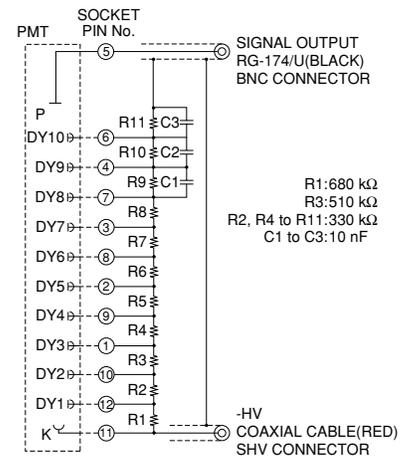

TACCA0212EB



TACCA0078EC

5 E2253-05

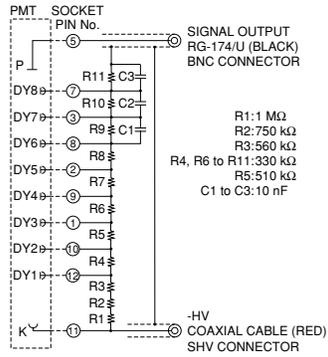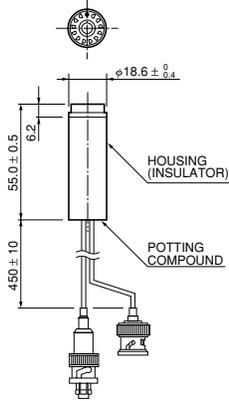



TACCA0079EB

6 E974-19

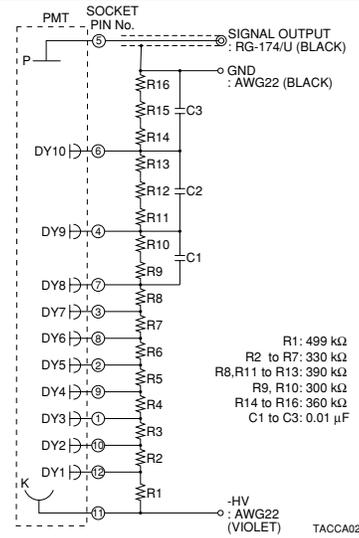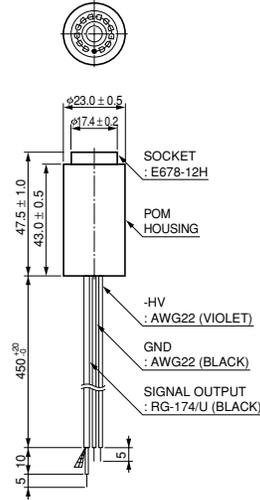



TACCA0230EA

7 E2037-02

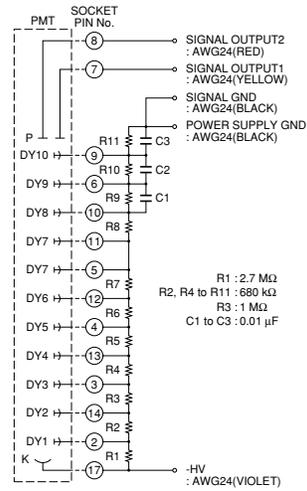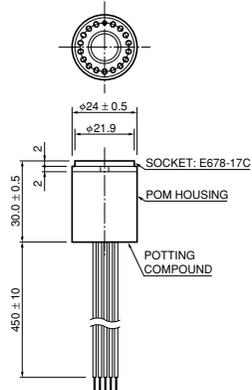



TACCA0028EB

8 E6133-04

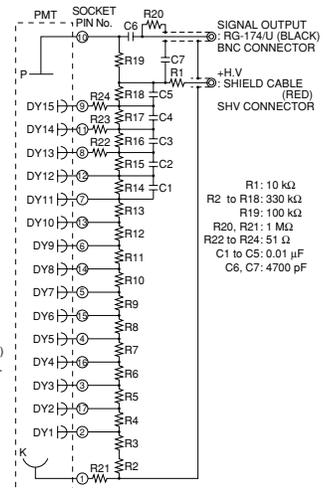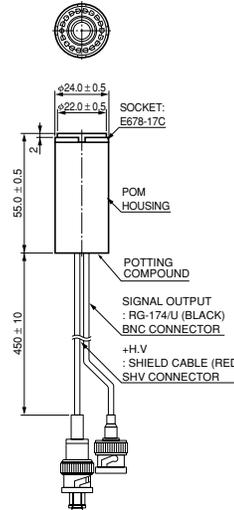



TACCA0231EA

9 E2924-11

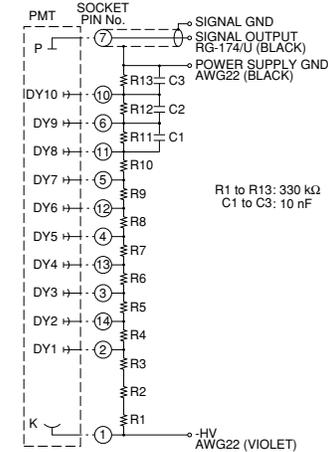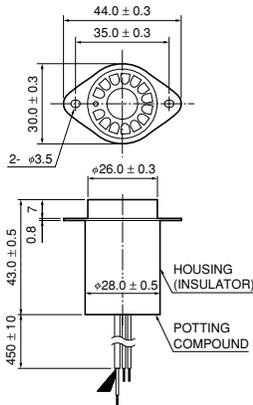



TACCA0032EC

10 E2924-500

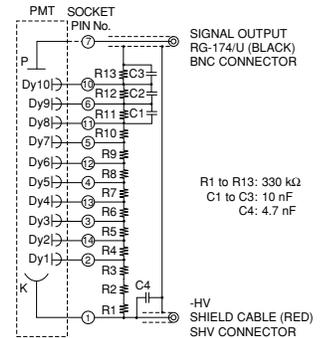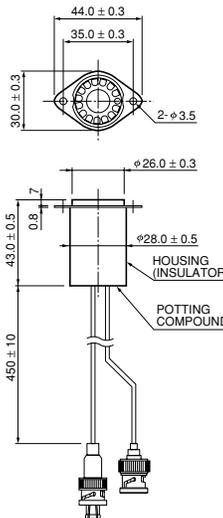



TACCA0081EC

11 E2624-14

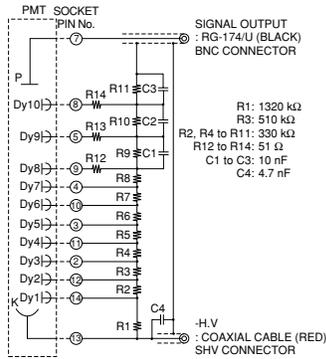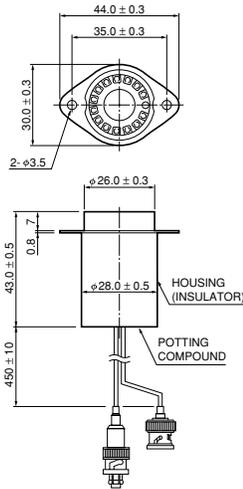


TACCA0082EC

12 E2624-04

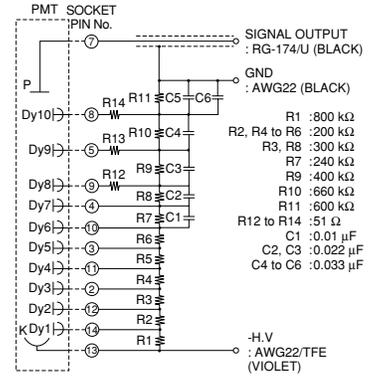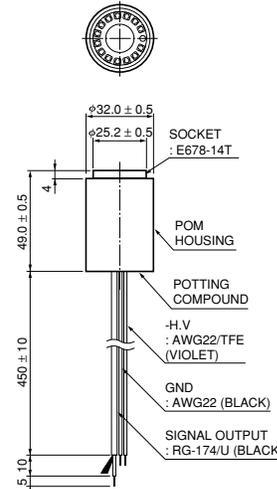


TACCA0084EC

13 E2183-500, E2183-501

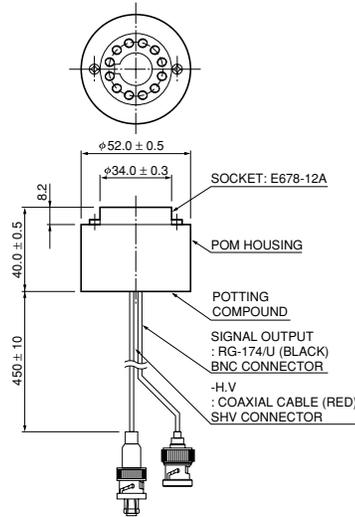


E2183-500

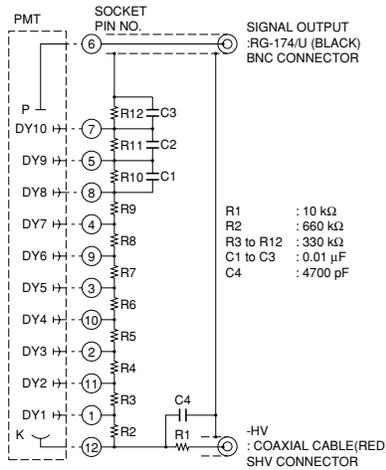



TACCA0166EB

E2183-501

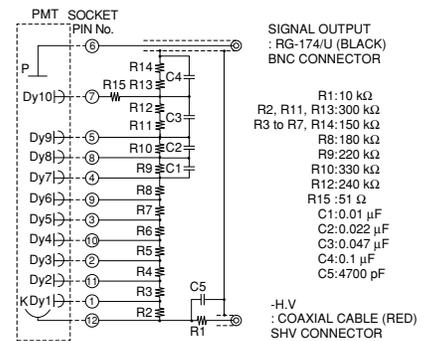

TACCA0086EB



14 E1198-07

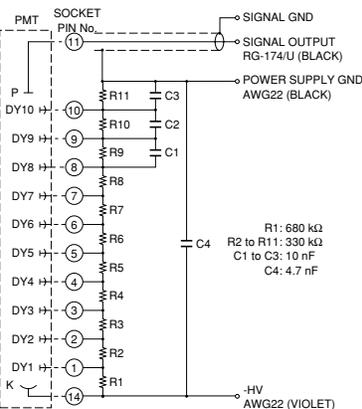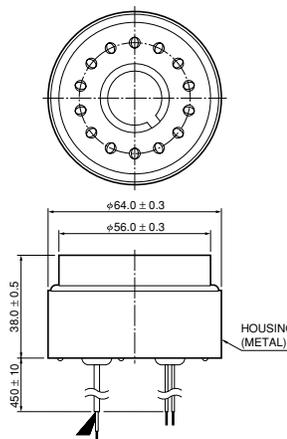

The housing is internally connected to the GND.

TACCA0220EB

15 E2979-500

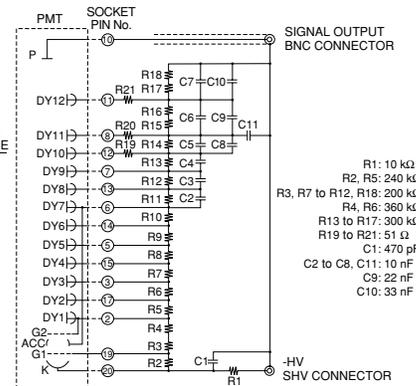
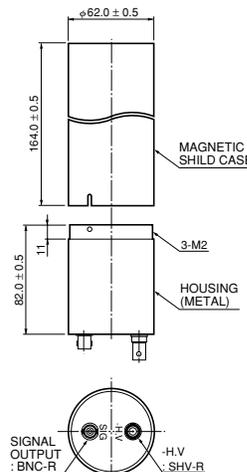


The housing is internally connected to the GND.



TACCA0093EB

(Unit: mm)

16 E1198-05

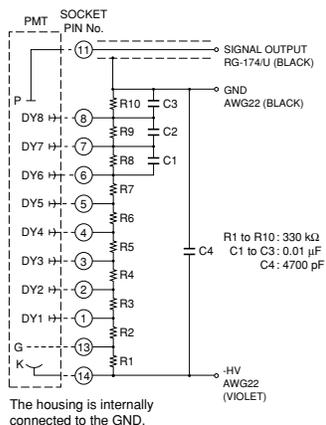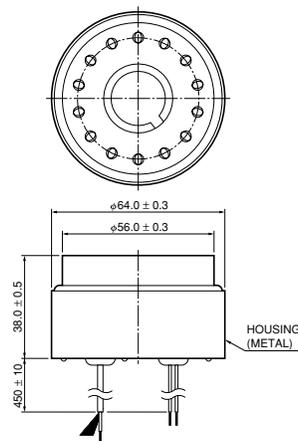

17 E1198-20

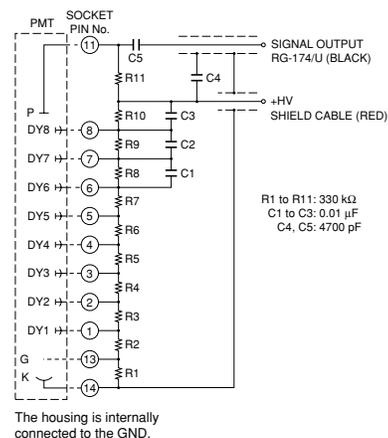
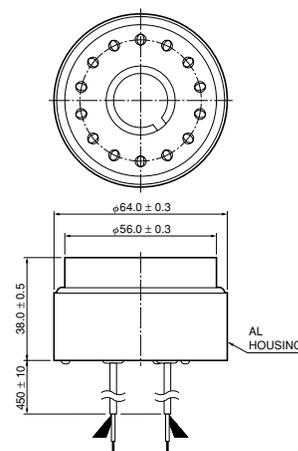


TACCA0221EB


TACCA0223EB

18 E1198-26, E1198-27

E1198-26

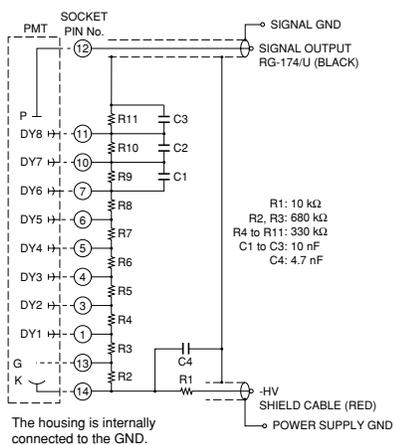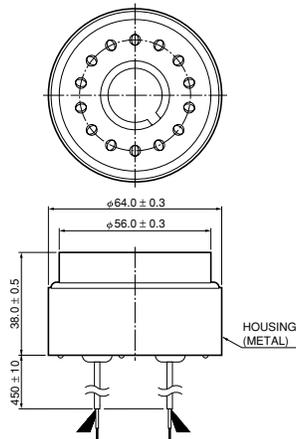

E1198-27


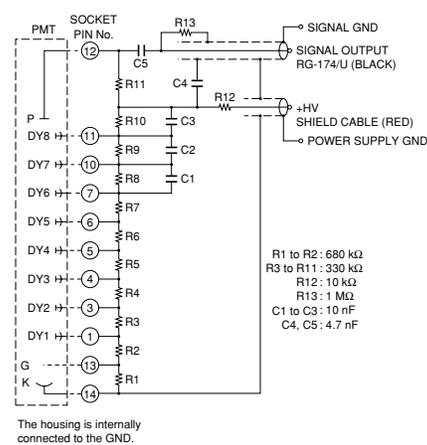


TACCA0224EB

TACCA0225EB


19 E5859, E5859-01

E5859

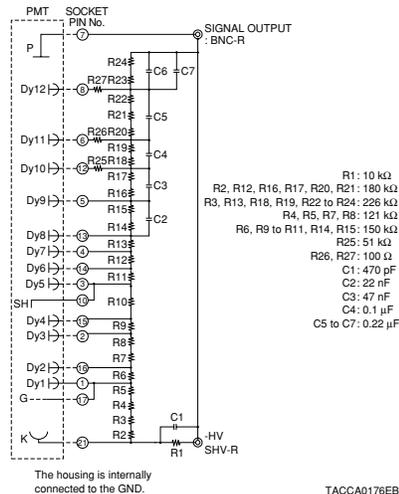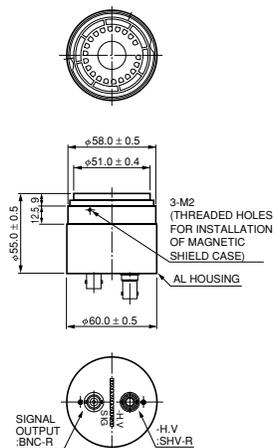


TACCA0176EB

E5859-01

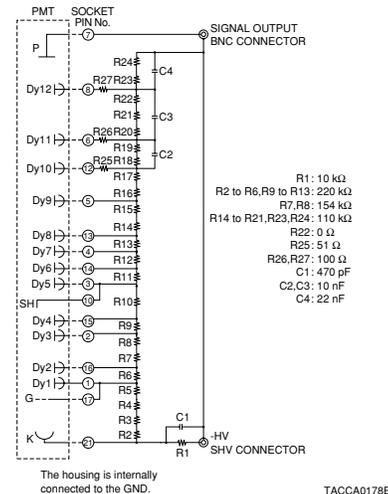


TACCA0178EB

20 E6316-01

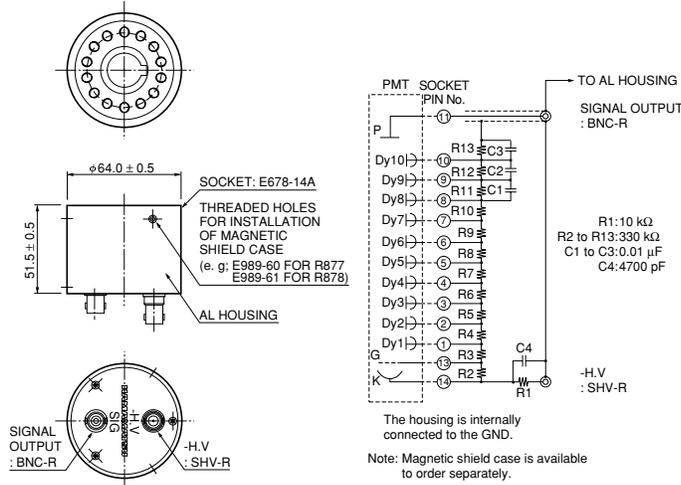

TACCA0089EA


21 E7693, E7694

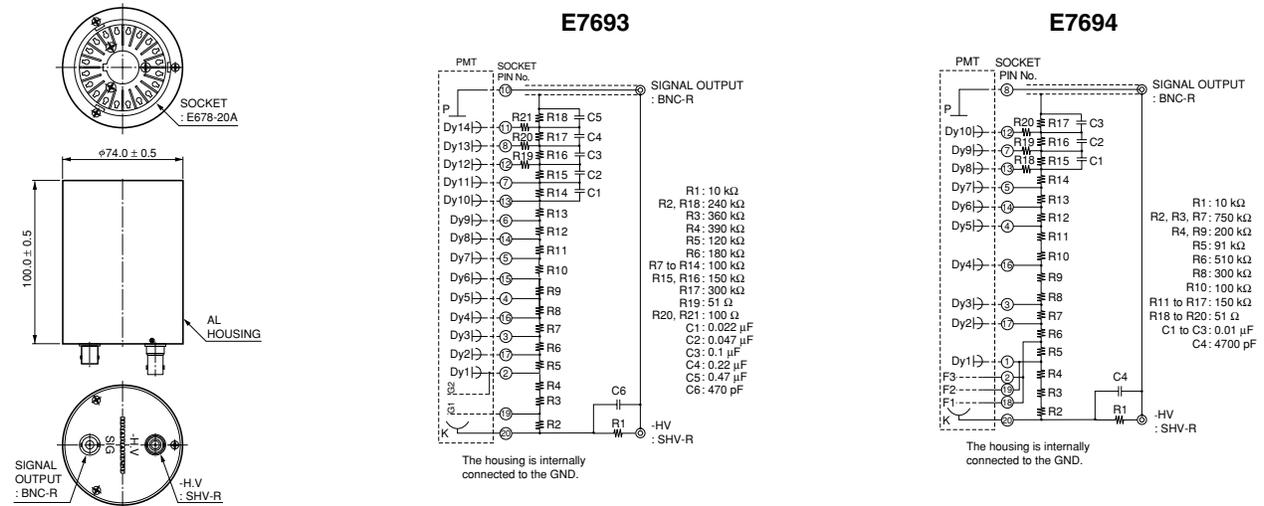

TACCA0227EB


TACCA0229EB

22 E5770

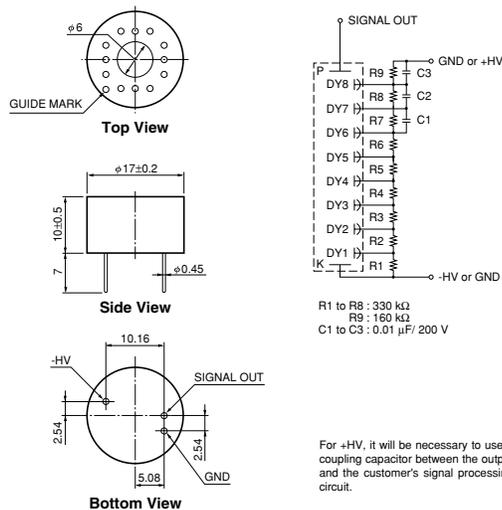

TACCA0057EF


23 E5780

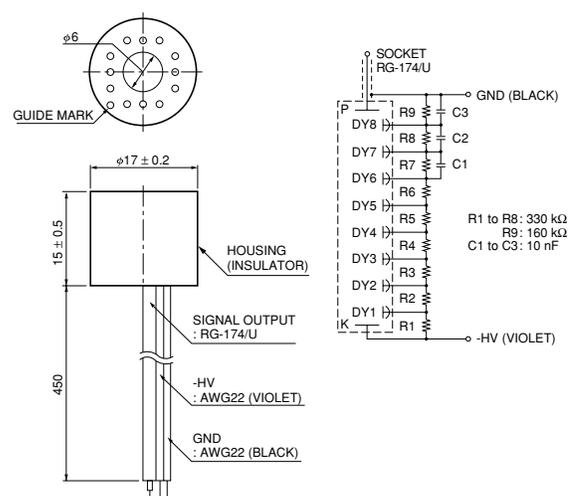


TACCA0060EE

(Unit: mm)


24 E5996

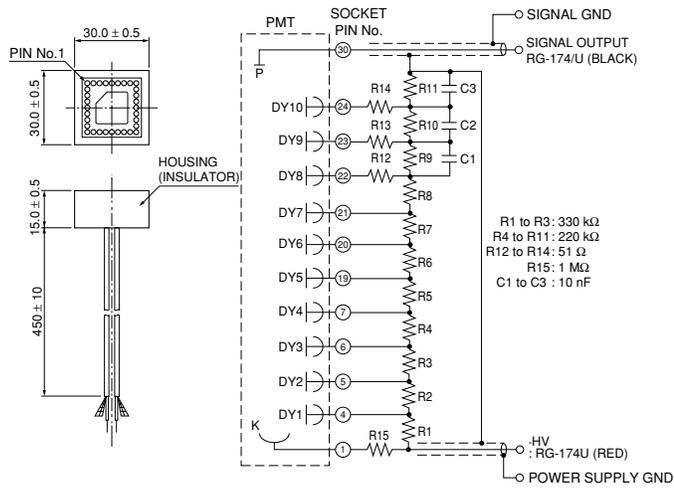


25 E7083

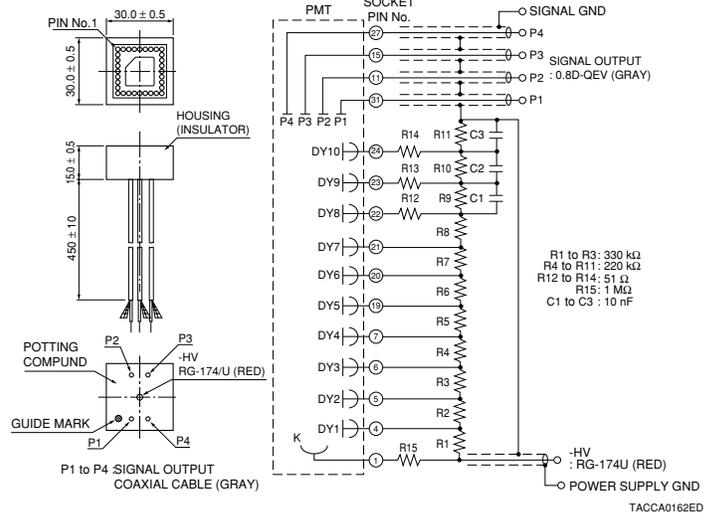

26 E6736

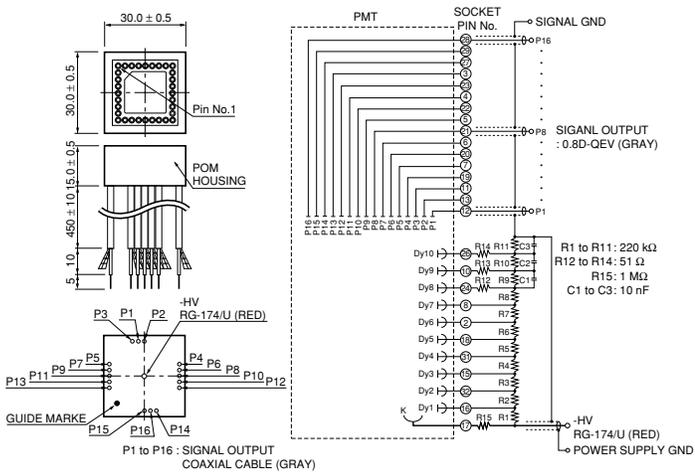


27 E7514

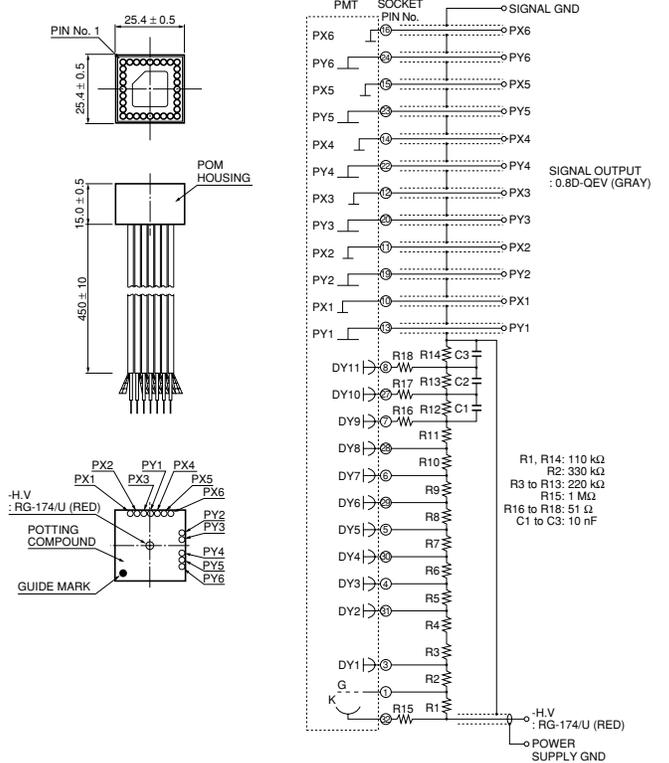

Dimensional Outline


For E678 Series Sockets

E678-11N

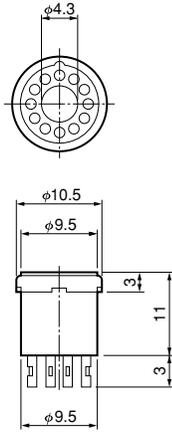


TACCA0043EA

E678-12A

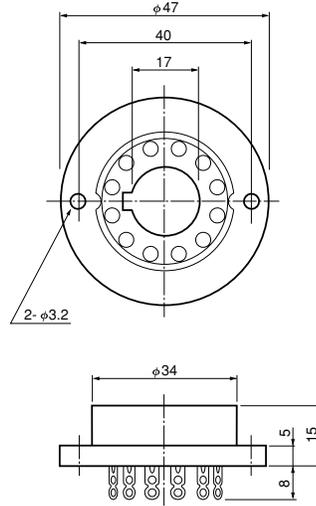


TACCA0009EB

E678-12L

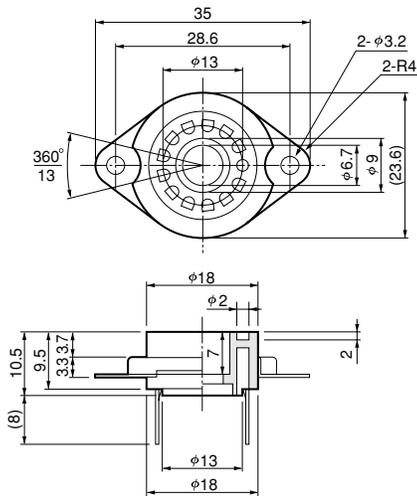


TACCA0047EA

E678-12M

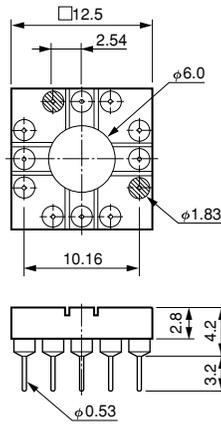


TACCA0164EB

E678-13A

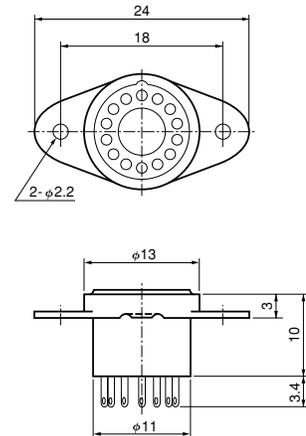


TACCA0005EA

E678-13E

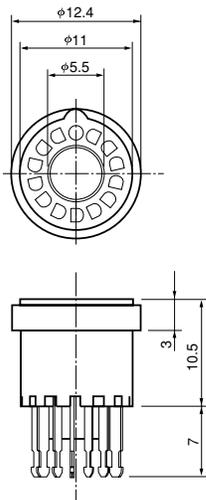


TACCA0013EB

E678-14C

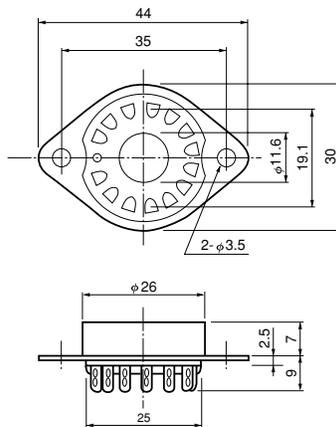

TACCA0004EA


E678-14V

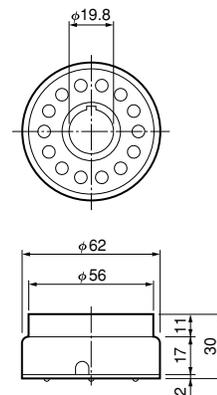

TACCA0200EA


(Unit: mm)

E678-15B

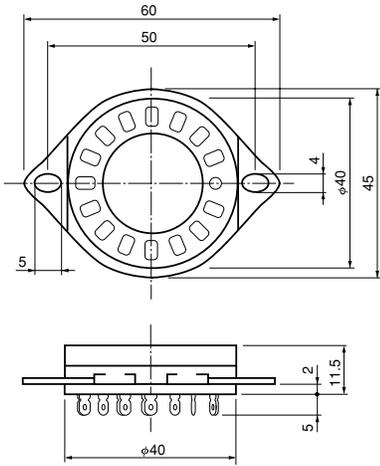


TACCA0201EA

E678-17A

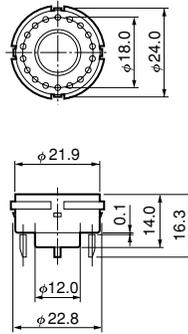


TACCA0046EB

E678-19E

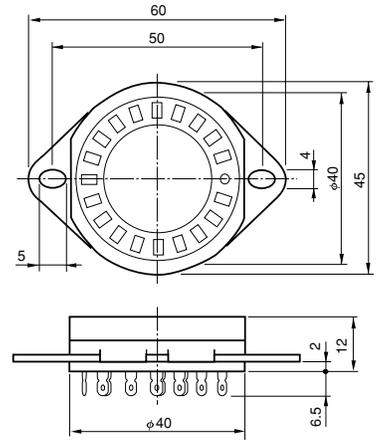


TACCA0202EA

E678-19F

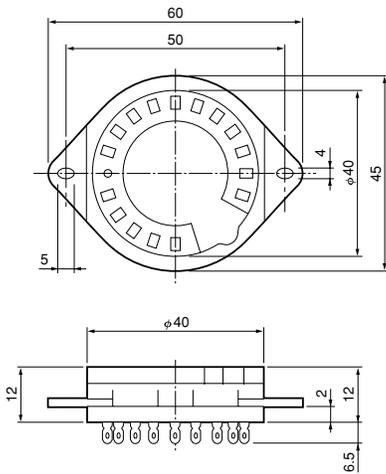


TACCA0203EA

E678-20A

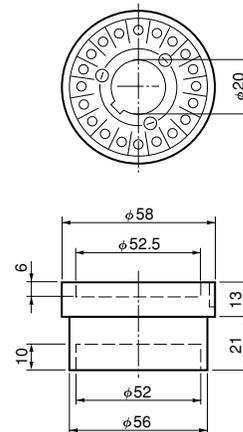


TACCA0003EA

E678-21C

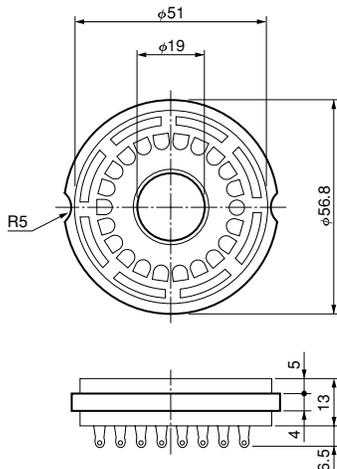

TACCA0066EC

E678-32B

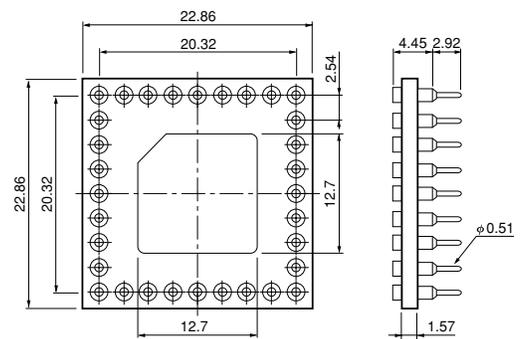

MATERIAL: Glass Epoxy

TACCA0094ED

Index by Type No.

Type Number	Product	Page	Type Number	Product	Page
R329-02	51mm (2") dia. PMT	20	E2183-500	Socket Assembly	52
R331	51mm (2") dia. PMT	21	E2183-501	Socket Assembly	52
R331-05	51mm (2") dia. PMT	20	R2238	76mm (3") dia. PMT	20
R580	38mm (1-1/2") dia. PMT	18	R2238-01	Hybrid Assembly	43
R580-17	38mm (1-1/2") dia. PMT	18	R2248	10mm (3/8") Square PMT	22
R647-01	13mm (1/2") dia. PMT	18	E2253-05	Socket Assembly	52
E678 SERIES	Socket	60, 61	R2256-02	51mm (2") dia. PMT	21
R750	19mm (3/4") dia. PMT	19	H2431-50	Hybrid Assembly	43
R760	13mm (1/2") dia. PMT	19	R2486-02	Position Sensitive PMT	38
R762	19mm (3/4") dia. PMT	19	R2496	10mm (3/8") dia. PMT	18
E849-68	Socket Assembly	52	E2624-04	Socket Assembly	52
E849-90	Socket Assembly	52	E2624-14	Socket Assembly	52
R877	127mm (5") dia. PMT	20	E2924-11	Socket Assembly	52
R877-01	127mm (5") dia. PMT	21	E2924-500	Socket Assembly	52
R960	13mm (1/2") dia. PMT	19	E2979-500	Socket Assembly	52
E974-17	Socket Assembly	52	R3149	51mm (2") dia. PMT	21
E974-19	Socket Assembly	52	H3164-10	Hybrid Assembly	42
E974-22	Socket Assembly	52	H3164-11	Hybrid Assembly	42
R980	38mm (1-1/2") dia. PMT	18	H3165-10	Hybrid Assembly	42
R1166	19mm (3/4") dia. PMT	18	H3165-11	Hybrid Assembly	42
E1198-05	Socket Assembly	52	H3177-50	Hybrid Assembly	43
E1198-07	Socket Assembly	52	H3177-51	Hybrid Assembly	43
E1198-20	Socket Assembly	52	H3178-51	Hybrid Assembly	42
E1198-26	Socket Assembly	52	H3178-61	Hybrid Assembly	42
E1198-27	Socket Assembly	52	R3292-02	Position Sensitive PMT	38
R1250	127mm (5") dia. PMT	20	R3377	51mm (2") dia. PMT	21
R1288A-06	25mm (1") dia. PMT	18	H3378-50	Hybrid Assembly	43
R1306	51mm (2") dia. PMT	20	R3478	19mm (3/4") dia. PMT	18
R1306-15	51mm (2") dia. PMT	21	R3479	19mm (3/4") dia. PMT	19
R1307	76mm (3") dia. PMT	20	R3600-02	508mm (20") dia. PMT	20
R1307-07	76mm (3") dia. PMT	21	R3600-06	Hybrid Assembly	43
R1450	19mm (3/4") dia. PMT	18	H3695-10	Hybrid Assembly	42
R1512	127mm (5") dia. PMT	20	H3695-11	Hybrid Assembly	42
R1538	60mm (2.5") Hexagon PMT	22	R3878	10mm (3/8") dia. PMT	19
R1538-01	60mm (2.5") Hexagon PMT	23	R3886	38mm (1-1/2") dia. PMT	18
R1548-07	25mm (1" Dual) Square PMT	22	R3991-04	19mm (3/4") dia. PMT	18
R1584	127mm (5") dia. PMT	20	R4004	51mm (2") dia. PMT	21
R1635	10mm (3/8") dia. PMT	18	H4022-50	Hybrid Assembly	43
E1761-21	Socket Assembly	52	H4022-51	Hybrid Assembly	43
E1761-22	Socket Assembly	52	R4124	13mm (1/2") dia. PMT	18
R1828-01	51mm (2") dia. PMT	20	R4125	19mm (3/4") dia. PMT	18
R1840	51mm (2") dia. PMT	20	R4141	13mm (1/2") dia. PMT	19
R1924A	25mm (1") dia. PMT	18	R4143	76mm (3") dia. PMT	20
R1924A-01	25mm (1") dia. PMT	19	R4177-04	13mm (1/2") dia. PMT	19
H1949-50	Hybrid Assembly	43	R4177-06	13mm (1/2") dia. PMT	18
H1949-51	Hybrid Assembly	43	R4607-06	51mm (2") dia. PMT	20
E2037-02	Socket Assembly	52	R4885	76mm (3") dia. PMT	21
R2059	51mm (2") dia. PMT	21	R4998	25mm (1") dia. PMT	18
R2076	19mm (3/4") dia. PMT	19	R5133-02	51mm (2") dia. PMT	21
R2083	51mm (2") dia. PMT	20	R5320	25mm (1") dia. PMT	19
R2102	13mm (1/2") Square PMT	22	R5325	19mm (3/4") dia. PMT	18
R2154-02	51mm (2") dia. PMT	20	R5330	38mm (1-1/2") dia. PMT	18

Type Number	Product	Page	Type Number	Product	Page
R5364	19mm (3/4") dia. PMT	19	H6559	Hybrid Assembly	43
R5380	25mm (1") dia. PMT	18	E6572	Socket Assembly	53
R5505-70	25mm (1") dia. PMT	18	R6594	127mm (5") dia. PMT	20
R5505-70	Fine Mesh PMT	22	H6610	Hybrid Assembly	42
R5611	19mm (3/4") dia. PMT	19	H6612	Hybrid Assembly	42
R5611-01	19mm (3/4") dia. PMT	18	H6612-01	Hybrid Assembly	42
E5770	Socket Assembly	53	H6613	Hybrid Assembly	42
E5780	Socket Assembly	53	H6613-01	Hybrid Assembly	42
E5859	Socket Assembly	52	H6614-70	Hybrid Assembly	43
E5859-01	Socket Assembly	52	E6736	Socket Assembly	53
E5859-02	Socket Assembly	52	R7056	28mm (1-1/8") dia. PMT	19
E5859-03	Socket Assembly	52	R7081	254mm (10") dia. PMT	20
R5900U-00-L16	Metal Package PMT	22	R7081-20	254mm (10") dia. PMT	20
R5912	204mm (8") dia. PMT	20	E7083	Socket Assembly	53
R5912-02	204mm (8") dia. PMT	20	R7111	28mm (1-1/8") dia. PMT	18
R5924-70	51mm (2") dia. PMT	20	H7195	Hybrid Assembly	43
R5924-70	Fine Mesh PMT	22	R7250	508mm (20") dia. PMT	20
E5996	Socket Assembly	53	H7260	Hybrid Assembly	22, 43
R6091	76mm (3") dia. PMT	20	R7354	2 π Shape PMT	22
E6133-03	Socket Assembly	52	R7373A-01	2 π Shape PMT	22
E6133-04	Socket Assembly	52	R7375-01	2 π Shape PMT	22
H6152-70	Hybrid Assembly	42	R7400U	Metal Package PMT	22
R6231	51mm (2") dia. PMT	20	R7400U-03	Metal Package PMT	23
R6231-01	51mm (2") dia. PMT	21	R7400U-06	Metal Package PMT	22
R6232	60mm (2.5") dia. PMT	20	H7415	Hybrid Assembly	42
R6232-01	60mm (2.5") dia. PMT	21	H7415-01	Hybrid Assembly	42
R6233	76mm (3") dia. PMT	20	H7416	Hybrid Assembly	42
R6233-01	76mm (3") dia. PMT	21	E7514	Socket Assembly	53
R6234	60mm (2.5") Hexagon PMT	22	R7525	28mm (1-1/8") dia. PMT	18
R6234-01	60mm (2.5") Hexagon PMT	23	H7546B	Hybrid Assembly	22, 43
R6235	76mm (3") Hexagon PMT	22	R7600U	Metal Package PMT	22
R6235-01	76mm (3") Hexagon PMT	23	R7600U-00-M4	Metal Package PMT	22
R6236	60mm Square PMT	22	R7600U-03	Metal Package PMT	23
R6236-01	60mm Square PMT	23	E7693	Socket Assembly	52
R6237	76mm (3") Square PMT	22	E7694	Socket Assembly	52
R6237-01	76mm (3") Square PMT	23	E7694-01	Socket Assembly	52
E6316-01	Socket Assembly	52	R7723	51mm (2") dia. PMT	20
H6410	Hybrid Assembly	43	R7724	51mm (2") dia. PMT	21
R6427	28mm (1-1/8") dia. PMT	18	R7725	51mm (2") dia. PMT	21
R6504-70	64mm (2.5") dia. PMT	20	R7761-70	38mm (1-1/2") dia. PMT	18
R6504-70	Fine Mesh PMT	22	R7761-70	Fine Mesh PMT	22
H6520	Hybrid Assembly	42	R7899	25mm (1") dia. PMT	19
H6520-01	Hybrid Assembly	42	R7899-01	25mm (1") dia. PMT	18
H6521	Hybrid Assembly	43	R8055	332mm (13") dia. PMT	20
H6522	Hybrid Assembly	43	H8135	Hybrid Assembly	42
H6524	Hybrid Assembly	42	R8143	2 π Shape PMT	22
H6524-01	Hybrid Assembly	42	H8318-70	Hybrid Assembly	43
H6525	Hybrid Assembly	43	H8409-70	Hybrid Assembly	42
H6526	Hybrid Assembly	43	H8500	Hybrid Assembly	22, 43
H6527	Hybrid Assembly	43	R8520U-00-C12	Position Sensitive PMT	38
H6528	Hybrid Assembly	43	H8643	Hybrid Assembly	42
H6533	Hybrid Assembly	42	H8711	Hybrid Assembly	22, 43

CAUTIONS AND WARRANTY

WARNING



Take sufficient care to avoid an electric shock hazard

A high voltage used in photomultiplier tube operation may present a shock hazard. Photomultiplier tubes should be installed and handled only by qualified personnel that have been instructed in handling of high voltages. Designs of equipment utilizing these devices should incorporate appropri-

ate interlocks to protect the operator and service personnel. The metal housing of the Metal Package PMT R7400 series, R5900 series and R7600 series are connected to the photocathode (potential) so that it becomes a high voltage potential when the product is operated at a negative high voltage (anode grounded).

PRECAUTIONS FOR USE

● Handle tubes with extreme care

Photomultiplier tubes have evacuated glass envelopes. Allowing the glass to be scratched or to be subjected to shock can cause cracks. Extreme care should be taken in handling, especially for tubes with graded sealing of synthetic silica.

● Keep faceplate and base clean

do not touch the faceplate and base with bare hands. Dirt and fingerprints on the faceplate cause loss of transmittance and dirt the base may cause ohmic leakage. Should they become soiled, wipe it clean using alcohol.

● Do not expose to strong light

Direct sunlight and other strong illumination may cause damage the Photocathode. They must not be allowed to strike the photocathode, even when the tube is not operated.

● Handling of tubes with a glass base

A glass base (also called button stem) is less rugged than a plastic base, so care should be taken in handling this type of

tube. For example, when fabricating the voltage-divider circuit, solder the divider resistors to socket lugs while the tube is inserted in the socket.

● Cooling of tubes

When cooling a photomultiplier tube, the photocathode section is usually cooled. However, if you suppose that the base is also cooled down to -30°C or below, please consult our sales office in advance.

● Helium permeation through silica bulb

Helium will permeate through the silica bulb, leading to an increase in noise. Avoid operating or storing tubes in an environment where helium is present.

Data and specifications listed in this catalog are subject to change due to product improvement and other factors. before specifying any of the types in your production equipment, please consult our sales office.

WARRANTY

All Hamamatsu photomultiplier tubes and related products are warranted to the original purchaser for a period of 12 months following the date of shipment. The warranty is limited to repair or replacement of any defective material due to defects in workmanship or materials used in manufacture.

A: Any claim for damage of shipment must be made directly to the delivering carrier within five days.

B: Customers must inspect and test all detectors within 30 days after shipment. Failure to accomplish said incoming inspection shall limit all claims to 75 % of invoice value.


C: No credit will be issued for broken detectors unless in the opinion of Hamamatsu the damage is due to a bulb crack or a crack in a graded seal traceable to a manufacturing defect.

D: No credit will be issued for any detector which in the judgment of Hamamatsu has been damaged, abused, modified or whose serial number or type number have been obliterated or defaced.

E: No detectors will be accepted for return unless permission has been obtained from Hamamatsu in writing, the shipment has been returned prepaid and insured, the detectors are packed in their original box and accompanied by the original data sheet furnished to the customer with the tube, and a full written explanation of the reason for rejection of each detector.

F: When products are used at a condition which exceeds the specified maximum ratings or which could hardly be anticipated, Hamamatsu will not be the guarantor of the products.

Typical Photocathode Spectral Response and Emission Spectrum of Scintillators

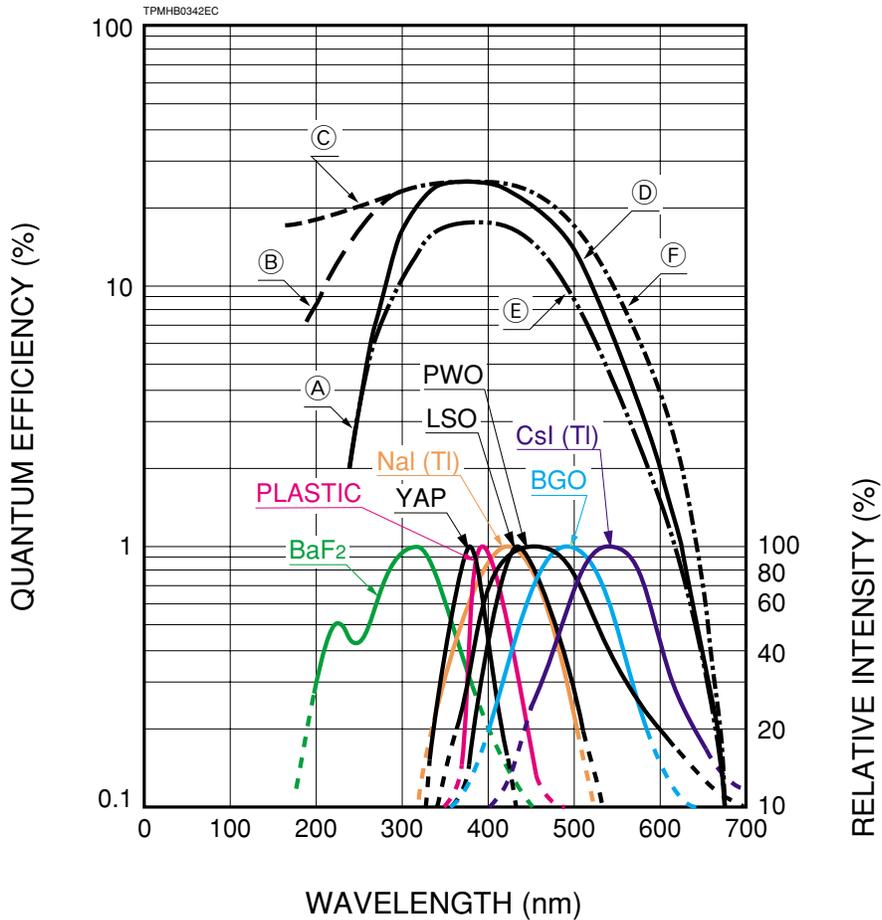

- (A): Borosilicate Glass
- (B): UV Glass
- (C): Synthetic Silica
- (D): Bialkali Photocathode
- (E): High Temp. Bialkali Photocathode
- (F): Extended Green bialkali photocathode

HAMAMATSU

HAMAMATSU PHOTONICS K.K., Electron Tube Division

314-5, Shimokanzo, Toyooka-village, Iwata-gun, Shizuoka-ken, 438-0193, Japan

Telephone: (81)539/62-5248, Fax: (81)539/62-2205

<http://www.hamamatsu.com>

Main Products

Electron Tubes

Photomultiplier Tubes
Light Sources
Microfocus X-ray Sources
Image Intensifiers
X-ray Image Intensifiers
Microchannel Plates
Fiber Optic Plates

Opto-semiconductors

Si Photodiodes
Photo IC
PSD
InGaAs PIN photodiodes
Compound semiconductor photosensors
Image sensors
Light emitting diodes
Application products and modules
Optical communication devices
High energy particle/X-ray detectors

Imaging and Processing Systems

Video Cameras for Measurement
Image Processing Systems
Streak Cameras
Optical Measurement Systems
Imaging and Analysis Systems

Sales Offices

ASIA:

HAMAMATSU PHOTONICS K.K.
325-6, Sunayama-cho,
Hamamatsu City, 430-8587, Japan
Telephone: (81)53-452-2141, Fax: (81)53-456-7889

U.S.A.:

HAMAMATSU CORPORATION
Main Office
360 Foothill Road, P.O. BOX 6910,
Bridgewater, N.J. 08807-0910, U.S.A.
Telephone: (1)908-231-0960, Fax: (1)908-231-1218
E-mail: usa@hamamatsu.com

Western U.S.A. Office:

Suite 110, 2875 Moorpark Avenue
San Jose, CA 95128, U.S.A.
Telephone: (1)408-261-2022, Fax: (1)408-261-2522
E-mail: usa@hamamatsu.com

United Kingdom:

HAMAMATSU PHOTONICS UK LIMITED
Main Office
2 Howard Court, 10 Tewin Road Welwyn Garden City
Hertfordshire AL7 1BW, United Kingdom
Telephone: 44-(0)1707-294888, Fax: 44-(0)1707-325777
E-mail: info@hamamatsu.co.uk

South Africa Office:

PO Box 1112, Buccleuch 2066,
Johannesburg, South Africa
Telephone/Fax: (27)11-802-5505

France, Portugal, Belgium, Switzerland, Spain:

HAMAMATSU PHOTONICS FRANCE S.A.R.L.
8, Rue du Saule Trapu, Parc du Moulin de Massy,
91882 Massy Cedex, France
Telephone: (33)1 69 53 71 00
Fax: (33)1 69 53 71 10
E-mail: infos@hamamatsu.fr

Swiss Office:

Richtersmattweg 6a
CH-3054 Schüpfen, Switzerland
Telephone: (41)31/879 70 70,
Fax: (41)31/879 18 74
E-mail: swiss@hamamatsu.ch

Belgian Office:

7, Rue du Bosquet
B-1348 Louvain-La-Neuve, Belgium
Telephone: (32)10 45 63 34
Fax: (32)10 45 63 67
E-mail: epirson@hamamatsu.com

Spanish Office:

Centro de Empresas de Nuevas Tecnologías
Parque Tecnológico del Valles
08290 CERDANYOLA, (Barcelona) Spain
Telephone: (34)93 582 44 30
Fax: (34)93 582 44 31
E-mail: spain@hamamatsu.com

Germany, Denmark, Netherland, Poland:

HAMAMATSU PHOTONICS DEUTSCHLAND GmbH
Arzbergerstr. 10,
D-82211 Herrsching am Ammersee, Germany
Telephone: (49)8152-375-0, Fax: (49)8152-2658
E-mail: info@hamamatsu.de

Danish Office:

Skyttehusgade 36, 1tv. DK-7100 Vejle, Denmark
Telephone: (45)4346/6333, Fax: (45)4346/6350
E-mail: lkoldbaek@hamamatsu.de

Netherlands Office:

PO Box 50.075, 1305 AB Almere The Netherland
Telephone: (31)36-5382123, Fax: (31)36-5382124
E-mail: info@hamamatsu.nl

Poland Office:

02-525 Warsaw, 8 St. A. Boboli Str., Poland
Telephone: (48)22-660-8340, Fax: (48)22-660-8352
E-mail: info@hamamatsu.de

North Europe and CIS:

HAMAMATSU PHOTONICS NORDEN AB
Smidesvägen 12
SE-171 41 Solna, Sweden
Telephone: (46)8-509-031-00, Fax: (46)8-509-031-01
E-mail: info@hamamatsu.se

Russian Office:

Riverside Towers
Kosmodamianskaya nab. 52/1, 14th floor
RU-113054 Moscow, Russia
Telephone/Fax: (7)095 411 51 54
E-mail: info@hamamatsu.ru

Italy:

HAMAMATSU PHOTONICS ITALIA S.R.L.
Strada della Moia, 1/E
20020 Arese, (Milano), Italy
Telephone: (39)02-935 81 733, Fax: (39)02-935 81 741
E-mail: info@hamamatsu.it

Rome Office:

Viale Cesare Pavese, 435, 00144 Roma, Italy
Telephone: (39)06-50513454, Fax: (39)06-50513460
E-mail: inforoma@hamamatsu.it

SEPT. 2004 REVISED

Information in this catalog is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omission. Specifications are subject to change without notice. No patent rights are granted to any of the circuits described herein.

© 2004 Hamamatsu Photonics K.K.

Quality, technology, and service are part of every product.

TPMO0007E01
SEPT. 2004 IP
Printed in Japan (6,000)