

OUTDOOR BOOTH KS-14611 AIRLIGHT

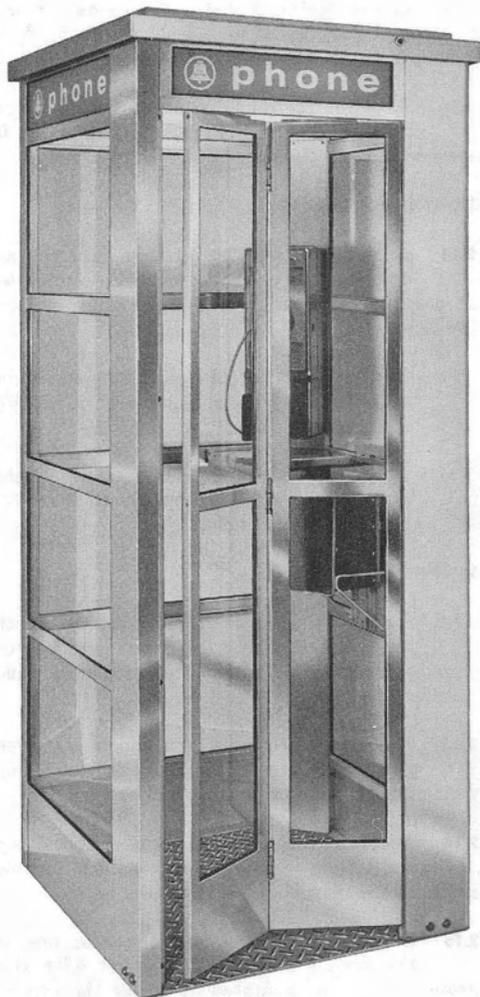


Fig. 1—KS-14611 Airlight Booth

1. GENERAL

1.01 Information in this section was formerly contained in Sections 508-352-100, 508-352-300, and 508-352-800 which are hereby canceled.

1.02 The KS-14611 booth (Fig. 1) is an outdoor aluminum and glass phone booth designed for single installation only.

1.03 This booth is designed primarily for standup service; however, a KS-19425, List 11 seat assembly can be used if desired.

1.04 The KS-19580 Airlight II Booth is a direct replacement for the KS-14611 (MD) booth.

2. IDENTIFICATION

BASIC BOOTH (Fig. 2)

2.01 KS-14611, List 3 booth is constructed of satin anodized aluminum, finished with one of the following:

- KS-14611, List 60—Red
- KS-14611, List 61—Blue
- KS-14611, List 62—Green
- KS-14611, List 63—Clear

2.02 The overall dimensions of the booth are:

- Height—86-1/8 inches
- Width—35-7/16 inches at roof, 33-1/2 inches at base
- Depth—35-7/16 inches at roof, 33-1/2 inches at base

2.03 The door consists of two vertical sections, each containing two clear safety glass panels. The door is self-closing and folds along the right wall when opened.

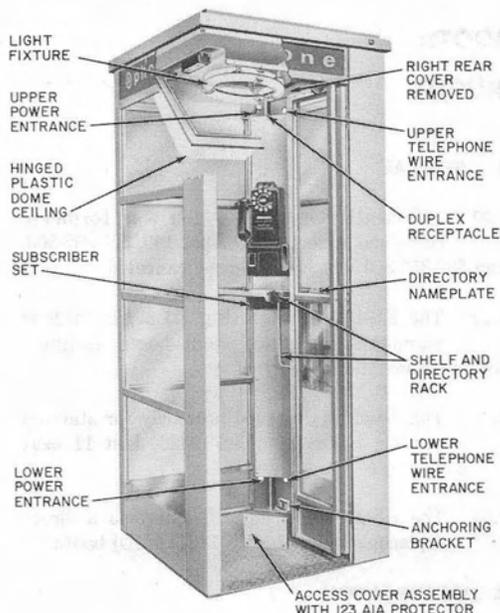


Fig. 2—KS-14611 Booth Showing Individual Features

PANELS

Door, Side, and Rear Panels

2.04 Door, side, and rear panels are available as described in Table A.

Sign Panels

2.05 Sign panels and blanks are available as described in Table B.

Bottom Panels

2.06 Bottom panels are available as described in Table C.

LIGHT FIXTURE

2.07 The booth and phone signs are illuminated by a KS-19207, List 4 light fixture (see Section 508-820-100). This light fixture replaces the older B-185379 light fixture assembly.

2.08 The ceiling is equipped with a B-185369 plastic dome designed to cover the light fixture and exclude dirt and insects.

DOME STOP

2.09 The KS-20224 dome stop (Fig. 3), a spring loaded device, is designed to mount along the door track (Fig. 4) to prevent the dome from falling when the fasteners are released.

2.10 To lower the dome, push up on the dome stop as shown in Fig. 5. After dome is lowered, release and stop.

LIGHT CONTROL UNIT

2.11 A KS-19261, List 1 or List 2 light control unit may be used to switch the lamps on at darkness and off at daylight (see Section 508-825-100).

- KS-19261, List 1 provides automatic light control for booths equipped with KS-19207, List 4 light fixture.
- KS-19261, List 2 provides automatic light control for booths equipped with B-185379 light fixture assembly.

WIRING

2.12 Holes at the top and bottom of the booth provide access for telephone and power wiring, permitting either overhead or underground entrances.

2.13 The right-rear column of the booth is divided into two channels; the right for telephone wiring and the left for power wiring.

2.14 Access covers (Fig. 2), located at the top and bottom of the right-rear column, provide access to the channels from inside the booth.

2.15 A 123A1A protector is mounted on one of the access covers. The cover with the protector may be mounted at either the top or the bottom. In areas subjected to snow or heavy rainfall, the upper location is recommended.

2.16 This booth is furnished wired for subscriber set and for coin collector/telephone set connections.

TABLE A
DOOR, SIDE, AND REAR PANELS
AND GLAZING STRIPS

SPEC NO.	LIST NO.	DESCRIPTION		LOCATION	GLAZING STRIP
KS-14611	18	Tempered Glass	7/32-in. thk	Door	B-179367-4
KS-19580	10		7/32-in. thk	Side or Rear	B-685410-3
	32	Aluminum Blank			
	93	Porcelain Enamel	Blue		B-685411-3
	94		Gray		
	95		Red		

TABLE B
SIGN PANELS AND GLAZING STRIPS

SPEC NO.	LIST NO.	DESCRIPTION		LOCATION	GLAZING STRIP
		LETTERS	BACKGROUND		
KS-14611	101	White	Blue	Front	B-179367-1
	102	Blue	White		
	105	None	White		
	106	None	Blue		
	103	White	Blue	Rear and Sides	B-179367-2
	104	Blue	White		
	107	None	White		
	108	None	Blue		
	35	Solid Aluminum Blank			

TABLE C
BOTTOM PANELS

SPEC NO.	LIST NO.	DESCRIPTION	
KS-19580	38	Side	Short
	39	Rear	
	40	Side	Solid
	41	Rear	

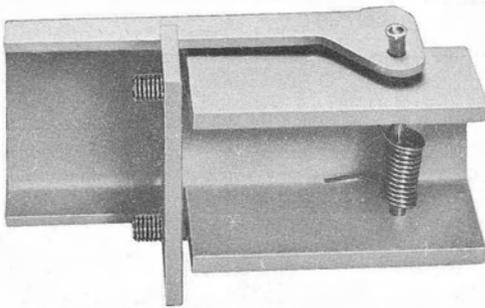


Fig. 3—KS-20224 Dome Stop

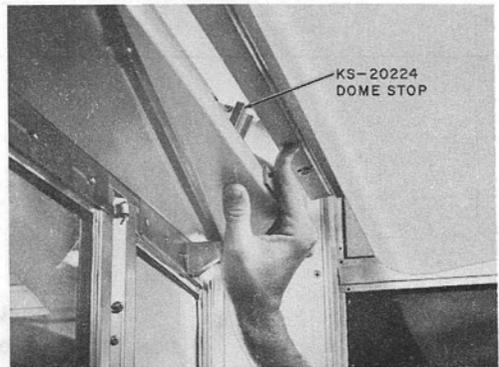


Fig. 5—Releasing Dome Stop

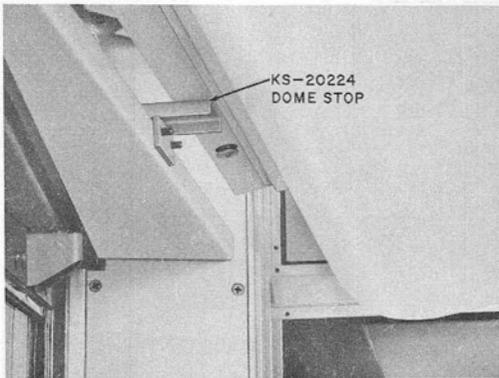


Fig. 4—KS-20224 Dome Stop Installed

COIN COLLECTOR/TELEPHONE SET AND SUBSCRIBER SET

2.17 The right-rear corner panel is designed to mount either a 200-type coin collector or a 1A/1C type coin telephone set. No additional backboard is necessary.

2.18 A hinged mounting bracket is located under the corner shelf for mounting a subscriber set (Fig. 6).

FLOOR

2.19 The KS-14611 booth is equipped with a B-684719-1 aluminum treadplate floor.

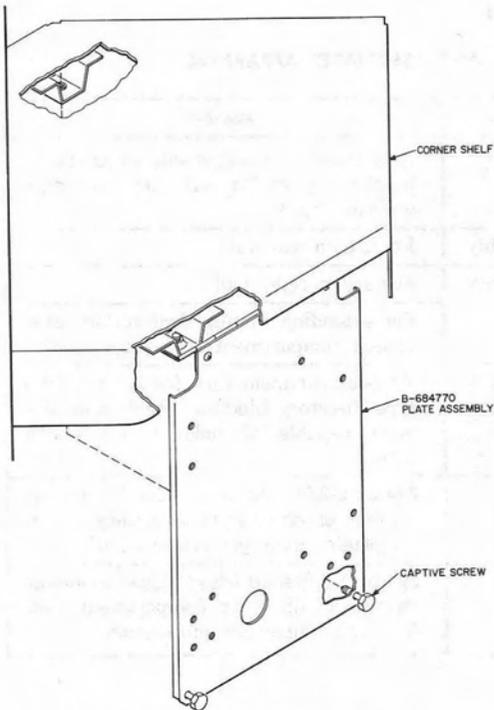


Fig. 6—Subscriber Set Mounting Bracket

- 2.20** Four adjustable brackets (Fig. 7) are provided to permit leveling and anchoring.

SHELF AND DIRECTORY ARRANGEMENTS

- 2.21** Shelf assemblies, directory racks, and associated apparatus are listed in Table D and shown in Fig. 8 through 10.

SEAT

- 2.22** A KS-19425, List 11 seat assembly (Fig. 11) may be used if desired.
- 2.23** A KS-19425, List 12 mounting plate (Fig. 11) must be used for mounting the seat.

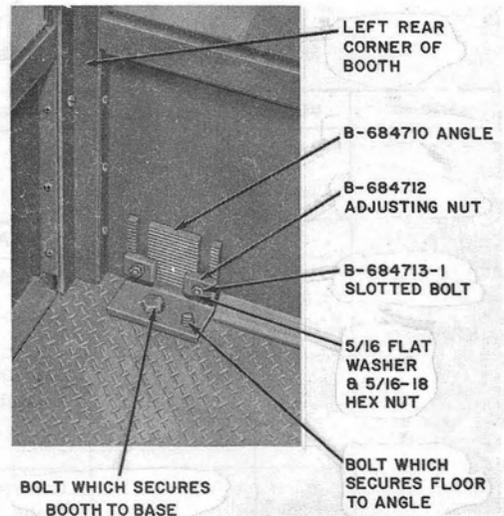


Fig. 7—Booth Anchoring Bracket

CARD FRAME

- 2.24** A KS-19928, List 2 card frame is used in this booth. Refer to Section 508-811-100 for complete information on the card frame.

POWER CORD ASSEMBLIES

- 2.25** KS-19580, List 30 power cord assembly (Fig. 12) is available for overhead power.
- 2.26** KS-19580, List 31 power cord group (Fig. 13) is available for ground level power.

3. INSTALLATION

- 3.01** Booth location should be:

- Within full view of public
- Readily accessible to customer
- Free of such hazards as broken or uneven pavements
- Spaced with a minimum clearance of 6 inches from property lines and buildings

TABLE D

SHELF ASSEMBLIES, DIRECTORY RACKS, AND ASSOCIATED APPARATUS

SPEC NO.	LIST NO.	FIG. NO.	DESCRIPTION	REMARKS
KS-19580	21	8, 9, and 10	Shelf	Corner shelf. Furnished with all KS-14611 booths. Contains sub set mounting bracket (Fig. 6).
	22	8 and 10	Shelf Assembly	For use on rear wall
	23	9 and 10	Shelf Assembly	For use on right wall
	24	8 and 10	Apparatus Blank	For extending writing shelf surface over unused compartment of directory rack.
	25	8, 9, and 10	Directory Rack Assembly	Two-compartment rack for holding OD-type directory binders. Each compartment capable of holding one 3-inch binder.
	26		Nameplate Blank Assembly	3/4 by 2-3/4 hard brass. Used to mount on rear of directory compartment rack for placing directory information.
	27		Nameplate Blank Assembly	3/4 by 1-3/8 hard brass. Used to mount on rear of directory compartment rack for placing directory information.

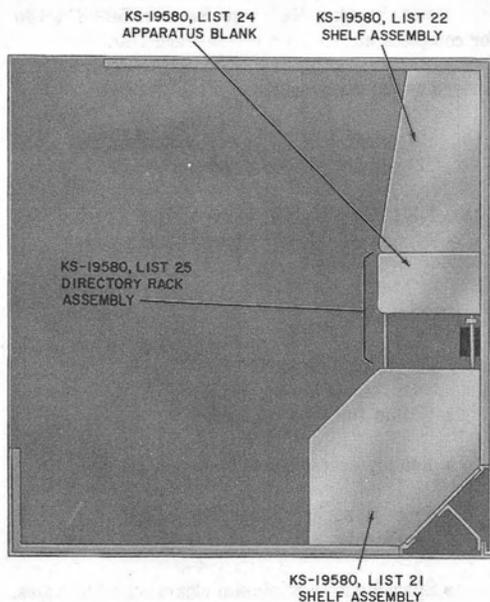


Fig. 8—Rear Wall Shelf Arrangement

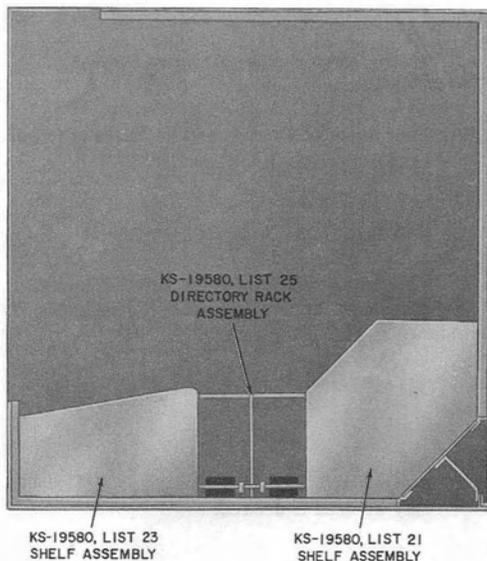


Fig. 9—Right Wall Shelf Arrangement

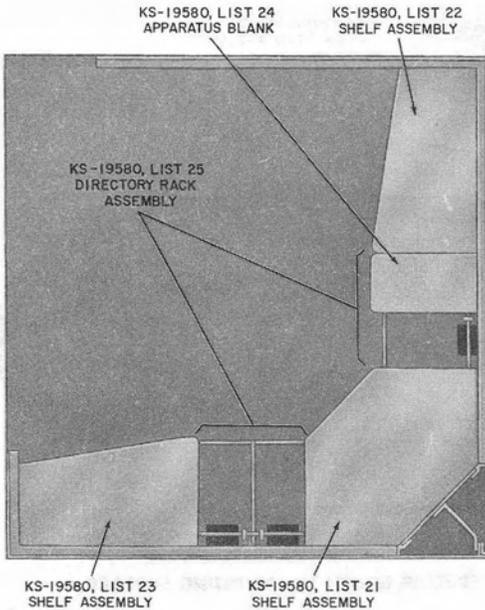


Fig. 10—Combination Shelf Arrangement

- Placed with as little step-up as possible and still maintaining proper drainage

3.02 The KS-14611 booth requires anchoring at all installations.

FOUNDATION TEMPLATE

3.03 When necessary to provide a concrete base, a KS-19580, List 28 foundation template (Fig. 14) is used. Install the template as follows:

- Prepare a form 40 inches square with an inside depth of 10 inches (Fig. 14).
- Tamp 6 inches of cinders or gravel in the bottom of form.
- Position the template in the form on wooden blocks so that the top of four mounting inserts will be flush with concrete base as shown in Fig. 14.

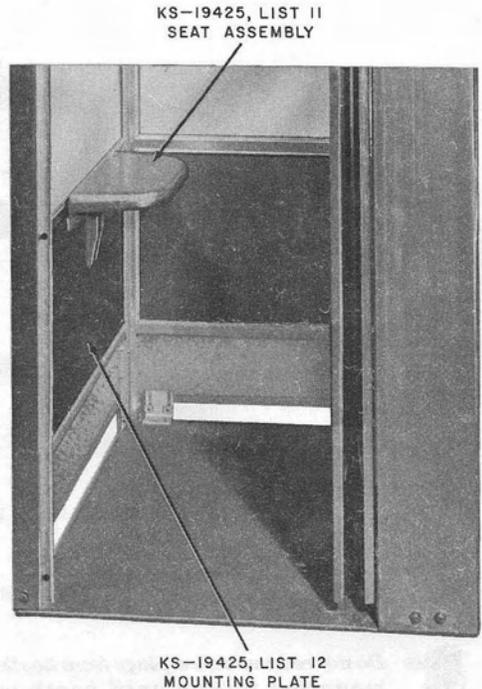


Fig. 11—KS-19425, List 11 Seat Assembly With KS-19425, List 12 Mounting Plate

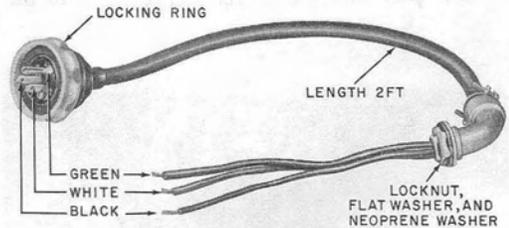


Fig. 12—KS-19580, List 30 Power Cord Assembly



Nail holes are provided in the four corners of the template for fastening the wooden blocks. Use the blocks to level and support the template at the proper height.

- If underground power and telephone wires are to be used, provide for holes in the

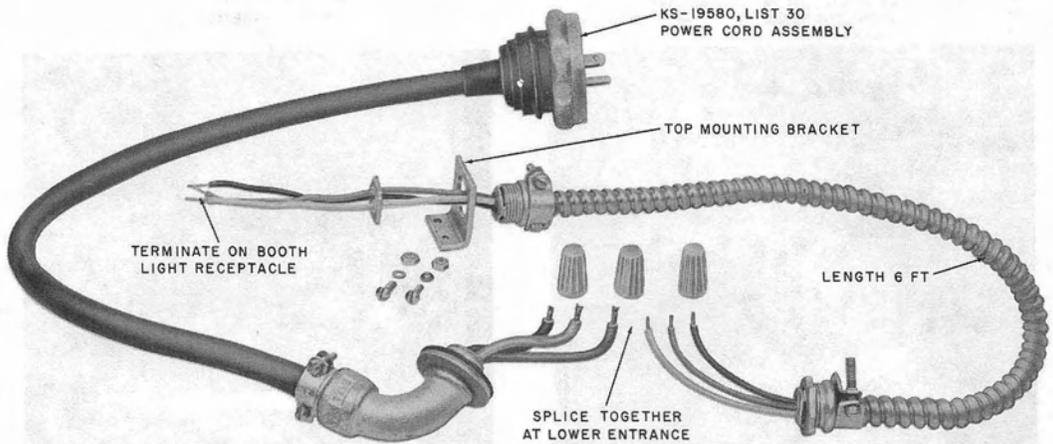


Fig. 13—KS-19580, List 31 Power Cord Group

concrete base at the positions of corresponding holes in the template.



Do not remove screw plugs from booth mounting inserts until booth is installed. Their sole purpose is to prevent dirt from filling mounting holes.

- (e) Pour concrete around the template to fill the form.

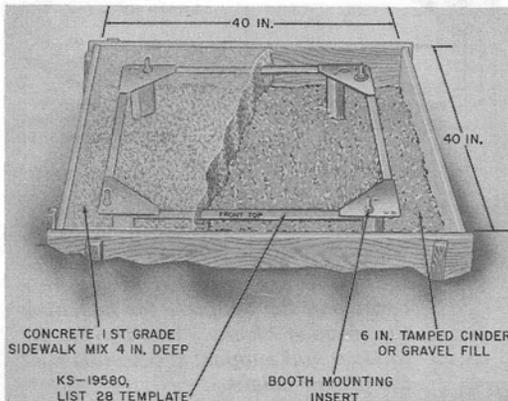


Fig. 14—Concrete Base Preparation with KS-19580, List 28 Template

SECURING BOOTH TO MOUNTING SURFACE

3.04 Secure booth as follows:

- (a) If a KS-19580, List 28 foundation template is used, remove insert plugs from template and secure anchor brackets (Fig. 7) of booth to template using four 3/8-16 by 1-1/4 hex head bolts, four 3/8-inch lockwashers, and four 3/8-inch flatwashers.
- (b) If a KS-19580, List 28 foundation template is not used, and the booth is to be mounted on concrete, perform the following operations:
 - (1) Mark the locations for four mounting holes.
 - (2) Drill the four holes to accept machine bolt anchors for 3/8-16 by 1-1/4 bolts. See Section on Machine Bolt Anchors.
 - (3) Install the fasteners.
 - (4) Secure anchor brackets of booth to fasteners using four 3/8-16 by 1-1/4 hex head bolts, four 3/8-inch lockwashers, and four 3/8-inch flatwashers.
- (c) If booth is to be mounted on a wooden floor, perform the following operations:
 - (1) Mark the location for four mounting holes.

- (2) Drill four lead holes to accommodate 5/16 by 2-1/2 inch lag screws.
- (3) Secure booth to floor using the four 5/16 by 2-1/2 inch lag screws, four 5/16-inch lockwashers, and four 5/16-inch flatwashers.
- (d) Adjust the anchor brackets (Fig. 7) if necessary, and ensure that the booth is level.

DOOR REQUIREMENTS

- 3.05** After anchoring and leveling booth, check door operation per Part 4.

TELEPHONE WIRING



Aerial wire spans fastened to booth should not exceed 25 feet.

First Attachment

- 3.06** Attach drop wire hook (Fig. 15) or corner bracket (Fig. 16) (whichever is required) on right-rear column adjacent to the entrance hole as follows:

A. Drop Wire Hook

- (1) Secure drop wire hook to clinch nut (provided with booth) using one 1/4-20 by 3/4 FHM screw, one 1/4-inch flatwasher, and one 1/4-inch lockwasher.

B. Corner Bracket

- (1) Secure the corner bracket to the threaded clinch nut using one 1/4-20 by 3/4 Phillips RHM screw.
- (2) Using the bracket as a template, drill a clearance hole for another 1/4-inch screw.
- (3) Further secure the bracket to the booth using one 1/4-20 by 3/4 Phillips RHM screw, one 1/4-inch flatwasher, one 1/4-inch lockwasher, and one 1/4-inch hex nut.

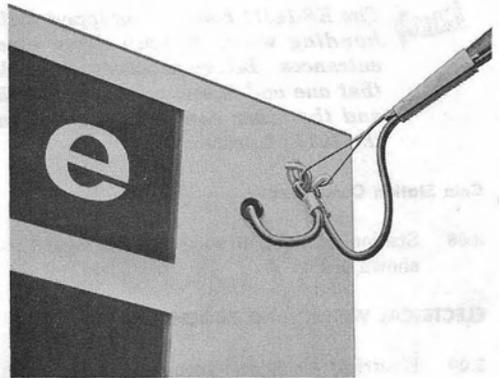


Fig. 15—Drop Wire Hook For First Attachment

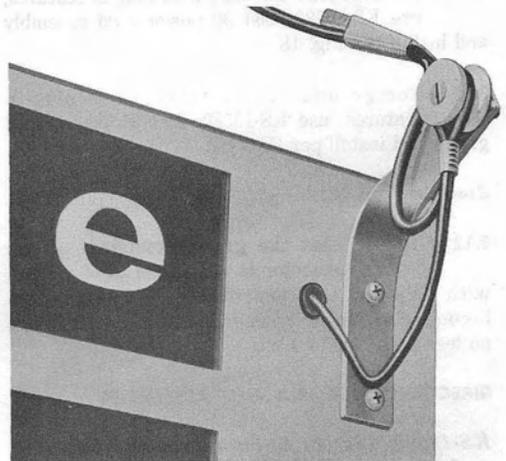


Fig. 16—Corner Bracket For First Attachment

Drop Wire

- 3.07** Feed drop wire through entrance hole and terminate on 123A1A station protector.



The protector is located in the top of the right-rear corner behind an access cover; however, it may be moved to the bottom of the right-rear corner if ground level or underground entrance is used.

THINK *The KS-14611 booth is equipped with bonding wires at both drop wire entrances. Before proceeding, check that one end is secured to the booth and the other end is terminated on the 123A1A protector.*

Coin Station Connections

3.08 Station connection wires are furnished as shown in Fig. 17.

ELECTRICAL WIRING AND GROUNDING

3.09 Electrical wiring and grounding of the booth is covered in Section 508-100-100.

Wiring

3.10 For overhead entrance with plug-in features, use KS-19580, List 30 power cord assembly and install per Fig. 18.

3.11 For ground level entrance with plug-in features, use KS-19580, List 31 power cord group and install per Fig. 19.

Grounding

3.12 Ensure that the ground terminal of the station protector is connected to the booth with bonding wire provided. If bonding wire becomes broken or damaged, use a suitable wire no less than No. 14 AWG.

DIRECTORY RACK AND SHELF ASSEMBLIES

KS-19580, List 21 Shelf Assembly (Fig. 8, 9, and 10)

3.13 Secure with four 10-32 by 1/2 Phillips FHM screws and four No. 10 CSK washers.

KS-19580, List 22 Shelf Assembly (Fig. 8 and 10)

3.14 Install with four 10-32 by 1/2 Phillips FHM screws and four No. 10 CSK washers.

KS-19580, List 23 Shelf Assembly (Fig. 9 and 10)

3.15 Install with four 10-32 by 1/2 Phillips FHM screws and four No. 10 CSK washers.

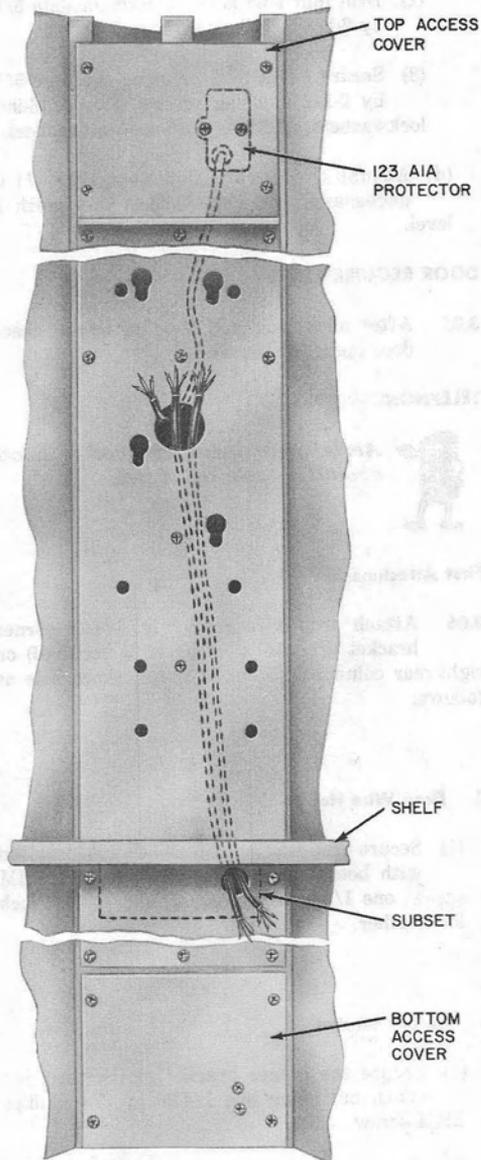


Fig. 17—Station Wiring

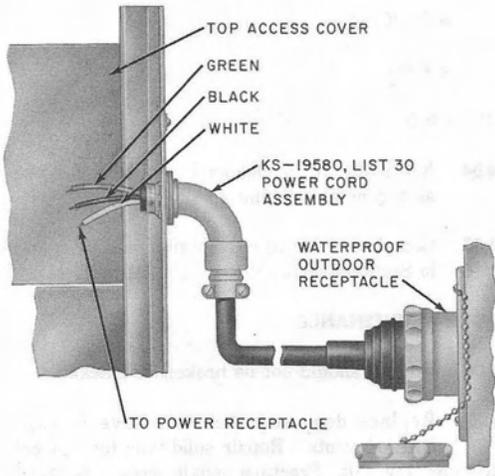


Fig. 18—KS-19580, List 30 Power Cord Assembly Overhead Entrance

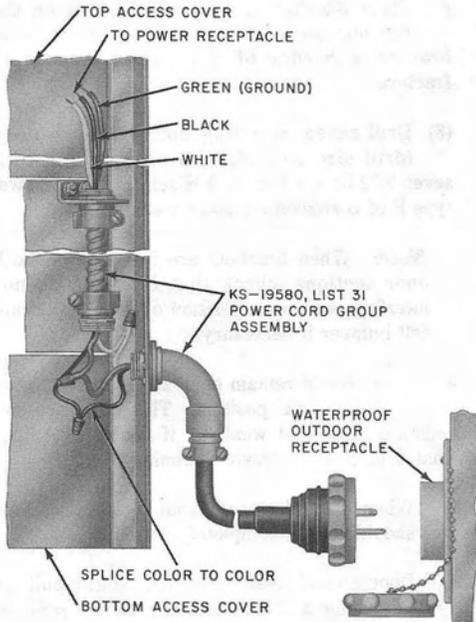


Fig. 19—KS-19580, List 31 Cable and Cord Group for Ground Level Entrance

KS-19580, List 25 Directory Rack (Fig. 8, 9, and 10)

3.16 Install with four 10-32 by 1/2 Phillips RHM screws, two 10-32 by 1/2 Phillips FHM screws, two No. 10 flatwashers, and two No. 10 lockwashers.

KS-19580, List 24 Apparatus Blank (Fig. 8 and 10)

3.17 Install with two 10-32 by 5/8 Phillips RHM screws, four No. 10 fiber washers, and two No. 10 elastic stop nuts.

- Hardware furnished with apparatus blank

KS-19580, List 26 Nameplate Blank Assembly (3/4 by 2-3/4 inches)

3.18 Insert pins through two outer holes at top of directory rack.

3.19 Bend pins on back side of directory rack.

KS-19580, List 27 Nameplate Blank Assembly (3/4 by 1-3/8 inches)

3.20 Insert one pin through one of the outer holes and the other pin through center slot at top of directory rack.

3.21 Bend pins on back side of directory rack.

SEAT ASSEMBLY

3.22 Install KS-19425, List 12 mounting plate as follows:

- Install the mounting plate in the same manner as a standard glass panel in the bottom position on the left side of the booth.
- Install a B-650894 clip (furnished with seat assembly) on each corner of the List 12 mounting plate, using four 8-32 by 3/8 SEMS RHM screws.



Install the clips on the inside of the booth. Their purpose is to prevent the removal of retaining strips.

3.23 Install the seat assembly on the upper portion of the mounting plate using the following

items (furnished with seat assembly) and install in the sequence listed.

- Four 1/4-20 by 1-1/8 carriage bolts (install with heads on outside of booth)
- Four B-650893 spacers
- Seat assembly
- Two 1/4-inch flatwashers (front and rear bolts)
- Four 1/4-inch lockwashers
- Four 1/4-20 cap nuts

4. MAINTENANCE

- 4.01** The local telephone company shall establish the appearance standards of all exposed surfaces.
- 4.02** The local telephone company shall establish the safety standards for all booths.
- 4.03** All screws threaded into aluminum parts during the course of repair shall be coated with KS-19094 antiseize compound.

BOOTH CHECK POINTS

- Safe approach to booth (have dangerous conditions corrected)
- Appearance of booth
- Electrical grounding
- Door operation
- Panels and signs
- Booth lighting
- Directories and binders
- Dome and lights
- Security of booth anchorage
- Loose screws and bolts
- Seat assembly (if applicable)

- Shelf assemblies
- Power cords

CLEANING

- 4.04** KS-19432, List 1 cleaner is available for use as a general cleaning agent.
- 4.05** Complete cleaning information may be found in Section 508-100-101.

DOOR MAINTENANCE

- 4.06** Frames should not be broken or cracked.
- 4.07** Replace door sections that have broken mitered joints. Repair solid-type (one piece) sections (Fig. 20). Fracture usually occurs because of misuse, improper adjustment, or because booth is not level. Check the cause and repair as follows:
 - (1) Close the door against a thin wooden block to close fracture.
 - (2) Place B-931522 door repair bracket on the top outside of the door. Align edge of bracket with edge of door that is closest to fracture.
 - (3) Drill seven mounting holes 1/2-inch deep (drill size No. 26). Secure bracket with seven 8-32 by 1/2 Phillips FH self-tapping screws, type F of corrosion resistant steel.

Note: When brackets are installed on both door sections, check that brackets do not interfere with open position of door. Relocate felt bumper if necessary.

- 4.08** Door should remain open 2 to 3 inches when it is at normal position. This clearance can be eliminated in cold weather, if desired. Adjust so that door closes without slamming (see 4.14).
- 4.09** When pushed closed from inside, the door should remain completely closed.
- 4.10** Door should open fully with slight pull on the handle and return to the normal position when released.
- 4.11** Open-door clearance from the writing shelf is about 1 to 2 inches.

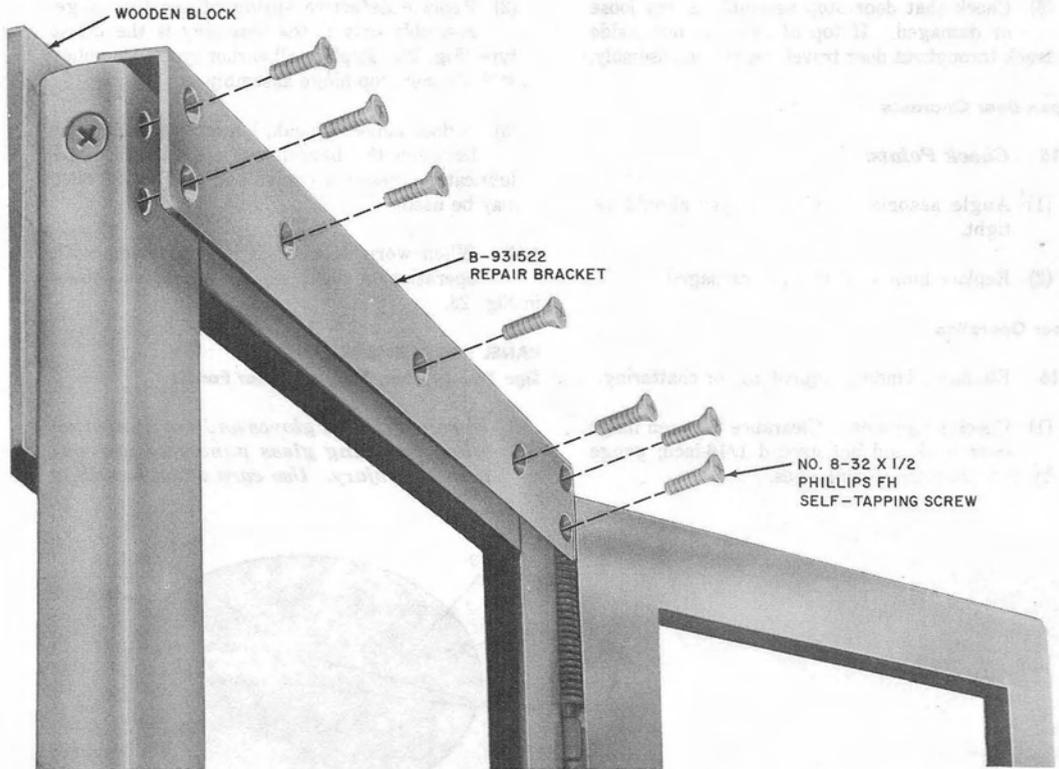


Fig. 20—Installation of Door Repair Bracket

4.12 Door operation should be free without binding, squeaking, or chattering (see 4.16).

4.13 Rubber frame bumpers shall be in place.

Door Adjustments (Fig. 21)

4.14 **Normal Position.** These adjustments should be made in sequence:

- (1) Loosen setscrews on spring stop assembly.
- (2) Place door in normal position (2 to 3 inches) from corner column.

(3) Position rod of spring stop assembly against door roller.

(4) Secure rod in this position by placing collar of the spring stop assembly against the bracket of the spring stop assembly, and tighten setscrews.

(5) Loosen mounting screws on the adjustable stop assembly. Move assembly left or right to obtain the spring tension required to return door to normal position. Tighten screws and recheck tension.

- (6) Check that door stop assembly is not loose or damaged. If top of roller is not inside track throughout door travel, reposition assembly.

Open Door Clearance

4.15 Check Points:

- (1) Angle associated with bumper should be tight.
- (2) Replace bumper if worn or damaged.

Door Operation

4.16 Eliminate binding, squeaking, or chattering:

- (1) Check hinge wear. Clearance between hinge barrels should not exceed 1/16-inch; gauge by eye. Replace worn hinges.

- (2) Replace defective spring of the top hinge assembly only if the assembly is the latest type (Fig. 22). Replace all earlier type assemblies with the new top hinge assembly.

- (3) If door hinges squeak, lubricate at each joint between the barrels with KS-14774, L2G lubricating grease or equivalent; a KS-14796 oiler may be used.

- 4.17 When worn door track is interfering with operation of door, replace track, as shown in Fig. 23.

PANEL REPLACEMENT

Sign Panels, Door, Side, and Rear Panels

Warning: Wear gloves and eye protection when handling glass panels to prevent personal injury. Use care when handling

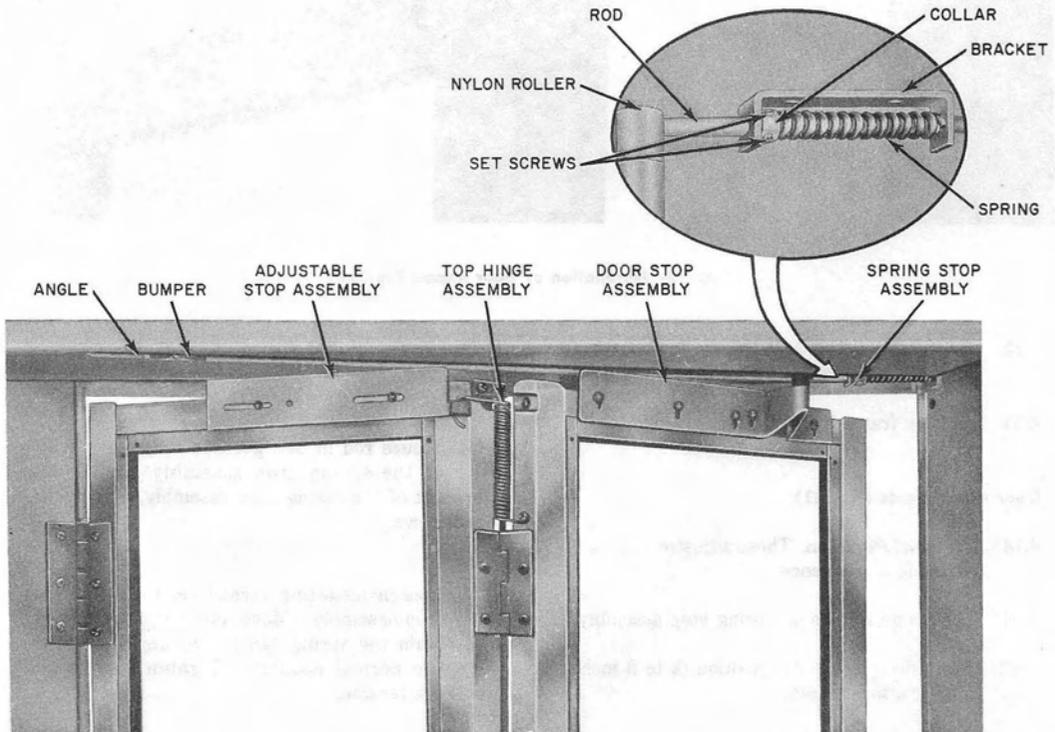


Fig. 21—KS-14611 Booth Door Adjustment

tempered glass. Nicks or scratches will damage the glass and may cause it to shatter. Do not allow metal tools to come in contact with edge of tempered glass. Before installation, examine glass for nicks or chips along edges. If such defects are apparent, do not use this glass.

4.18 Replace those panels which are broken or which will not meet local telephone company standards. Refer to Table A for available door, side, and rear panels and glazing strips. Refer to Table B for available sign panels and glazing strips.

4.19 Booth panels and signs are held in place by four interlocking retaining strips inserted in sequence as shown in Fig. 24. The No. 4 strip is rippled and is held in place by interface friction. Refer to Table E for retaining strips.

4.20 Replace panels as follows:

- (1) Remove No. 4 locking strip.

REMOVABLE SUPPORT
DRILL HOLE 1/2 IN. DEEP.
FASTEN WITH
SELF TAPPING SCREW
TYPE F, 8-32 X 1/2 IN.

INCREASE
SPRING CLEARANCE
ON BOTH DOORS.
FILE OR SAND
1/32 IN. DEEP
X 3-7/8 IN. LONG.

DRILL 5/32 IN. HOLE
1/2 IN. DEEP
FASTEN WITH
SELF TAPPING SCREW
TYPE F, 8-32 X 5/8 IN.

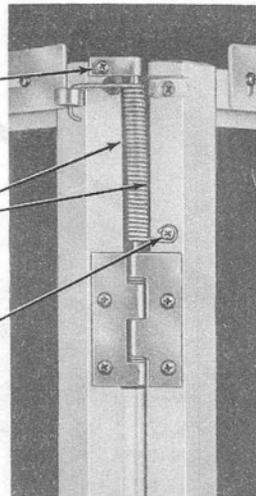


Fig. 22—Installation of Top Hinge Assembly

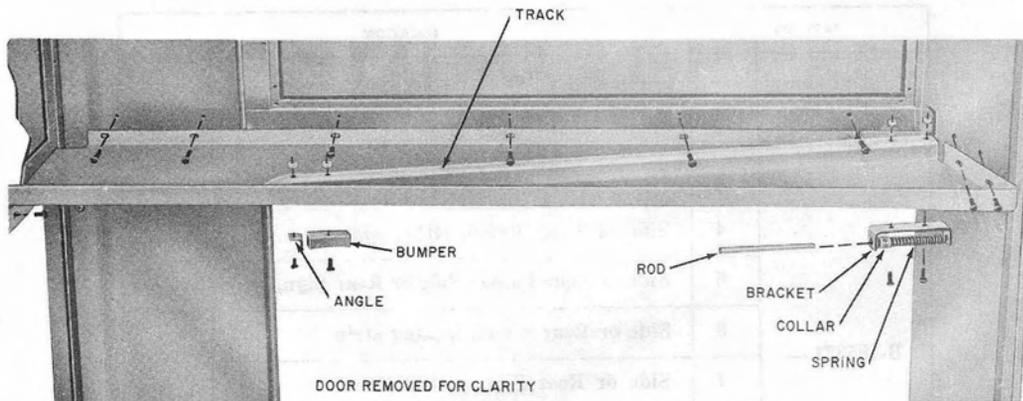


Fig. 23—Installation of Door Track

- (2) Remove retaining strips No. 2 and 3.
- (3) Remove retaining strip No. 1.
- (4) Remove panel and rubber glazing strip.
- (5) Apply rubber glazing strip to replacement panel.
- (6) Insert panel into frame with the beaded edge of glazing strip on the outside.

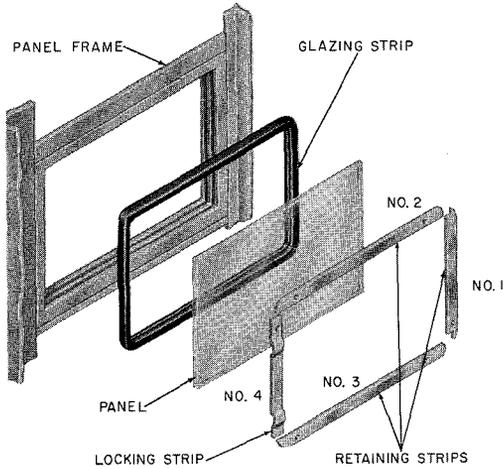


Fig. 24—Assembly of Side or Rear Panels

(7) Replace retaining strips in sequence as shown in Fig. 24.

Bottom Panels

4.21 Replace those panels which are broken or which will not meet company standards. Refer to Table C for available bottom panels.

4.22 To remove panels, remove Phillips RH screws (eight for short panel and ten for solid or louvered panel).



The rear bottom panels are equipped with a mounting bracket and leveling device.

**TABLE E
RETAINING STRIPS**

PART NO.	LOCATION
B-185371 —	1 Door Panel, top
	2 Door Panel, either side
	3 Door Panel, bottom
	4 Side or Rear Panel, either side
	5 Side or Rear Panel; Side or Rear Sign, top or bottom
	6 Side or Rear Panel, locking strip
	7 Side or Rear Sign, either side
	9 Side or Rear Sign, locking strip
	10 Front Sign, either side
	11 Front Sign, top
	12 Front Sign, locking strip
	13 Front Sign, bottom

BOOTH LIGHTING

For your safety, observe the following: Work operations on booth lighting equipment and electrical wiring should be limited to locations where power can be turned off at a switch or a plug can be removed. Wear eye protection when lowering ceiling and handling fluorescent lamps.

4.23 When ballast shows signs of leaking compound, replace the complete KS-19207 unit per Section 508-820-100.

4.24 Earlier model KS-14611 booths were equipped with a B-185379 light fixture. If major repairs are required for maintenance, replace the B-185379 light fixture with a KS-19207, List 4 light fixture per Section 508-820-100.

4.25 Maintenance instructions for the B-185379 light fixture are covered below:



Both ceiling lamps should be lighted when power is on, unless booth is equipped with a light control unit. For booths with a light control, refer to Section 508-825-100.

- (1) Check that manual starter reset buttons are pushed in when this type starter is used. Allow 1 minute for lamps to light.
- (2) If lamps fail to light remove lamp plug from ceiling receptacle, and test for power.
 - (a) If power is off, check for intermediate switch.
 - (b) If power is present, replace lamp plug.
- (3) If lamps fail to function, replace starters and allow 1 minute for lighting. Replace lamps that do not light. (Before discarding a starter, test in a good lamp fixture.)
- (4) If lamps still fail to function, trouble may be due to low voltage (below 95 volts) or a defective fixture.

4.26 Automatic cutoff thermal-type starters are also used with the KS-14611 booth lamps. Bimetallic contacts control starter operation. If

starter fails to light the lamp, a cutoff contact will open the lamp circuit. Starter remains in this cutoff condition until power is turned off, allowing bimetallic cutoff to cool. Purpose of cutoff is to prevent ballast transformer from overheating.

4.27 Starter cutoff usually occurs from the following:

- (a) Low ac voltage or downward power surge (service interruptions, fluctuations, thunderstorms, etc) below operating range of lamp.
- (b) Defective lamp (flickers when starting to light).
- (c) Extremely low temperature at start. Gas in lamp does not ionize.
- (d) High temperature, either at start, or while lamp is lighted. External heat combined with current flow operates bimetallic cutoff contact.

Note: Remember, the lamp starting time is determined by the temperature present in conjunction with lamp condition and line voltage.

4.28 Starter Selection (see Table F.)

- (a) **Automatic Reset** starters will reset after going into cutoff when the power is turned off to allow the contacts to cool. Operating range at 118 volts is from 0 to 135°F.
- (b) **Manual Reset** starters can be reset by pushing the reset button to render starter operative. Operating range at 118 volts is from 0 to 185°F.

Note: Permanent damage to ballast transformer may result if the starter used is not correct for lamp wattage.

DOMES REPLACEMENT

4.29 Replace defective dome as follows:

- (1) Unlock dome fasteners and lower dome.
- (2) Remove machine screws and molding assembly.

TABLE F
LAMP AND STARTER CODES

WATTS	LAMP CODE*	STARTER CODE	
		RESET	
		AUTOMATIC	MANUAL
32	FC12T10	TC-12	TC-120
40	FC16T10	TC-4	TC-40

* Lamp, fluorescent, 4-pin, standard, cool white.

- (3) Remove defective dome and insert replacement as shown in Fig. 25.
- (4) Replace and secure molding assembly.
- (5) *Raise dome and secure in position by locking dome fasteners.*

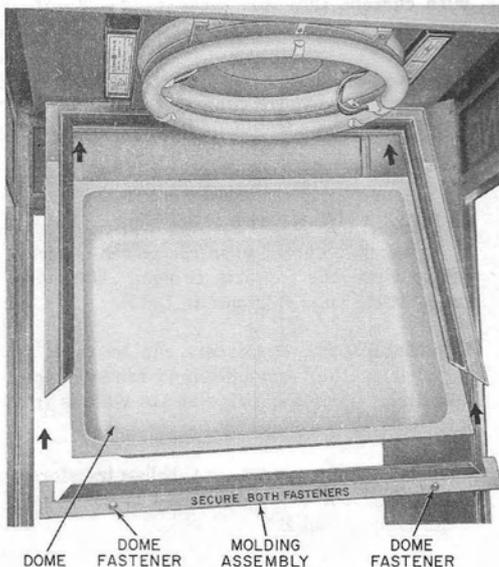


Fig. 25—Installation of Dome

DOMESTOP

- 4.30 Dome stops which are damaged or broken should be replaced in accordance with Fig. 4.

SEAT ASSEMBLY

- 4.31 Replace those seats (if present) which are broken or which will not meet company standards per 3.22 and 3.23.

SHELF ASSEMBLIES AND APPARATUS BLANKS

- 4.32 Replace those shelves and apparatus blanks which are broken or which will not meet company standards per 3.13 through 3.21.

DIRECTORIES AND BINDERS

- 4.33 Directory binder rods or hinge fasteners shall not be broken or distorted to the extent that directories are not held securely in the binder. Hinges shall not be so bent, burred, or distorted as to obstruct the free passage of hinge fasteners or prevent smooth operation of covers.

- 4.34 Binder locking devices shall operate freely and lock securely. Adjustable backplates shall be in good condition.

- 4.35 Ensure that a rubber bumper (B-685401) is in place on the directory rack to cushion the binder as it drops into the rack. Install a new bumper, if required as follows:
 - (a) Soften old adhesive with the trichloroethane and remove.
 - (b) Install new bumper using 3M Company EC-880 adhesive or equivalent.

FLOOR

- 4.36 If a booth is equipped with an abrasive-clad floor, the finish can be restored with the use of Goodyear Griptred flooring and protective coating, dark gray 592-7005 or equivalent. This can be applied with an ordinary paint brush.

PROTECTOR GROUND

- 4.37 When coverplate is removed, the station protector ground is removed. Under certain conditions this could present a hazard while working on protector, wiring, etc.



When coverplate is removed and bonding strap is not present, place strap before proceeding with work. Use No. 14 wire from ground terminal of protector to

screwhead of partition fastener separating the two wiring channels.

REPAIR OR REPLACEMENT PARTS

4.38 Refer to Table G for repair or replacement parts which are most commonly required.

5. CONVERSION OF CEILING ASSEMBLY OF A LIST 2 (MD) BOOTH TO CEILING ASSEMBLY OF A LIST 3 BOOTH

5.01 The following material is required for conversion:

1—Top Access Coverplate Assembly per drawing B-189009

1—Ceiling Assembly, B-185463

2—Screws, RHM, Phillips, No. 8-32 by 3/8-inch with lockwasher, B-185955,

2—Cap Nuts, 1/4-20 inches, B-185955,

2—Hex Nuts, 1/4-20 inches, B-185955,

1—Duplex Power Receptacle Assembly, B-189783

2—Lamps, fluorescent, 4-pin, standard, cool white, FC16T10

1—Antiseize Compound, KS-19094

4—Screws, RH, Phillips, type F, 8-32 by 1/2 inch

5.02 In addition to regular tools the following are used:

Drill, electric

Drill, No. 15

Drill, No. 25

Drill, 3/8 or 1/2 inch

Punch, center

Wrench, adjustable

Screwdrivers, Phillips

Taps, set, small (to repair any stripped threads)

Stepladder

5.03 Penetrating oil may be necessary for removal of tight screws.

5.04 Use center punch to start drilling of new holes.

5.05 KS-19094 antiseize compound is used on screws threaded into aluminum.

WORK OPERATIONS

 *Eye protection when lowering ceiling sections and performing drilling operations.*

 *Use a stepladder of sufficient height to work in top of booth safely. Place warning signs to safeguard public when necessary.*

5.06 Disconnect both the power and telephone service to booth.

(1) Open ceiling with KS-19192, List 1 wrench and remove lamps.

(2) Disconnect telephone wiring at subscriber set, if applicable, and station protector.

(3) Remove four wing nuts holding roof to ceiling assembly.

5.07 Place stepladder at side of booth and proceed as follows:

(1) Lift roof off.

(2) Unplug light-fixture cord.

(3) Support ceiling assembly and remove four retaining screws from cross brace with wrench or screwdriver, as required.

(4) Lift ceiling assembly out through top of booth. Remove subscriber set, if applicable, and protector.

5.08 Inside of booth, remove top access plate assembly.

- (1) Disconnect power cord conductors from back of receptacle. Remove receptacle and bracket.
- (2) Drill holes for new receptacle bracket B-189783 as shown in Fig. 26.
 - When a power source for electric drill is not close by, use hand drill. **Do not attempt to drill these holes with power connected to the booth.**
 - When rear of booth is located against a wall, mark position of holes on inside with receptacle bracket as template. Then drill from inside the booth.
- (3) Connect wiring to new receptacle and fasten in place as shown in Fig. 27.

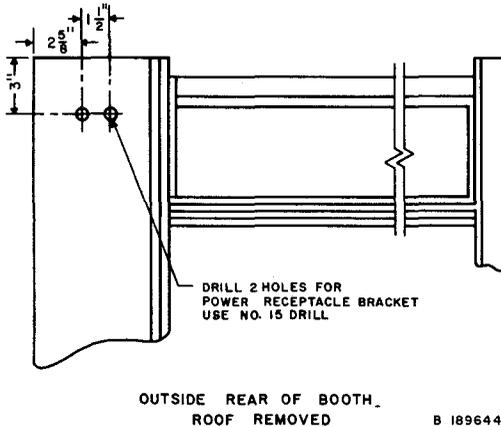


Fig. 26—Holes for Mounting Receptacle Bracket

5.09 Reconnect power to booth. If applicable, drill holes for subscriber set mounting under shelf as follows:

- (1) Locate subscriber set 1-inch down from underside of corner shelf on right-rear cover assembly (aluminum panel) of booth. Position subscriber set over right (telephone) wiring channel, and mark locations of four mounting holes and wire entrance holes.

- (2) Use No. 25 drill for subscriber set mounting holes.
- (3) Use 3/8- or 1/2-inch drill for wire entrance.

- Smooth edges with file to prevent damage to wires.

5.10 Relocate telephone wiring to new subscriber set location.

- (1) Fish right wiring channel with string or chain from top access opening to subscriber set wire entrance.
- (2) Fasten new piece of triple station wire and wire formerly connected to subscriber set on string at tip access opening. Pull through to new subscriber set location.

(3) Connect new triple and drop wire to 123A1A protector on B-189009 top access plate assembly. Allow slack to facilitate future maintenance work.

(4) Install access plate in position.

5.11 Install new ceiling assembly B-185463 as follows:

(1) Lower ceiling assembly into position from outside top of booth. Fasten with screws previously removed from old cross brace.

(2) Place lamps in fixture.

(3) Plug light fixture cord into receptacle.

(4) Replace roof.

(5) Anchor roof from inside of booth. Use two cap nuts in rear and two hex nuts (drop dome) in front.

(6) Close dome and lock with KS-19192, List 1 wrench. Check that both fasteners are tightened securely.

5.12 Install subscriber set using four 1/2-inch Phillips screws. Connect telephone wiring at subscriber set.

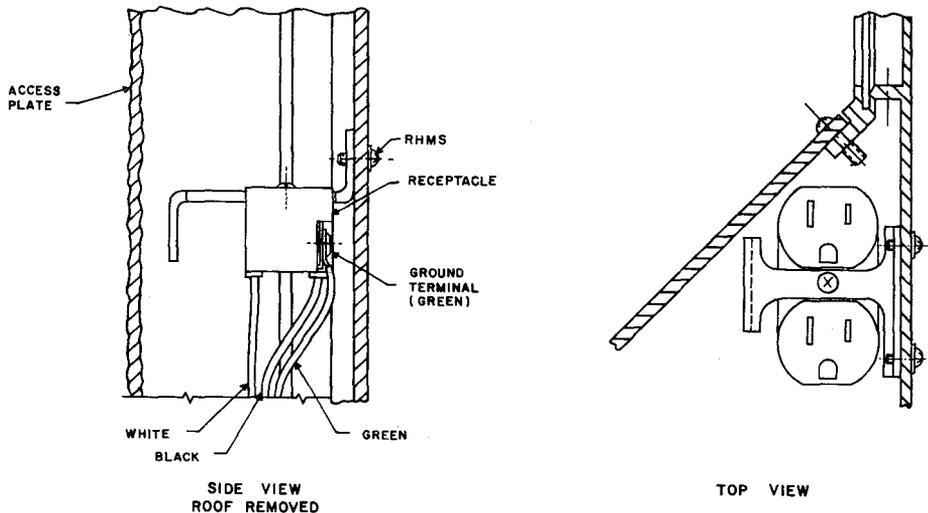


Fig. 27—Location and Wiring of Receptacle

5.13 Check coin collector and ringer operation.
Check that lamps are functioning properly.

**6. CONVERSION OF CEILING ASSEMBLY TO ADD
KS-19207, LIST 3 LIGHT AND BLOWER UNIT**

6.01 For detailed conversion procedures, refer to
BSRS 457.106. This modification is not
recommended for field forces to attempt.

TABLE G
REPAIR OR REPLACEMENT PARTS

NAME	PART NUMBER	REMARKS
Angle	B-179424	Component of track assembly
	B-684710	Component of booth anchoring bracket
Bracket	B-176686	Component of spring stop assembly
	B-931522	Door repair bracket
Bolt	B-684713-1	Component of booth anchoring bracket
Bumper	B-179473	Component of track assembly
	B-684714	Located on column of left side assembly
	B-685401	Located on directory rack
Collar	B-192403	Component of spring stop assembly
Cover Assembly, Right Rear	B-185432	Mounts coin collector
Cover Assembly, Right Rear Access	B-185443	Includes a 123A1A protector
Cover, Right Rear Access	B-185375-1	Does not mount protector
Cover, Left Front Access	B-179378	Covers booth anchoring bracket on left front column
Dome	B-185369	Light dome
Door Assembly	B-179333	Door includes left and right door frame assemblies, hinges, handle, door stop assembly, and adjustable stop assembly
Frame Assembly, Left Side	B-181729	Left frame of door assembly
Frame Assembly, Right Side	B-181728	Right frame of door assembly
Grommet	B-684716	Located at telephone wire entrance
Handle	B-684738	Door handle

TABLE G (Cont)

NAME	PART NUMBER	REMARKS
Hinge Assembly	B-650842	Door post hinge
	B-684744	Center door hinge (middle and bottom positions)
	B-684745	Top center door hinge
Nut	B-684712	Component of booth anchoring bracket
Plug	Plastic Plug for Rear Assembly B-179324	Located at unused power entrance
Rod Assembly	B-192404	Component of spring stop assembly
Roller, Nylon	B-561730	Mounts on pin of door stop assembly
Spring	B-176687	Component of spring stop assembly
	B-684746	Component of top hinge assembly
Stop Assembly, Adjustable	B-684748	Component of door assembly
Stop Assembly, Door	B-176782	Component of door assembly
Stop Assembly, Spring	B-192543	Component of track assembly
Track Assembly	B-178483	Consists of track, spring stop assembly, angle, and bumper
Track	B-185579	Component of track assembly
Washer, Plain Cres, 5/16 std	Obtain locally	Component of booth anchoring bracket