



GENERAL OPERATION OUTLINE

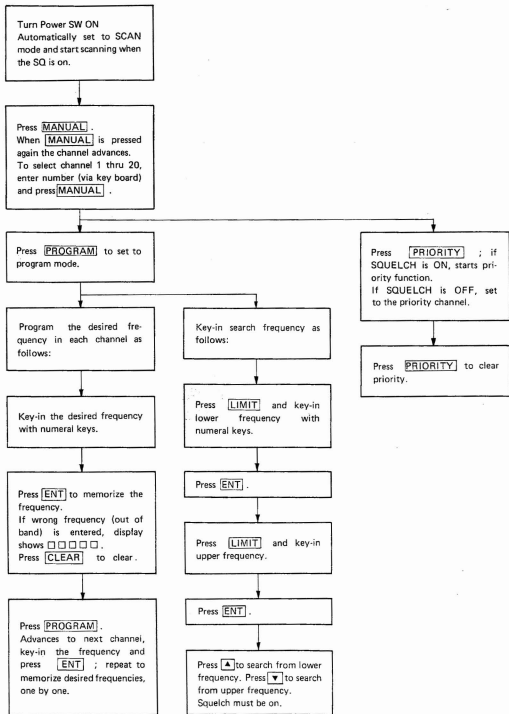


DISASSEMBLY DIAGRAM

- Step 1: Remove two bracket screws (A) and the bracket (B).
- Step 2: Remove four screws (C) two from each side of the Cabinet.
- Step 3: Remove two screws (D) from back of cabinet.
- Step 4: Open the cabinet. Use care not to damage leads of speaker installed on the cabinet.

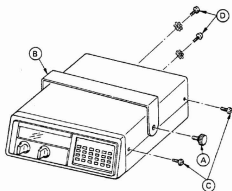

ALIGNMENT AND TEST POINT POSITIONS

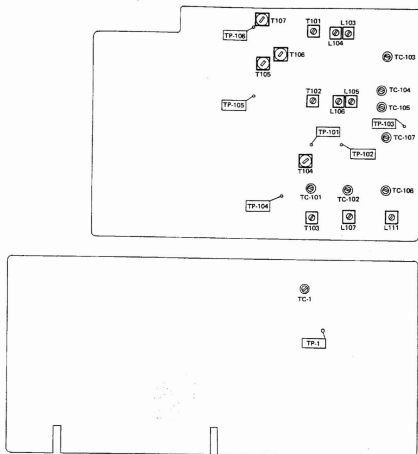

ALIGNMENT PREPARATION

Test equipment required

1. Oscilloscope (0 ~ 500 kHz, 0 ~ 50 MHz)
2. AC VTVM
3. DC VTVM
4. Frequency Counter (60 MHz)
5. 8 ohm dummy load
6. Slow Sweep Generator with variable marker (10.7 MHz)
7. VHF Sweep Generator with variable marker (30 ~ 50 MHz, *68 ~ 88 MHz, 108 ~ 174 MHz)
8. UHF Sweep Generator with variable marker (410 ~ 512 MHz)
9. FM Signal Generator (30 ~ 50 MHz, *68 ~ 88 MHz, 138 ~ 174 MHz, 410 ~ 512 MHz)
10. AM Signal Generator (108 ~ 136 MHz)

NOTE 1: Use non-metallic tuning tools.

The test equipment and Receiver should be warmed up at least 10 minutes before proceeding with alignment. Input signal from the Generator should be kept as low as possible and still obtain usable output.

NOTE 2: A 9-volt battery is required to hold the memory when AC is disconnected. Always be sure the unit is loaded with a fresh 9-volt battery or the pre-programmed channels will be lost (and will have to be re-programmed).

NOTE 3: For servicing VHF Mid band of European/Australian models, see Appendix on pages 41 and 42.


REFERENCE FREQUENCY OSC ALIGNMENT

- Step 1: Connect Frequency Counter to TP1 and ground. Connect the ground first to prevent IC-8 latch-up.
Step 2: Adjust TC-1 so that the frequency is $6.40000 \text{ MHz} \pm 10 \text{ Hz}$.

NOTE 1: If 6.4 MHz fails to oscillate, it may be due to IC-8 latch-up.
Unplug the power connector momentarily to turn power supply completely off.

IF SECTION ALIGNMENT

- Step 1: Connect instruments as shown below.

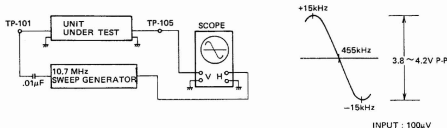

- Step 2: Adjust T105 for maximum output so that the 455 kHz marker is in the center of the discriminator curve and for best linearity as shown above.
During Alignment, maintain Sweep Generator output at the lowest level possible to prevent overloading.

VCO ALIGNMENT

VHF LO BAND

- Step 1: Connect a DC VTVM to TP-104 and ground.
Step 2: Program CH1, 2 and 3 as follows:
CH1 (30 MHz), CH2 (40 MHz), CH3 (50 MHz).
Step 3: Select Channel 3 (50 MHz) and adjust TC-101 for 9.0V on the DC VTVM.
Step 4: Select Channel 1 (30 MHz) and adjust T103 for 1.0V on the DC VTVM.
Step 5: Repeat steps 3 and 4 until no improvement is observed. The DC VTVM should show as below.
- | | | |
|--------|------------------|----------------|
| 30 MHz | Voltage at TP104 | 1.0V |
| 40 MHz | Voltage at TP104 | $3.4 \pm 0.3V$ |
| 50 MHz | Voltage at TP104 | 9.0V |

VHF HI BAND AND AIRCRAFT

- Step 1: Connect a DC VTVM to TP104 and ground.
Step 2: Program CH1, 2, 3, 4, 5 and 6 as follows.
CH1 (108 MHz), CH2 (120 MHz), CH3 (136 MHz), CH4 (138 MHz), CH5 (160 MHz), CH6 (174 MHz).
Step 3: Select Channel 6 (174 MHz) and adjust TC102 for 8.0V on the DC VTVM.
Step 4: Select Channel 1 (108 MHz) and adjust L107 for 1.0V on the DC VTVM.
Step 5: Repeat steps 3 and 4 until no improvement is observed. The DC VTVM should show as below.
- | | | |
|---------|-------------------|----------------|
| 108 MHz | Voltage at TP-104 | 1.0V |
| 120 MHz | Voltage at TP-104 | $2.1 \pm 0.3V$ |
| 136 MHz | Voltage at TP-104 | $3.6 \pm 0.3V$ |
| 138 MHz | Voltage at TP-104 | $1.8 \pm 0.3V$ |
| 160 MHz | Voltage at TP-104 | $3.9 \pm 0.3V$ |
| 174 MHz | Voltage at TP-104 | 8.0V |


UHF BAND

- Step 1: Connect a DC VTVM to TP-104 and ground.
- Step 2: Program CH1, 2 and 3 as follows:
 CH1 (410 MHz), CH2 (430 MHz), CH3 (512 MHz).
- Step 3: Select Channel 3 (512 MHz) and adjust TC-106 for 9.0V on the DC VTVM.
- Step 4: Select Channel 1 (410 MHz) and adjust L111 for 1.0V on the DC VTVM.
- Step 5: Repeat steps 3 and 4 until no improvement is observed. The DC VTVM should show as below.
- | | | |
|---------|-------------------|----------------|
| 410 MHz | Voltage at TP-104 | 1.0V |
| 430 MHz | Voltage at TP-104 | $1.8 \pm 0.3V$ |
| 512 MHz | Voltage at TP-104 | 9.0V |


RF AMP ALIGNMENT

VHF LO BAND

- Step 1: Connect instruments as shown below.




- Step 2: Program 30 MHz (CH1), 40 MHz (CH2) and 50 MHz (CH3).
- Step 3: Select Channel 2 (40 MHz) and adjust T101 and T102 for maximum RF waveform.
- Step 4: Check Channels 1 ~ 3 for the maximum RF waveform. A slight deviation (as shown below) is acceptable.




VHF HI AND AIRCRAFT

- Step 1: Connect instruments as shown below.




- Step 2: Program 108 MHz (CH1), 120 MHz (CH2), 136 MHz (CH3), 138 MHz (CH4), 160 MHz (CH5) and 174 MHz (CH6).
- Step 3: Select Channel 1 (108 MHz) and adjust L104 and L106 for maximum RF waveform.
- Step 4: Select Channel 5 (160 MHz) and adjust L103 and L105 for maximum RF waveform.
- Step 5: Repeat steps 3 and 4 to obtain the maximum RF waveform for each channel.
- Step 6: Check Channels 1 ~ 6 for the maximum RF waveform at each frequency marker. A slight deviation (as shown below) is acceptable.

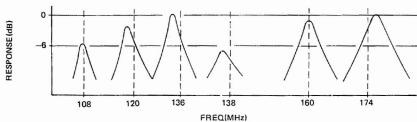


UHF BAND

- Step 1: Connect instruments as shown below.



- Step 2: Program 410 MHz (CH1), 430 MHz (CH2) and 512 MHz (CH3).
- Step 3: Select Channel 2 (430 MHz) and adjust TC-103, TC-104, and TC-105 for maximum RF waveform.
- Step 4: Select Channel 3 (512 MHz) and adjust TC-107 for maximum RF waveform.
- Step 5: Check Channels 1 ~ 3 for the maximum RF waveform at each frequency marker. A slight deviation (as shown below) is acceptable.




OVERALL ALIGNMENT AND SENSITIVITY MEASUREMENT

- Step 1: Connect Signal Generator (SSG) to ANTenna jack and AC VTVM to EXT. SPKR Jack.
 Step 2: Turn SQUELCH fully counterclockwise. Set for reception of the channels noted in the following chart. Set the SSG to the center of each band.

CH	BAND	FREQ.
1	VHF LO (MID)	40 MHz (78 MHz)
2	VHF HI	160 MHz
3	UHF	512 MHz
4	AIRCRAFT	120 MHz

- Step 3: Set the Signal Generator frequency to 512 MHz (channel 3). Readjust TC-107 for maximum sensitivity.
 Step 4: Set the Signal Generator frequency to 120 MHz (channel 4). Adjust T104, T106 and T107 for maximum sensitivity.
 Step 5: For each frequency/channel, set Signal Generator to each frequency (FM: 3 kHz deviation, AM: 60% modulation). Set VOLUME control for 0 dB (0.775 V) reading on the VTVM.
 Step 6: Turn off the modulation and measure the (S + N)/N ratio.

ZEROMATIC FUNCTION AND HOW TO CHECK IT

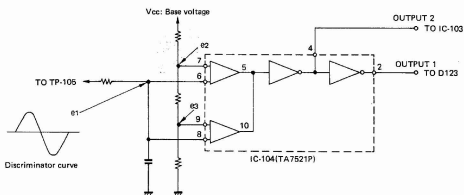

* Zeromatic functions when OUTPUT 1 is in "H" level.

e_1	$0 < e_1 < e_3$	$e_3 < e_1 < e_2$	$e_2 < e_1 < V_{CC}$
OUTPUT 1 (Pin No. 2)	L	H	L
OUTPUT 1 (Pin No. 4)	H	L	H

To adjust e_1 voltage, receive signal in Manual mode, and set T105 to get half supply voltage (IC101, 4 pin). It is convenient to use the National Weather Service Signal for the adjustment.

In the event Zeromatic does not function right, refer to "REFERENCE FREQUENCY OSC ALIGNMENT" and check 6.4 MHz, and adjust T105 again.

RESET TIMING (IC-1)

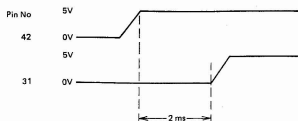


Figure 1

NOTE:

Pin 31 of IC-1 is the RESET terminal which functions at L level. It reverts to H level 2ms after Pin 42 VDD.

CPU CLOCK OSCILLATION WAVEFORM (IC-1)




Figure 2

NOTE:

This is the basic waveform of CPU (IC-1). Ceramic Resonator (X-2) generates 400 kHz for about 2.5μs

IC-3 INPUT/OUTPUT WAVEFORM


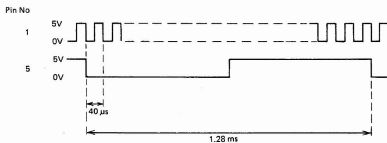


Figure 3


NOTE:

Waveform at Pin No. 5 is CPU (IC-1) interrupt signal. Must have above waveform or the CPU program malfunctions.

IC-4 INPUT/OUTPUT TIME CHART (150 MHz displayed, in Program Mode)

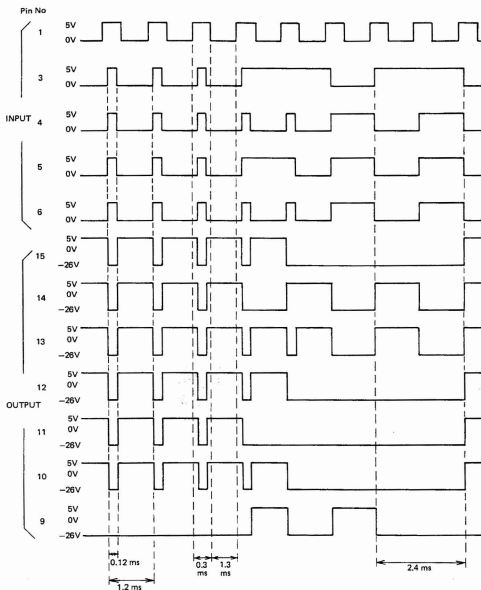


IC-6 INPUT/OUTPUT TIME CHART (150 MHz displayed, in Program Mode)

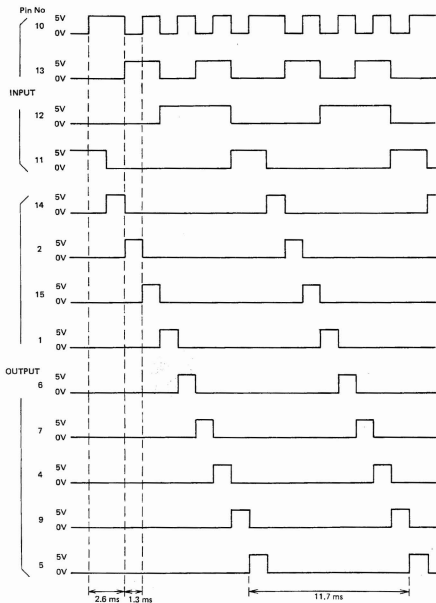


PLL CLOCK AND DATA INPUT WAVEFORMS (IC-8)

*Measured during SCAN: 150 MHz displayed on CH1, CH2 ~ 20 are locked out.

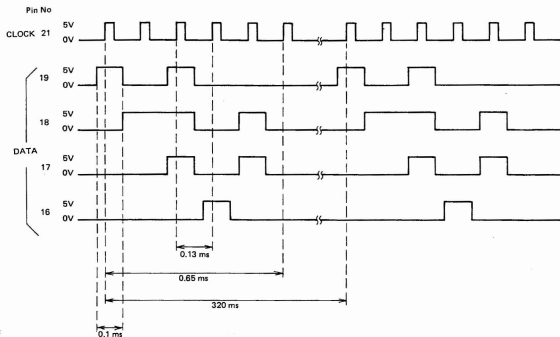

MEMORY CHECK

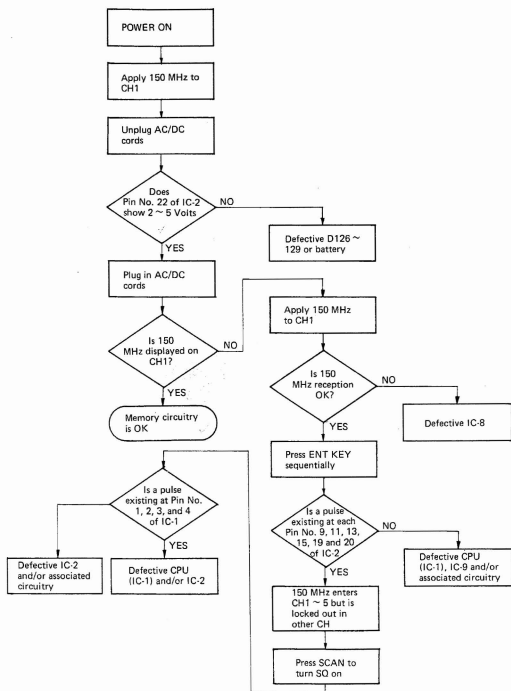


RECEPTION CHECK

Table-1


IC:10 Pin No.	11	8	3	6
FREQ. BAND				
LOW or MID	1	1	1	0
AIRCRAFT	1	0	0	1
HIGH	1	0	1	1
UNF	0	1	1	1

NOTE: 1 → 7.6V
0 → 0V

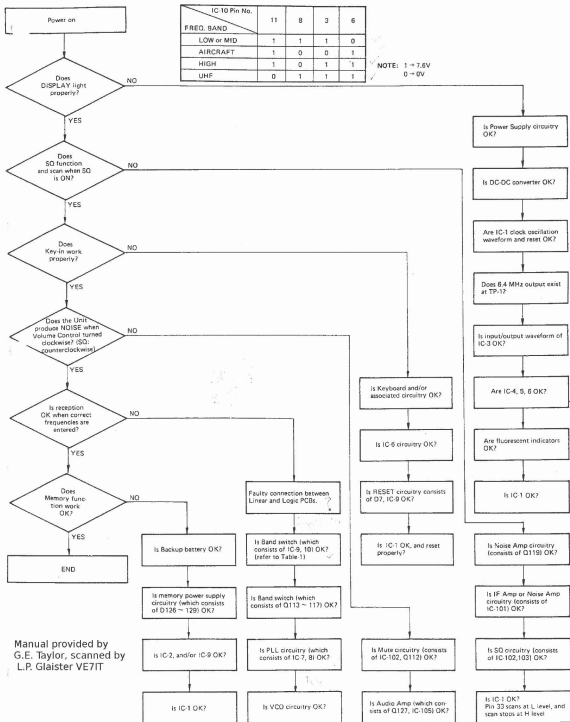


Manual provided by
G.E. Taylor, scanned by
L.P. Glaister VE7IT


WIRING DIAGRAM

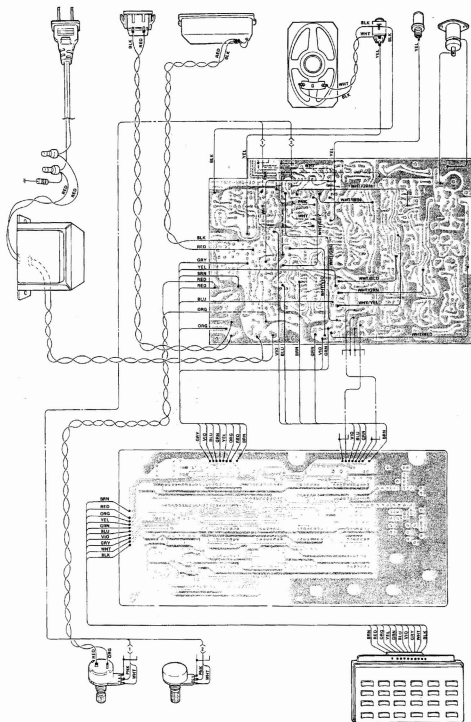


LINEAR P.C.BOARD (TOP VIEW)

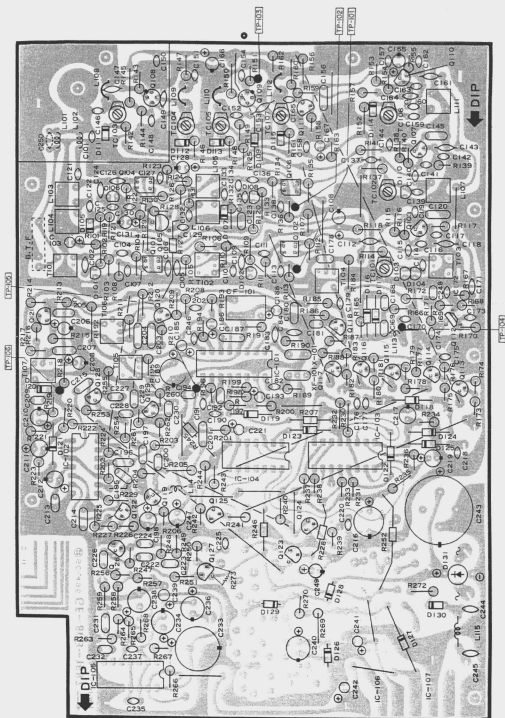

LOGIC P.C.BOARD (TOP VIEW)

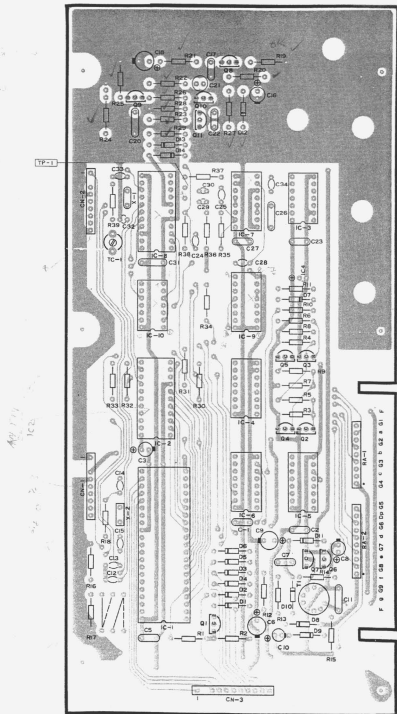

LOGIC P.C.BOARD (BOTTOM VIEW)

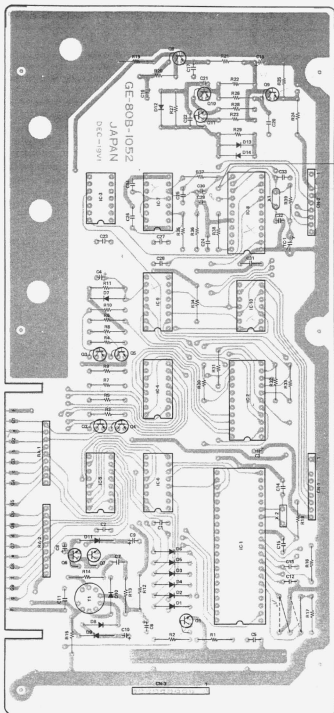


TROUBLESHOOTING

Symptom	Possible Cause
1) Display does not light and no sound when POWER is on. Volume control: MAX. Squelch control: counterclockwise (CCW)	1) Faulty power cord. 2) Defective power transformer. 3) Defective power switch. 4) Defective rectifier D131 or Polarity Protector D130.
2) Display lights but no sound. Volume control: MAX. Squelch control: CCW	1) Defective speaker or EXT. SPKR jack. 2) Defective audio amplifier IC-105, Q128, 129 and/or associated circuit components. 3) Defective IF amplifier IC-101 and/or associated circuit components. 4) Defective functional squelch control and mute switching IC-102, 103 and/or associated circuit components.
3) Sound but display does not light. Volume control: MAX. Squelch control: CCW	1) Defective DC-DC converter consisting of Q6, 7, 8, D8, 9, 10, 11. 2) Defective fluorescent display tube. 3) Defective DC-DC converter Transformer (T1). 4) Defective voltage Regulator IC-107. 5) Defective CPU (IC-1) or associated circuit components.
4) Does not scan and squelch does not operate.	1) Defective Q119 and/or associated circuit components. 2) Defective IC-1, D119 and/or associated circuit components. 3) Defective squelch circuit consisting of IC-102, 103.
5) Does not scan but squelch operates.	1) Faulty connection between Linear and Logic P.C.B. 2) Defective Keyboard and/or associated circuit components. 3) Defective IC-1, and/or associated circuit components.
6) Displays incorrectly and/or unable to key in correctly. <i>Screen off just go</i>	1) Defective Keyboard and/or associated circuit. 2) Defective CPU (IC-1) and/or associated circuit. 3) Defective IC-4, 5, 6 and/or associated circuit.
7) Displays correctly at the time of programming, but after scanning becomes faulty.	1) Defective memory IC-2 and/or associated circuit. 2) Defective IC-3, 9, 10 and/or associated circuit. 3) Defective IC-1 and/or associated circuit.
8) MANUAL scan operates but AUTO scan does not operate.	1) All channels are skipped (lockout). 2) Squelch control is not adjusted right.
9) "Zeromatic" does not operate or holds on a drifted frequency at search operation.	1) Defective Q125, IC-104 in Zeromatic circuit. 2) Discriminator coil is out of adjustment. TP-105 shall have 1/2 VCC (approx. 3.0V) in normal receiving mode. 3) Is 6.4 MHz adjusted correctly?
10) All bands do not operate but display OK.	1) Faulty connection between Linear and Logic PCBs. 2) Defective Q8 ~ 11 in Low-pass filter. 3) Defective IC-7, 8, 9, 10 and/or associated circuit. 4) Defective D116, 117 and/or associated circuit. 5) Defective Q112 and/or associated circuit.


Symptom	Possible Cause
11) Low (Mid) band does not operate but Air, Hi, UHF band operate.	1) Defective Low band RF Amp, mixer and/or VCO circuit. 2) Defective IC-9, 10, Q117 and/or associated circuit.
12) Aircraft band does not operate but Low, High, UHF operate.	1) Defective D105, 107, Q114, 115 and/or associated circuit. 2) Defective AM IF Amp including Q120, 121, D120.
13) Aircraft and High band do not operate but Low, UHF band operate.	1) Defective Q104 ~ 106 in RF Amp mixer and/or in VCO circuit. 2) Defective Q114 ~ 116 in band switch circuit.
14) UHF band does not operate but Low Air, High band operate.	1) Defective Q108 ~ 111 in RF Amp mixer and/or VCO circuit. 2) Defective Q113 in band switch circuit.

INTEGRATED CIRCUIT LEAD IDENTIFICATION



IC-1 GRE7954

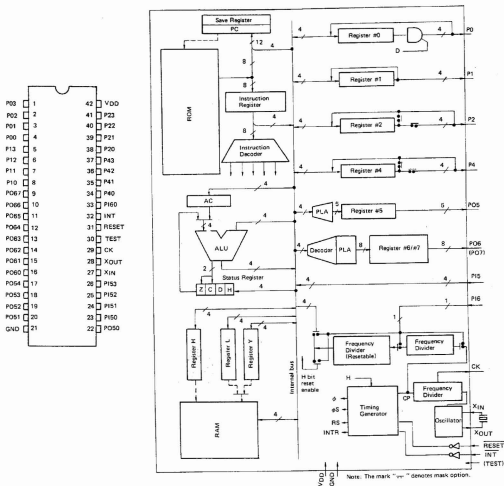



IC-2 TC5501P

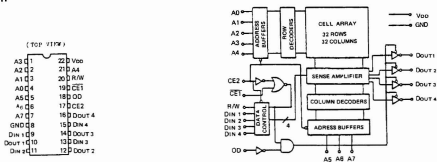


IC-3 TC4024BP




IC-4 TC5069BP





IC-5 TC5066BP




1/7 TC5066BP




IC-6 TC4028BP

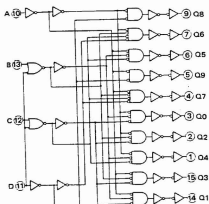


IC-7 MC12013P

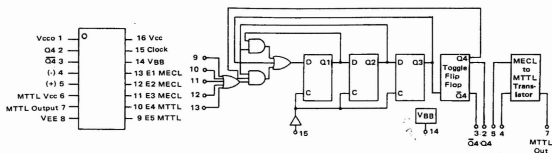



IC-8 GRE-7803A

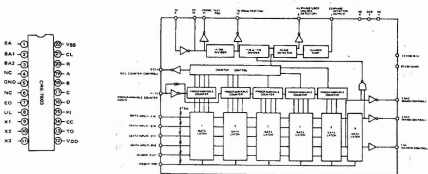



IC-9 TC4009UBP




IC-10 SN74LS26



IC101 MC3357P or MPS5071

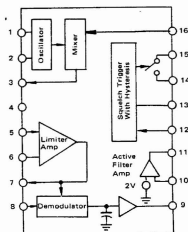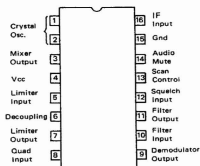


IC-102 TC4016BP or HD14016BP




VDD : 14, VSS : 7



Logic Symbol




Circuit Schematic





IC-103 TD62501P

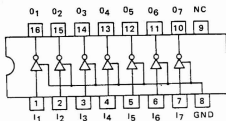



IC-104 TA7521P

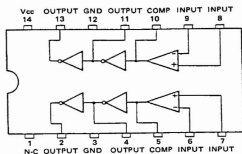

IC-105 SN76007N

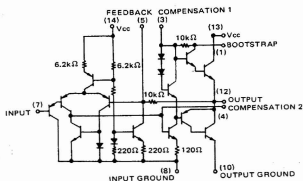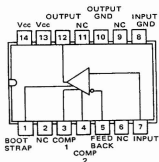

IC-106 HA17808P or μ A7808UC
IC-107 HA17805P or μ A7805UC

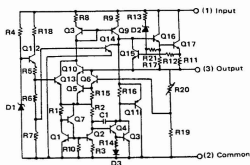

SEMICONDUCTOR LEAD IDENTIFICATION


A) 3SK77 (GR) (BL)

B) 2SC1923(R)(O), 2SC1815(O),(Y)(GR), 2SA495(O), 2SA1015(O),(Y), 2SC2347, 2SC732(BL), 2SC1384(R)


B) or C) 2SC535 (B)

D) 2SC1117


(A)




(B)



(C)



(D)




DIODE IDENTIFICATION AND LEAD POLARITY


A) 1S2076A




B) 1N60




C) HZ5C-2, HZ9LC-3, HZ16L-1




D) 1SS81




E) 1SS85




F) 1S1588 (or HV-80)




G) S5277B




H) 1SV89B



I) FC-54



MICRO-COMPUTER (IC-1) PORT FORMAT

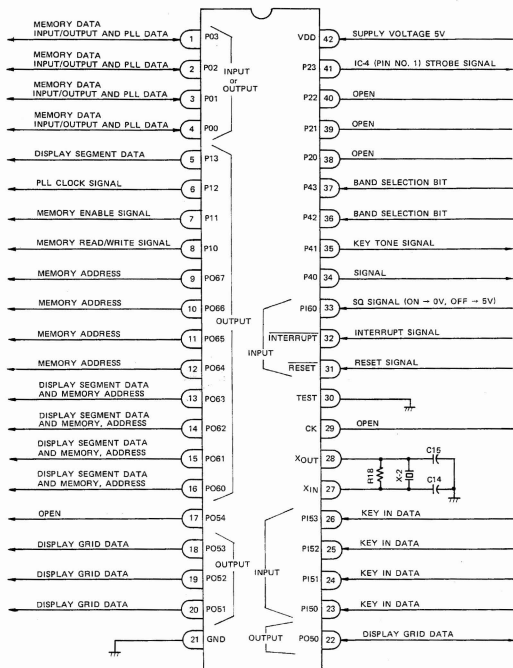


APPENDIX for VHF-MID Band for European/Australian models

VCO ALIGNMENT


- Step 1: Connect a DC VTVM to TP-104 and ground
- Step 2: Program CH1, 2 and 3 as follows:
CH1 (68 MHz), CH2 (78 MHz), CH3 (88 MHz)
- Step 3: Select channel 3 (88 MHz) and adjust TC-101 for 9.0V on the DC VTVM
- Step 4: Select channel 1 (68 MHz) and adjust T103 for 1.0V on the DC VTVM
- Step 5: Repeat steps 3 and 4 until no improvement is observed.
- The DC VTVM should show as below.
- | | | |
|--------|-------------------|-----------------|
| 68 MHz | Voltage of TP-104 | 1.0V |
| 78 MHz | Voltage of TP-104 | 3.4V \pm 0.3V |
| 88 MHz | Voltage of TP-104 | 9.0V |

RF AMP ALIGNMENT

- Step 1: Connect instruments as shown below.



- Step 2: Program 68 MHz (CH1), 78 MHz (CH2), 88 MHz (CH3).
- Step 3: Select Channel 1 (68 MHz) and adjust T101 and T102 for maximum RF waveform.
- Step 4: Check the Channels 1 ~ 3 one by one for maximum RF waveform.
- Slight deviation as shown below is tolerable.

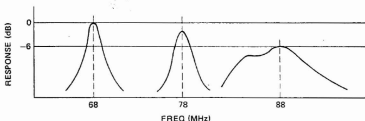

PARTS LIST REVISION

Ref. No.	Value	Voltage (V)	Tolerance (%)	Material
C102	33pF	50	\pm 10	Ceramic
C109	33pF	50	\pm 10	Ceramic
C114	47pF	50	\pm 10	Ceramic
C116	33pF	50	\pm 10	Ceramic
C117	5pF	50	\pm 0.5pF	Ceramic
C250	10pF	50	\pm 0.5pF	Ceramic


Ref. No.	Value	
R271	1.8M Ω	not used

Ref. No.	Description	
D103	Variable capacitor	not used

Ref. No.	Type No.	RS Part No.	Substitute Type No.
T101	RF Coil		GR-N553
T102	RF Coil		GR-N553
T109	Power Transformer		K6862
B.T.F.	Trap Filter		20LTR-141
	AC Cord		HAR Class 2


APPENDIX (Continued)

MID BAND RF SECTION SCHEMATIC DIAGRAM

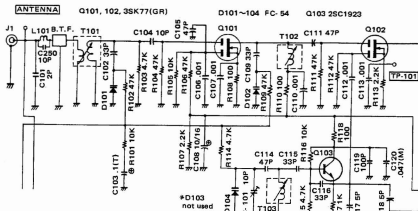


LOGIC SECTION SCHEMATIC DIAGRAM

In mid band, pin 36 of IC-1 is wired as per dotted line.

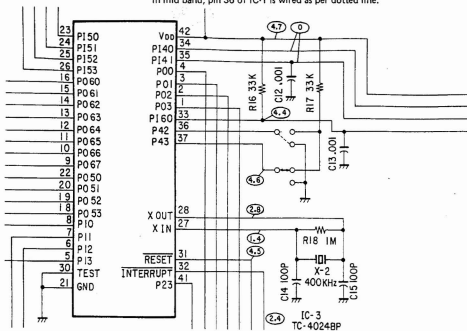

EXPLODED VIEW

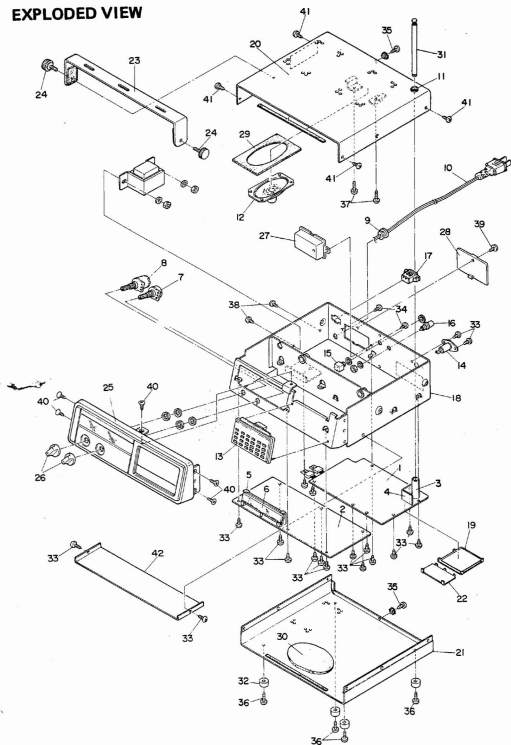

CONTENTS

SPECIFICATIONS	3
PRINCIPLES OF OPERATION.....	4
DISASSEMBLY DIAGRAM.....	5
BLOCK DIAGRAM	6
GENERAL OPERATION OUTLINE.....	7
ALIGNMENT	
ALIGNMENT AND TEST POINT POSITIONS	8
ALIGNMENT PREPARATION	8
REFERENCE FREQUENCY OSC ALIGNMENT.....	9
IF SECTION ALIGNMENT.....	9
VCO ALIGNMENT	9,10
RF AMP ALIGNMENT.....	10,11
OVERALL ALIGNMENT AND SENSITIVITY MEASUREMENT	12
AUTOMATIC FUNCTION AND HOW TO CHECK IT.....	12
RESET TIMING (IC-1)	13
CPU CLOCK OSCILLATION WAVEFORM (IC-1).....	13
IC-3 INPUT/OUTPUT WAVEFORM.....	13
IC-4 INPUT/OUTPUT TIME CHART.....	14
IC-6 INPUT/OUTPUT TIME CHART.....	15
PLL CLOCK AND DATA INPUT WAVEFORMS (IC-8).....	16
MEMORY CHECK.....	17
RECEPTION CHECK.....	18
WIRING DIAGRAM.....	19
PRINTED CIRCUIT BOARD	
LINEAR P.C. BOARD (TOP VIEW).....	20
LINEAR P.C. BOARD (BOTTOM VIEW).....	21
LOGIC P.C. BOARD (TOP VIEW)	22
LOGIC P.C. BOARD (BOTTOM VIEW)	23
TROUBLESHOOTING.....	24,25
INTEGRATED CIRCUIT LEAD IDENTIFICATION.....	26 ~ 30
SEMICONDUCTOR LEAD IDENTIFICATION	31
DIODE IDENTIFICATION AND POLARITY.....	32
MICRO-COMPUTER (IC-1) PORT FORMAT.....	33
PARTS LIST	34 ~ 40
APPENDIX FOR VHF-MID BAND FOR EUROPEAN/AUSTRALIAN MODELS	41,42
EXPLODED VIEW.....	43
SCHEMATIC DIAGRAM (LOGIC SECTION)	44,45
SCHEMATIC DIAGRAM (LINEAR SECTION)	46,47


SPECIFICATIONS

Description		Nominal spec.	Limit spec.
Frequency Coverage VHF LOW (* or MID)			30 ~ 50 MHz 5 kHz steps * or 68 ~ 88 MHz 5 kHz steps
AIRCRAFT VHF HIGH UHF			108 ~ 136 MHz 25 kHz steps 138 ~ 174 MHz 5 kHz steps 410 ~ 512 MHz 12.5 kHz steps
Sensitivity			
VHF LOW (* or MID)	FM	0.5 μ V	2 μ V
AIRCRAFT	AM	1 μ V	3 μ V
VHF HIGH	FM	0.5 μ V	2 μ V
UHF	FM	1 μ V	4 μ V
		MOD.: 60% at 1 kHz (S + N)/N = 20 dB	
Selectivity			
- 6 dB		± 9 kHz	± 12 kHz
-60 dB		± 15 kHz	± 18 kHz
Spurious Rejection			
at 40 MHz (* or 78 MHz)		50 dB	40 dB
at 120 MHz		50 dB	40 dB
at 160 MHz		50 dB	40 dB
UHF			Not specified
(except primary image)			
IF Rejection	10.7 MHz	80 dB	40 dB
Modulation Acceptance (EIA RS-204-A)		± 7 kHz	± 5 kHz
Signal to Noise Ratio (AM: MOD. 60% at 1 kHz) (FM: DEV. 3 kHz at 1 kHz)			
VHF LOW (* or MID)		45 dB	30 dB
AIRCRAFT		40 dB	25 dB
VHF HIGH		40 dB	25 dB
UHF		35 dB	25 dB
Residual Noise (Vol. Min)		3 mV	5 mV
Scanning Speed			
Fast		9 channels/sec.	6 ~ 12 channels/sec.
Slow		4 channels/sec.	3 ~ 7 channels/sec.
Search Rate			
Fast		9 steps/sec.	6 ~ 12 steps/sec.
Slow		4 steps/sec.	3 ~ 7 steps/sec.
Priority Sampling		2 sec.	1.5 ~ 2.5 sec.
Scan Delay Time		2 sec.	1 ~ 3 sec.
Audio Output Power (T.H.D. 10 %)		1.5 W	1 W
Channels of Operation Channel, Frequency and Mode Display Receiving System		Any 20 channels in any band combination Fluorescent multi display 9 letters Direct Key entry Digital-Controlled Synthesizer, Superheterodyne 1st IF: 10.7 MHz 2nd IF: 455 kHz AC-120 V 60 Hz 19 W (220 ~ 240 V, 50 Hz for European/Australian) DC-13.8 V 10 W	
Power Requirements			
Accessory		Telescopic antenna and Car Mounting bracket with Screws.	

NOTE: Nominal Specs represent the design specs: all units should be able to approximate these — some will exceed and some may drop slightly below these specs. Limit Specs represent the absolute worst condition which still might be considered acceptable: in no case should a unit perform to less than within any Limit Spec.

* VHF MID (68 ~ 88 MHz) range is for European and Australian Models only.


SCHEMATIC DIAGRAM (LOGIC SECTION)

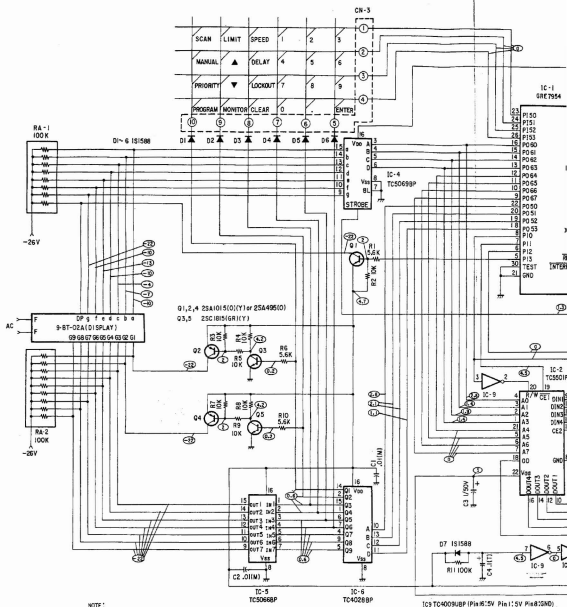

NOTE:


1. RESISTANCE VALUES IN OHMS(K=1000, M=1000000)
2. CAPACITANCE VALUES IN μF (P=PF)
3. (T) TANTALUM CAPACITOR
4. (M) MYLAR CAPACITOR
5. NO SUFFIX : CERAMIC CAPACITOR
6. \bigcirc DEMOTES DC VOLTAGE MEASURED WITH DC VOLTMETER 100K Ω /V UNDER FOLLOWING CONDITIONS : CH-1 HIGH BAND AT 150MHZ, MANUAL OPERATION, VOLUME AT MINIMUM AND SQUELCH CHW
7. \bigcirc DEMOTES VOLTAGES FOR AIRCRAFT BAND OPERATION
8. \bigcirc DEMOTES VOLTAGES FOR LOW BAND OPERATION
9. \bigcirc DEMOTES VOLTAGES FOR UHF BAND OPERATION
10. RATING OR TYPE NUMBER OF COMPONENT PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT WITHOUT NOTICE

SCHEMATIC DIAGRAM (LINEAR SECTION)

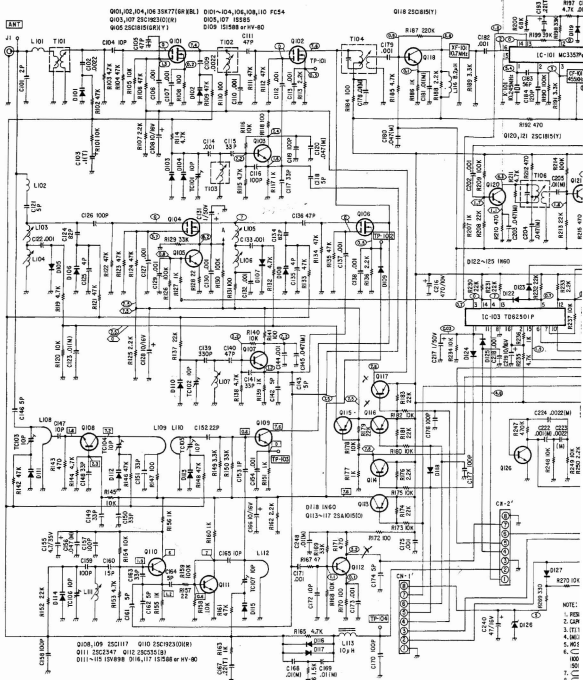

NOTE:

1. FISH
2. CARP
3. TIL
4. [MCD]
5. WGS
6. 100 ISO
7.
8.
9.
10. RAT
- SUB

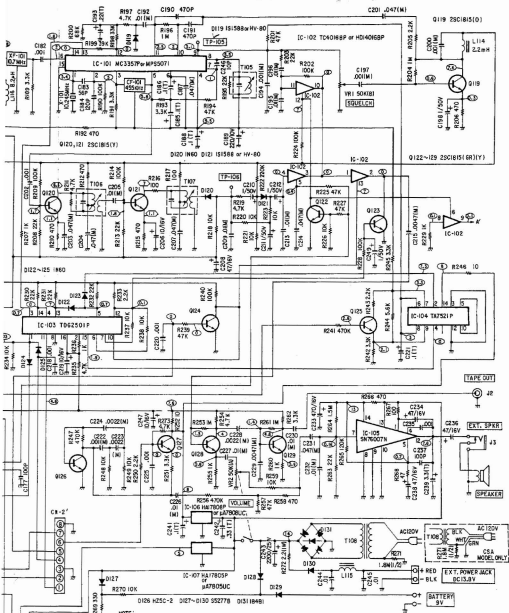

NOTE:

1. RESISTANCE VALUES IN OHMS(X) 100G, M=1000000
 2. CAPACITANCE VALUES IN pF(P) μF(F)
 3. (T) TANTALUM CAPACITOR
 4. (M) M.I.M. AIR CAPACITOR
 5. NO RAYFLEX CERAMIC CAPACITOR
 6. ⊕ ⊖ DENOTES DC VOLTAGE MEASURED WITH DC VOLT METER (100KΩ/VOLTER FOLLOWING CONDITIONS: CH-1 HIGH BAND AT 1500MHz, MANUAL OPERATION, VOLUME AT MINIMUM AND SQUELCH CCW)
 7. ⊕ ⊖ DENOTES VOLTAGES FOR AIRCRAFT BAND OPERATION
 8. ⊕ ⊖ DENOTES VOLTAGES FOR LOW BAND OPERATION
 9. ⊕ ⊖ DENOTES VOLTAGES FOR UHF BAND OPERATION
- ISOLATING OR TYPE NUMBER OF COMPONENT PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT WITHOUT NOTICE

Manual provided by G.E. Taylor, scanned by L. Glaser VE7IT